

X1 Fold 16 Gen 1

User Guide



Read this first

Before using this documentation and the product it supports, ensure that you read and understand the following:

- *Safety and Warranty Guide*
- *Setup Guide*
- [*Generic Safety and Compliance Notices*](#)

First Edition (November 2022)

© Copyright Lenovo 2022.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

Discover your Lenovo Foldable Computer	iii
Chapter 1. Meet your new Foldable Computer	1
Overview	1
Rear view	2
Features and specifications	4
USB specifications	4
Chapter 2. Get started with your computer	7
Four-in-one Foldable Screen.	7
Access networks	7
Connect to Wi-Fi networks.	7
Connect to the wired Ethernet (for selected models)	8
Connect to a cellular network (for selected models)	8
Turn on the Airplane mode.	9
Interact with your computer	9
Use the OLED touch screen	9
ThinkPad Bluetooth TrackPoint Keyboard and Stand (for selected models)	12
Connect to an external display	20
Use Lenovo Precision Pen (for selected models) . .	22
Use Lenovo Precision Pen 2 (for selected models)	24
Chapter 3. Explore your Foldable Computer	27
Lenovo apps	27
The Vantage app	27
Smart Displays	27
Lenovo Voice	28
Mode Switcher	29
Smart features (for selected models)	31
TrackPoint Quick Menu.	36
Intelligent cooling	37
Manage power	38
Check the battery status	38
Charge the computer	38
Change the power settings	39
Transfer data	39
Set up a Bluetooth connection	39

Accessories	40
Lenovo Powered USB-C Travel Hub (for selected models)	40
Purchase accessories	41
Chapter 4. Secure your computer and information	43
Log in with your fingerprint (for selected models)	43
Log in with your face ID (for selected models)	43
Protect data against power loss	43
UEFI BIOS passwords	44
Password types	44
Set, change, and remove a password	45
Associate your fingerprints with passwords (for selected models)	46
FIDO (Fast ID) Online authentication	46
Certificate based BIOS management	47
Chapter 5. Configure advanced settings.	49
UEFI BIOS	49
Enter the UEFI BIOS menu.	49
Navigate in the UEFI BIOS interface	49
Set the system date and time.	49
Change the startup sequence	49
View UEFI BIOS Event log	50
Detect memory retraining	51
Reset system to factory defaults	51
Update UEFI BIOS	51
Install a Windows operating system and drivers	52
Chapter 6. Help and support	55
Frequently asked questions	55
Error messages	57
Self-help resources	58
Windows label	59
What are CRUs	59
Call Lenovo	60
Before you contact Lenovo	60
Lenovo Customer Support Center	61
Purchase additional services.	62
Appendix A. Compliance information.	63
Appendix B. Notices and trademarks.	65

Discover your Lenovo Foldable Computer

Thank you for choosing a Lenovo® Foldable Computer! We are dedicated to delivering the best solution to you.

Before starting your tour, please read the following information:

- Illustrations in this documentation might look different from your product.
- Depending on the model, some optional accessories, features, software programs, and user interface instructions might not be applicable to your computer.
- Documentation content is subject to change without notice. To get the latest documentation, go to <https://pcsupport.lenovo.com>.

Chapter 1. Meet your new Foldable Computer

ThinkPad Fold 16 Gen 1 creates your new experience of the foldable computer.

Ultra versatility

- High-efficiency data transfer, charging, and video output through two Thunderbolt ports
- High-speed and superior reliable 5G cellular service*
- Optimized Mode Switcher, Smart Display and new TrackPoint Quick Menu
- Diverse using modes

Upgraded accessories

- Redesigned ThinkPad Bluetooth TrackPoint Keyboard and Stand*
- Magnetically-attaching Lenovo Precision Pen*

Eco-friendly back cover textile material

100% recycled performance fabric made from plastic water bottles

* for selected models

Overview



USB-C	USB-C (3.2 Gen 2) connector	Microphone
	Speaker	Power button
	Volume button	USB-C (Thunderbolt™ 4) connector

 *	Nano-SIM-card tray		Infrared (IR) camera / Camera
	Touch screen		

* for selected models

Related topics

- “Connect to a cellular network (for selected models)” on page 8
- “Use the OLED touch screen” on page 9
- “Log in with your face ID (for selected models)” on page 43
- “Smart features (for selected models)” on page 31


Important information

Your foldable computer contains magnets. Keep a safe distance away from devices and objects that may be affected by magnets, such as credit cards.



Rear view

The back cover material is 100% recycled performance fabric made from plastic water bottles. Handle the back cover with care so that you can enjoy this product for a long time.

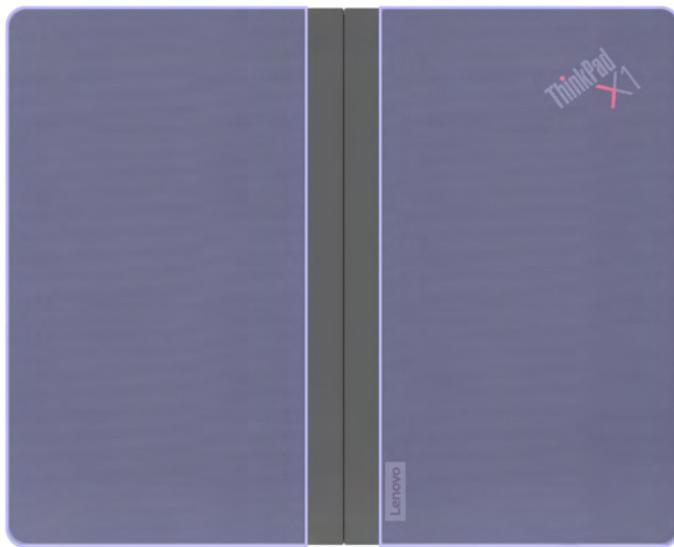

Maintenance tips and usage notices for back cover

- Care for the fabric back cover by regularly wiping the fabric cover with a soft and clean cloth, or brushing it. If dirt does not come off, use a high-quality fabric cleaner.

- Do not expose the back cover to sunshine or moisture for long periods of time. Clean with a soft cloth if the back cover becomes wet. Dry it by dabbing with an absorbent lint-free cloth and keep it out of direct sunlight. If possible, place your computer in a dry, well-ventilated area.
- Do not clean the back cover with alcohol-based solvents, such as benzine or thinners, or other strong chemicals.
- Do not use or store your computer in dusty, dirty areas, or extremely hot or cold areas.
- Keep the back cover away from sharp objects and fire.
- Take special care when cosmetics, such as foundation or creams, come in contact with the back cover. If any such products contact with the back cover, use a dry cloth to wipe them off immediately.

Features and specifications

For detailed specifications of your computer, go to <https://psref.lenovo.com> and search by product.

Memory	Low Power Double Data Rate 5 (LPDDR5) soldered on the system board, up to 32 GB.
Storage device	<ul style="list-style-type: none">One slot, M.2 2242 solid-state drive, up to 1 TB
Audio	<ul style="list-style-type: none">Dolby Atmos® Speaker SystemDolby Voice®
Display	<ul style="list-style-type: none">Color display with Flexible Organic Light Emitting Diode (OLED) technology and Thin Film Transistor (TFT) technology.Display ratio: 4:3Display resolution: 2560 x 2024 pixels10 point multi-touch technology
Security features	<ul style="list-style-type: none">Face authentication*User Presence Sensing*Fingerprint reader* (integrated in ThinkPad Bluetooth TrackPoint Keyboard)Glance Privacy Guard*Glance Privacy Alert*Trusted Platform Module (TPM)*
Wireless features	<ul style="list-style-type: none">BluetoothGPS (on wireless WAN model)*Wireless LANWireless WAN (5G)* <p>Note: The 5G cellular service is provided by authorized mobile service carriers in some countries or regions. You must have a cellular plan from a service carrier to connect to the cellular network. The cellular data plan might vary by location.</p>

* for selected models

USB specifications

Notes:

- Depending on the model, some USB connectors might not be available on your foldable computer.
- On very rare occasions, the USB-C compatible devices connected to USB-C connector might interfere with wireless features. If your computer cannot be connected to Wi-Fi or cellular network, or if your location cannot be pinpointed through the GPS function, detach the USB-C compatible device from the USB connector.
- Use USB to USB-C adapter to attach non-USB-C devices to your foldable computer.

Connector name	Description
 <ul style="list-style-type: none"> • USB 2.0 connector • USB 3.2 connector Gen 1 • USB 3.2 connector Gen 2 	<p>Connect USB-compatible devices, such as a USB keyboard, USB mouse, USB storage device, or USB printer.</p>
 <ul style="list-style-type: none"> • USB-C (3.2 Gen 1) connector • USB-C (3.2 Gen 2) connector • USB-C (Thunderbolt 3) connector • USB-C (Thunderbolt 4) connector • USB-C (USB 4) connector 	<ul style="list-style-type: none"> • Charge USB-C compatible devices with the output voltage and current of 5 V and 1.5 A. • Connect to an external display: <ul style="list-style-type: none"> – USB-C to VGA: up to 1920 x 1200 pixels, 60 Hz – USB-C (Thunderbolt 4) to DP: up to 5120 x 3200 pixels, 60 Hz – USB-C (3.2 Gen 2) to DP: up to 4096 x 2304 pixels, 60 Hz • Connect to USB-C accessories to help expand your computer functionality. To purchase USB-C accessories, go to https://www.lenovo.com/accessories.

Statement on USB transfer rate

Depending on many factors such as the processing capability of the host and peripheral devices, file attributes, and other factors related to system configuration and operating environments, the actual transfer rate using the various USB connectors on this device will vary and will be slower than the data rate listed below for each corresponding device.

USB device	Data rate (Gbit/s)
3.2 Gen 1	5
3.2 Gen 2	10
3.2 Gen 2 × 2	20
4 Gen 2 × 2	20
4 Gen 3 × 2	40
Thunderbolt 3	40
Thunderbolt 4	40

Chapter 2. Get started with your computer

Four-in-one Foldable Screen

Your foldable computer features the following modes. Switch between different modes to experience the most of the four-in-one foldable computer.




Mode	Recommended scenario(s)
 Landscape mode	<ul style="list-style-type: none">• Working at desk or tabletop• Multi-tasking• Watching Movies
 Clamshell mode	<ul style="list-style-type: none">• Using the foldable computer as a normal laptop.• For use while traveling / in small spaces / typing on lap• Writing Emails• Multi-tasking
 Book mode	<ul style="list-style-type: none">• Reading• Browsing Multiple Webpages• Note Taking while Reading
 Portrait mode	<ul style="list-style-type: none">• Joining / Presenting Online Meetings• Browsing / Editing Long Documents• Split Screen Multi-tasking

Access networks

This section helps you connect to a wireless or wired network.

Connect to Wi-Fi networks

Click the network icon in the Windows® notification area, and then select a network for connection. Provide required information, if needed.

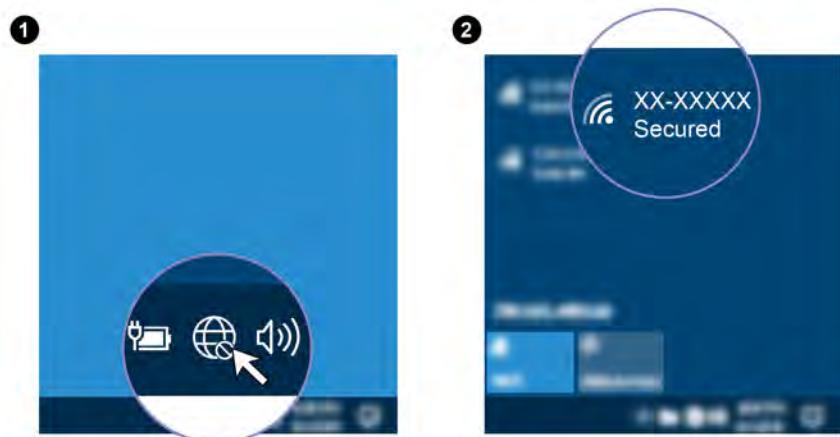

Connect to the wired Ethernet (for selected models)

To connect your computer to a local network, you need a Lenovo USB-C to Ethernet Adapter. Lenovo USB-C to Ethernet Adapter is available as an option and shipped with some computer models. You can purchase one from Lenovo at <https://www.lenovo.com/accessories>.



Connect to a cellular network (for selected models)

To connect a 5G cellular data network, you must have a wireless wide area network (WWAN) card and a nano-SIM card installed. The nano-SIM card might come with your computer by countries or regions. If no nano-SIM card is shipped, you will need to purchase one from authorized service carriers.


Notes:

- The 5G cellular service is provided by authorized mobile service carriers in some countries or regions. You must have a cellular plan from a service carrier to connect to the cellular network. The cellular data plan might vary by location.
- Network connection speeds might also vary by location, environment, network conditions and other factors.

To establish a cellular connection:

1. Turn off the computer and turn it over.
2. Locate the nano-SIM card slot

3. Insert a straightened paper clip into the hole beside the SIM tray to pop open the tray. Insert the SIM card into the tray. Note the orientation of the card and ensure that it is seated correctly.

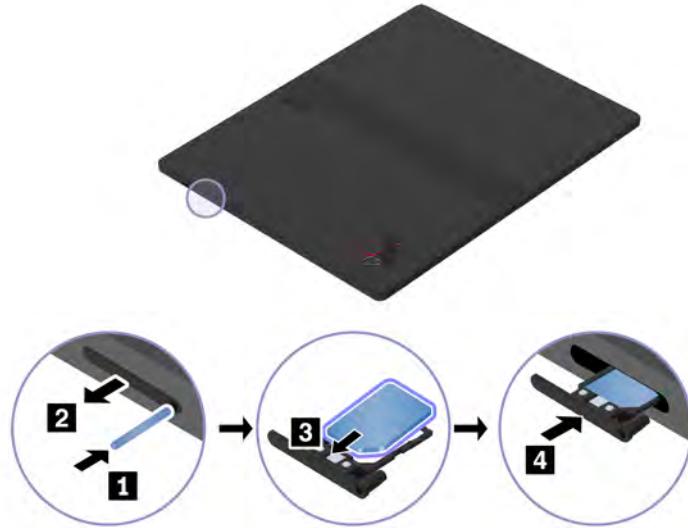

4. Turn on the computer.
5. Click the network icon, and then select the cellular network icon  from the list. Provide required information, if needed.

Turn on the Airplane mode

When the Airplane mode is enabled, all wireless features are disabled.

1. Type Airplane mode in the Windows search box and then press Enter.
2. Turn on the Airplane mode.

Interact with your computer

Your computer provides you various ways to navigate the screen.

Use the OLED touch screen

Use the touch gestures

Your foldable computer display supports the multi-touch function, you can navigate the screen with simple touch gestures. For more touch gestures, refer to <https://support.microsoft.com/windows>.


Note: Some gestures might not be available when you are using certain apps.




Tap once to single click




Tap twice quickly to double-click

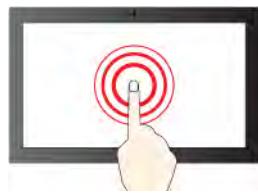

Tap and hold to right-click

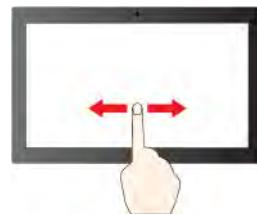


Slide to scroll through items

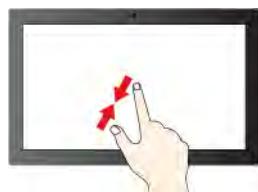

Zoom out




Zoom in

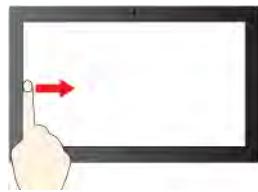


Swipe from the left: view all open windows (Windows 10)



Swipe from the left: open widget panel (Windows 11)

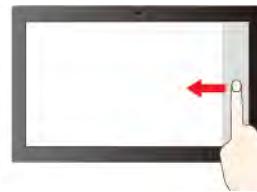

Swipe from the right: open Action Center (Windows 10)

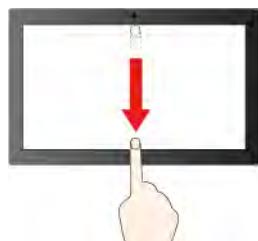

Swipe downwards shortly: show title bar



Drag

Swipe downwards: close the current app

Use the On-Screen Keyboard

You can use the On-Screen Keyboard when your foldable computer is in portrait mode, landscape mode or clamshell mode.

To use the On-Screen Keyboard, tap the keyboard icon in the toolbar as shown. The On-Screen Keyboard will be displayed.



Note: TrackPoint, fingerprint reader and special keys functions are not supported on the On-Screen Keyboard.

Maintenance tips and usage notices for OLED screen

Follow the instructions in daily use to maintain the OLED screen.


- Do not attach any adhesives to the display, such as a screen protector or a sticker.
- Do not apply excessive pressure or place any metallic objects on the screen. Otherwise, the touch panel could be damaged or malfunctioning.
- Do not scratch the screen with hard or sharp objects or drop them on the screen. Only use objects and accessories recommended for use with the ThinkPad X1 Fold 16 Gen 1.
- Do not use fingernails, gloved fingers, or other incompatible objects for touch input. Use clean fingers or an approved pen such as Lenovo Precision Pen or Lenovo Precision Pen 2.
- Do not place any objects inside when folding the computer.
- Avoid splash and wipe off liquids from the screen as soon as possible. Any extended contact with the screen could result in deformations and color fading.
- Turn off your computer before cleaning the screen. Use a dry, soft, and lint-free cloth or a piece of absorbent cotton to remove fingerprints or dust from the screen. Do not apply solvents to the cloth.
- You may notice a crease or pattern at the center of the screen due to the unique display materials, but it is a normal characteristic of the foldable OLED display. It will not affect the display's quality, lifespan, and performance. It will not hinder using the device.
- When the computer is folded, you may see bright bands along the inside of the fold, especially when the screen content is white or bright. This is a normal characteristic of the foldable OLED display. It will not affect the display's quality, lifespan, and performance. It will not hinder using the device.

ThinkPad Bluetooth TrackPoint Keyboard and Stand (for selected models)

Your foldable computer might come with ThinkPad Bluetooth TrackPoint Keyboard and Stand (model: TKBBTDU811), a wireless, magnetic keyboard with touchpad, TrackPoint and stand. You can connect the keyboard to your foldable computer by a USB-C cable or Bluetooth. Use the keyboard to work more easily and effectively.

The keyboard is available as an option. You can purchase one from Lenovo at <https://www.lenovo.com/accessories>.

Keyboard overview

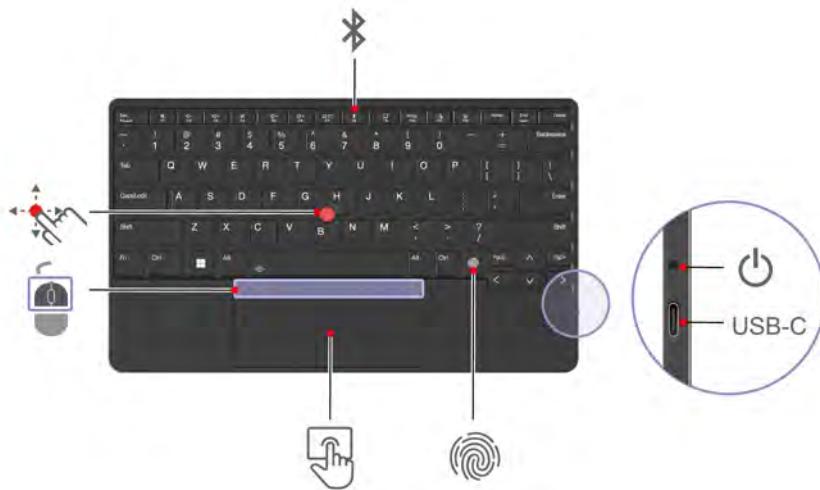

	Bluetooth key		Power switch
	USB-C connector		Fingerprint reader
	Trackpad		TrackPoint buttons
	TrackPoint® pointing stick		

Related topics

- “Use the TrackPoint pointing device” on page 17
- “Use the trackpad” on page 19
- “Log in with your fingerprint (for selected models)” on page 43

Pair the keyboard

Your foldable computer may come with the keyboard pre-paired with Bluetooth, to use the pre-paired Bluetooth keyboard, do the following:

Before pairing: Place the keyboard close to your foldable computer to establish Bluetooth connection.

1. Ensure the Bluetooth keyboard and your foldable computer are not connected by USB cable.
2. Turn on your foldable computer.

3. Turn on the keyboard.

The keyboard is paired with your foldable computer automatically.

If you purchase the keyboard separately, to pair the keyboard, do the following:



Before pairing: Place the keyboard close to your foldable computer to establish Bluetooth connection.

1. Enable Bluetooth and Swift Pair in Bluetooth settings page on your foldable computer.
2. Turn on the keyboard and the LED indicator keeps in blinking blue.
3. Press and hold F8 or Fn + F8 for about three seconds.
4. Follow the on-screen instructions to pair your keyboard.

The keyboard is paired, then the LED indicator turns off.

Use the keyboard shortcuts

The special keys on the keyboard help you work more effectively.

	Invoke the special function printed as an icon on each key or standard function of F1–F12 function keys.
	FnLock indicator on: standard function
	FnLock indicator off: special function
	Enable / disable speakers
	Decrease volume
	Increase volume
	Enable / disable microphones
	Darken display
	Brighten display
	Manage external displays

	Launch Bluetooth settings
	Open / collapse Notification Center
	Print screen
	Open the Windows snipping tool
	Customize the function of this key on the Vantage app
	Toggle keyboard backlight (for selected models)
	Fingerprint reader

Use the Keyboard Stand

The ThinkPad Bluetooth TrackPoint Keyboard comes with a Keyboard Stand (hereafter referred to as stand). You can use the keyboard with the stand to achieve more using modes. Do as following to use the stand properly.

Attach the keyboard to the stand

Align the keyboard magnetic zone with the stand metal bar as shown, when the keyboard gets close enough, it magnetically attaches to the stand.



Detach the keyboard from the stand

To detach the keyboard, remove the stand by pulling it away.

Maintenance tips and usage notices for the Keyboard Stand

The stand is made of suede. To ensure your use experience and enjoy the stand longer, follow the instructions to maintain and clean your stand.

- Do not apply foundation, cream, or other cosmetics or chemicals to the suede. Otherwise, the stand will be dyed or stained.

- Do not clean the stand with wet hands or cloth. Otherwise, the suede surface may fade.
- Do not expose the stand to the sunlight or moisture for long periods of time.
- Clean the stand with a soft brush.
- Dry the stand, if it gets wet accidentally.
- Rubbing the suede surface may cause the nap falling out or pilling, but will not affect the functionality of the stand.
- The color of the stand may vary depending on the arrangement of the nap on the suede surface and the way the stand is exposed to the light.

Use the keyboard in different modes

The keyboard can work with your foldable computer in landscape mode, clamshell mode, portrait mode and carry mode.

Landscape mode



Clamshell mode

The keyboard can be magnetically attached to the foldable computer bezel. When placing the keyboard onto the foldable computer, ensure that the stand is detached from the keyboard and the camera side is upward, otherwise the keyboard does not attach properly.



Portrait mode



Carry mode

The keyboard can be magnetically attached to the bottom of your foldable computer in carry mode.



Charge the keyboard

You can also use a USB PD (USB Power Delivery) adapter and a USB-C cable or ThinkPad 65W Slim AC Adapter (USB Type-C, for selected models) to charge the keyboard. The keyboard is fully charged in about two hours.

Output rating of the Keyboard: 5 V dc, 1 A




The LED indicator is solid amber during charging and is solid green when the keyboard is fully charged.

Use the TrackPoint pointing device

The TrackPoint pointing device enables you to perform all the functions of a traditional mouse, such as pointing, clicking, and scrolling.

Use the TrackPoint pointing device

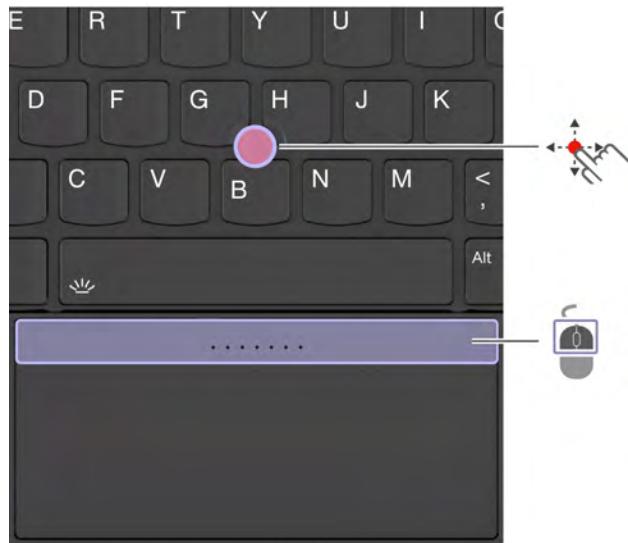

TrackPoint pointing stick

Use your finger to apply pressure to the pointing-stick nonslip cap in any direction parallel to the keyboard. The pointer on the screen moves accordingly. The higher the pressure applied, the faster the pointer moves.

Your computer supports TrackPoint Quick Menu, see “TrackPoint Quick Menu” on page 36.



TrackPoint buttons

The left-click button and right-click button correspond to the left and right buttons on a traditional mouse. Press and hold the dotted middle button while using your finger to applying pressure to the pointing stick in the vertical or horizontal direction. Then, you can scroll through the document, Web site, or apps.


Disable the TrackPoint pointing device

The TrackPoint pointing device is active by default. To disable the device:

1. Open the **Start** menu, and then click **Settings** → **Devices** → **Mouse**.
2. Follow the on-screen instructions to disable TrackPoint.

Replace the pointing-stick nonslip cap

Note: Ensure that the new cap has grooves **a**.

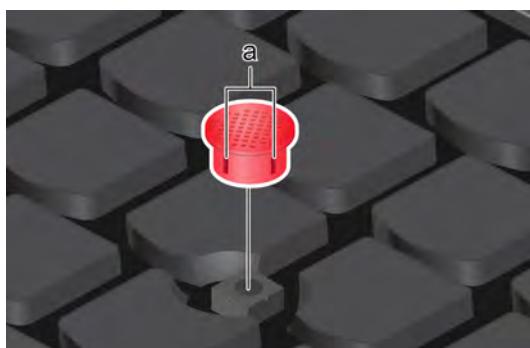


Use the trackpad

You can use the trackpad to perform all the pointing, clicking, and scrolling functions of a traditional mouse.


Use the trackpad




Use the touch gestures

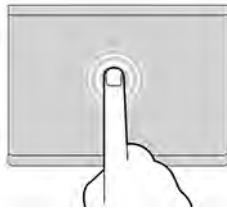


Tap once to select or open an item.

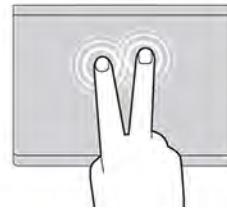


Tap twice quickly to display a shortcut menu.

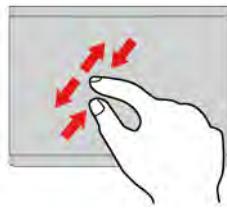


Two-finger zoom in or zoom out.

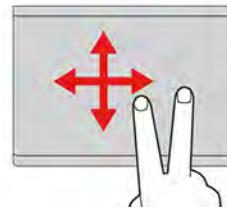

Scroll through items.

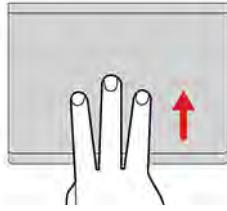

Open the task view to see all open windows.

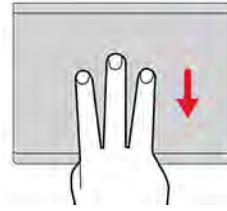

Show the desktop.

Notes:

- When using two or more fingers, ensure that you position your fingers slightly apart.
- Some gestures are not available if the last action was done from the TrackPoint pointing device.
- Some gestures are only available when you are using certain apps.
- If the trackpad surface is stained with oil, turn off the computer first. Then, gently wipe the trackpad surface with a soft and lint-free cloth moistened with lukewarm water or computer cleaner.

For more gestures, see the help information of the pointing device.

Disable the trackpad

The trackpad is active by default. To disable the device:


1. Open the **Start** menu, and then click **Settings** → **Devices** → **Touchpad**.
2. In the Touchpad section, turn off the **Touchpad** control.

Connect to an external display

Connect your computer to a projector or a monitor to give presentations or expand your workspace.

Connect to a wired display

If your computer cannot detect the external display, right-click a blank area on the desktop and select display settings. Then follow the on-screen instructions to detect the external display.

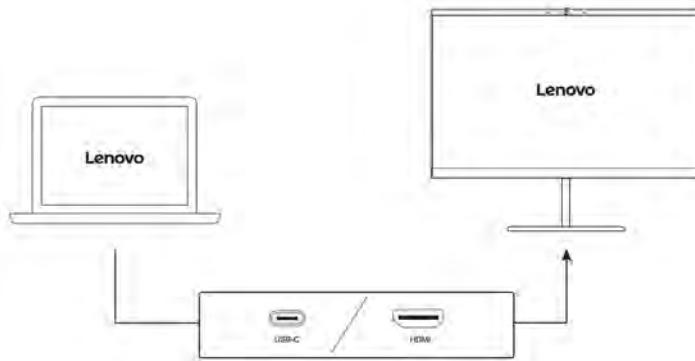

Supported resolution

The following table lists the supported maximum resolution of the external display.

Connect the external display to	Supported resolution
USB-C (3.2 Gen 2) connector	Up to 5K / 60 Hz
Thunderbolt 4 connector	Up to 8K / 60 Hz

Note: The refresh rate higher than 60 Hz can also be supported. If you set the refresh rate higher than 60 Hz, the maximum resolution might be limited.

Connect to a wireless display

To use a wireless display, ensure that both your computer and the external display support the Miracast® feature.

Press Windows logo key + K and then select a wireless display to connect with.

Set the display mode

Press F7 or Fn + F7 and then select a display mode of your preference.

Change display settings

1. Right-click a blank area on the desktop and select display settings.
2. Select the display that you want to configure and change display settings of your preference.

You can change the settings for both the computer display and the external display. For example, you can define which one is the main display and which one is the secondary display. You also can change the resolution and orientation.

Use Lenovo Precision Pen (for selected models)

The Lenovo Precision Pen enables a more precise and easier way of writing and sketching. It can be magnetically attached to the computer



Eraser button



To erase text or drawings, hold the button to erase the object in supported apps.

Click button



To right-click, hold the button and tap the screen in supported apps.

LED indicator



When the LED indicator blinks in white, the Bluetooth is enabled

Bluetooth button



To enable Bluetooth, press and hold the button for three seconds.


Notes:

- The default function of each barrel button might vary in different apps.
- To customize the barrel button functions, use Lenovo Pen Settings. If Lenovo Pen Settings is not installed on your computer, download and install the latest WinTab driver from <https://support.lenovo.com>.

Lenovo Precision pen is not waterproof. Keep the pen away from water and excessive moisture. To purchase Lenovo Precision Pen, go to <https://www.lenovo.com/accessories>.

Install the battery for Lenovo Precision Pen

Depending on the model, your pen might not be installed with a battery. To install an AAAA alkaline battery, do the following:

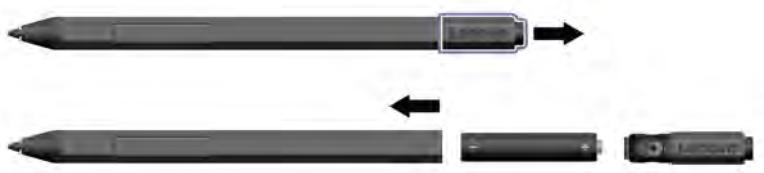

Pair Lenovo Precision Pen

1. Press and hold the Bluetooth button on the pen for at least 3 seconds until the LED indicator blinks in white.



2. Click the Action Center icon  and right-click the **Bluetooth** icon. Select **Go To Settings → Add Bluetooth or other device → Bluetooth**.
3. Select **Lenovo Precision Pen** and start pairing.

Store Lenovo Precision Pen

Attach the Lenovo Precision Pen to the magnetic side of your computer as shown:



Use Lenovo Precision Pen 2 (for selected models)

The Lenovo Precision Pen 2 (a rechargeable stylus pen) enables you to write and draw in a natural manner. To purchase the pen, go to <https://www.lenovo.com/accessories>.

Notes:

- Lenovo Precision Pen 2 does not magnetically attach to your foldable computer.
- The color of the pen might vary by country or region. Depending on the models, the pen might look slightly different from the illustrations in this topic.

Pen overview



Eraser button



To erase text or drawings, hold the button to erase the object in supported apps.

Click button



To right-click, hold the button and tap the screen in supported apps.

LED indicator



When the LED indicator blinks in amber, the pen battery power is low. The LED indicator is solid amber during charging and is solid white when the pen is fully charged. The pen is fully charged in about two hours.

USB-C connector




Use the ac power adapter that comes with your foldable computer to charge the pen.

Notes:

- The default function of each barrel button might vary in different apps.
- To customize the barrel button functions, use Lenovo Pen Settings. If Lenovo Pen Settings is not installed on your computer, download and install the latest WinTab driver from <https://support.lenovo.com>.

Charge the pen

1. Remove the pen cap in the direction as shown.
2. Connect the pen to a charger with a USB-C cable.
3. Install the pen cap back on the pen.

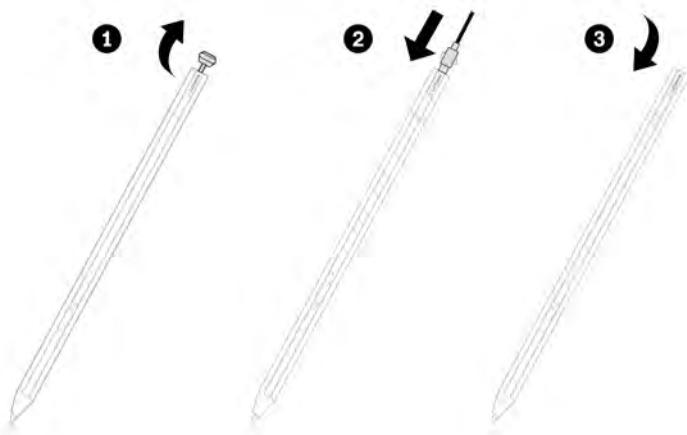

Maintenance tips

- The pen is not waterproof. Keep the pen away from water and excessive moisture.
- The pen contains pressure sensors. Apply an appropriate amount of pressure when writing on the screen. Do not subject the pen to shock or vibration.
- If possible, place your pen in a well-ventilated and dry area without direct exposure to sunshine.
- Do not use or store the pen in a place where excessive changes in temperature may occur such as in a car.

Chapter 3. Explore your Foldable Computer

Lenovo apps

This section provides introduction to the Vantage, Smart Displays and Lenovo Voice apps.

The Vantage app

The preinstalled Vantage app is a customized one-stop solution to help you maintain your computer with automated updates and fixes, configure hardware settings, and get personalized support.

To access the Vantage app, type Vantage in the Windows search box.

Key features

The Vantage app enables you to:

- Know the device status easily and customize device settings.
- Download and install UEFI BIOS, firmware, and driver updates to keep your computer up-to-date.
- Monitor your computer health and secure your computer against outside threats.
- Scan your computer hardware and diagnose hardware problems.
- Look up warranty status (online).
- Access *User Guide* and helpful articles.

Notes:

- The available features vary depending on the computer model.
- The Vantage app makes periodic updates of the features to keep improving your experience with your computer. The description of features might be different from that on your actual user interface.

Smart Displays



Smart display is an app that allows you to manage the layouts of various Windows applications residing in various displays. With this app, you can save the layout of all apps in your display workspace and restore them automatically when the same monitor configuration is detected. You can also create and manage different workspaces to customize your layout when working on multiple projects.

Smart Displays is ideal for both users who work in an open-office, shared desk environment and for travelers returning to their home offices.

To access the app, type Smart Displays in the Windows search box.

Key features

The app can:

- Constantly monitor the location and the size of all applications on displays and keep track of all different display configurations.

- Allow you to easily create extended displays configuration, and provide a visual feedback on where the display will be positioned.
- Allow you to manage your workspace to save, edit, delete, and launch the layouts.

Notes:

- The available features and languages vary depending on the computer model and delivery of countries and regions.
- Smart Displays makes periodic updates of the features to keep improving your experience. The description of features might be different from that on your actual user interface.

Lenovo Voice



Lenovo Voice is a voice assistant that enables you to use voice to control your computer, translate voice into on-screen text, and convert voice to text. Ensure that you sign into the app before using both translation/subtitle function and voice-to-text function.

Notes:

- The available features and languages vary depending on the computer model and delivery of countries and regions.
- Lenovo Voice makes periodic updates of the features to keep improving your experience. The description of features might be different from that on your actual user interface.

To download the latest version of Lenovo Voice, go to Microsoft Store and search for the app name.

To access Lenovo Voice, do one of the following:

- Open the **Start** menu and tap **Lenovo Voice**.
- Type **Lenovo Voice** in the search box.
- Tap Windows key + alt + V on the On-Screen Keyboard, or press the same on ThinkPad Bluetooth TrackPoint Keyboard if available.

Voice commands

This function allows you to use voice to control certain functions of your computer, such as:

- Brighten or darken computer screen.
- Adjust the speaker volume.
- Enable or disable airplane mode.
- Put computer into hibernation mode.
- Enable or disable the Bluetooth function.
- Go to the previous or next slide in a PPT file.

Translation/Subtitles

Lenovo Voice enables you to translate voice or audio into on-screen text in one of the supported languages. During conference calls, the translation function can translate a foreign conversation into on-screen text in your preferred language in real time.

In addition, the subtitle function allows you to watch foreign videos and see the translated text in a subtitle form.

Voice-to-text

This function allows you to use voice to input text in any typable field. Select any typable field (such as document editing area, web site browser input field, and windows input bar) and use voice instead of typing. Your voice is converted to text and is inserted at the position of the cursor.

Mode Switcher

The Mode Switcher allows you to handle multiple tasks simultaneously in different areas of the computer screen.

Use Mode Switcher

Select one of following methods in default setting to switch between split-screen view and full-screen view:

- Tap the \wedge icon in the toolbar and tap the Mode Switcher icon in the overflow area to launch the Lenovo Mode Switcher window, then choose a preferred layout in the window.



- Slightly fold the computer, the window pops up automatically, then choose a preferred layout in the window.



- Flatten the computer, the window pops up automatically, then choose a preferred layout in the window.



- Slightly fold the computer, the window pops up automatically, then choose a preferred layout in the window.



- Flatten the computer, the window pops up automatically, then choose a preferred layout in the window.




Use Mode Switcher to organize applications

- When you launch only one application in single screen, selecting split-screen layout in Mode Switcher makes the application fit to the primary screen (the screen marked as 1 in the Lenovo Mode Switcher window). The secondary screen is empty.
- When you launch two or more applications in single screen, selecting split-screen layout in Mode Switcher makes the active window fit to the primary screen. The other inactive windows become thumbnails in the secondary screen. You can choose one of them to fit to the secondary screen.
- When you launch no application, you can also use Mode Switcher to select screen layout. But both half screens are empty in split-screen. After that, if you launch a new application, It will be placed in the primary screen.
- When you return to single screen mode, the active window is maximized and the inactive windows return to state in previous single screen mode.

Set Mode Switcher

You can enter the Mode Switcher settings by tapping the settings icon in the window as shown or long pressing the Mode Switcher icon. Then you can customize screen behaviors or feedback your use experience.

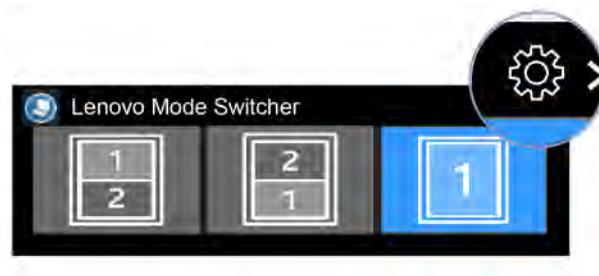

The screen behavior has three modes in Mode Switcher settings:

- **Always ask (recommended)**

It is set by default. When you fold or flatten the foldable computer, the Lenovo Mode Switcher window pops up automatically

- **Change automatically**

If you select this mode, the screen is automatically split into two screens layout when you fold the foldable computer, and return to single screen layout when you flatten the foldable computer.

- **Never change**

If you select this mode, the window never appears unless you tap the Mode Switcher icon. The screen layout does not change automatically when you fold or flatten the foldable computer

Notes:

- Tapping the Mode Switcher icon to activate the window is always available, regardless of the setting modes.
- When the keyboard is docked in clamshell mode, split-screen layout is unavailable.

Smart features (for selected models)

You can use Glance by Mirametrix® and Smart Assist features to improve your security, productivity, digital wellness and save battery power.

Notes:

- Depending on the model, some features might not be available on your foldable computer.
- Ensure you create your Face ID with the IR camera. See “Log in with your face ID (for selected models)” on page 43.
- If Glance is uninstalled, you can request it through <https://support.lenovo.com/contactus>
- Glance features and Smart Assist features can not work simultaneously.


To enable the features marked ¹ or ², do as following:

- ¹ Type Glance in the Windows search box, press Enter, then turn on the feature of your preference. The features are powered by Glance by Mirametrix.
- ² Open the Vantage app, click **Device** → **Smart Assist**, turn on **User Presence Sensing**, then turn on the feature of your preference.


The features are powered by Intel Visual Sensing Technology.

Express Sign-in and Auto-lock

- **Presence Detection**¹ keeps your foldable computer awake when in use and locks your system automatically when your head moves out of the camera range.

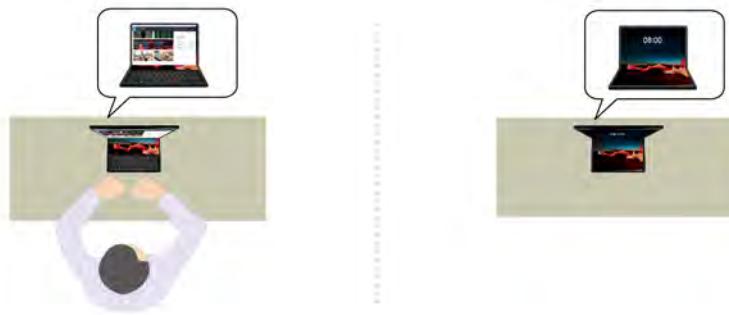

- **Zero Touch Login**² wakes up your system when you approach the computer. You can log in with your Face ID without touching your computer.
- **Zero Touch Lock**² Locks your system automatically whenever you step away.

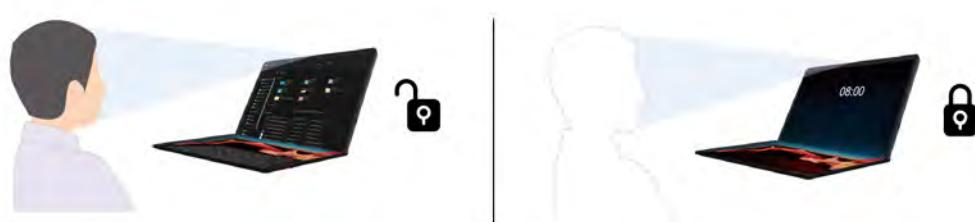


Protect your privacy



- **Privacy Alert**¹ notifies you when a shoulder surfer is detected.



- **Privacy Guard**¹ blurs your screen when detecting a shoulder surfer.

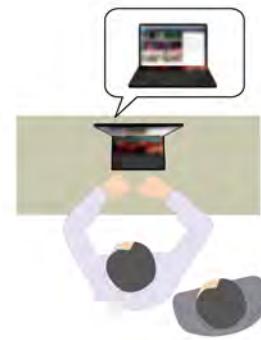

- **Smart Display**¹ blurs the screens you are not looking at. If you are not facing any screen, all screens are blurred.

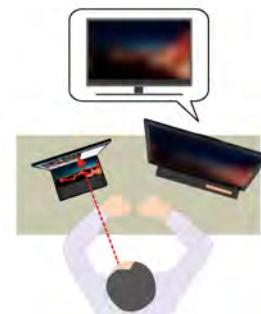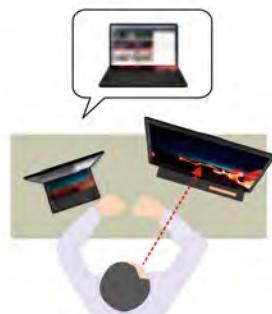


- **Adaptive Dimming**² tracks your face movement to recognize if your focus is elsewhere and dim to further protect privacy and save battery power.




Improve productivity

- **Snap Window**¹ can automatically snap the window you select to the top center of the screen you turn to.

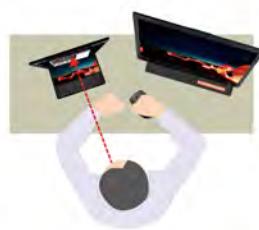


- **Smart Pointer**¹ relocates the pointer to the screen you are facing. When the pointer moves from one screen to another, it is temporarily drawn large.

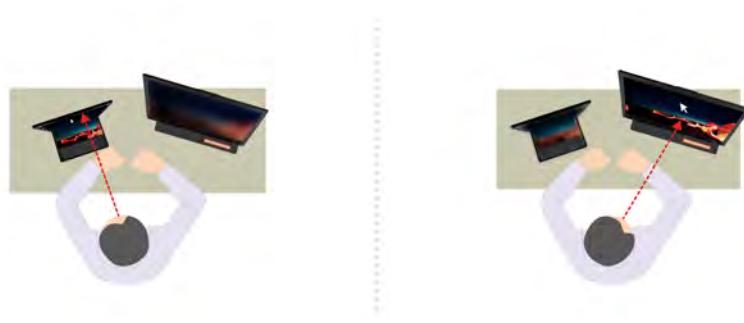

Note: Snap Window and Smart Pointer only work when your computer is connected to external displays. Ensure that external displays are placed at the same height of your computer.

Digital Wellness

- **Posture Warning**¹ reminds you to adjust your posture if slouching is detected.
- **20/20/20 Rule**¹ reminds you to look away from the screen and relax your eyes for 20 seconds every 20 minutes.

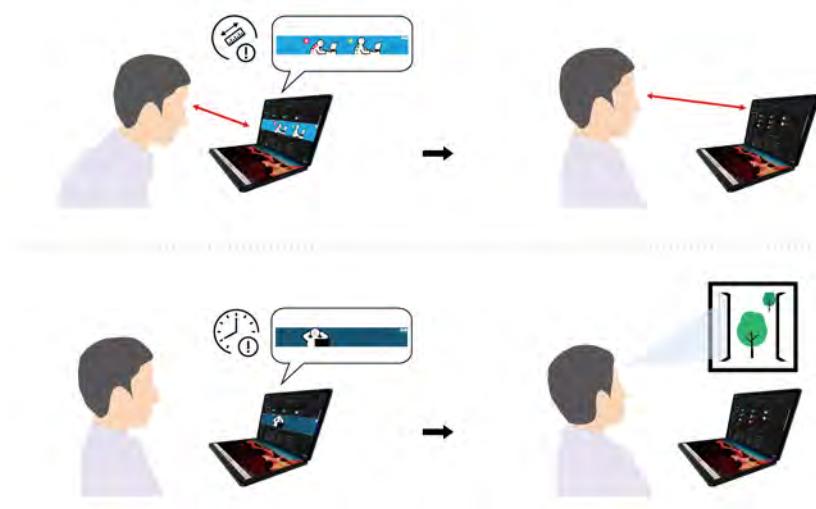

Notes:

- The feature does not work in the following cases:
 - the computer is in book mode or is used as a tablet on the desk.
 - the computer is in hibernation mode or has been turned off.
 - the computer display is closed.
 - the computer is connected to an external display.
 - you set the power options to never turn off the display.
- The feature might not work properly in the following cases:
 - when used in bright back light or very dark environment.
 - when your face is partially hidden by your dress.
 - when the camera recognizes the face image behind you.

- The feature uses camera to detect your presence and recognize your face. But there is no personal data transmission from camera to host.
- For some countries or regions, the feature might be disabled according to local regulations.


TrackPoint Quick Menu

Launch the TrackPoint Quick Menu

For models with ThinkPad Bluetooth TrackPoint Keyboard

Double-tap the TrackPoint pointing stick to launch the TrackPoint Quick Menu.

The TrackPoint Quick Menu is enabled by default. Press Fn+G to disable or enable the double-tapping gesture. When disabled, it cannot be launched by double-tapping the TrackPoint pointing stick.

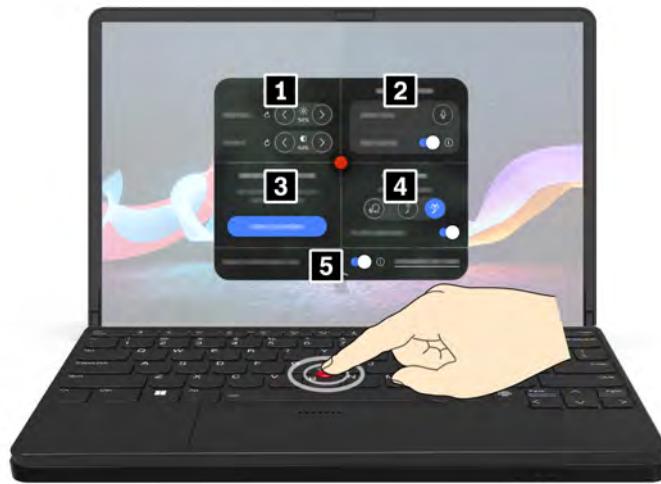

Note: It is recommended that you use TrackPoint Quick Menu with ThinkPad Bluetooth TrackPoint Keyboard to experience the unique design for TrackPoint.

For models without ThinkPad Bluetooth TrackPoint Keyboard

Type TrackPoint Quick Menu in the Windows search box and then press Enter to launch the TrackPoint Quick Menu.

Use the TrackPoint Quick Menu

1 Camera

In section 1, you can adjust the brightness and contrast of the camera, and restore the settings to default by tapping the reset button .

2 Mute detection

In section 2, you can mute your computer. If **Mute warning** is turned on, you will receive a notification when you mute the computer. You can see the working condition of the feature by clicking the icon  next to the toggle.

3 Microsoft dictation

In section 3, you can use dictation to transcribe your speech in a notepad. Click **START DICTATION** to invoke the notepad.

4 Microphone

In section 4, you can adjust the sound effect of your microphone.

- Privacy mode: capture the speaker's voice.
- Collaboration mode: capture the speaker's voice and the ambience.

When you select either of the two modes, AI noise suppression will be toggled on automatically to reduce unwanted sound.

Note: When internal microphone is not supported by Dolby or the Dolby driver is disabled, an input device list will be displayed instead. The list provides options and one volume bar to test your microphone.

5 TrackPoint buttons (for models with ThinkPad Bluetooth TrackPoint Keyboard)

In section 5, you can enable or disable TrackPoint buttons. When the button area is enabled, it works as TrackPoint buttons. When the button area is disabled, it becomes part of the TrackPad. You can also click **ADVANCED SETTINGS** to enter OS settings to customize your TrackPoint features.

Note: The TrackPoint Quick Menu does not work on split screens.

Intelligent cooling

The Intelligent Cooling feature helps you adjust power consumption, computer temperature, and performance.


For models with Windows 10

Intelligent Cooling feature is adjusted through Windows Power Slider.


Do the following to select a preferred mode:

1. Click the battery status icon in the Windows notification area.
2. Move the slider to the left or right to select a preferred mode.

-  Eco mode: power consumption and performance are lowered to get your computer cooler and more eco-friendly, and to get the best battery life.
-  Auto mode: your computer is adjusted automatically to achieve the best mix of power consumption, battery life and computer performance based on the amount of system activity.
-  Performance mode: the maximum performance is prioritized, allowing higher temperature.

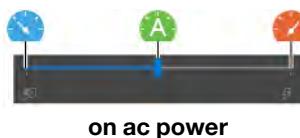

on ac power

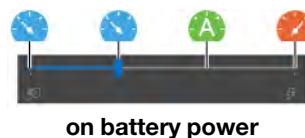

on battery power

For models with Windows 11

Intelligent Cooling feature is adjusted through Power mode or Battery saver in Windows Settings.

Do the following to select a preferred mode:

1. Right-click the battery icon in the task bar to access power, sleep and battery settings.
2. Locate the power section and choose one of the following power modes.

- **Best Power efficiency:** power consumption and performance are lowered to get your computer cooler and more eco-friendly, and to get the best battery life.
- **Balanced:** your computer is adjusted automatically to achieve the best mix of power consumption, battery life and computer performance based on the amount of system activity.
- **Best Performance:** the maximum performance is prioritized, allowing higher temperature.

Manage power

Use the information in this section to achieve the best balance between performance and power efficiency.

Check the battery status

Go to **Settings** → **System** to check the battery status. For more details about your battery, refer to the Vantage app.

Charge the computer

Use ac power

Power source of the ac power adapter:

- Power: 65 W
- Sine-wave input at 50 Hz to 60 Hz
- Input rating of the ac power adapter: 100 V to 240 V ac, 50 Hz to 60 Hz
- Output rating of the ac power adapter: 20 V dc, 3.25 A

When the battery power is low, charge your battery by connecting your computer to ac power with the supplied power adapter. The 65 W ac power adapter supports the rapid charge function, the battery is 80% charged in about one hour when the computer is turned off. The actual charging time depends on the battery size, the physical environment, and whether you are using the computer.



Notes: To maximize the life of the battery:


- Use the battery until the charge is depleted and recharge the battery completely before using it. Once the battery is fully charged, it must discharge to 94% or lower before it will be allowed to recharge again.
- The battery may optimize its full charge capacity based on your usage. After prolonged periods of limited use, full battery capacity may not be available until you discharge to as low as 20% and recharge completely. For more information, refer to the power section of the Vantage app.

Use P-to-P 2.0 (Peer to Peer 2.0) charging function

Both USB-C (Thunderbolt 3) connectors on the computer feature the Lenovo-unique P-to-P 2.0 charging function. To use the function, ensure that **Always On USB** and **Charge in Battery Mode** are enabled in UEFI BIOS of your computers, so that the function works even when the computers are off or in hibernation mode.

To enable **Always On USB** and **Charge in Battery Mode**:

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. Click **Config → USB**, and then to enable **Always On USB** and **Charge in Battery Mode**.

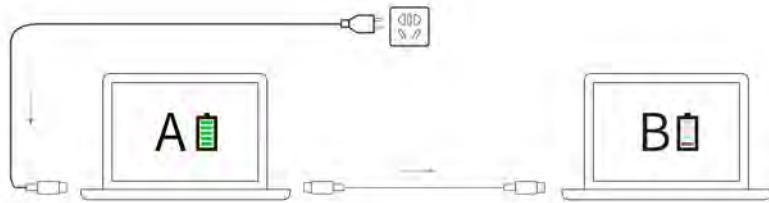

Note: The actual charging speed of your computer depends on many factors, such as the remaining battery power of the computers, the wattage of the ac power adapter, and whether you are using the computers.

Change the power settings

For ENERGY STAR® compliant computers, the following power plan takes effect when your computer has been idle for a specified duration:

- Turn off the display: After 10 minutes
- Put the computer to sleep: After 10 minutes

To reset the power plan:

1. Go to **Control Panel** and view by Large icons or Small icons.
2. Click **Power Options**.
3. Choose or customize a power plan of your preference.

To reset the power button function:

1. Go to **Control Panel** and view by Large icons or Small icons.
2. Click **Power Options**, and then click **Choose what the power buttons do** on the left pane.
3. Change the settings as you prefer.

Transfer data

Quickly share your files using the built-in Bluetooth among devices with the same features.

Set up a Bluetooth connection

You can connect all types of Bluetooth-enabled devices to your computer, such as a keyboard, a mouse, a smartphone, or speakers. To ensure successful connection, place the devices at most 10 meters (33 feet) from the computer.

1. Type **Bluetooth** in the Windows search box and then press Enter.
2. Turn on Bluetooth, if it is off.

3. Select a Bluetooth device, and then follow the on-screen instructions.

Accessories

This section provides instructions on how to use hardware accessories to expand your computer functionalities.

Lenovo Powered USB-C Travel Hub (for selected models)

The Lenovo Powered USB-C Travel Hub provides quick and easy connections between your computer and computer accessories.

The Lenovo Powered USB-C Travel Hub is available as an option and shipped with some computer models. You can purchase one from Lenovo at <https://www.lenovo.com/accessories>.

Overview



	VGA connector		HDMI™ connector
	Ethernet connector		Always On USB connector (USB 3.0)
	USB 2.0 connector		Power connector

Use the Lenovo Powered USB-C Travel Hub

Before you use the hub with your foldable PC, download and install the latest driver at:

https://support.lenovo.com/accessories/lenovo_powerd_usb-c_travel_hub

Connect the Lenovo Powered USB-C Travel Hub to either USB-C connector on your foldable PC.



Charge the Lenovo Powered USB-C Travel Hub



For more information, refer to the documentation of the hub.

Purchase accessories

Lenovo has a number of hardware accessories and upgrades to help expand the functionalities of your computer. Options include memory modules, storage devices, network cards, port replicators or docking stations, batteries, power adapters, keyboards, mice, and more.

To shop at Lenovo, go to <https://www.lenovo.com/accessories>.

Chapter 4. Secure your computer and information

Log in with your fingerprint (for selected models)

Before enrollment, ensure that the keyboard is connected properly to your foldable computer by either the USB-C cable or Bluetooth. Then enroll your fingerprints and unlock computer by scanning your fingerprints on the fingerprint reader key.

1. Type Sign-in options in the Windows search box and then press Enter.
2. Select the fingerprint setting and then follow the on-screen instruction to enroll your fingerprint.

Note: It is recommended that you put your finger at the center of the fingerprint reader during enrollment and enroll more than one fingerprint in case of any injuries to your fingers. After the enrollment, the fingerprints are associated with the Windows password automatically.

3. Log in with your fingerprint.



Associate your fingerprints with UEFI BIOS passwords

You can associate your fingerprints with your power-on password and NVMe password. See “Associate your fingerprints with passwords (for selected models)” on page 46.

Maintenance tips:

- Do not scratch the surface of the reader with anything hard.
- Do not use or touch the reader with a wet, dirty, wrinkled, or injured finger.

Log in with your face ID (for selected models)

For models come with a webcam privacy shutter, slide the webcam privacy shutter to uncover the camera lens before using the Windows Hello face recognition.

Create your face ID and unlock your computer by scanning your face:

1. Type Sign-in options in the Windows search box and then press Enter.
2. Select the face ID setting and then follow the on-screen instruction to create your face ID.

Protect data against power loss

NVMe (Non-Volatile Memory express) M.2 solid-state drive features the Lenovo-unique PLP (Power Loss Protection) function to avoid data loss or damage. If your computer is not responding and you might have to shut down your computer by pressing and holding the power button for several seconds. In this case, the

PLP function enables your computer data to be saved timely. However, there is no guarantee that all data is saved in any situation. To check the type of your M.2 solid-state drive:

1. Restart the computer. When the logo screen is displayed, press F10 to enter the Lenovo diagnostics window.
2. On the TOOLS tab, select **SYSTEM INFORMATION → STORAGE** using the arrow keys.
3. Locate the **Device Type** section to check the information

UEFI BIOS passwords

You can set passwords in UEFI (Unified Extensible Firmware Interface) BIOS (Basic Input/Output System) to strengthen the security of your computer.

Password types

You can set a power-on password, supervisor password, system management password, or NVMe password in UEFI BIOS to prevent unauthorized access to your computer. However, you are not prompted to enter any UEFI BIOS password when your computer resumes from sleep mode.

Power-on password

If you set a power-on password, a window is displayed on the screen when you turn on the computer. Enter the correct password to use the computer.

Supervisor password

The supervisor password protects the system information stored in UEFI BIOS. When entering the UEFI BIOS menu, enter the correct supervisor password in the window prompted. You also can press Enter to skip the password prompt. However, you cannot change most of the system configuration options in UEFI BIOS.

If you have set both the supervisor password and power-on password, you can use the supervisor password to access your computer when you turn it on. The supervisor password overrides the power-on password.

System management password

The system management password can also protect the system information stored in UEFI BIOS like a supervisor password, but it has lower authority by default. The system management password can be set through the UEFI BIOS menu or through Windows Management Instrumentation (WMI) with the Lenovo client-management interface.

You can enable the system management password to have the same authority as the supervisor password to control security-related features. To customize the authority of the system management password through the UEFI BIOS menu:

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. Select **Security → Password → System Management Password Access Control**.
3. Follow the on-screen instructions.

If you have set both the supervisor password and the system management password, the supervisor password overrides the system management password. If you have set both the system management password and the power-on password, the system management password overrides the power-on password.

NVMe passwords

The NVMe password prevents unauthorized access to the data on the storage drive. When an NVMe password is set, you are prompted to type a correct password each time you try to access the storage drive.

- **Single Password**

When a Single NVMe password is set, the user must enter the user NVMe password to access files and applications on the storage drive.

- **Dual Password (User + Admin)**

The admin NVMe password is set and used by a system administrator. It enables the administrator to access any storage drive in a system or any computer connected in the same network. The administrator can also assign a user NVMe password for each computer in the network. The user of the computer can change the user NVMe password as desired, but only the administrator can remove the user NVMe password.

When prompted to enter an NVMe password, press F1 to switch between the admin NVMe password and user NVMe password.

Notes: The NVMe password is not available in the following situations:

- A Trusted Computing Group (TCG) Opal-compliant storage drive and a TCG Opal management software program are installed in the computer, and the TCG Opal management software program is activated.
- An eDrive storage drive is installed in the computer preinstalled with the Windows operating system.

Set, change, and remove a password

Before you start, print these instructions.

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. Select **Security → Password** by using the arrow keys.
3. Select the password type. Then, follow the on-screen instructions to set, change, or remove a password.

You should record all your passwords and store them in a safe place. If you forget any of your passwords, any potential repair actions required are not covered under warranty.

What to do if you forget your power-on password

If you forget your power-on password, do the following to remove the power-on password:

- If you have set a supervisor password and remember it:
 1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
 2. Select **Security → Password → Power-On Password** by using the arrow keys.
 3. Type the current supervisor password in the **Enter Current Password** field. Then, leave the **Enter New Password** field blank, and press Enter twice.
 4. In the Changes have been saved window, press Enter.
 5. Press F10 to save changes and exit the UEFI BIOS menu.
- If you have not set a supervisor password, contact a Lenovo authorized service provider to have the power-on password removed.

What to do if you forget your NVMe password

If you forget your NVMe password (Single password) or both user and admin NVMe passwords (Dual password), Lenovo cannot reset your passwords or recover data from the storage drive. You can contact a Lenovo authorized service provider to have the storage drive replaced. A fee will be charged for parts and

service. If the storage drive is a CRU (Customer Replaceable Unit), you can also contact Lenovo to purchase a new storage drive to replace the old one by yourself. To check whether the storage drive is a CRU and the relevant replacement procedure, see “What are CRUs” on page 59.

What to do if you forget your supervisor password

If you forget your supervisor password, there is no service procedure to remove the password. You have to contact a Lenovo authorized service provider to have the system board replaced. A fee will be charged for parts and service.

What to do if you forget your system management password

If you forget your system management password, do the following to remove the system management password:

- If you have set a supervisor password and remember it:
 1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
 2. Select **Security → Password → System Management Password** by using the arrow keys.
 3. Type the current supervisor password in the **Enter Current Password** field. Then, leave the **Enter New Password** field blank, and press Enter twice.
 4. In the Changes have been saved window, press Enter.
 5. Press F10 to save changes and exit the UEFI BIOS menu.
- If you have not set a supervisor password, contact a Lenovo authorized service provider to have the system management password removed.

Associate your fingerprints with passwords (for selected models)

Do the following to associate your fingerprints with the power-on password and NVMe password:

1. Turn off and then turn on the computer.
2. When prompted, scan your finger on the fingerprint reader.
3. Enter your power-on password, NVMe password, or both as required. The association is established.

When you start the computer again, you can use your fingerprints to log in to the computer without entering your Windows password, power-on password, or NVMe password. To change settings, enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49. Then select **Security → Fingerprint**.

Attention: If you always use your fingerprint to log in to the computer, you might forget your passwords. Write down your passwords and keep them in a safe place.

FIDO (Fast ID) Online authentication

Your computer support FIDO (Fast ID) Online authentication which works as an alternative of password-based authentication to help you achieve passwordless authentication. This new BIOS feature only works when power-on password is set in UEFI BIOS and FIDO2 USB device is registered in ThinkShield™ Passwordless Power-On Device Manager. With this feature, you can input power-on password or use the registered USB FIDO2 device to power on your computer.

Register your FIDO2 USB device in ThinkShield Passwordless Power-On Device Manager

1. Turn on the computer.
2. Press F12 during power on process.
3. If you set a power-on password, a window pops up on the screen when you turn on the computer. Enter the correct password to use the computer.

4. Select **App Menu → ThinkShield Passwordless Power-On Device Manager** and press Enter.
5. Insert FIDO2 device to register the FIDO2 device by following steps:
 - a. Select the available FIDO2 device that you want to register in the **Discovered Devices** area.
 - b. The first window pops up to confirm the device you selected. Click **Yes**.
 - c. If you set a power-on password, a window pops up. Enter the correct password.
 - d. The **User operation request** window pops up. You are required to press a button on the connected FIDO2 device, and then follow the on-screen instruction to close the window.
 - e. Press ESC to exit and restart your computer.

Notes:

- If you want to unregister your devices, click available FIDO2 device that you want to unregister in **My Device** area and enter the correct power-on password for verification.
- If you use more than one FIDO2 devices with common identifier for registration, only one device could be available.

Log in to the System with Passwordless Power-On Authentication

1. Restart the computer.
2. **ThinkShield Passwordless Power-On Authentication** window appears.
3. Insert your registered FIDO2 device for detection.
4. Then follow the on-screen instruction to press the button on your FIDO2 device for verification.
5. After your device is verified, the power-on process continues.

Note: You should insert the FIDO2 device or enter power-on password within 60 seconds. Otherwise, your computer will shut down automatically.

Certificate based BIOS management

Certificate-based BIOS authentication (also called the password-less management mode) provides more secure UEFI BIOS management with password-free solution. It is used to replace the supervisor password / system management password for authentication if you have set one.

Note: Supervisor password / system management password are disabled automatically when certificate mode is enabled. But the power-on password / hard disk password / NVMe password still can be used normally in certificate mode if you have set one.

For certificate enrollment, see *Certificate Enrollment Guide* at: https://support.lenovo.com/docs/certificate_enrollment_guide

Enter the BIOS menu with certificate

Once you have enrolled the certificate, you can enter the BIOS menu with the certificate.

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. The request data is displayed. Click **Save to File** to save the request data in a USB key and send the request data to IT admin by e-mail or phone.
3. Enter the unlock code provided by IT admin and click **OK**.

Notes:

- The unlock code is a one-time password and is valid only during logon prompt (in one power-on cycle) for up to two hours.

- If you click **Skip**, you can enter the BIOS setup menu without BIOS management authority. But certificate reset is allowed.

Reset certificate

The enrolled certificate cannot be disabled. You can reset or remove it:

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. Enter the BIOS menu with the certificate or skip the certification authentication process.
3. Select **Security** → **Reset Certificate**.
4. Follow the on-screen instructions to enter the reset code provided by IT admin.

Chapter 5. Configure advanced settings

UEFI BIOS

UEFI BIOS is the first program that the computer runs. When the computer turns on, UEFI BIOS performs a self test to make sure that various devices in the computer are functioning.

Enter the UEFI BIOS menu

To enter the UEFI BIOS menu, do the following:

1. Restart the computer. When the logo screen is displayed, tap the prompt. The Startup Interrupt Menu window is displayed.
2. In the Startup Interrupt Menu window, tap **F1** to enter the UEFI BIOS menu.

Note: If you have set the supervisor password, enter the correct password when prompted. You also can press Enter to skip the password prompt and enter the UEFI BIOS menu. However, you cannot change the system configurations that are protected by the supervisor password.

Navigate in the UEFI BIOS interface

You can navigate in the UEFI BIOS interface by pressing the following keys:

- F1: General Help
- F9: Setup Defaults
- F10: Save and Exit
- F5 / F6: Change boot priority order
- ↑ ↓ or PgUp / PgDn: Select / Scroll page
- ← →: Move keyboard focus
- Esc: Back / Close dialog
- Enter: Select / Open submenu

Set the system date and time

1. Restart the computer. When the logo screen is displayed, press F1.
2. Select **Date/Time** and set the system date and time as desired.
3. Press F10 to save changes and exit.

Change the startup sequence

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. Select **Startup** → **Boot**. Then, press Enter. The default device order list is displayed.

Note: No bootable device is displayed if the computer cannot start from any devices, or the operating system cannot be found.

3. Set the startup sequence as desired.
4. Press F10 to save the changes and exit.

To change the startup sequence temporarily:

1. Restart the computer. When the logo screen is displayed, tap the prompt. The Startup Interrupt Menu window is displayed.
2. In the Startup Interrupt Menu window, tap **F12**.
3. Select the device that you want the computer to start from and press Enter.

View UEFI BIOS Event log

1. Restart the computer. When the logo screen is displayed, press F1.
2. Select **Main → BIOS Event log**. Then, press Enter. The BIOS Event log interface is displayed.
3. Navigate the interface by pressing the following keys, and then see details by selecting each item.
 - ↑ ↓: Move keyboard focus
 - PgUp / PgDn: Scroll page
 - Enter: Select
 - F3: Exit

The following BIOS event logs might be listed on your screen depending on the UEFI BIOS activities. Each log consists of date, time, and a description of the event.

- **Power On** event: this log shows Power On Self Test (POST) routine has started with power-on process. It includes power on reason, boot mode and shutdown reason.
- **Subcomponent Code Measurement** event: this log shows subcomponent code measurement has worked. It includes validation result of each component.
- **System Preboot Authentication** event: this log shows what credential was provided to gain preboot authentication. It includes installed password, password type, input device and authentication result.
- **BIOS Password Change** event: this log shows changes of the UEFI BIOS passwords. It includes password type, event type and result.
- **Subcomponent Self-healing** event: this log shows information about the subcomponent where the recovery event occurred. It includes event cause, recovered firmware version and result.
- **BIOS Setup Configuration Change** event: this log shows changes of UEFI BIOS Setup configuration. It includes item name and value.
- **Device Change** event: this log shows changes of devices. It includes event cause and event type.
- **System Boot** event: this log shows which boot device was utilized to boot the system. It includes boot option, description and file path list.
- **System Tamper** event: this log shows occurrence of system tamper events. It includes event cause and event type.
- **Runtime Intrusion Detection of SPI Flash** event: this log shows system has detected unauthorized/suspicious access to SPI Flash. It includes event cause and region.
- **On-Demand Measurement** event: this log shows On- Demand measurement has worked. It includes validation result of each component.
- **POST Error** event: this log shows occurrence of errors during POST routine. It includes the error code.
- **Flash Update** event: this log shows occurrence of flash update. It includes event cause, updated firmware version and result.
- **Set On-Premise** event: this logs shows changes of on-premise boot setting. It includes on-premise setting value and change method.
- **Capsule Update** event: this log shows occurrence of UEFI capsule firmware update. It includes event cause, updated firmware version and result.
- **Log Cleared** event: this log shows clearing BIOS event log has executed. It includes event cause and result.

- **Shutdown / Reboot** event: this log shows UEFI BIOS is successfully shut down or the system is rebooted. It includes event cause and event type.

Detect memory retraining

Memory retraining is a process to initialize the memory module and run diagnostic tests for the memory module in your computer. The memory retraining might occur during POST if any of the following situations is detected:

- Memory module replacement
- Total Memory Encryption setting change in UEFI BIOS
- UEFI BIOS update (Memory Reference Code [MRC] change)

When memory retraining occurs, the screen cannot display the progress information and might be blank. You might see the LED indicators on ESC, F1, and F4 blinking sequentially to indicate the progress. Do not press the power button to interrupt the process. Wait a few minutes until the logo screen is displayed.

Reset system to factory defaults

This feature allows you to initialize the UEFI BIOS to the factory default state, including all UEFI BIOS settings and internal data. It helps you wipe user data in case that you want to dispose of or reuse your computer.

Note: If you permanently disable **Intel AMT control** and **Absolute Persistence(R) Module** in UEFI BIOS, you can not reset even if you reset the system to factory default.

How to reset system to factory default

1. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
2. Select **Security** → **Reset System to Factory Defaults** and press Enter.
3. A series of warning windows might pop up. You might be required to do the following before resetting the system to factory default.
 - a. Reset the Certificate-based BIOS Authentication. Refer to “Associate your fingerprints with passwords (for selected models)” on page 46.
 - b. Deactivate the Absolute Persistence Module.
 - c. Remove the NVMe password if you have set one.
4. For computer model with RAID settings, a window pops up to remind you of data damage.
5. If you select **Yes**, a window pops up to confirm your current operation.
6. If you select **Yes**, a window pops up. Enter your supervisor password, system management password or power-on password.
7. Then, your computer will restart immediately. It takes several minutes to complete the initialization.

Note: This initialization process may require the screen to be blank. This is normal and you should not interrupt the process.

Update UEFI BIOS

When you install a new program, device driver, or hardware component, you might need to update UEFI BIOS.

Download and install the latest UEFI BIOS update package by one of the following methods:

- Open the Vantage app to check the available update packages. If the latest UEFI BIOS update package is available, follow the on-screen instructions to download and install the package.

- Go to <https://pcsupport.lenovo.com> and select the entry for your computer. Then, follow the on-screen instructions to download and install the latest UEFI BIOS update package.

Note: During the UEFI BIOS update process, Memory Reference Code (MRC) change might cause memory retraining. Memory retraining is a process to initialize the memory module and run diagnostic tests for the memory module in your computer. When memory retraining occurs, the screen can't display the progress information and might be blank. You might see the LED indicators on ESC, F1, and F4 blinking sequentially to indicate the progress. Do not press the power button to interrupt the process. Wait a few minutes until the logo screen is displayed.

To know more about UEFI BIOS, visit Knowledge Base of your computer at <https://pcsupport.lenovo.com>.

Install a Windows operating system and drivers

This section provides instructions on installing a Windows operating system and device drivers.

Install a Windows operating system

Microsoft constantly makes updates to the Windows operating system. Before installing a particular Windows version, check the compatibility list for the Windows version. For details, go to <https://support.lenovo.com/us/en/solutions/windows-support>.

Attention:

- It is recommended that you update your operating system through official channels. Any unofficial update might cause security risks.
- The process of installing a new operating system deletes all the data on your internal storage drive, including the data stored in a hidden folder.

1. If you are using the Windows BitLocker® Drive Encryption feature and your computer has a Trusted Platform Module, ensure that you have disabled the feature.
2. Ensure that the security chip is set to **Active**.
 - a. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
 - b. Select **Security** → **Security Chip** and press Enter. The **Security Chip** submenu opens.
 - c. Ensure that the security chip for TPM 2.0 is set to **Active**.
 - d. Press F10 to save the settings and exit.
3. Connect the drive that contains the operating system installation program to the computer.
4. Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
5. Select **Startup** → **Boot** to display the **Boot Priority Order** submenu.
6. Select the drive that contains the operating system installation program, for example, **USB HDD**. Then, press Esc.

Attention: After you change the startup sequence, ensure that you select the correct device during a copy, a save, or a format operation. If you select the wrong device, the data on that device might be erased or overwritten.

7. Select **Restart** and ensure that **OS Optimized Defaults** is enabled. Then, press F10 to save the settings and exit.
8. Follow the on-screen instructions to install the device drivers and necessary programs.
9. After installing the device drivers, apply Windows Update to get the latest updates, for example the security patches.

Install device drivers

You should download the latest driver for a component when you notice poor performance from that component or when you added a component. This action might eliminate the driver as the potential cause of a problem. Download and install the latest driver by one of the following methods:

- Open the Vantage app to check the available update packages. Select the update packages you want, and then follow the on-screen instructions to download and install the packages.
- Go to <https://pcsupport.lenovo.com> and select the entry for your computer. Then, follow the on-screen instructions to download and install necessary drivers and software.

Chapter 6. Help and support


Frequently asked questions

How do I access **Control Panel**? Type Control Panel in the Windows search box and then press Enter.

How do I turn off my computer? Open the **Start** menu and click  **Power**. Then, click **Shut down**.

How do I partition my storage drive? <https://support.lenovo.com/solutions/ht503851>

1. Press and hold the power button until the computer turns off. Then, restart the computer.
2. If step 1 does not work:
 - For models with emergency reset holes: Insert a straightened paper clip into the emergency reset hole to cut off power supply temporarily. To pop open the Then, restart the computer with ac power connected.

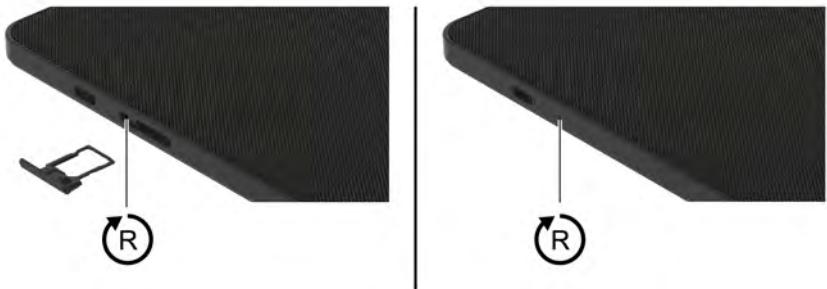

What do I do if my computer stops responding?

- For models without an emergency reset hole:
 - For models with the removable battery, remove the removable battery and disconnect all power sources. Then, reconnect to ac power and restart the computer.
 - For models with the built-in battery, disconnect all power sources. Press and hold the power button for about seven seconds. Then, reconnect to ac power and restart the computer.

1. Carefully unplug the ac power adapter and turn off the computer immediately. The more quickly you stop the current from passing through the computer the more likely you will reduce damage from short circuits.

Attention: Although you might lose some data or work by turning off the computer immediately, leaving the computer on might make your computer unusable.

2. Do not try to drain out the liquid by turning over the computer. If your computer has keyboard drainage holes on the bottom, the liquid will be drained out through the holes.
3. Wait until you are certain that all the liquid is dry before turning on your computer.

What do I do if I spill liquid on the computer?

How do I enter the UEFI BIOS menu?	Enter the UEFI BIOS menu. See “Enter the UEFI BIOS menu” on page 49.
------------------------------------	--

Where can I get the latest device drivers and UEFI BIOS?	<ul style="list-style-type: none">From the Vantage app. See “Enter the UEFI BIOS menu” on page 49 and “Update UEFI BIOS” on page 51.Download from Lenovo Support Web site at https://pcsupport.lenovo.com.
--	--

Error messages

If you see a message that is not included in the following table, record the error message first, then shut down the computer and call Lenovo for help. See “Lenovo Customer Support Center” on page 61.

Message	Solution
0190: Critical low-battery error	The computer turned off because the battery power is low. Connect the ac power adapter to the computer and charge the batteries.
0191: System Security - Invalid remote change requested	The system configuration change has failed. Confirm the operation and try again.
0199: System Security - Security password retry count exceeded.	This message is displayed when you enter a wrong supervisor password more than three times. Confirm the supervisor password and try again.
0271: Check Date and Time settings.	The date or the time is not set in the computer. Enter the UEFI BIOS menu and set the date and time.
210x/211x: Detection/Read error on HDDx/SSDx	The storage drive is not working. Reinstall the storage drive. If the problem still exists, replace the storage drive.
<p>Note: This error indicates that the operating system or programs cannot create, modify, or delete data in the non-volatile system UEFI variable storage due to insufficient storage space after POST.</p> <p>The non-volatile system UEFI variable storage is used by the UEFI BIOS and by the operating system or programs. This error occurs when the operating system or programs store large amounts of data in the variable storage. All data needed for POST, such as UEFI BIOS setup settings, chipset, or platform configuration data, are stored in a separate UEFI variable storage.</p> <p>Tap the screen after the error message is displayed, and follow the on-screen instructions to enter the UEFI BIOS menu. A dialog asks for confirmation to clean up the storage. If you select “Yes”, all data that were created by the operating system or programs will be deleted except global variables defined by the Unified Extensible Firmware Interface Specification. If you select “No”, all data will be kept, but the operating system or programs will not be able to create, modify, or delete data in the storage.</p> <p>If this error happens at a service center, Lenovo authorized service personnel will clean up the non-volatile system UEFI variable storage using the preceding solution.</p>	
Fan error. Press ESC to startup with limited performance.	The thermal fan might not work correctly. After the error message is displayed, press ESC within five seconds to start up the computer with limited performance. Otherwise, the computer will shut down immediately. If the problem still exists when you starts up next time, have your computer serviced.

Self-help resources

Use the following self-help resources to learn more about the computer and troubleshoot problems.

Resources	How to access?
Troubleshooting and FAQ	<ul style="list-style-type: none">• https://www.lenovo.com/tips• https://forums.lenovo.com
Accessibility information	https://www.lenovo.com/accessibility
Reset or restore Windows	<ul style="list-style-type: none">• Use Lenovo recovery options.<ol style="list-style-type: none">1. Go to https://support.lenovo.com/HowToCreateLenovoRecovery.2. Follow the on-screen instructions.• Use Windows recovery options.<ol style="list-style-type: none">1. Go to https://pcsupport.lenovo.com.2. Detect your computer or manually select your computer model.3. Navigate to the troubleshooting menu to diagnose the operating system for recovery instructions.

Use the Vantage app to:

- Configure device settings.
- Download and install UEFI BIOS, drivers, and firmware updates.
- Secure your computer from outside threats.
- Diagnose hardware problems.
- Check the computer warranty status.
- Access *User Guide* and helpful articles.

Type Vantage in the Windows search box and then press Enter.

Note: The available features vary depending on the computer model.

Product documentation:

- *Safety and Warranty Guide*
- *Generic Safety and Compliance Notices*
- *Setup Guide*
- *This User Guide*
- *Regulatory Notice*

Go to <https://pcsupport.lenovo.com>. Then, follow the on-screen instructions to filter out the documentation you want.

Resources	How to access?
Lenovo Support Web site with the latest support information of the following: <ul style="list-style-type: none"> • Drivers and software • Diagnostic solutions • Product and service warranty • Product and parts details • Knowledge base and frequently asked questions 	https://pcsupport.lenovo.com
Windows help information	<ul style="list-style-type: none"> • Open the Start menu and click Get Help or Tips. • Use Windows Search or the Cortana® personal assistant. • Microsoft support Web site: https://support.microsoft.com

Windows label

Your computer might have a Windows Genuine Microsoft label affixed to ac adapter depending on the following factors:

- Your geographic location
- Edition of Windows that is preinstalled

Go to <https://www.microsoft.com/en-us/howtotell/Hardware.aspx> for illustrations of the various types of Genuine Microsoft labels.

- In the People's Republic of China, the Genuine Microsoft label is required on all computer models preinstalled with any edition of the Windows operating system.
- In other countries and regions, the Genuine Microsoft label is required only on computer models licensed for Windows Pro editions.

The absence of a Genuine Microsoft label does not indicate that the preinstalled Windows version is not genuine. For details on how to tell whether your preinstalled Windows product is genuine, refer to the information provided by Microsoft at <https://www.microsoft.com/en-us/howtotell/default.aspx>.

There are no external, visual indicators of the Product ID or Windows version for which the computer is licensed. Instead, the Product ID is recorded in the computer firmware. Whenever a Windows product is installed, the installation program checks the computer firmware for a valid, matching Product ID to complete the activation.

In some cases, an earlier Windows version might be preinstalled under the terms of the Windows Pro edition license downgrade rights.

What are CRUs

Customer Replaceable Units (CRUs) are parts that can be upgraded or replaced by the customer. The computers contain the following types of CRUs:

- **Self-service CRUs:** Refer to parts that can be installed or replaced easily by customer themselves or by trained service technicians at an additional cost.

- **Optional-service CRUs:** Refer to parts that can be installed or replaced by customers with a greater skill level. Trained service technicians can also provide service to install or replace the parts under the type of warranty designated for the customer's machine.

If you intend on installing a CRU, Lenovo will ship the CRU to you. CRU information and replacement instructions are shipped with your product and are available from Lenovo at any time upon request. You might be required to return the defective part that is replaced by the CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. For full details, see the Lenovo Limited Warranty documentation at https://www.lenovo.com/warranty/lw_02.

Refer to the following CRU list for your computer.

Self-service CRUs

- ac power adapter
- Lenovo Precision Pen*
- Lenovo Precision Pen 2*
- Nano-SIM-card tray*
- Power cord
- ThinkPad Bluetooth TrackPoint Keyboard*
- Keyboard Stand*

* for selected models

Note: Replacement of any parts not listed above, including the built-in rechargeable battery, must be done by a Lenovo-authorized repair facility or technician. Go to <https://support.lenovo.com/partnerlocator> for more information.

Call Lenovo


If you have tried to correct the problem yourself and still need help, you can call Lenovo Customer Support Center.

Before you contact Lenovo

Prepare the following before you contact Lenovo:

1. Record the problem symptoms and details:
 - What is the problem? Is it continuous or intermittent?
 - Any error message or error code?
 - What operating system are you using? Which version?
 - Which software applications were running at the time of the problem?
 - Can the problem be reproduced? If so, how?
2. Record the system information:
 - Product name
 - Machine type and serial number

The following illustration shows where to find the machine type and serial number of your computer.

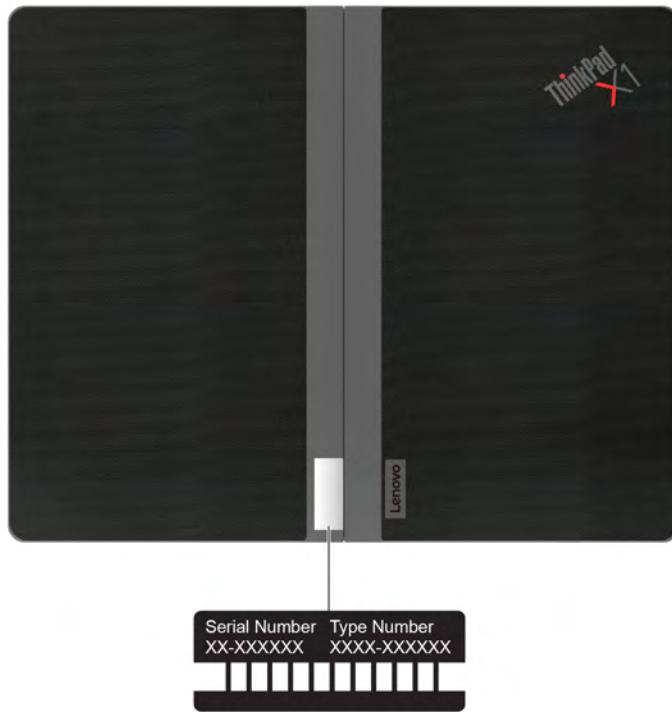

Lenovo Customer Support Center

During the warranty period, you can call Lenovo Customer Support Center for help.

Telephone numbers

For a list of the Lenovo Support phone numbers for your country or region, go to <https://pcsupport.lenovo.com/supportphonelist> for the latest phone numbers.

Note: Phone numbers are subject to change without notice. If the number for your country or region is not provided, contact your Lenovo reseller or Lenovo marketing representative.

Services available during the warranty period

- Problem determination - Trained personnel are available to assist you with determining if you have a hardware problem and deciding what action is necessary to fix the problem.
- Lenovo hardware repair - If the problem is determined to be caused by Lenovo hardware under warranty, trained service personnel are available to provide the applicable level of service.
- Engineering change management - Occasionally, there might be changes that are required after a product has been sold. Lenovo or your reseller, if authorized by Lenovo, will make selected Engineering Changes (ECs) that apply to your hardware available.

Services not covered

- Replacement or use of parts not manufactured for or by Lenovo or nonwarranted parts
- Identification of software problem sources
- Configuration of UEFI BIOS as part of an installation or upgrade
- Changes, modifications, or upgrades to device drivers
- Installation and maintenance of network operating systems (NOS)
- Installation and maintenance of programs

For the terms and conditions of the Lenovo Limited Warranty that apply to your Lenovo hardware product, go to:

- https://www.lenovo.com/warranty/llw_02
- <https://pcsupport.lenovo.com/warrantylookup>

Purchase additional services

During and after the warranty period, you can purchase additional services from Lenovo at <https://pcsupport.lenovo.com/warrantyupgrade>.

Service availability and service name might vary by country or region.

Appendix A. Compliance information

For compliance information, refer to *Regulatory Notice* at <https://pcsupport.lenovo.com> and *Generic Safety and Compliance Notices* at https://pcsupport.lenovo.com/docs/generic_notices.

Certification-related information

Product name	Compliance ID	Machine type(s)
ThinkPad X1 Fold 16 Gen 1	TP00144A	21ES and 21ET
ThinkPad X1 Fold 16 Gen 1 5G ¹	TP00144A0 ²	

¹ for mainland China only / ² for India only

Further compliance information related to your product is available at <https://www.lenovo.com/compliance>.

Locate the UltraConnect wireless antennas

Your computer has an UltraConnect™ wireless antenna system. You can enable wireless communication wherever you are.

The following illustration shows the antenna locations on your computer:



1 Wireless WAN antenna (main)*

2 Wireless WAN antenna (MIMO1)* and Wireless LAN antenna (auxiliary)

3 Wireless LAN antenna (main)* / Wireless WAN antenna (MIMO2)*

4 Wireless WAN antenna (auxiliary)*

5 Wireless LAN antenna (main)*

* for selected models

Operating environment

Maximum altitude (without pressurization)

3048 m (10 000 ft)

Temperature

- Operating: 5°C to 35°C (41°F to 95°F)
- Storage and transportation in original shipping packaging: -20°C to 60°C (-4°F to 140°F)
- Storage without packaging: 5°C to 43°C (41°F to 109°F)

Note: When you charge the battery, its temperature must be no lower than 10°C (50°F).

Relative humidity

- Operating: 8% to 95% at wet-bulb temperature 23°C (73°F)
- Storage and transportation: 5% to 95% at wet-bulb temperature 27°C (81°F)

Appendix B. Notices and trademarks

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in the manuals included with your computer, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your computer might not match exactly the actual configuration of the computer that you purchase. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Lenovo and is not covered by any open source license, including any Linux® agreement(s) which may accompany software included with this product. Lenovo may update this document at any time without notice.

For the latest information or any questions or comments, contact or visit the Lenovo Web site:

<https://pcsupport.lenovo.com>

Trademarks

LENOVO, LENOVO logo, THINKPAD, THINKPAD logo, TRACKPOINT, and ULTRACONNECT are trademarks of Lenovo. Intel and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft, Microsoft Teams, Windows, BitLocker, and Cortana are trademarks of the Microsoft group of companies. Mini DisplayPort (mDP) and DisplayPort are trademarks of the Video Electronics Standards Association. Dolby, Dolby Voice, and Dolby Atmos are trademarks of Dolby Laboratories Licensing Corporation. USB-C is a registered trademark of USB Implementers Forum. Wi-Fi and Miracast are registered trademarks of Wi-Fi Alliance. All other trademarks are the property of their respective owners.