



V 1.0

4. Web Access

You can access the unit through a web browser by using the following steps:

- ① Connect an Ethernet cable from your computer to GE1 on the 5266XG.
- ② Launch a browser or telnet session and point it to **192.168.1.1**.
- ③ Enter the username and password.

The default username/password is **admin/dzsi**
For security the password should be changed.



Quick Installation Guide
5266XG

Information furnished by DZS is believed to be accurate and reliable. However, no responsibility is assumed by DZS for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of DZS. DZS reserves the rights to change specifications at any time without notice.

Copyright 2023 DZS, Inc. All Rights Reserved.

1. Caution

Please follow the instructions below to avoid physical injury:
You should not install the unit during a storm. Likewise you should not connect or disconnect any line to avoid the risk of electric shock.

⚠ Caution & Warning

- *This unit is indoor use and all the communication wirings are limited to inside of the building.*
- *DO NOT plug in, turn on or attempt to operate an obviously damaged unit.*
- *Never look directly at the fiber TX port and fiber cable ends when they are powered on.*
- *DO NOT use near water.*
- *DO NOT place near high temperature source.*
- *DO NOT disassemble the unit.*
- *DO NOT operate the unit in a location where the maximum ambient temperature exceeds 40°C.*
- *Open optical connections must use a protective cap under all circumstances to protect against physical damage and dirt.*
- *Before making connections, use isopropyl alcohol and non-fibrous cellulose to clean the faces of the connectors.*
- *Avoid impact stresses when handling connectors. Physical damage to the faces of optical connections impairs transmission quality (higher attenuation).*
- *Avoid a bend radius in excess of 30 mm for fiber optic links.*
- *Check the available voltage supply.*
- *Only use the unit in dry rooms.*
- *Set up the unit away from direct sunlight or other electrical equipment.*
- *Only connect approved accessories.*
- *It may only be repaired by authorized service personnel.*
- *This equipment is not suitable for use in locations where children are likely to be present.*

☑ Limited Warranty

- *Not covered under this warranty is defect and damage resulting from product disassembly by yourself. And also, such behavior may amount to intellectual property infringement.*

2. Introduction


2.1 Package Contents

- 5266XG
- Desktop Stand
- QIG (Quick Installation Guide)


2.2 Specification

Item	Specification
Uplink Interface	1 XGS-PON port (SC/APC)
Service Interface	4 10/100/1000Base-T ports (RJ45) 1 1G/2.5GBase-T port (RJ45)
VoIP Interface	2 FXS ports (RJ11)
Power Adapter	Output: 12VDC/1.5A
Operating Temp.	0 to 40°C (32 to 104°F)
Operating Humidity	5 to 95% (non-condensing)

Dimensions

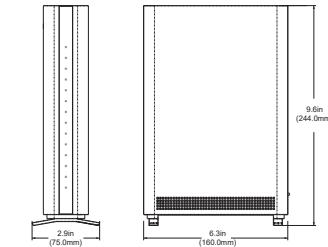

2.3 Interface

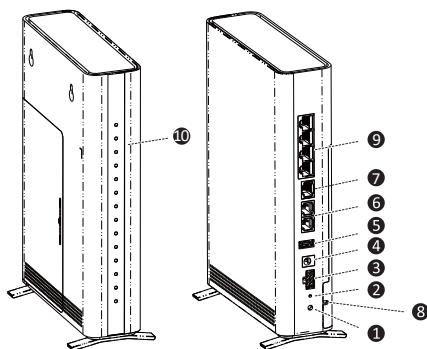

3

Item	Description
① WPS	Enable WPS process.
② RESET button	Reboot the unit.
③ UPS	Power connector and UPS backup power
④ Power port	Connect an external power supply.
⑤ USB	Connect an external 3.0 USB drive
⑥ POTS 1-2	Connect to VoIP phone.
⑦ 2.5GE	Connect to PC or LAN. (1G/2.5GBase-Rinterface)
⑧ Fiber Connector	Connect optical network.
⑨ GE 1-4	Connect to PC or LAN. (10/100/1000Base-Tinterfaces)
⑩ LEDs	Operating status LEDs.


2.4 LED

Label	Light	Status	Definition
STATUS	Blue	ON	Normal Operation
		Rapid Blink (10/sec)	Unit has been reset to factory defaults /is unconfigured.
		Slow Blink	Boot-up / Initialization / provisioning in progress
		OFF	Power off
BATT	Yellow	ON	Normal operation on AC source
		Slow Blink (2/sec)	Battery Alarm (Low Battery, Missing or Replace)
		OFF	No major alarms
ALARM	Red	ON	Major Alarm (including operating in battery power)
		Slow Blink (2/sec)	SW or Config update in progress
		ON	Ranged successfully
WAN	Blue	Flash	Ranging in progress
		OFF	Not ready for ranging or not provisioned
INTERNET	Blue	ON	Internet service is available.
		OFF	Internet service is unavailable. (no response from DNS server)
GE1/4-2.5GE	Blue	ON	Ethernet interface linked
		Flash	Data transmitting
		OFF	Ethernet interface not linked
		ON	Registered successfully
VOICE	Blue	Slow Blink (1/sec)	Off hook
		OFF	Registration failed or telephone service is not provisioned.
		ON	2.4GHz Wi-Fi service is enabled on ONT.
2.4GHz	Blue	Slow Blink (1/sec)	2.4GHz Wi-Fi data passing between ONT and connected devices.
		OFF	2.4GHz Wi-Fi service is disabled on ONT.
		ON	5GHz Wi-Fi service is enabled on ONT.
5GHz	Blue	Slow Blink (1/sec)	5GHz Wi-Fi data passing between ONT and connected devices.
		OFF	5GHz Wi-Fi service is disabled on ONT.
		ON	WPS successful connection established (for 5 sec)
WPS	Blue	Slow Blink (1/sec)	WPS in progress
		OFF	Disabled or process successfully finished

4

3. Installation


- ① Remove fiber service cover to expose XGS-PON port.
- ② Connect fiber optic cable with SC/APC termination to the XGS-PON port.
- ③ Re-attach the fiber service cover onto the 5266XG.

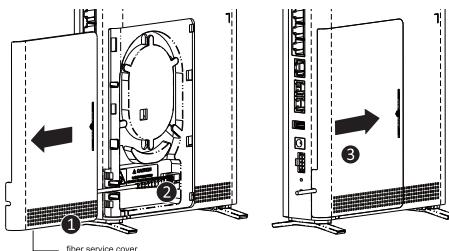

- ④ Connect the Ethernet cable from 1GE or 2.5GE port to PC.
- ⑤ Connect the telco cable from POTS port to home phone lines.
- ⑥ Connect the power cable from power port to an electrical outlet.
- ⑦ (OPTIONAL) Connect the Battery Backup Unit power and telemetry to the UPS port.


UPS Connector Pinouts

Pin	Signal	Comments
1	+VDC	Power in from UPS
2	-VDC	Power return to UPS
3	On Battery	Open signal when on battery power
4	Signal Return	Connected to Signal GND on ONT
5	Missing Battery	Open signal when battery not detected
6	Replace Battery	Open signal when battery should be replaced
7	GND	Connected to Signal GND on ONT
8	Low Battery	Open signal when battery is low

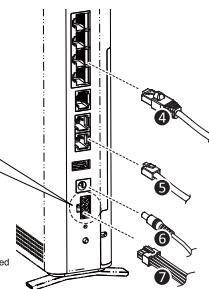

Mounting on a Wall

If necessary, you may have your ONT mounted on a wall using mounting holes.

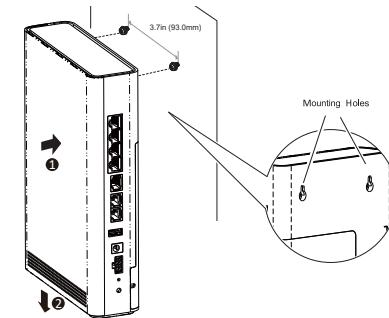

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IC Warning

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada . Son fonctionnement est soumis aux deux conditions suivantes :

- (1) Ce dispositif ne peut causer d'interférences ; et
- (2) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

Ce matériel est complété par une exposition de rayonnements ISED pour un environnement naturel. Ce matériel doit être installé et se faire avec une distance minimale de 20cm entre les radiateurs et les autresYour body shop.