

IEEE802.11n/a/b/g Wireless LAN Access Point Board FXE2000-G Setup Guide CONTEC CO.,LTD.

The FXE2000-G is a wireless LAN board that conforms to IEEE 802.11n/a/b/g standards of various countries and features a wide input power supply (5 to 30 VDC) and can be configured either as an access point or station.

Packing List

- Main unit (FXE2000-G)...1

- Setup Guide...1

How to Obtain Service



For replacement or repair, return the device freight prepaid, with a copy of the original invoice. Please obtain a Return Merchandise Authorization number (RMA) from the CONTEC group office where you purchased before returning any product. *No product will be accepted by CONTEC group without the RMA number.

Default setting

This product is set up via a network using a Web browser. Connect this product to the PC with a LAN cable using the wired LAN connection and then access the default IP address in a web browser. This product's default settings are shown in the table to the right.

Setting Item	Default setting
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
ESSID	LocalGroup
Security	Disable
Username	admin
Password	pass

Component Locations

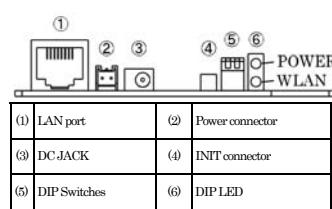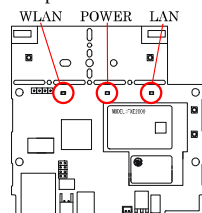

LED display


LED name	Status	Indicator
POWER	ON	Indicates that the device is operating.
	Flashing	Indicates that the device is being started (This device turned on)
	OFF	Indicates that the device is power off.
LAN	ON	Indicates that a wired LAN has been connected.
	Flashing	Indicates that the product is transmitting/receiving data to/from the connected terminal through wired LAN.
	OFF	Indicates that a wired LAN not logged-in.
WLAN	ON	Indicates that the device has been connected.
	Flashing	Indicates data is being transmitted to or received from the device connected through wireless LAN.
	OFF	Indicates that the device has been not connected.
POWER/LAN/WLAN	Flashing (simultaneously)	Indicates that firmware has been reprogrammed. *1
POWER/LAN	Blinking twice / On	DHCP error

*1 Not include LogFile

DIP switches

No.	Name	Operation / function
1	INIT	Turning on this switch flashes the POWER, WLAN LEDs. If the switch is turned off before the LEDs change their status from flashing to ON (about 3 seconds), all the settings are restored to the default settings after the product is started next time. Reboot the product after the LEDs stop flashing. *1
2		

Pin header (JP2)



No.	Name	Operation / function
1	LAN port 4pin	The INIT (initialization) signal can be connected to via pin 4 on the LAN port by shorting pin 1 and pin 2.
2	INIT	
3	LAN port 5pin	The GND can be connected to via pin 5 on the LAN port by shorting pin 3 and pin 4.
4	GND	
5	LAN port 7pin	The power supply line can be connected to via pin 7 on the LAN port by shorting pin 5 and pin 6.
6	24VDC	
7	LAN port 8pin	The GND can be connected to via pin 8 on the LAN port by shorting pin 7 and pin 8.
8	GND	

*1 Usable when JP2 No. 1 and No. 2 are connected. When initializing the product by turning the INIT signal on and off, the LEDs will continue flashing for a short time after the signal is turned off. This indicates the internal memory files are being deleted. If the power is turned off while the LEDs are flashing, the internal memory files may be damaged and the product may no longer be able to start properly. Always restart the product after the LEDs stop flashing.

CAUTION

When supplying power via the LAN connector, do not use a combination of power supplied from the power connector and the AC adapter.


Power Supply

Using the DC JACK

The power plug to be used must conform to EIAJ voltage classification 2.

CAUTION

When supplying power via the LAN connector, do not use a combination of power supplied from the power connector and the AC adapter.



Using the Power connector


The power connector in Figure 1 can be used to supply power from an external source. Use the following power cable or its equivalent.

Power connector			
Housing: JST S02B-PASK-2(LF)(SN) Cable: AWG28-16(equivalent to it)			
Pin No.	Name	Operation / function	
1	Vi+	5-30VDC(±5%)	1 pin
2	Vi-	GND	

When supplying the LAN cable power

CAUTION

- Create the power cable correctly as specified. Using the power cable with the housing pins assigned wrong numbers may result in device faults or accidents.
- The input voltage range of this product is from 5 to 24 VDC ±5%. Supply power outside that range may result in device faults or accidents.
- Use the power supply whose supply voltage rises to at least 4.75VDC within the input voltage range within 10ms. Using a power supply which does not satisfy this condition may result in device faults or accidents.
- Input voltage range: 5 to 30 VDC ± 5%. Use a power supply that rises to 4.75 VDC or higher in the input voltage range within 10 ms. There is a risk of damage to the device or accident if a power supply outside this range is used.

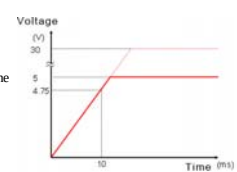

Installation

Read and understand the following precautions before installation :

- Leaving a metal object in the vicinity of 30mm from the antenna board affects the antenna characteristics.
- Do not place metal objects near the antenna as possible.
- This product has a protrusion of up to 14mm on the front surface and a protrusion of up to 3mm on the rear surface. Allow clearance around this product and use it within the range of ambient temperatures satisfying the environment conditions for installation.
- Figure 2 shows the locations the mounting holes for installing this product and external dimensions.
- Use M2 screws for the mounting holes (φ2.3 mm).
- The lower right mounting hole is the FGND (grounding) hole. Connect it to FGND (ground).

*1 Always reboot the product after the flashing stops. The flashing continues for a little while after the product is switched off during initialization by switching on and off the INIT switch. This indicates internal memory files are being deleted. The internal memory files may be damaged and the product may not start up properly if the power is switched off before the flashing stops.

Connecting to This Product Using Web Browser

Start up a Web browser and enter the IP address of this product after "http: //" in the address bar. If connecting for the first time, enter the default IP address. When the default setting IP address is 192.168.0.1, enter as follows.

<http://192.168.0.1/>

Connecting to this product displays the "Wireless LAN Manager" login screen/ If the login screen is not displayed, the IP address setting for PC, browser settings, or the URL entered in the address bar of the browser may be incorrect.



Enter a password on the login screen and then click "Login" to log in.

When connecting for the first time, Default setting is Username="admin" & Password="pass" and just click "OK". If the login is successful, the following setup screen will be displayed after a little while.

Setup Using Web Browser

Select the desired setting items from the opened menu (1). Information such as setting items will be displayed in the right-hand frame.

For more information about a setting item, please refer to "help" (2).

Click "Submit" (3) after changing settings on each page to temporarily save the settings in this product.

The settings become enabled when the product is restarted after all the setup procedure is completed and the settings are stored. Click "Save & Reboot" (4) on the left-hand menu.

There will be no problem if you just save the settings now but reboot the product later when necessary. In this case, saving the settings does not actually change the settings of the product. Therefore, make sure to reboot the product later

CAUTION

It takes approximately 5 - 10 seconds to save settings (writing to internal flash memory). During that period, the LEDs for POWER, LAN and WLAN at the front part of the main unit blink simultaneously. Do not reboot or turn off the product until the screen indicates the completion of the saving process. The setup file data and firmware data may be damaged and the product may not operate properly if it is rebooted or switched off during the saving process.



*2 These are theoretical values based on their respective wireless LAN standards; they do not indicate actual data transfer rates.

Name	Specification
Input voltage range	5VDC±5% (DC Jack), 5 - 30VDC±5% (power connector), 24VDC±10% (PoE)
Rating input current	1.05A (5VDC input), 0.19A (30VDC input) (Max), 0.24A (PoE input 24V)
Operating ambient temperature	0 ~ 50°C
Operating ambient humidity	10 ~ 90%RH (No condensation)
Floating dust particles	Not extreme
Corrosive gases	None

This document provides safety information using the following symbols to prevent accidents resulting in injury or death and the destruction of equipment and resources. Understand the meanings of these labels to operate the equipment safely.

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

It is prohibited to modify the inside of this product. The product cannot be used in any country other than those authorized for use.

Wireless LAN uses radio waves instead of LAN cables to send and receive data between a computer and a wireless access point, making it possible to freely establish a LAN connection within a range of the radio waves. However, radio waves can be received through obstacles, such as walls, when within the range. Therefore, if security settings are not made, the following problems may occur.

Unauthorized viewing of data An unauthorized third party can intercept the radio waves and view e-mail messages and personal information, such as user ID and password or your credit card information. Unauthorized access An unauthorized third party can access a personal or corporate network and cause the following damage:

- The wireless LAN card and wireless access point have security features to counter these problems. Using the security settings of the wireless LAN equipment can help prevent these problems from occurring. The security settings of the wireless LAN equipment are not configured at the time of purchase.

To reduce security problems, configure all security settings of the wireless LAN equipment according to the manual before using the wireless LAN card and wireless access point. Please be aware that the security settings do not provide complete security protection due to wireless LAN specifications. If you are unable to configure the security settings yourself, please contact your local authorized dealer.

Notes on Radio Interface

The 2.4GHz band used by this product covers the operating frequencies of mobile-identification local radio stations (requiring the license), specific low-power radio stations (requiring no license) and amateur wireless stations (requiring the license) as well as industrial, scientific, and medical equipment such as microwave ovens.

- ### About the speed mark

The link speed shown for the transmission rate in this manual, the setup screens, and elsewhere is the theoretical maximum value based on the wireless LAN standard and does not represent the actual data transfer rate.

This product has not been developed or manufactured to be used in systems including the equipment which is directly related to human lives *1 or the equipment which involves human safety and may significantly affect the maintenance of public functions *2. Therefore, do not use the product for such purposes. In addition, do not use the product within 20cm from a human body on a regular basis.

*1: Medical devices such as life-support equipment and devices used in an operating theater.

*2: Main control systems at nuclear power stations, safety maintenance systems at nuclear facilities, other important safety-related systems, operation control systems within group transport systems, air-traffic control systems, etc.

If using the IEEE802.11a standard, ensure that you comply with all relevant laws in the country of use. Outdoor use of IEEE802.11a is prohibited in some countries. It is not possible to use it by limiting Radio Law in Japan.

⚠ DANGER

or failure.

- This product contains no animal products.
Otherwise, the best choice is to buy organic.

- Do not use or store this device in high temperature or low temperature surroundings, or do not expose it to extreme temperature changes. Otherwise, the board may malfunction, overheat, or cause a failure.
- Do not use or store this device where it is exposed to direct sunlight or near stoves or other sources of heat. Otherwise, the board may malfunction, overheat, or cause a failure.
- Do not use or store this device near strong magnetic fields or devices emitting electromagnetic radiation. Otherwise, the board may malfunction, overheat, or cause a failure.
- If an unusual smell or overheat is noticed, unplug the power cable immediately. In the event of an abnormal condition or malfunction, please contact your retailer.
- The specifications of this product are subject to change without notice for enhancement and quality improvement. Even when using the product continuously, be sure to read the manual and understand the contents.
- Do not attempt to modify this device. The manufacturer will bear no responsibility whatsoever for the device if it has been modified.
- The product must always be associated with the instruction manual.
- Regardless of the foregoing statements, CONTEC is not liable for any damages whatsoever (including damages for loss of business profits) arising out of the use or inability to use this CONTEC product or the information contained herein.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

- The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- The transmitter module may not be co-located with any other transmitter or antenna.
- The antenna of the module must be installed at a location where the EM wave can be received or transmitted freely without the blocking by the final house or any internal/external object(s). Preferably be seated above the final device to make sure radar signal can be detected without reduce in sensitivity.

As long as 3 conditions above are met, further transmitter test will not be required. However, the Embedded System Integrators is still responsible for testing their end-product for any additional compliance requirements required with this module installed

IMPORTANT NOTE: In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the Embedded System Integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling: This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: "Contains FCC ID: PQRFXE2000-G". The grantee's FCC ID can be used only when all FCC compliance requirements are met.

Manual Information to the End User: The Embedded System Integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

For operation within 5.15 ~ 5.25GHz / 5.47 ~ 5.725GHz frequency range, it is restricted to indoor environment. The band from 5600-5650MHz will be disabled by the software during the manufacturing and cannot be changed by the end user. This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

This device meets the requirements for operation in the 5400 - 5725 MHz band specified in KDB 443999.

Professional installation instruction

1. Installation personnel:

This product is designed for specific application and needs to be installed by a qualified personnel who has RF and related rule knowledge. The general user shall not attempt to install or change the setting.

2. Installation location:

The product shall be installed at a location where the radiating antenna can be kept 20cm from nearby person in normal operation condition to meet regulatory RF exposure requirement. Also, the antenna of the module must be installed at a location where the EM wave can be received or transmitted freely without the blocking by the final house or any internal/external object(s). Preferably be seated above the final device to make sure radar signal can be detected without reduce in sensitivity.

3. External antenna:

Use only the antennas which have been approved by the applicant. The non-approved antenna(s) may produce unwanted spurious or excessive RF transmitting power which may lead to the violation of FCC limit and is prohibited.

4. Installation procedure:

Please refer to user's manual for the detail.

5. Warning

Please carefully select the installation position and make sure that the final output power does not exceed the limit set force in relevant rules. The violation of the rule could lead to serious federal penalty.

Copyright 2012 CONTEC CO., LTD. All Rights Reserved.

CONTEC CO.,LTD.

May 2012 Edition

3-9-31, Himesato, Nishiyodogawa-ku, Osaka 555-0025, Japan

Japanese <http://www.contec.co.jp/> English <http://www.contec.com/>

Chinese <http://www.contec.com.cn/>

NA01967 (LYNZ931)

[05112012]

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.
