

Normally, you would use the eject button to remove the WLAN Adapter. However, you are advised to refer to your system's manual on properly ejecting your WLAN Adapter from the slot.

5 Using the Configuration & Monitor Utility

In special circumstances, you may need to change configuration settings depending on how you would like to manage your wireless network. The Configuration & Monitor Application utility enables you to make configuration changes and perform user-level diagnostics on your WLAN Adapter as well as monitor the status of communication.

5.1 Configure 802.11b WLAN/Flash Disk USB Adapter Under Windows XP

Windows XP is the only operating system right now that enables you to configuration the WLAN Adapter without using the Configuration & Monitor Application utility. Therefore, if your desktop or laptop is running on Windows XP, you need to decide whether to configure your WLAN Adapter through Windows XP or Configuration & Monitor utility.

After you install complete, the Configuration & Monitor utility will start to run it automatically. If you choose to configure your WLAN Adapter through Windows XP instead of through Configuration & Monitor utility, follow the steps below:


1. Exit the Configuration & Monitor Utility  icon. If it is currently active, this icon is loaded on the system tray of Windows task bar, right click to exit Configuration & Monitor Utility.
2. Windows XP will appear a “Wireless Network Connection #” message.



3. Click on the message and the “Automatic Wireless Network Configuration” will display automatically. You may click “Connect” button to connect with an available Access Point.



4. You may click “Advanced” button to make advanced configuration for the 802.11b WLAN/Flash Disk USB Adapter, Select the **Wireless Networks** tab shown as below.

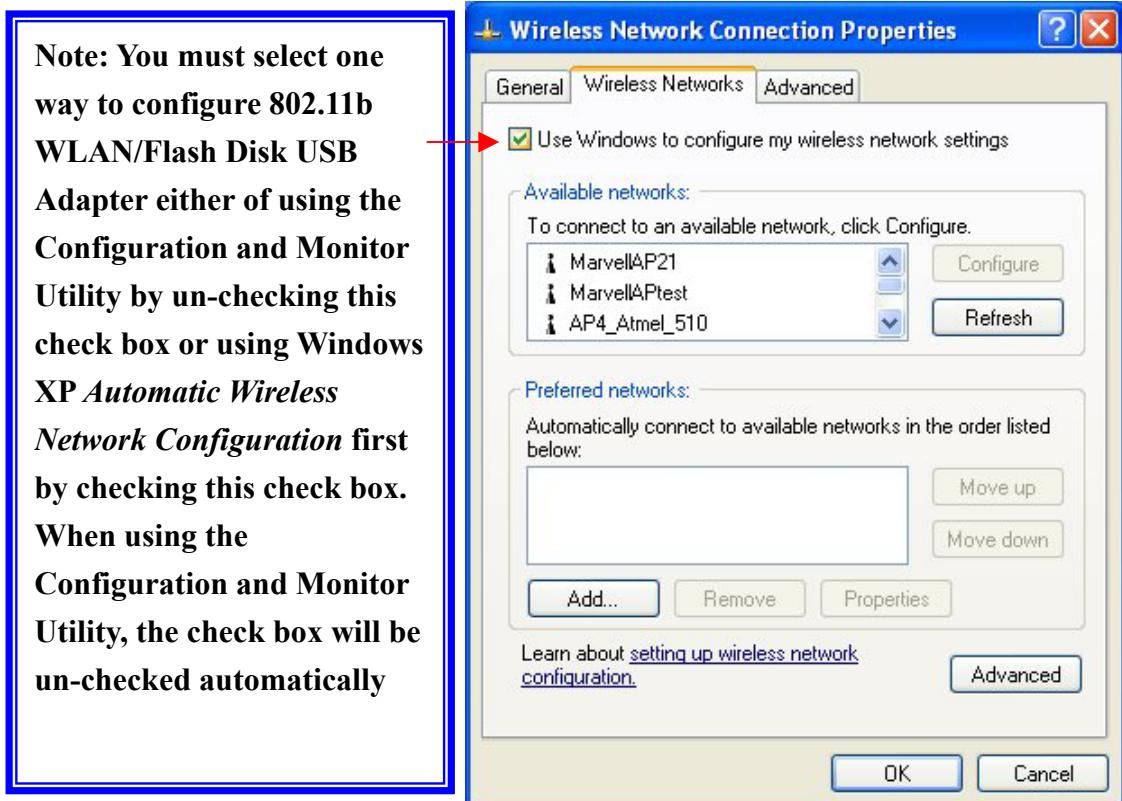

For more information on how to use the automatic wireless network configuration, please refer to Windows XP **Help** file.

However, the Configuration & Monitor utility provides you more settings to configure the 802.11b WLAN/Flash Disk USB Adapter and monitor the wireless network connection. Please refer to the following section “Usage of the Configuration & Monitor utility”.

5.2 Usage of the Configuration & Monitor Utility

1. Insert the 802.11b WLAN/Flash Disk USB Adapter into the USB slot on the desktop or laptop. The Configuration & Monitor Application utility will appear as an icon on the system tray of Windows task bar. Double-click on




this icon or go to **Program File** and run the USB Wireless LAN.

- ★ When the station is in *Infrastructure* mode and not associated with an AP, color of the icon is red.
- ★ When the station is in *Infrastructure* mode and associated with an AP, color of icon is blue.
- ★ When the station is in *Ad-Hoc* mode, color of icon is always blue.
- ★ When the station is in *Ad-Hoc* mode and the WLAN Card is resetting and initializing, color of icon is red.

2. The next window appears onscreen (the following pages describe the Configuration & Monitor Application utility in sequence).

Status

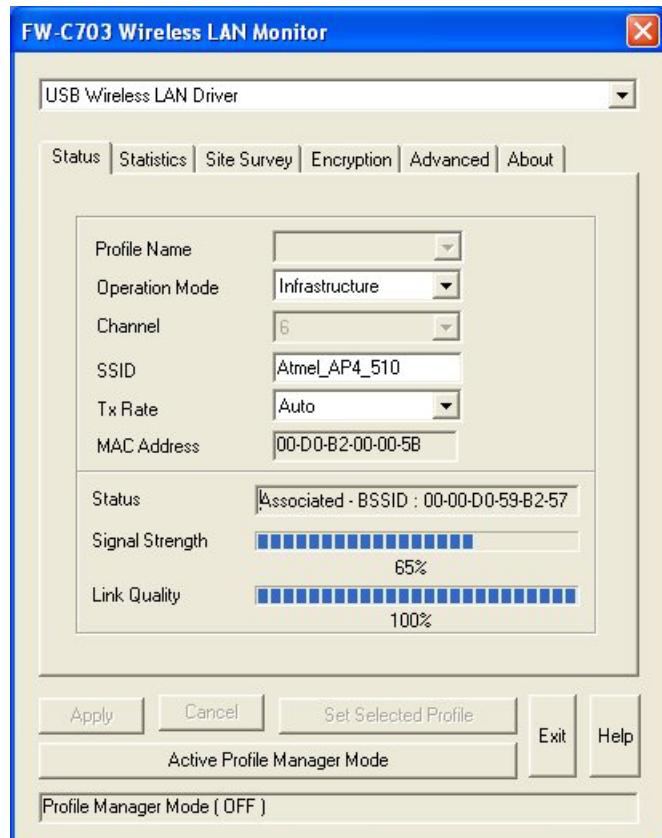

The following configuration parameters are shown:

- **Profile Name**

The Profile field allows you to set values for all parameters by selecting a previously defined profile or allows you to create a new profile for 802.11b WLAN/Flash Disk USB Adapter. To create a new profile, enter a Profile Name in Profile field and set the corresponding parameters. After complete the setting, click “**Set Selected Profile**” and click “**Apply**” button to take effect. If you don’t want to use the profile, click the “**Cancel Profile Manager Mode**”. You could have multiple profiles and modify a profile at any time.

- **Operating Mode**

Allow you to choose between *Ad-Hoc* and *Infrastructure* mode. In *Ad-Hoc* mode the wireless stations can communicate directly with each other. In *Infrastructure* mode the use of an Access Point (AP) is necessary for wireless stations to communicate with each other.

- **Channel**

This item is available only if *Ad-Hoc* mode was selected in the previous field. Select the 14 channels available for use.

- **SSID**

When using the wireless station in an *Ad-Hoc* mode then all participating stations should have the same SSID. When using the wireless station in an *Infrastructure* mode the SSID must be the same as the SSID of the AP it is associated with.

- **Tx Rate**

Your WLAN Card provides various transmission (data) rate options for you to select. In most networking scenarios, the option *Auto* will prove the most efficient. This setting allows your WLAN Adapter to operate at the maximum transmission rate. When the communication quality drops below a certain level, the WLAN Adapter will automatically switch to a lower transmission rate. Transmission at lower data speeds is usually more reliable. However, when the communication quality improves again, the WLAN Adapter will gradually increase the transmission rate again until it reaches the highest available transmission rate. If you wish to balance speed versus reliability, you can select any of the available options.

- **MAC Address**

Indicates the MAC address of the 802.11b WLAN/Flash Disk USB Adapter. MAC address could be used as the unique ID of the WLAN Adapter.

The communication status is also shown:

- **Status**

Indicates the status of connection and MAC address of the associated Access Point when the FW-C703 802.11b WLAN/Flash Disk USB Adapter is configured in Infrastructure mode.

- **Signal Strength**


Signal level when receiving the last responding packet. Signal strength is calculated as the percentage of its signal level measurement relative to the full signal level.

- **Link Quality**

The transmission quality between your WLAN Adapter and the AP it is associated with (*Infrastructure* mode). Based on the quality of the received signal of the Access Point.


After changing parameters click “**Apply**” button to take effect.

Statistics

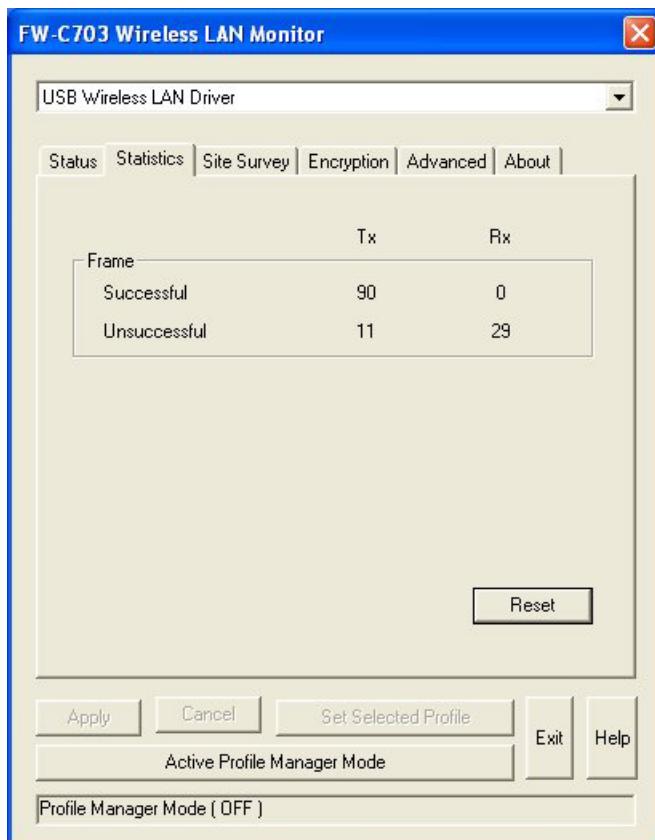

The **Statistics** utility allows you to view the statistic (Packets) information (Data Packets, Mgmt Packets, and Rejected Packets). To renew or update the list of statistics, click “**Reset**”.


Site Survey

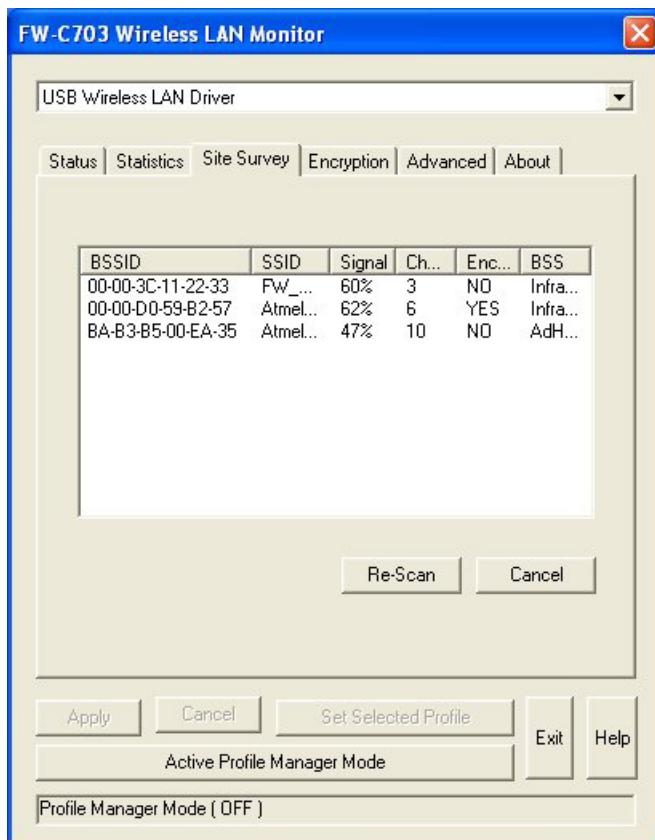

The **Site Survey** utility allows you to scan all the channels to locate all the APs (Access Points) within the range of your WLAN Adapter. When an/Various AP(s) are located, information regarding the BSSID and SSID, signal strength and channel where the AP operates, whether or not WEP encryption is used, and the operating mode is shown. Click “**Re-Scan**” to update the list. You may stop rescanning by press the “**Cancel**” button.

To associate with any of the APs listed, double-click on your choice (on the BSSID field) and the utility will take you back to the **Status** utility showing you the parameters of the newly established connection.


Encryption

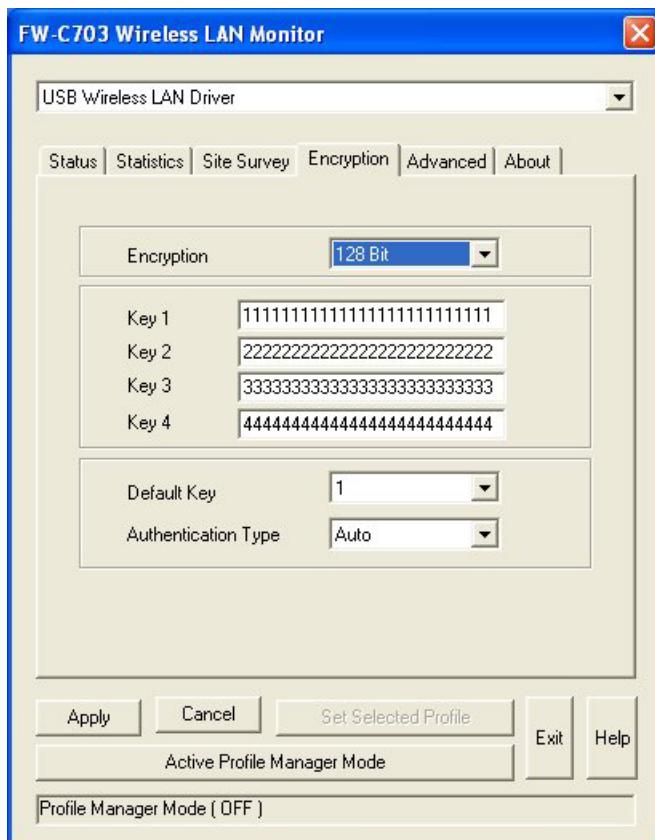

To prevent unauthorized wireless stations from accessing data transmitted over the network, the **Encryption** utility offers highly secure data encryption by allowing you to set four different WEP keys (must be the same for the participating wireless stations) and specify which one to use. To set encryption:

1. Choose *Enabled* on the **Encryption** window and select either 64 Bits or 128 Bits Encryption.
2. Select any of the available WEP keys (**Key #1** to **#4**) on the **Default Key** field. The WEP keys must be in HEX (hexadecimal) format in the range of *a* to *f*, *A* to *F*, and *0* to *9*.
3. Select the **Authentication Type** (*Open System* or *Shared Key* or *Auto*).
4. Press **Apply** for any changes to take effect.

Advanced

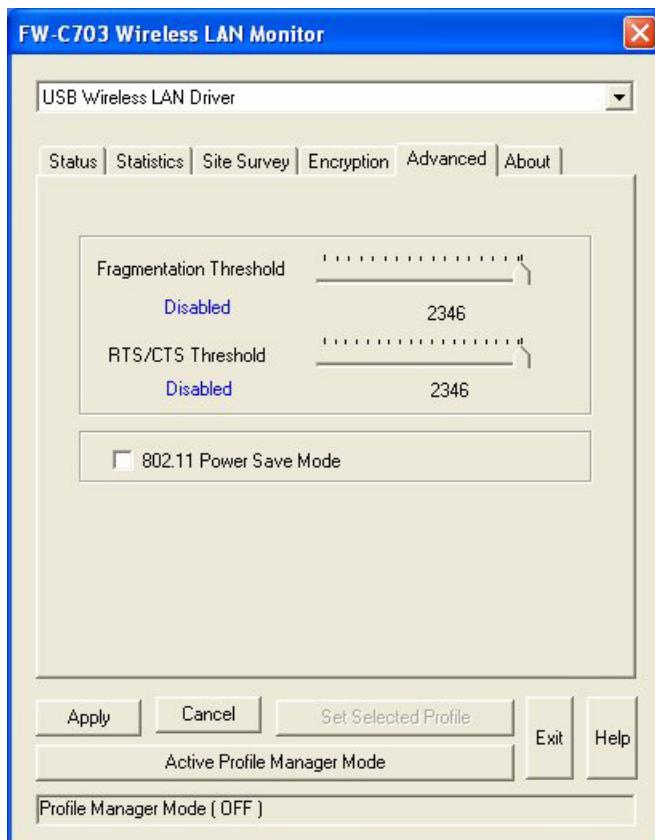

The **Advanced** utility allows you to change the following advanced configuration settings:

- **Fragmentation Threshold**

Allow you to set the Fragmentation Threshold (threshold for the activation of the fragmentation mechanism). The Fragmentation function is used for improving the efficiency when high traffic flows along in the wireless network. If you often transmit large files in the wireless network, move the slide bar with your mouse and then use the right and left arrow keyboard keys to select an exact number. The figure shows the recommended configuration setting.

- **RTS/CTS Threshold**


Allow you to set the RTS Threshold (threshold for the activation of the RTS/CTS mechanism). Transmitter contending for the medium may not hear

each other. RTS/CTS (Request-To-Send/Clear-To-Send) mechanism can solve this “Hidden Node Problem.” If the packet size is smaller than the preset RTS Threshold size, the RTS/CTS mechanism will not be enabled. To enable RTS/CTS Threshold, move the slide bar with your mouse and then use the right and left arrow keyboard keys to select an exact number. The figure shows the recommended configuration setting.

- **802.11 Power Save**

Allow you to minimize power consumption and conserve the battery life of your computer.

About

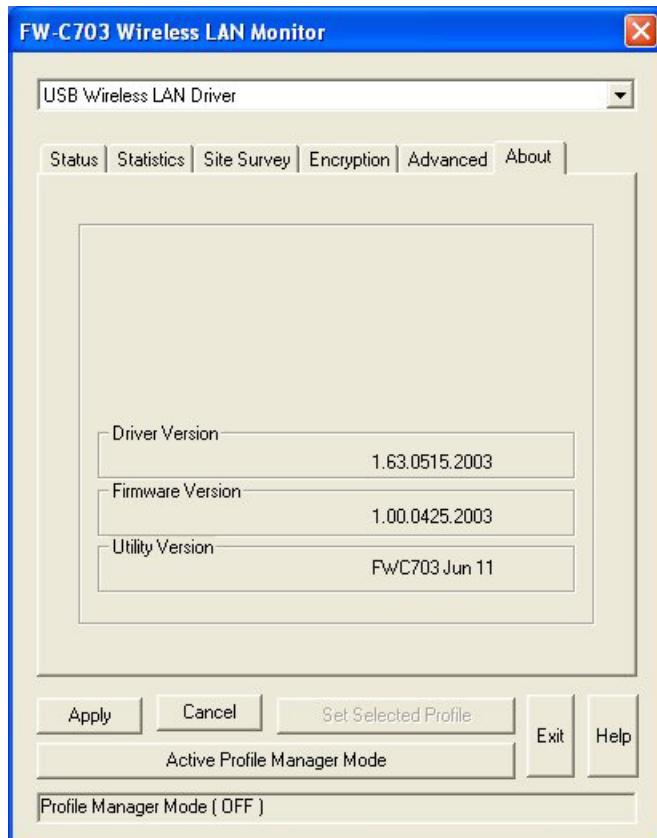

By choosing this option, you can get the information on the version of the driver, firmware and application. Use the “Exit” button in order to exit the application.

On a Local Area Network (LAN) or other network, the MAC (Media Access Control) address is your computer’s unique hardware number. On an Ethernet LAN, it is the same as your Ethernet address.

5.3 Usage of the Change Region Tool

This option is used for changing the Channel of the Region for the WLAN Adapter according to your current region. The default Channel will be Channel 1 to Channel 11 for USA, Canada and Taiwan. If you don't locate in the default countries, please go to the FW-C703 Change Region Tool and select the Channel Region that you locate. If you don't select the right Channel Region, it may occur your WLAN Adapter cannot work properly. After selecting the correctly Region, click “OK” button to make the Change Region take effect.



6 Install the USB Flash Driver for Windows (Optional Function)

In this section, we provide the instructions that guide you install or uninstall the driver of your 802.11b WLAN/Flash Disk USB Adapter in your PC. Because USB disk is driverless in most OS in Windows 2000, XP, and ME except Windows 98SE, we will provide how to install driver in this OS.

6.1 Installation Driver Under Windows XP, 2000, ME

Since the 802.11b WLAN/Flash Disk USB Adapter supports driverless functions under Windows XP, 200, ME, all you need to do is just plug the 802.11b WLAN/Flash Disk USB Adapter into the computer's USB slot and system will auto detect and found the new Hardware. Wait for a while and the driver will automatic install. After complete the installation, you can see a Removable Disk and 31/2 Floppy display on Explorer and My Computer. You could access this Removable Disk just like access Floppy Disk.

6.2 Installation Driver Under Windows 98SE

As you plug 802.11b WLAN/Flash Disk USB Adapter into USB slot in your PC, the system will auto detect and find a new device. Follow the instructions below to install the driver on a computer running Windows 98SE:

1. After inserting the USB Adapter into the USB slot on your laptop or notebook, Windows will auto-detect new hardware and will display an “**Add New Hardware Wizard**” window. Click “**Next**” to continue.



2. Select “Search for the best driver for your device (Recommended)” and click “Next”.



3. Insert the Product CD-ROM into the CD-ROM drive. Select the “CD-ROM drive” check box and click on “Next” to install the driver.



4. The Windows will find “USB Flash Disk”. Click “Next” to continue.



5. Finish the installation.



6. Restart the computer.



6.3 Safety Removing the USB Flash Storage


After you complete to copy files from or to 802.11b WLAN/Flash Disk USB Adapter, you need to safety removing it. Otherwise, it could occur data loss because you don't "eject" USB Flash Disk FLASH before remove it from PC.

Follow the steps below to stop using the WLAN Adapter:

1. Click on Unplug or Eject Hardware icon on the system tray of Windows task bar



2. Select the “USB Mass Storage Device”

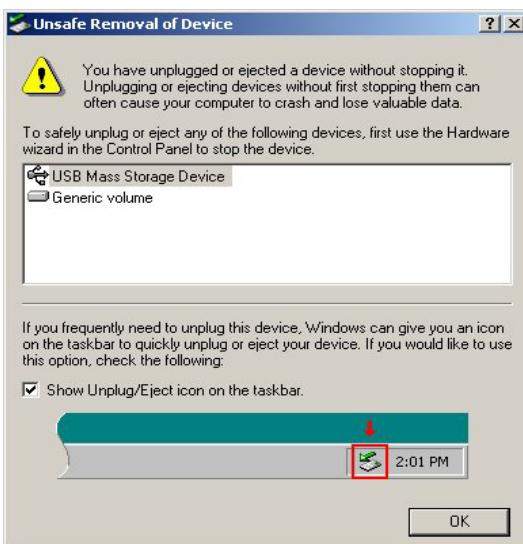


3. Wait a few seconds until the system pop-up a message to indicate that you can safely remove the WLAN Adapter from the system. Click **OK** and then you may eject WLAN Adapter.



6.4 Using the Flash Configuration & Monitor Utility

After complete the installation, you can see a Removable Disk and 31/2 Floppy display on Explorer and My Computer. You could access this Removable Disk just like access Floppy Disk. The Security AP enables you to make password changes and protect on your Removable Disk.

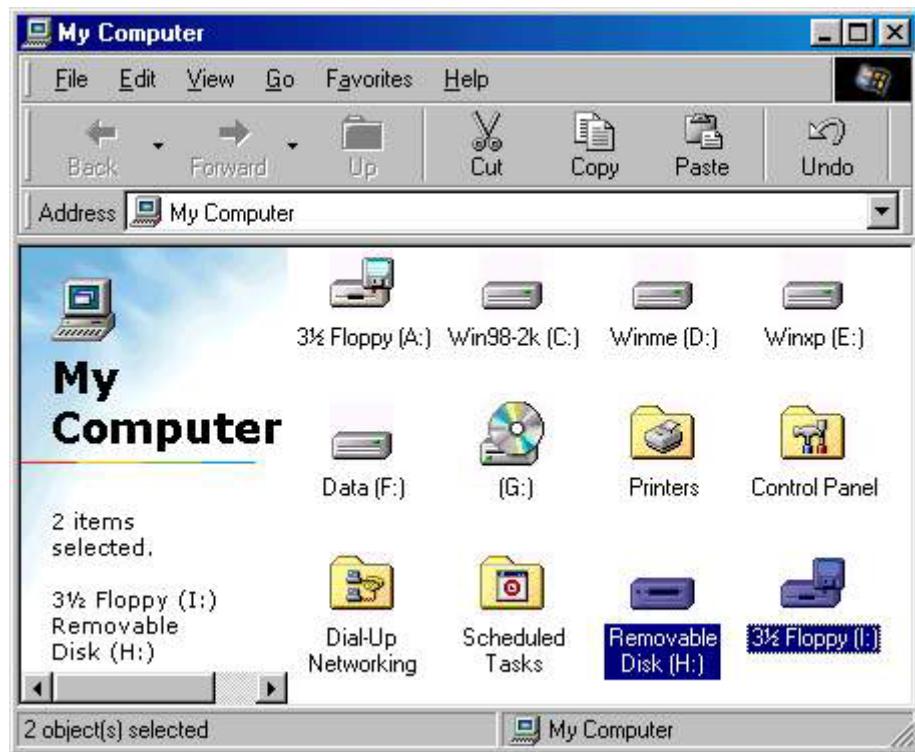

Following steps below to configure and monitor the Security AP:

Setup Password

1. Open Explorer or My Computer and click on 31/2 Floppy Disk, you can see the file **SECUAP.exe**.
2. Click on the file **SECUAP.exe** and the configuration of Security AP will appear.



3. Click on **Set Password** to setup password and the configuration window will appear. Enter New Password of your choice and the maximum is 16 characters long. Confirm Password by re-enter the password. Enter a hint of your own, in case you forget your password. You can enter anything you want within 31


characters. If you check the **Unmask Password** check box, you will see what you have entered for the password. After finish the configuration, click on “OK” button.



4. Finish the setup password and click “OK” button.



5. Once you have set up the password correctly, you will notice the change in “Password Exist” Status. Click on “Close” button to exit the Security AP.

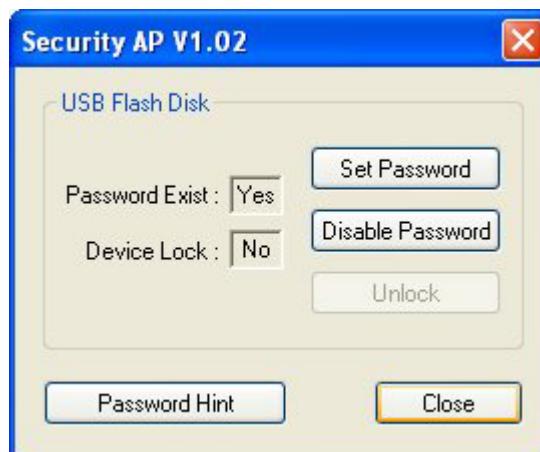

Notice: After you finish the configuration, you need to remove the device from USB port first and then plug in again to make configuration take effect.

6. When you remove the device from USB port and plug in it again, the device will

automatically be locked. If you try to access it, it will appear an error message. (Depending on the Operating System, the error message will be different).



7. If you execute the Security AP, you will see that the device is LOCKED.



Change Password

1. If you have already setup a password before, you can change the password by click "Set Password" to change.




2. Follow instruction please follow the procedure of Setup Password.

Disable Password

1. If you no longer want to use the password, click "Disable Password" to disable the

setting.

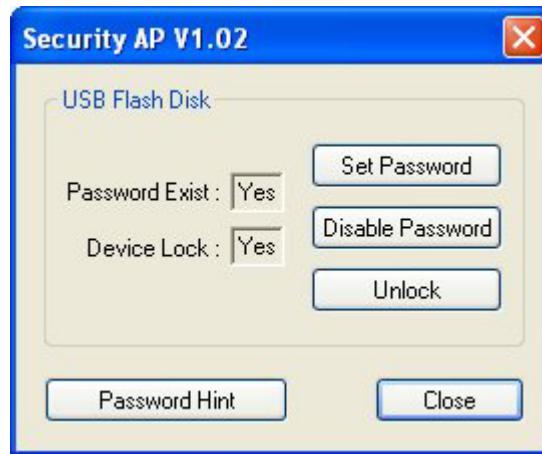

2. Enter the password.



Notice: You only have SIX chances to enter password correctly. If you enter wrong password six times, it will automatically FORMAT your USB FLASH DISK. (All data will be lost)


3. Complete the configuration.

Unlock

1. If you have setup a password, before you can access the USB Disk, you must “Unlock” first. (Enter password) Select “Unlock” to enter password.



2. Enter the password.

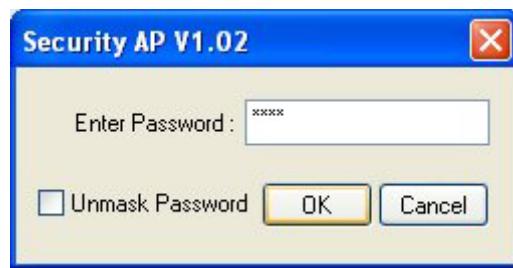


Notice: You only have SIX chances to enter password correctly. If you enter wrong password six times, it will automatically FORMAT your USB FLASH DISK. (All data will be lost)

3. Complete the configuration.

Password Hint

1. If you forget the password, you can use Password Hint to reminder you remember your password.
2. Click “Password Hint” button and it will appear a message.

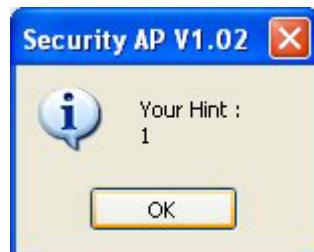

7 Troubleshooting

This chapter covers potential problems you may run into and the possible remedies. After each problem description, some instructions are provided to help you to diagnose and solve the problem.

Q: When you encounter problems, there are some preliminary checklists that can help you to dig out the problems before you take further actions?

A:

- Try to isolate which part of the computer's network connection is causing the problem.
- Absence of, or conflict of the WLAN Card driver. Make sure that all device drivers are correctly installed (refer to chapter 3).
- Determine if the location of your WLAN Card is not conducive for wireless transmission (refer to chapter 2 "Site Selection").

If a problem persists after you follow the instructions in this chapter, contact an authorized dealer for help.

Q: When you encounter problems during Installation?

A:

Don't insert your WLAN Card into the USB slot until you have finished the installation. If in case you should mistakenly insert your WLAN Card into your computer before installing the driver and utility, then perform the following to correct it:

- Remove the WLAN Card from the USB slot.
- Insert the driver CD into the CD-ROM drive and double-click the file **SETUP.EXE** under the Windows directory. It would locate the already installed driver and utility and uninstall it.
- Re-boot your system after uninstalling.
- Refer to chapter 2 and follow the instructions to properly install the driver and utility before inserting the WLAN Card.
- Re-insert the WLAN Card to the computer again.
- Check if the I/O and IRQ for the WLAN Card have conflict problems with other devices connected to your computer.

For Windows 98SE / 2000 / Me operating system, make sure that the USB device driver is installed on your computer.

Q: During using Configuration & Monitor Utility, when you encountered the problem to connect?

A: - Use the **Monitor** utility of your **Configuration & Monitor Utility** to check the *Link Quality* of your WLAN Card with the AP it is associated with (*Infrastructure* mode) or with other wireless station(s) (*Ad-Hoc* mode).

- Use the **Site Survey** utility of your **Configuration & Monitor Utility** to check if there is high interference around the environment.

Q: When you cannot connect with Access Point?

A: - Make sure that the Access Point that your WLAN Card is associated with is powered on and all the LEDs are working properly.

- Reconfigure and reset the Access Point.

- Use the Web Manager / Telnet of the Access Point to check whether it is connected to the network.

Q: When Infrastructure mode is configured, the WLAN card cannot communicate with the computer in the Ethernet?

A: - Make sure that the Access Point your WLAN Card is associated with is powered on.

- Use the **Site Survey** utility of the **Configuration & Monitor Utility** to verify if the operating radio *channel* is in good quality. Or, change the Access Point and all the wireless station(s) within the *BSSID* to another radio *channel*.

- Out-of-range situation, which prevents the WLAN Card from establishing a wireless connection with the network. Move the WLAN Card closer to the Access Point it is associated with.

- Make sure that your WLAN Card is configured with the same security option (encryption) to the Access Point.

- Make sure that the *BSSID* is the same as the Access Point for a roaming-disabled wireless station, or the *ESSID* is the same as the Access Point for a roaming-enabled wireless station.

Q: What should I do when I cannot access the network?

A:

- Make sure that the necessary driver(s) was correctly installed.
- Make sure that the network configuration is appropriate.
- Make sure that the user name or password is correct.
- You have moved out of range of the network.
- Turn off power management.

Q: When the Configuration & Monitor Utility does not work correctly.

A:

- Make sure that the Configuration & Monitor Utility is correctly installed (refer to chapter 5).
- If you are sure the operation has stop, reset the computer.

Appendix A WLAN USB Adapter Specification

Product	802.11b WLAN/Flash Disk USB Adapter
Model	FW – C703A
Attach Interface/ bus	USB 1.1 and USB 2.0
LED Indicators	Wireless LAN LINK in , Flash Disk in (Option)
Operating Frequency/Channel	2.412 ~ 2.462 GHz (FCC, Canada), 11 Channels 2.412 ~ 2.4835 GHz (Japan, TELEC), 14 channels 2.412 ~ 2.472 GHz (Euro ETSI), 13 channels 2.457 ~ 2.462 GHz (Spain), 2 channels 2.457 ~ 2.472 GHz (France), 4 channels
RF Modulation	Direct Sequence Spread Spectrum (DSSS) Technology CCK, DQPSK, DBPSK
RF Output Power	15 dBm typical
Sensitivity	-80 dBm at 11Mbps -82 dBm at 5.5Mbps -84 dBm at 2Mbps -85 dBm at 1Mbps
Data Rate	11, 5.5, 2, 1 Mbps with automatic fall back
Media Access Protocol	CSMA/CA + ACK, IEEE 802.11b compliant
Working Mode	Ad-Hoc, Infrastructure
Power Consumption	TX: 5 V, 350 mA
	RX: 5 V, 240 mA
Physical Dimension	L90(mm) x W34(mm) x H20(mm)
Humidity	20% to 70% in operating
	20% to 90% Non-condensing in storage
Temperature	0 ~ 55 degree C in operation
	-20 ~ 70 degree C in storage
Driver Support	Windows 98SE/ ME/2000/XP
Electromagnetic Compatibility	FCC, CE