



Bundesrepublik Deutschland
Federal Republic of Germany

Bundesamt für Seeschifffahrt und Hydrographie
Federal Maritime and Hydrographic Agency



Conformance test report of an
AIS system

Equipment under test: **SAM**

Type: **DEBEG 3400**

Applying test standards:

IEC 61993-2 (2002) Sections 14, 16-21

Test Report No.: 734.2/0048-1/2003/S3220

Applicant: SAM Electronics GmbH
Behringstr. 120
22763 Hamburg
Germany

Hamburg, 3.Feb. 2003
Federal Maritime and
Hydrographic Agency

by order

Bartels
Test engineer

by order

Preuss
head of
laboratory
nach DIN EN 45001
akkreditiertes Prüflaboratorium

Federal Maritime and Hydrographic Agency
Bernhard-Nocht-Str. 78
D-20359 Hamburg
Germany



DAT-P-086/98-00

Translation

Deutsche Akkreditierungsstelle Technik (DATech) e.V.

represented in the

Deutschen AkkreditierungsRat



Akkreditierung

The German Accreditation Body Technology (DATech) e.V. certifies that the Testing Laboratory

of the
Bundesamtes für Seeschifffahrt und Hydrographie (BSH)
Abteilung Schiffahrt
Laboratorium für Baumusterprüfungen
Bernhard-Nocht-Straße 78
20359 Hamburg

is competent under the terms of DIN EN 45 001 to carry out testing in the fields


Marine Equipment
(Navigation Equipment, Radio-Communication Equipment, Life-Saving
Appliances)

The accreditation is valid until: **Dec. 22th, 2003**

The annex is deemed part of this certificate and comprises: **4** pages

DAR-Registration No.: **DAT-P-086/98-00e**

Frankfurt/M., Dec. 23rd, 1998

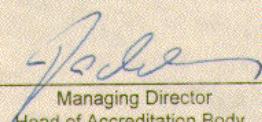

Managing Director
Head of Accreditation Body

Accreditation Body in the TGA - Trägergemeinschaft für Akkreditierung GmbH

Translation for information purposes only. The German Accreditation Certificate is authoritative.

See notes overleaf.

General

Applicant: SAM Electronics GmbH
Behringstr. 120, D-22763 Hamburg, Germany

Equipment under test:

Type: DEBEG 3400
Manufacturer: SAM Electronics GmbH
Behringstr. 120, D-22763 Hamburg, Germany
Place of test: BSH test laboratory Hamburg, Room 916
Start of test: 18. 03. 2002
End of test: 25. 11. 2002

Test standards¹:

IEC 61993-2 (2002)

Maritime navigation and radiocommunication equipment and systems-

Automatic Identification Systems

Part 2: Class A shipborne equipment of the Universal Automatic Identification System (AIS) – Operational and performance requirements, Methods of testing and required test results

IEC 61162-1/ -2

Maritime navigation and radiocommunication equipment and systems Digital Interfaces

Part 1: single talker and multiple listeners (2000)

Part 2: single talker and multiple listeners, high speed transmission (1998)

Summary

Test No.	Reference	Section	Result (passed/ not passed / not applicable / not tested)
2	IEC 61993-2 FDIS	14 Operational tests	passed
3	IEC 61993-2 FDIS	15 Physical tests	Not included
4	IEC 61993-2 FDIS	16 Specific tests of link layer	passed
5	IEC 61993-2 FDIS	17 Specific tests of network layer	passed
6	IEC 61993-2 FDIS	18 Specific tests of transport layer	passed
7	IEC 61993-2 FDIS	19 Specific presentation interface tests	passed
8	IEC 61993-2 FDIS	20 DSC functionality tests	passed
9	IEC 61993-2 FDIS	21 Long range functionality tests	passed

¹ Numbers listed in the titles of the test sections of this report refer to the respective sections of IEC 61993-2 if not stated otherwise.

GENERAL.....	3
SUMMARY.....	3
1 GENERAL.....	8
1.1 TECHNICAL DATA.....	8
1.2 COMPOSITION	8
1.3 REMARKS.....	9
1.3.1 <i>General problems.</i>	9
1.4 4.3 MANUALS	10
1.4.1 <i>Operating and Installation.</i>	10
1.4.2 <i>Interface documentation</i>	11
2 14 OPERATIONAL TESTS.....	14
2.1 14.1 OPERATING MODES / CAPABILITY	14
2.1.1 14.1.1 <i>Autonomous mode</i>	14
2.1.1.1 14.1.1.1 Transmit Position reports	14
2.1.1.2 14.1.1.2 Receive Position reports.....	15
2.1.2 14.1.2 <i>Assigned mode</i>	15
2.1.3 14.1.3 <i>Polled mode</i>	17
2.1.3.1 14.1.3.1 Transmit an interrogation	17
2.1.3.2 14.1.3.2 Interrogation response	20
2.1.4 14.1.4 <i>Addressed operation</i>	21
2.1.4.1 14.1.4.1 Transmit an addressed message	21
2.1.4.2 14.1.4.2 Receive addressed message.....	24
2.2 14.2 MULTIPLE SLOT MESSAGES.....	25
2.2.1 14.2.1 <i>5 slot messages</i>	25
2.2.2 14.2.2 <i>Longer messages</i>	27
2.3 14.3 INFORMATION CONTENT	29
2.3.1 <i>Information content of msg 1</i>	29
2.3.2 <i>Information content of msg 5</i>	30
2.4 14.4 REPORTING RATES	32
2.4.1 14.4.1 <i>Speed and course change</i>	33
2.4.2 14.4.2 <i>Change of navigational status</i>	36
2.4.3 14.4.3 <i>Assigned reporting rates</i>	38
2.4.4 14.4.4 <i>Static data reporting rates</i>	41
2.5 14.5 SECURITY.....	42
2.6 14.6 INITIALISATION PERIOD.....	43
2.7 14.7 CHANNEL SELECTION.....	44
2.8 14.8 TRANSCEIVER PROTECTION	45
2.9 14.9 ALARMS AND INDICATORS, FALL-BACK ARRANGEMENTS.....	46
2.9.1.1 14.9.1 Loss of power supply	47
2.9.2 14.9.2 <i>Monitoring of functions and integrity</i>	47
2.9.2.1 14.9.2.1 Tx malfunction	47
2.9.2.2 14.9.2.2 Antenna VSWR.....	48
2.9.2.3 14.9.2.3 Rx malfunction	49
2.9.2.4 14.9.2.4 Loss of UTC	50
2.9.2.5 14.9.2.5 Remote MKD disconnection, when so configured	50
2.9.3 14.9.3 <i>Monitoring of sensor data</i>	51
2.9.3.1 14.9.3.1 Priority of position sensors	51
2.9.3.2 14.9.3.2 Heading sensor	55
2.9.3.3 14.9.3.3 Speed sensors	57
2.10 14.10 DISPLAY AND CONTROL – RADAR 1000	59
2.10.1 14.10.1 <i>Data input/output facilities</i>	59
2.10.2 14.10.2 <i>Initiate message transmission</i>	62
2.10.3 14.10.3 <i>System control</i>	63
2.10.4 <i>Ergonomic aspects</i>	66

2.11	14.10 DISPLAY AND CONTROL – ECDIS.....	66
2.11.1	14.10.1 <i>Data input/output facilities</i>	66
2.11.2	14.10.2 <i>Initiate message transmission</i>	70
2.11.3	14.10.3 <i>System control</i>	71
2.11.4	14.10.4 <i>Ergonomic aspects</i>	76
3	15 PHYSICAL TESTS	77
4	16 SPECIFIC TESTS OF LINK LAYER	78
4.1	16.1 TDMA SYNCHRONISATION.....	78
4.1.1	16.1.1 <i>Synchronisation test using UTC</i>	78
4.1.2	16.1.2 <i>Synchronisation test without UTC, semaphore</i>	79
4.1.3	16.1.3 <i>Synchronisation test without UTC</i>	79
4.2	16.2 TIME DIVISION (FRAME FORMAT).....	80
4.3	16.3 SYNCHRONISATION JITTER.....	81
4.4	16.4 DATA ENCODING (BIT STUFFING).....	82
4.5	16.5 FRAME CHECK SEQUENCE.....	83
4.6	16.6 SLOT ALLOCATION (CHANNEL ACCESS PROTOCOLS).....	84
4.6.1	16.6.1 <i>Network entry</i>	84
4.6.2	16.6.2 <i>Autonomous scheduled transmissions (SOTDMA)</i>	85
4.6.3	16.6.3 <i>Single message transmission (RATDMA)</i>	86
4.6.4	16.6.4 <i>Assigned operation</i>	87
4.6.4.1	16.6.4.1 <i>Assigned mode using reporting rates</i>	88
4.6.4.2	16.6.4.2 <i>Receiving test</i>	89
4.6.4.3	16.6.4.3 <i>Assignment selectivity</i>	93
4.6.4.4	16.6.4.4 <i>Slot assignment to FATDMA reserved slots</i>	94
4.6.5	16.6.5 <i>Fixed allocated transmissions (FATDMA)</i>	94
4.7	16.7 MESSAGE FORMATS	97
4.7.1	16.7.1 <i>Received messages</i>	97
4.7.2	16.7.2 <i>Transmitted messages</i>	108
5	17 SPECIFIC TESTS OF NETWORK LAYER.....	114
5.1	17.1 DUAL CHANNEL OPERATION	114
5.1.1	17.1.1 <i>Alternate transmissions</i>	114
5.2	17.2 REGIONAL AREA DESIGNATION BY VDL MESSAGE	114
5.3	17.3 REGIONAL AREA DESIGNATION BY SERIAL MESSAGE	117
5.4	17.4 POWER SETTING	119
5.5	17.5 MESSAGE PRIORITY HANDLING.....	121
5.6	17.6 SLOT REUSE (LINK CONGESTION).....	122
5.7	17.7 MANAGEMENT OF RECEIVED REGIONAL OPERATING SETTINGS.....	125
5.7.1	17.7.1 <i>Test for replacement or erasure of dated or remote regional operating settings</i>	125
5.7.2	17.7.2 <i>Test of correct input via Presentation Interface or MKD</i>	127
5.7.3	17.7.3 <i>Test of addressed telecommand</i>	130
5.7.4	17.7.4 <i>Test for invalid regional operating areas (three regional operating areas with same corner</i> <i>131</i>	
5.7.5	17.7.5 <i>Self-Certification of other conditions</i>	132
5.8	17.8 CONTINUATION OF AUTONOMOUS MODE REPORTING RATE	132
6	18 SPECIFIC TESTS OF TRANSPORT LAYER	134
6.1	18.1 ADDRESSED MESSAGES.....	134
6.1.1	18.1.1 <i>Transmission</i>	134
6.1.2	18.1.2 <i>Acknowledgement</i>	136
6.1.3	18.1.3 <i>Transmission Retry</i>	137
6.2	18.1.4 <i>ACKNOWLEDGEMENT OF ADDRESSED SAFETY RELATED MESSAGES</i>	139
6.3	18.2 (M.1371 A1/5.3) INTERROGATION RESPONSES	140
6.4	18.3 BROADCAST MESSAGES	143

7	19	SPECIFIC PRESENTATION INTERFACE TESTS	146
7.1	19.1	GENERAL	146
7.2	19.2	CHECK OF THE MANUFACTURER'S DOCUMENTATION	146
7.3	19.3	ELECTRICAL TEST	147
7.4	19.4	TEST OF INPUT SENSOR INTERFACE PERFORMANCE	148
7.5	19.5	TEST OF SENSOR INPUT	150
7.5.1		<i>GLL sentence</i>	150
7.5.2		<i>GGA sentence</i>	152
7.5.3		<i>GNS sentence</i>	153
7.5.4		<i>RMC sentence</i>	154
7.5.5		<i>DTM sentence</i>	155
7.5.6		<i>GBS sentence</i>	155
7.5.7		<i>VTG sentence</i>	156
7.5.8		<i>VBW sentence</i>	157
7.5.9		<i>OSD sentence</i>	160
7.5.10		<i>HDT sentence</i>	161
7.5.11		<i>ROT sentence</i>	162
7.5.12		<i>Additional Tests</i>	163
7.5.13		<i>Check of different inputs</i>	164
7.5.14		<i>Sensor sentences overview</i>	165
7.6	19.6	TEST OF HIGH SPEED OUTPUT	165
7.7	19.7	HIGH SPEED OUTPUT INTERFACE PERFORMANCE	168
7.8	19.8	TEST OF HIGH SPEED INPUT	168
8	20	DSC FUNCTIONALITY TESTS	171
8.1	20.1	GENERAL	171
8.2	20.2	REGIONAL AREA DESIGNATION	173
8.3	20.3	SCHEDULING	175
8.4	20.4	POLLING	176
9	21	LONG RANGE FUNCTIONALITY TESTS	181
9.1	21.1	LR INTERROGATION	181
9.2	21.2	LR "ALL SHIPS" INTERROGATIONS	186
9.3	21.3	CONSECUTIVE LR "ALL SHIPS" INTERROGATIONS	187
ANNEX A TEST EQUIPMENT			
A.1		TEST EQUIPMENT SUMMARY	190
A.1.1		<i>VDL analyser / generator</i>	190
A.1.2		<i>Target simulator</i>	190
A.1.3		<i>Presentation Interface Monitor</i>	191
A.1.4		<i>DSC Testbox</i>	191
A.2		TEST ENVIRONMENT OVERVIEW	193
ANNEX B IEC 61162 TEST SENTENCES			
B.1		SENSOR INPUT	194
B.1.1		<i>Settings (VSD,SSD)</i>	195
B.1.2		<i>Messages (ABM,BBM)</i>	196
B.1.3		<i>Regional operational settings (ACA)</i>	197
B.1.4		<i>Long range requests</i>	198
B.1.5		<i>DSC sentences</i>	199
ANNEX C TEST DIAGRAMS			
C.1		GMSK MODULATION 12.5 AND 25 KHZ BANDWIDTH	201
C.2		REPORTING RATE BY SPEED	202
C.3		REPORT RATE BY HEADING	203

C.4	NETWORK ENTRY PHASE	204
C.5	ASSIGNED MODE / REPORT RATE	205
C.6	ASSIGNED MODE / SLOT ASSIGNMENT	206
C.7	DSC RESPONSE TIME	207
PHOTOS OF EQUIPMENT UNDER TEST		208

1 General

1.1 Technical Data

Appliance	Type/denotation	Serial no.
component 1	Transponder DEBEG 3400 electronics unit	1/8/02 NG 3030 G 010
component 2	Radar ATLAS 1000 Serie (as MKD)	1/8/02
component 3	ECDIS Atlas Chartpilot (as alternative MKD)	1/8/02
component 4	VHF antenna	CXL 2-1
component 5	GPS antenna	1330 FP

16.09.02: New software version for transponder: 1.0 Build 197, 14.09.02

20.09.02: New software version for transponder: 1.0 Build 198, 19.09.02

02.10.02: New software version for transponder: 1.0 Build 202, 01.10.02

08.10.02: New software version for transponder: 1.0 Build 203, 07.10.02

11.10.02: New software version for transponder: 1.0 Build 204, 10.10.02

16.10.02: New software version for transponder: 1.0 Build 206, 16.10.02

22.11.02: New software version for transponder: 1.0 Build 207, 10.11.02

1.2 Composition

Minimum Keyboard and display (MKD)

Internal Remote external by
Atlas Radar1000 or Chartpilot

internal GNSS

sync only backup pos. sensor

1.3 Remarks

Result marking:

Ok	Item is ok, test was successful
Dev	slight deviation, no change required
Nok	Test of a required item was not successful, change required
Rec	It is recommended to make a change.
???	temporarily, has to be clarified or discussed

1.3.1 General problems

Here are general problems found in the operation of the EUT, not specific to the actual test point.

General problems			
Date	Item	Remark	Result
27.08.02	DSC RX	In the afternoon the DSC reception decreases. Most messages are not received, some with "no valid EOS pattern", Next morning reception is ok; not observed again	ok
28.08.02	DSC – Restart	After transmission of selective DSC call with 104+00+2087/88 EUT stops operation and restarts <u>20.09.02 Retest: ok</u>	ok
28.08.02	No RX	After an automatic restart caused by the DSC message (see above) the EUT did not receive any AIS (TDMA) messages, Transmission was ok in this state After manual restart ok, not observed again	ok

1.4 4.3 Manuals

1.4.1 Operating and Installation

60945) Adequate information shall be provided to enable the equipment to be properly operated and maintained by suitable qualified members of a ship's crew:

(60945) Moreover adequate information shall be provided to allow equipment to be installed so that it operates in accordance with the requirements of the relevant equipment standard, taking into account limitations imposed by the operation of other equipment also required to be installed on the bridge.

(61993-2) In addition to the requirements of IEC 60945 clause 14, the manuals shall include:

- The type of external connector required for connection of the external display as referred to in 7.6.3.2
- The needed information for correct siting of the antennas; and
- The requirements for external illumination, as appropriate

It is checked that the required documentation items are available.

Test details – General documentation			
Test item	Check	Remark	Result
Description of AIS	Check that an general function description of AIS as a new system is included. This is not required but recommended in the introduction phase of a new system.	Short description in Technical manual	ok
Operating information	Check that an operating manual is included	No operating manual of DEBEG 3400. Operating information is part of the operating manuals of Radar 1000 and Chart Pilot	ok
Technical information	Check that an technical manual is included	Special Technical Manual of DEBEG 3400	ok
Installation information	Check that an installation manual is included	Included in the Technical manual.	
Language	Check that the documentation is written in English		ok
Some details of installation information			
System overview	Check that an AIS system overview diagram is available		ok
Mechanical dimensions	Check that mechanical dimension drawings of transponder are available		ok
	Check that mechanical dimension drawings of MKD are available	Part of the Technical Manuals of Radar 1000 and Chart Pilot	ok

21.11.02 Test details – Requirements of IEC 61993-2			
Test item	Check	Remark	Result
Connector of external display	Check that type of connector of external Display is included		ok
Siting of antennas	Check that information about siting the GPS antenna is included		Ok
	Check that information about siting the VHF antenna is included		Ok
RF cable requirements	Check that information about cable requirements for GPS antenna is included	Cable types in wiring diagrams	ok
	Check that information about cable requirements for the VHF antenna is included	Cable types in wiring diagrams	ok
Illumination	Check that information about external illumination is included if required	No illumination required	ok

1.4.2 Interface documentation

(61993-2) *The manufacturer shall provide sufficient technical documentation of the EUT and its interfaces in particular (see 7.219.2 Check of the manufacturer's documentation")*

(61162-1; -2) *Operator manuals or other appropriate literature provided for equipment that is intended to meet the requirements of this standard shall contain the following information:*

- a) *identification of the A and B signal lines*
- b) *the output drive capability as a talker*
- c) *a list of approved sentences, noting unused fields, proprietary sentences transmitted as a talker and transmission interval for each sentence*
- d) *the load requirements as a listener*
- e) *a list of sentences and associated data fields that are required as a listener*
- f) *the current software and hardware revision if this is relevant to the interface*
- g) *an electrical description of schematic of the listener/talker input/output circuits citing actual components and devices used, including connector type and part number*
- h) *the version number and date of update of the standard for which compliance is sought.*

21.11.02 Test details – Requirements of of Interface documentation			
Test item	Check	Remark	Result
a) A and B signal lines	Check that identification of A and B signal lines is included	Connectors are marked with + and -. There is a definition in the manual that – is A and + is B of IEC 61162	ok
b) Output driver	Check that the output drive capability is included	Not found,	???
c) Talker sentences of PI ports	Check that list of sentences is included		Ok
	Check that unused fields are noted	Used fields are listed	ok
	Check if proprietary sentences are included if available	Proprietary sentences are included in Technical Manual. Detailed specification of sentences in special manual	Ok
c) Talker sentences of long range port	Check that list of sentences is included		Ok
	Check that unused fields are noted	Used information is listed, not based on single sentences but as a general function	Acc
	Check if proprietary sentences are included if available	Not available on long range port, but on PI port there is a proprietary sentence to report a long range request	Ok
d) Input load	Check that the input load is included	Not found In extra document?	???
e) Input sentences of PI ports	Check that list of sentences is included		Ok
	Check that required and unused fields are noted	Used fields are listed	Ok
	Check if proprietary sentences are included if available	Description of proprietary sentences is included	Ok
e) Input sentences of long range port	Check that list of sentences is included		Ok
	Check that required and unused fields are noted	Used field are listed	Ok
	Check if proprietary sentences are included if available	No proprietary sentences on long range port	ok
e) Input sentences of sensor inputs	Check that list of sentences is included		Ok
	Check that a list is included for each sensor input if different for the ports	Not applicable, all 3 sensor inputs are functionally identical	ok
	Check that required and unused fields are noted	Used data fields are listed but not used fields like status or GPS mode	Acc
Test Report No.. 734.2/0048-1/2003 / S3220	print date: 07.02.03	page 12	of 209

	Check if proprietary sentences are included if available	No proprietary sentences on sensor inputs	ok
f) Software version	Check that the relevant software version is included	Actual software version is provided on an special sheet	Ok
f) Hardware version	Check that the relevant hardware version is included	Not found	acc
g) Hardware input/output circuit	Check that information about hardware interface components is included	Provided in extra documentation	ok
h) Standards	Check that the version number and date of update of the relevant standard is included		ok

2 14 Operational tests

2.1 14.1 Operating modes / Capability

(4.2)

2.1.1 14.1.1 Autonomous mode

(4.2.1, M.1371 A2/3.3.5)

2.1.1.1 14.1.1.1 Transmit Position reports

Method of measurement

Set up a test environment of at least 5 test targets. Record the VDL communication and check for messages of the EUT.

Required results

Confirm that the EUT transmits continuously and that the transmitted data complies with sensor inputs.

This is a first more general check that the EUT is continuously transmitting a position report. Special tests regarding

- Reporting rate
- Message contents
- Slot use

are done in special test items.

Test details – Transmission of Position reports			
Test item	Check	Remark	Result
Navigation status is set to 0 (travelling using engine) Internal GNSS is in use			
MMSI	Check MMSI		Ok
Transmission rate	Check that the message 1 is transmitted continuously		Ok
Position	Check the values of lat and lon		Ok
Speed	Check the values of SOG and COG		Ok
Heading/ROT	Check that the values of heading and ROT are default		ok

Date	Result	Status
19.03.02	Test ok, Transmission not regularly alternating channel, not a constant update rate of 10 s rate; Has to be checked in test of reporting rate	ok

2.1.1.2 14.1.1.2 Receive Position reports

Method of measurement

Set up a test environment of at least 5 test targets.

- a) *Switch on Test targets, then start operation of the EUT*
- b) *Start operation of the EUT, then switch on Test targets*

Check the VDL communication and Presentation Interface outputs of the EUT.

Required results

Confirm that EUT receives continuously under conditions a) and b) and outputs the received messages via the PI.

19.03.2002 Test details a)– Receive Position reports, Target first started			
Test item	Check	Remark	Result
Switch on Test targets, then start operation of the EUT			
Check the following items on VDM output at PI and MKD compared with the transmitted values			
MMSI	Check MMSI		Ok
Transmission rate	Check that the message 1 is received continuously		Ok
Position	Check the values of lat and lon		Ok
Speed	Check the values of SOG and COG		Ok
Heading/ROT	Check the values of heading and ROT		Ok

19.03.2002 Test details b)– Receive Position reports, EUT first started			
Test item	Check	Remark	Result
Start operation of the EUT, then switch on Test targets			
Check the following items on VDM output at PI and MKD compared with the transmitted values			
MMSI	Check MMSI		Ok
Transmission rate	Check that the message 1 is received continuously		Ok
Position	Check the values of lat and lon		Ok
Speed	Check the values of SOG and COG		Ok
Heading/ROT	Check the values of heading and ROT		Ok

2.1.2 14.1.2 Assigned mode

(4.2.1 M.1371A2/3.3.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit an Assigned mode command msg 16 to the EUT with:

- a) Slot offset and increment
- b) Designated reporting rate.

Record transmitted messages..

Required results

Confirm that the EUT transmits position reports msg 2 according to defined parameters and reverts to SOTDMA msg 1 with standard reporting rate after 4 to 8 min.

This is a test on operational basis. The details of slot allocation are checked in a special test on link layer (see 4.6.4 16.6.4 Assigned operation). A record of this test can be used for evaluation of this slot allocation test point.

A test if the assigned reporting rate depends on course, speed and navigation status is done in 2.4.3 14.4.3 Assigned reporting rates.

20.06.02 Test details a)– Slot offset and increment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset A = offset to first assigned slot = 10 and slot increment parameter = 4 (increment = 125); autonomous report rate 10 s			
Message type	Check that message type of position report is 2		Ok
First message	Check that first message is sent after 10 slots	Is sent after 135 slots (= 10 slots + 125 slots increment) For offset=100 in assignment it is ok <u>27.08.02 Retest: offset = 40</u>	ok
Alternating channels	Check that position report is sent alternating on channel A and B	ok	Ok
Reporting rate	Check that the reporting rate is 125 slots (18 msg/min) or 250 slots (9 msg/min) per channel	Reporting rate and slot increment is only correct if the increment value is 125, not 4 <u>27.08.02 Retest: ok</u>	ok
Record switch back time	Check that EUT reverts to SOTDMA msg 1 within 4 to 8 min		Ok

20.06.02 Test details b)– Reporting rate			
Test item	Check	Remark	Result
Send an assignment message 16 with offset = reporting rate of 300msg/10 min, increment=0			

Message type	Check that message type of position report is 2 instead of msg 1	<u>27.08.02</u> Retest: Rescheduling using msg 3 is done but msg 2 is not used <u>18.09.02</u> Retest: ok, msg 2 is used as required	ok
Alternating channels	Check that position report is sent alternating on channel A and B		Ok
Reporting rate	Check that the reporting is 30msg/frame = 2 s	Reporting rate is not changed <u>27.08.02</u> Retest: Reporting rate not changed <u>18.09.02</u> Retest: ok, reporting rate is 30/min	ok
Record switch back time	Check that EUT reverts to SOTDMA msg 1 within 4 to 8 min	Starts rescheduling using msg 3 after 7 min, is finished after 8 min	Ok

Date	Result	Status
20.06.02	Assigned reporting rate is not 2 s but remains at 10 s	
27.08.02	Retest: not ok, msg 2 is not used and reporting rate is not changed Retest: ok, msg 2 is used and reporting rate is as required.	ok
20.06.02	For slot assignment the slot increment parameter has to be a value from 0 to 7, the index to the real slot increment.	
27.08.02	Retest: ok now	ok

2.1.3 14.1.3 Polled mode

(4.2.1 M.1371A2/3.3.2)

2.1.3.1 14.1.3.1 Transmit an interrogation

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of an interrogation message (msg 15) by the EUT addressing 1 or 2 destinations according to message table (M.1371 table 13) requesting the following responses:

- msg 3, msg 5 from mobile stations

- msg 4, msg 20, msg 22. from base stations

Record transmitted messages.

Required results

Check that EUT transmits the interrogation message (msg 15) as appropriate.

14.02.02 Test details - Interrogation of msg 3			
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_5.sst: \$AIAIR,000005002,3,..... Change type from 5 to 3 A response is automatically transmitted by the addressed transponder			
VDO output of EUT	Check the VDO output on PI	No VDO output <u>27.08.02</u> Retest: ok	ok
AIABK acknowledgement Record and check the AIABK acknowledgement			
No ABK output <u>27.08.02</u> Retest: ABK output: \$AIABK,431099806,B,15,□,3 Message sequence number should be a null field, but is a random character <u>19.09.02</u> Retest: ok, Message sequence number is a null field			
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check request on VDL analyser		Ok

14.02.02 Test details - Interrogation of msg 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_5.sst: \$AIAIR,000005002,5,..... A response is automatically transmitted by the addressed transponder			
VDO output of EUT	Check the VDO output on PI	No VDO output <u>28.08.02</u> Retest: ok	ok
AIABK acknowledgement Record and check the AIABK acknowledgement			
<u>28.08.02</u> Retest: ABK output see interrogation of msg 3 <u>19.09.02</u> Retest: ok, Message sequence number is a null field			
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check request on VDL analyser		ok

14.02.02 Test details - Interrogation of msg from base stations			
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_5.sst: \$AIAIR,000005002,4/20/22,,,,,, Change type to 4, 20, 22 <u>The response from the base station is not checked</u>			
Request msg 4	Check the VDO output on PI	No VDO output <u>27.08.02 Retest:ok</u>	ok
	Record and check the AIABK acknowledgement	<u>28.08.02 Retest:</u> ABK output see interrogation of msg 3 <u>19.09.02 Retest:</u> ok, Message sequence number is a null field	ok
Request msg 20	Check the VDO output on PI	No VDO output <u>27.08.02 Retest:ok</u>	ok
	Record and check the AIABK acknowledgement	<u>28.08.02 Retest:</u> ABK output see interrogation of msg 3 <u>31.09.02 Retest:</u> ok, Message sequence number is a null field	ok
Request msg 22	Check the VDO output on PI	No VDO output <u>27.08.02 Retest:ok</u>	ok
	Record and check the AIABK acknowledgement	<u>28.08.02 Retest:</u> ABK output see interrogation of msg 3 <u>31.09.02 Retest:</u> ok, Message sequence number is a null field	ok

14.02.02 Test details - Interrogation with 2 requests			
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_35_5.sst: \$AIAIR,000005002,3,,5,,000007001,5,, <u>A response is automatically transmitted by one of the addressed transponder</u>			
VDO output of EUT	Check the VDO output on PI	No VDO output <u>27.08.02 Retest:ok</u>	ok
AIABK acknowledgement	Record and check the AIABK acknowledgement	<u>28.08.02 Retest:</u> ABK output see interrogation of msg 3 <u>31.09.02 Retest:</u> ok, Message sequence number is a null field	ok
RX of request	Check that message is received by one of the addressed transponders (VDM)		Ok
Received by VDL Analyser	Check request on VDL analyser		Ok

Date	Result	Status
19.03.02	Not yet implemented	
26.06.02	No transmission of interrogation	
28.08.02	Interrogation is now transmitted, but message sequence number in ABK is a random character, should be a null field Retest: Sequence number in ABK is a null field	ok

2.1.3.2 14.1.3.2 Interrogation response

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply an interrogation message (msg 15; EUT as destination) to the VDL according to message table (M.1371 table13) for responses with msg 3, msg 5 and slot offset set to defined value.

Record transmitted messages and frame structure.

Required results

Check that the EUT transmits the appropriate interrogation response message as requested after defined slot offset. Confirm that the EUT transmits the response on the same channel as where interrogation was received.

The requests with offset > 0 have to be made by the VDL generator, because a mobile transponder cannot generate requests with slot offset.

Test details - Interrogation of msg 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 5, slot offset = 0 (auto select) A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)	Msg 15 is not received, no VDM output 28.08.02 Retest: ok	ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		ok
Response on VDL	Check the response on VDL with the VDL analyser, note slot offset		ok
Response channel	Check that the response is transmitted on the request channel		ok

Test details - Interrogation of msg 3			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3 with given slot offset = 100 A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)	Msg 15 is not received, no VDM output 28.08.02 Retest: ok	ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		ok
Response on VDL	Check the response on VDL with the VDL analyser		ok
Slot selection	Check that the slot offset defined in the request is used		ok

More detailed interrogation tests are made in 6.3 “18.2 (M.1371 A1/5.3) Interrogation responses”

2.1.4 14.1.4 Addressed operation

(6.1 M1371 A2/3.3.8)

2.1.4.1 14.1.4.1 Transmit an addressed message

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of an addressed binary message (msg 6; EUT as source) according to message table (M.1371 table 13) by the EUT.

Record the transmitted messages.

Required results

Check that the EUT transmits the msg 6 as appropriate. Repeat test with the addressed safety related message (msg 12).

More detailed tests of addressed message including channel use and transmission retry are made in 6.1 “18.1 Addressed messages”.

The field contents of this test should be checked in 4.7.2”

Test details - Addressed binary message 6			
Test item	Check	Remark	Result

Transmit an addressed binary message 6 by sending an ABM sentence to the PI or alternatively using the MKD

PI sentence: File AIABM_bin.sst: !AIABM,1,1,2,000005002,1,6,06P0test,0

A response is automatically transmitted by the addressed transponder .

VDO output of EUT	Check the VDO output on PI		ok
Channel	Check Tx channel	Transmission on Ch A, but in VDO and ABK is Ch B <u>26.06.02 Retest ok</u>	ok
Message sequence number	Check that sequence number in VDL msg = Sequential message identifier of ABM sentence		Ok
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check msg on VDL analyser		Ok
TX of ackn. msg 7 (VDO)	Check that ackn msg 7 is transmitted by addressed transponder (VDO)		Ok
Use of Appl. ID	Check for proper use of DAC and FI for text messages when using MKD		Ok
RX of msg 7 (VDM)	Check that the ackn. msg 7 is received by EUT (VDM)		ok
AIABK acknowledgement		AIABK,000001007,6,2,4 Channel should be A, Type should be 0 instead of 4 <u>26.06.02 Retest ok</u> AIABK,000001008,A,6,2,0	ok
Add invalid character to encapsulated data, e.g. x,y,z			
Transmission	Check that message is not transmitted	Message is transmitted all binary data set to 0 <u>28.08.02 Retest: no change</u> <u>19.09.02 Retest: ok, TX of invalid message is refused, ackn. type = 2</u>	ok
ABK sentence	Check that ABK message with ackn. type 2 (could not be broadcast) is output on PI	ABK type = 1 or 3 according to the received acknowledgement	ok

Test details - Addressed safety related message 12			
Test item	Check	Remark	Result
Transmit an addressed safety related message 12 by sending an ABM sentence to the PI or alternatively using the MKD . PI sentence: File AIABM_safety.sst: !AIABM,1,1,2,000001005,1,12,D5CD,0 (D5CD = „TEST“). A response is automatically transmitted by the addressed transponder .			
VDO output of EUT	Check the VDO output on PI		ok
Channel	Check Tx on channel A	Transmission on Ch A, but in VDO and ABK is Ch B <u>26.06.02 Retest ok</u>	ok
Message sequence number	Check that sequence number in VDL msg = Sequential message identifier of ABM sentence		ok
Received by VDL Analyser	Check msg on VDL analyser		ok
RX of msg 13 (VDM)	Check that the ackn. msg 13 is received by EUT (VDM)		ok
acknowledgement	Check AIABK or MKD for corresponding pos. and neg. ack.	ABK,000001007,B,12,2,0 AI Channel should be A <u>26.06.02 Retest ok</u> AIABK,000001008,A,12,2,0	ok

Date	Result	Status
19.03.02	Channel in VDO and ABK is wrong, Ackn. Type in ABK of binary message is 4 instead of 2	
26.06.02	Channel in VDO and ABK is now ok	ok

2.1.4.2 14.1.4.2 Receive addressed message

(4.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- a) Apply an addressed binary message (msg 6; EUT as destination) to the VDL.
- b) Apply an addressed binary message (msg 6; other station as destination) to the VDL.

Record transmitted messages and frame structure.

Required results

Check that EUT transmits the appropriate acknowledgement message. Confirm that

- a) EUT outputs the received message via the Presentation Interface.
- b) EUT does not output the received message via the Presentation Interface.

Further tests of received addressed messages including acknowledgement see 6.1.2
18.1.2 Acknowledgement.

19.03.02 Test details - Addressed binary message 6			
Test item	Check	Remark	Result
	Transmit an addressed binary message by VDL generator or other Transponder verified by VDL analyser		
Addressed to EUT	Check that VDM output on PI of EUT		ok
	Check DAC		Ok
	Check FI		Ok
	Check binary data		ok
Addressed to other AIS transponder	Check that no VDM output on PI or on display of EUT		ok

Test details - Addressed safety related message 12			
Test item	Check	Remark	Result
transmit an addressed safety related message by VDL generator or other Transponder verified by VDL analyser			
Addressed to EUT	Check that VDM output on PI of EUT		Ok
	Check message text		Ok
Addressed to other AIS transponder	Check that no VDM output on PI or on display of EUT	No output of msg 12, but VDM output of msg 13 from other transponder to transmitting transponder <u>26.06.02 Retest ok</u>	ok

Date	Result	Status
19.03.02	VDM output of msg 13 to another transponder	
26.06.02	Retest ok, no output of msg 13 from other transponder	ok

2.2 14.2 Multiple slot messages

(4.2 M.1371 A2/5.2.1)

2.2.1 14.2.1 5 slot messages

(M.1371 A2 / 5.2.1)

Method of measurement

Apply a BBM sentence to the PI of EUT with a max. of 121 data bytes of binary data in order to initiate transmission of a binary message (msg 8).

Required results

Check that the message is transmitted in up to 5 slots accordingly.

Single slot binary and safety related messages broadcast messages are tested in 6.4
 18.3 Broadcast messages

Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit a binary broadcast messages 8 with 121 data bytes of binary data by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_bin.sst: AIS channel for broadcast is 1: (ch A) The file contains 4 BBM sentences with in total 121 data bytes or 162 characters			
VDO output of EUT	Check the VDO output on PI	Transmission ok with channel 0 and 1 No transmission of Multislot message with channel 2, With channel 3: Function of EUT completely stopped. (2 times) <u>26.06.02 Retest</u> No transmission with channel 0,1,2,3 ABK type = 2 <u>28.08.02 Retest:</u> Transmission ok now	ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	AIABK,,,8,6,3	ok
Sequential message identifier in VDO	Check that message sequence number in ABK = Sequential message identifier of BBM sentence		ok
Message on VDL	Check the broadcast message on VDL analyser		ok
Rx on other transponder (VDM)	Check the VDM output of an other transponder		ok

Test details - Safety related broadcast message 14			
Test item	Check	Remark	Result
Transmit a safety related broadcast messages 14 with 121 data bytes of binary data by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_safety.sst: AIS channel for broadcast is 2: (ch B) The file contains 4 BBM sentences with in total 121 data bytes or 162 characters			
VDO output of EUT	Check the VDO output on PI	Transmission ok with channel 0 and 1 No transmission of Multislot message with channel 2, With channel 3: Function of EUT completely stopped. (2 times) <u>28.08.03 Retest:</u> Transmission ok now	ok
AIABK acknowledgement	Record and check the AIABK acknowledgements		ok
Sequential message identifier in VDO	Check that message sequence number in ABK = Sequential message identifier of BBM sentence		ok
Message on VDL	Check the broadcast message on VDL analyser		ok
Rx on other transponder (VDM)	Check the VDM output of an other transponder		ok

Date	Result	Status
19.03.02	Transmission ok with channel 0 and 1 No transmission of Multislot message with channel 2, With channel 3: Function of EUT completely stopped.	
26.06.02	Retest: No transmission of any BBM message, ABK type = 3 (successfully broadcast)	
28.08.02	Retest: Transmission ok now	ok

2.2.2 14.2.2 Longer messages

(M.1371 A2 / 5.2.1)

Method of measurement

Apply a BBM sentence to the PI of the EUT Presentation Interface with an information content not fitting in 5 slots (i.e. more than 121 data bytes of binary data containing only binary 1's).

Required results

Check that the message is not transmitted. Check that a negative acknowledgement is given on the presentation interface.

28.08.02 Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit a binary broadcast messages 8 with 122 data bytes of binary data, all bits "1", by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_bin_111.sst: AIS channel for broadcast is 1: (ch A) The file contains 4 BBM sentences with in total 121 data bytes or 162 characters			
VDO output of EUT	Check that no VDO is output on PI		Ok
Message on VDL	Check that no message is received by VDL analyser		Ok
AIABK acknowledgement	Record the AIABK output, check that type = 2 (could not be broadcast)		Ok

This test evaluates if the transponder takes into account the actually required amount of bit stuffing and can so transmit longer messages in 5 slots. This is not required.

28.08.02 Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit a binary broadcast messages 8 with 123 databytes of binary data, not all "1", by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_bin_long.sst: AIS channel for broadcast is 1: (ch A) The file contains 4 BBM sentences with in total 123 data bytes or 164 characters			
VDO output of EUT	Check the VDO output on PI	Message is not transmitted	Ok
AIABK acknowledgement	Record and check the AIABK acknowledgements, type should be 3	ABK is type 2	ok

Date	Result	Status
28.08.02	Test ok	ok

2.3 14.3 Information content

(6.5.1 M.1371 A2/3.3.8)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

Apply all static, dynamic and voyage related data to the EUT.

Record all messages on VDL and check the contents of position report msg 1 and static data report msg 5.

Required results

Confirm that data transmitted by the EUT complies with manual and sensor inputs.

2.3.1 Information content of msg 1

The dynamic information content of msg 1,2,3 provided by external sensors is checked in detail in 7.5 “19.5 Test of sensor input” depending on the content and status of the different sensor input sentences. 2.1.1.1

Information content provided by internal GNSS receiver – if used as backup position source – and manual MKD inputs are tested here.

Test details – content of msg 1			
Test item	Check	Remark	Result
Internal GNSS is in use, no external sensor inputs			
MMSI	Check MMSI and compare with MKD display		Ok
Navigational status	See below		ok
Position	Check the values of lat and lon and compare with MKD display		Ok
Speed	Check the values of SOG and COG and compare with MKD display		Ok
Heading/ROT	Check that the values of heading and ROT are default		Ok
Position accuracy flag	Check flag with and without differential corrections by msg 17		Ok
Time stamp	Check time stamp		ok
Comm state	Check for availability, detailed test in 5		ok
Default values	Check that default values for LAT, LON, SOG, COG are transmitted if internal GNSS is unavailable		ok

20.03.2002	Test details – Navigational status		
Test item	Check	Remark	Result
Test of navigational status on VDL message. Check some different navigational status values. Change the navigational status using MKD or VSD input			
Status = 0 (under way using engine)	Check Status in VDL message 1		ok
Status = 1 (at anchor)	Check Status in VDL message 1		ok
Status = 7 (fisching)	Check Status in VDL message 1		ok
Status = 15 (undefined)	Check Status in VDL message 1	Can not be entered on MKD	---
Other status values	Check some other values		ok

Date	Result	Status
14.03.02	Not yet tested	
26.06.02	Test ok	ok

2.3.2 Information content of msg 5

Test details – Content of msg 5			
Test item	Check	Remark	Result
Check of the contents of msg 5 (static and voyage related data)			
Data can be changed using MKD or VSD/SSD input at PI			
MMSI	Check value in msg 5		ok
AIS version indicator	Check that version is 0		ok
IMO number	Check value in msg 5		ok
Call sign	Check value in msg 5		ok
Name of ship	Check value in msg 5		ok
Type of ship and cargo type	Check value in msg 5		Ok
Reference point for internal GPS			
Reference point A	Check value in msg 5	<u>26.06.02 Retest</u> Value = 150 Same value as for EPFS, position of internal GPS is calculated to ref. point of EPFS	Ok
Reference point B	Check value in msg 5	<u>26.06.02 Retest</u> Value = 30	Ok
Reference point C	Check value in msg 5	<u>26.06.02 Retest</u> Value = 12	Ok
Reference point D	Check value in msg 5	<u>26.06.02 Retest</u> Value = 14	Ok
Reference point for EPFS			
Reference point A	Check value in msg 5	105, Should be 150 <u>26.06.02 Retest</u> Value = 150	ok
Reference point B	Check value in msg 5	323, Should be 30 <u>26.06.02 Retest</u> Value = 30	ok
Reference point C	Check value in msg 5	50, Should be 13 <u>26.06.02 Retest</u> Value = 12 (ok)	ok
Reference point D	Check value in msg 5	22, Should be 13 Wrong order of A,B,C,D <u>26.06.02 Retest</u> Value = 14 (ok)	ok
Tx of msg 5	Check if msg 5 is transmitted at change of position source	Msg 5 is not transmitted at change position source. Not required because ref. point doesn't change at change of position source	ok
Voyage related data			
ETA	Check value in msg 5		Ok
Maximum present static draught	Check value in msg 5		Ok
Destination	Check value in msg 5		Ok

DTE flag can be checked in connection with 2.9.2.5 "14.9.2.5 Remote MKD disconnection, when so configured". Check the flag during that test and enter result here			
DTE on	Check that DTE flag = 0	DTE flag = 0 <u>26.06.02 Retest:</u> 0k	ok
DTE off	Check that DTE flag = 1	DTE flag = 0 <u>26.06.02 Retest:</u> No update of msg 5 at MKD disconnection DTE flag = 1	ok
Type of EPFS			
Apply simulated GLL, VTG, GDT and ROT sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst.			
Change talker according to test item			
Talker = GP	Check type of EPFS = 1	= 1	Ok
Talker = GL	Check type of EPFS = 2	= 2	ok
Talker = GN	Check type of EPFS = 3	= 0 <u>26.06.02 Retest</u> Value = 3	Ok
Talker = LC	Check type of EPFS = 4	= 4	Ok
Talker = IN	Check type of EPFS = 6	= 0 <u>26.06.02 Retest</u> value = 6	Ok
Talker = other	Check type of EPFS = 0	= 0	Ok
		Note: at change of type of EPFS no msg 5 is transmitted <u>28.08.02 Retest:</u> no change <u>19.09.02 Retest:</u> ok	ok

Date	Result	Status
20/03/02 26.096.02	Dimensions and Ref.Point incorrect Ref. Point data now ok Note: after restart of transponder for some time the dimension 0,0,0,0 is transmitted in msg 5.	ok
20/03/02 26.06.02	DTE flag inverted Retest: DTE flag now ok	ok
20/03/02 26.06.02	EPFS types not complete Retest: EPFS types ok	ok

2.4 14.4 Reporting rates

(6.5.2)

2.4.1 14.4.1 Speed and course change

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- a) *start with own speed of 10kn; record all messages on VDL for 10min and evaluate reporting rate for position report of EUT by calculating average slot offset over test period.*
- b) *Increase speed and change course (ROT > 10%/min, derived from heading) in accordance with 6.5.2 Table 1 and ITU-R M.1371 A2/4.3.*
- c) *Reduce speed and rotation rate to values below those given in Table 1.*
- d) *Make speed and/or heading sensor unavailable.*

For b), c), d) record all messages on VDL and check slot offset between two consecutive transmissions.

Required results

- a) *Reporting rate shall comply to Table 1 (10sec $\pm 10\%$).*
- b) *Confirm that the new reporting rate has been established (after 2 transmissions $\pm 20\%$.)*
- c) *Confirm that the reporting rate is reduced after 4min (speed reduction) or 20sec (ROT reduction).*
- d) *Check that with unavailable sensors the reporting rate reverts to default values (10sec if no sensor connected).*

Record the VDL data of the procedure according to the following test items, generate a table and diagram from that data and check the items using the recorded data.

Test details – Change of reporting rate			
Test item	Check	Remark	Result
19.03.2002			
Apply simulated GLL sentence to the sensor input. Set Navigation status to 0 (under way) File name is ais01_gll_vtg_hdt_rot.sst Record the VDL data of the procedure according to the following test items, generate a table and diagram from that data and check the items using the recorded data. Change speed according to the test items and record VDL data. After each change wait until new reporting rate is clearly established. Lines are related to Excel table repreate_speed.xls			
Speed = 10 kn	Check that reporting rate is 10 s		ok
Speed = 15 kn	Check slot allocation using msg 3 for new reporting rate	<ul style="list-style-type: none"> Last msg 3 allocates a slot which is never used Timeout of all msg 1 in the 1st frame after changing report rate is 0 <u>28.08.02 Retest:</u> <ul style="list-style-type: none"> All msg 3 allocate used slots, timeout is ok 	ok
	Check that slot allocation for the new reporting rate has started after 2 transmissions		ok
	Check that new rate is established within 1 minute		ok
	Check that new reporting rate is 6 s	10 msg /frame	ok
Speed = 25 kn	Check slot allocation using msg 3 for new reporting rate	Last msg 3 allocates a slot which is never used Timeout of all msg 1 in the 1st frame after changing report rate is 0 <u>28.08.02 Retest:</u> <ul style="list-style-type: none"> All msg 3 allocate used slots, timeout is ok 	ok
	Check that slot allocation for the new reporting rate has started after 2 transmissions		ok
	Check that new rate is established within 1 minute		ok
	Check that new reporting rate is 2 s	30 msg/frame	ok
Speed = 25 kn Increase heading by 6 degr. steps sometimes	Check that no change		ok
Speed = 25 kn Stop Increasing heading	Check that no change		ok

Reduction of speed to Speed = 15 kn	Check slot allocation by deallocation of slots, Msg 3 not required for new reporting rate	One msg 3 allocating a slot which is never used <u>28.08.02 Retest:</u> All allocated slots are used	ok
	Check that new rate starts after 3 min and is established within 4 minutes		ok
	Check that new reporting rate is 6 s		ok
Speed = 15 kn Increase heading by 6 degr. steps sometimes	Check slot allocation by inserting ITDMA slots (msg 3) for new reporting rate	No change, not yet implemented ? <u>28.08.02 Retest:</u> msg 3 are inserted	ok
	Check that new rate is established immediately	<u>28.08.02 Retest:</u>	ok
	Check that new reporting rate is 2 s	<u>28.08.02 Retest:</u> Reporting rate is 2 s, but insertion is very unregularly. Slot distance varies from 21 ... 121, should be in the range of 75+45 = 30...120 <u>19.09.02 Retest:</u> ok	ok
Speed = 15 kn Stop increasing heading	Check slot allocation by stopping insertion of ITDMA slots (msg 3)	<u>28.08.02 Retest:</u>	Ok
	Check that new rate is established within (30 s averaging+20 s delay =) 50 s after stop of heading change	<u>28.08.02 Retest:</u> lot insertion is stopped 50 s after end of heading change.	ok
	Check that new reporting rate is 6 s again	<u>28.08.02 Retest:</u>	ok
Speed = 10 kn	Check slot allocation using msg 3 for new reporting rate	Last msg 3 allocates a slot which is never used <u>28.08.02 Retest:</u> All allocated slot are used	ok
	Check that new rate starts after 3 min and is established within 4 minutes	<u>28.08.02 Retest:</u>	ok
	Check that new reporting rate is 10 s	<u>28.08.02 Retest:</u>	ok
Speed = 10 kn Decrease heading by 6 degr. steps sometimes	Check slot allocation by inserting ITDMA slots (msg 3) for new reporting rate	No change, not implemented ? <u>28.08.02 Retest:</u> Reporting rate is increased by inserting msg 3	ok
	Check that new rate is established immediately	<u>28.08.02 Retest:</u>	ok

	Check that new reporting rate is 3 1/3 s	<u>28.08.02 Retest:</u> Reporting rate is 2 s, but insertion is very unregularly. Slot distance varies from 12 ... 242, should be in the range of $125+/-75 = 50...200$ <u>19.09.02 Retest:</u> ok	ok
Speed = 10 kn Stop Decreasing heading	Check slot allocation by stopping insertion of ITDMA slots (msg 3)	<u>28.08.02 Retest:</u>	ok
	Check that new rate is established within (30 s averaging+20 s delay =) 50 s after stop of heading change	<u>28.08.02 Retest:</u> <u>New rate is established within</u> <u>58 s</u>	acc
	Check that new reporting rate is 10 s again	<u>28.08.02 Retest:</u>	ok

19.03.2002 Test details – Reporting rate - Sensor unavailable			
Test item	Check	Remark	Result
Apply simulated GLL sentence to the sensor input. Set Navigation status to 0 (under way) File name is ais01_gll_vtg_hdt_rot.sst			
Change speed according to the test items and record VDL data.			
Speed = 10 kn	Check that reporting rate is 10 s		ok
Speed = 15 kn	Check that reporting rate is 6 s		ok
Speed sensor unavailable (internal source made unavailable)	Record time from stopping speed input to reverting report rate	Switch back to 10 s after 4min10s	ok
	Check that new reporting rate is 10 s		ok

Note: 61993 differs to 1371 clarifications with regard to behaviour when speed sensor unavailable

Date	Result	Status
19.03.02	Mainly ok, some failures in detail	
28.08.02	Test ok or accepted. Insertion of msg during reporting change is very irregular, a large variety of slot distances (see details)	
19.09.02	Retest: ok	ok

2.4.2 14.4.2 Change of navigational status

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Change Navigational status by applying voyage data message to the Presentation Interface of the EUT.

- a) set NavStatus to "at anchor" and speed <3 kn
- b) set NavStatus to "at anchor" and speed >3 kn
- c) set NavStatus to other values

Record all messages on VDL and evaluate reporting rate of position report of EUT.

Required results

- a) Reporting rate shall be 3 min.
- b) Reporting rate shall be 10 s.
- c) Reporting rate shall be adjusted according to speed and course (see 14.4.1)

Test details – Reporting rate			
Test item	Check	Remark	Result
Apply simulated sensor data to the sensor input. File name is ais01_gll_vtg_hdt_rot.sst Change Navigation status and speed according to test items			
Navigation status = 0 (under way using engine Speed = 2 kn)	Check that reporting rate is 10 s		ok
Nav. status = 1 (at anchor) Speed = 2 kn	Check that reporting rate is 3 min	No position reports (only msg 5) <u>26.06.02 Retest:</u> reporting rate is 3 min with msg 3	ok
Nav. status = 1 Speed = 4 kn	Check that reporting rate is 10 s		ok
Nav. status = 5 (moored) Speed = 2 kn	Check that reporting rate is 3 min	No position reports (only msg 5) <u>26.06.02 Retest:</u> reporting rate is 3 min with msg 3	ok
Nav. status = 2 or other Speed = 2 kn	Check that reporting rate is 10 s		
		Note: A sequence of 10 msg type 1 has been transmitted within 10 slots, after that ok again, not reproducible	

Date	Result	Status
26.06.02	Test ok	ok

--	--	--

2.4.3 14.4.3 Assigned reporting rates

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit an Assigned mode command msg 16 to the EUT with:

- a) initial slot offset and increment;
- b) designated reporting rate.

Change course, speed and NavStatus. Record transmitted messages.

Required results

Confirm that the EUT transmits position reports msg 2 according to the parameters defined by msg 16; the reporting rate shall not be affected by course, speed or NavStatus. The EUT shall revert to msg 1 or 3 in autonomous mode with standard reporting rate after 4 to 8 min.

If the autonomous mode requires a higher reporting rate than that directed by Message 16, the Class A shipborne mobile AIS station should use the autonomous mode.

A basic test of assigned mode is made in 2.1.2 14.1.2 Assigned mode

More detailed tests are made in 4.6.4 16.6.4 Assigned operation

In this test it is only checked if the assigned reporting rate depends on course, speed and navigation status.

Only if the speed or course change requires an higher report rate the EUT has the revert to autonomous mode and obtain the higher report rate.

Test details a) – Slot offset and increment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset A = offset to first assigned slot = 40 and slot increment parameter = 3 (increment = 225 = 6 s)			
NavStatus = 0 (under way using engine) Speed = 10 kn	Check that slot offset = 225 and reporting rate is 6 s And msg type = 2	The slot increment parameter has to be a value from 0...7 according to clarification of IUT-R M.1371. Actually the slot increment value is used directly <u>28.08.02 Retest: ok</u>	ok
NavStatus = 1 (at anchor)	Check that Navstatus has no effect: slot offset = 225 and reporting rate is 6 s And msg type = 2		ok

Nav Status = 0 Increase speed to 15 kn	Check that reporting rate is not changed.	<p><u>28.08.02</u> Retest: For 1 frame msg 3 is used, but slot allocation is not changed. After the msg 3 frame msg 2 is used again Msg 3 should not be used in this case because assigned mode is not left <u>18.09.02</u> Retest: ok, no change of assigned mode</p>	ok
NavStatus = 0 Speed = 25 kn	Check that reporting rate = 2 s and Msg type = 1 (change with msg 3)	<p>No change of reporting rate <u>28.08.03</u> Retest: Reporting rate is increased to 2 s. The assigned slots are kept. After rescheduling msg 2 is used. Msg 1 should be used because EUT has switched back to autonomous mode After assignment timeout it is rescheduled again to 2 s reporting rate, going back to msg 1 When increasing reporting rate because of high speed the assigned mode should be completely finished: <ul style="list-style-type: none"> • No use of msg 2 • No rescheduling at assigned mode timeout • No need to keep the assigned slots <u>18.09.02</u> Retest: ok, Assigned mode is completely finished</p>	Ok

NavStatus = 0, Speed = 10 kn, then msg 16 then speed = 15 kn then Course change	Check that reporting rate = 2 s and Msg type = 1/3 (msg 3 inserted between msg 1)	<p>No change of reporting rate <u>28.08.02 Retest:</u> No change <u>19.09.02 Retest:</u> Msg 3 are inserted between msg 2, but in most cases only 1 msg 3 is inserted between two msg 2, in some cases 2 msg 3, but on the same channel. <u>02.10.02 Retest:</u> Retest: no change. <u>08.10.02 Retest:</u> ok</p> <p><u>23.09.02 Retest:</u> Insertion of msg 3 seems to be ok now (no diagram evaluated), but insertion of msg 3 doesn't stop not within 50 s after end of heading change. It stops at end of assigned mode, about 3 min after end of heading change. <u>02.10.02 Retest:</u> End of increased reporting rate at 50 s after end of heading change:</p>	ok ok

Test details b) – Designated reporting rate			
Test item	Check	Remark	Result
Send an assignment message 16 with offset = reporting rate of 100 msg/10 min, increment=0			
NavStatus = 0 (under way using engine) Speed = 10 kn	Check that reporting rate is 6 s And msg type = 2	26.06.02: Reporting rate is 10 s <u>28.08.02</u> Retest: Reporting rate is 6 s Message type after rescheduling is 1, should be 2 <u>18.09.02</u> Retest: ok, reporting rate is 10/min,msg type 2	Ok ok
NavStatus = 1 (at anchor)	Check that navStatus has no effect: reporting rate = 6 s msg type = 2		ok
Nav Status = 0 Increase speed to 15 kn	Check that reporting rate is not changed.	Reporting rate is not changed, but rescheduling with msg 3 is done. It makes no sense to do a rescheduling. <u>18.09.02</u> Retest: ok, msg 16 is ignored	ok
NavStatus = 0 Speed = 25 kn	Check that reporting rate = 2 s and Msg type = 1 (change with msg 3)		Ok
NavStatus = 0 Speed = 15 kn Course change	Check that reporting rate = 2 s and Msg type = 1/3 (msg 3 inserted between msg 1)	Increase of reporting rate to 2 s is done be ineriton of msg 3	Ok

Date	Result	Status
26.06.02	Test not ok, see details	
28.08.02	Retest, not ok, see details	
19.09.02	Retest: ok	ok

2.4.4 14.4.4 Static data reporting rates

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

a) Record the transmitted messages and check for static and voyage related data (msg 5).

b) Change static and/or voyage related station data. Record the transmitted messages and check for static and voyage related data (msg 5).

Required results

a) Confirm that the EUT transmits msg 5 with a reporting rate of 6 min.
 b) Confirm that the EUT transmits msg 5 within 1 min reverting to a reporting rate of 6 min.

Test details - Static data reporting rates			
Test item	Check	Remark	Result
Record msg 5 and check repetition rate			
a) Default update rate	Check that update rate is 6 min		ok
b) Change static data using SSD sentence short time after regular msg 5	Check that msg 5 is transmitted within 1 min		Ok
Restart reporting rate of 6 min	Check that the next msg 5 is transmitted after 6 min		Ok
Change voyage related data using VSD sentence	Check that msg 5 is transmitted within 1 min		Ok
Change static data using MKD	Check that msg 5 is transmitted within 1 min		Ok
Change position source with different ref. point data (see 61993 6.10.3.4)	Check that msg 5 is transmitted within 1 min because of change of ref. point data		Ok

Date	Result	Status
19.03.2002	Test ok	ok

2.5 14.5 Security

(6.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Switch the EUT off for more than 15 min and on again at least ten times. Recover and readout recorded data.

Required results

Confirm that the EUT records and displays times and events correctly.

Test details - Security			
Test item	Check	Remark	
Switch EUT off for 16 minutes and on again			
Read out means	Check that there are means to readout recorded data	PI output using \$P No MKD display Note: Error code is not documented Actually not used, set to 000	ok
Read out recorded data	Check that all switch off times are correctly recorded	Switch off times are not stored, missing backup battery 29.02.02 Recorded times are stored now. Recorded times are not correct, <ul style="list-style-type: none"> • Switch on times seem to be ok, • Switch off times are not correct. (see logfile) <u>20.09.02 Retest: ok, Switch off Times ok</u>	ok

Logfile vom 29.08.02, ca. 06.24 UTC

```
-----
$PSAEAISLFS,1,010101,062559,290802,061428,001*01
$PSAEAISLFS,2,290802,062128,270802,071419,001*0D
$PSAEAISLFS,3,010101,000400,270802,113627,001*0D
$PSAEAISLFS,4,010101,000259,210802,101024,001*00
$PSAEAISLFS,5,010101,000200,210802,084800,001*0F
-----
$PSAEAISLFS,6,010101,000259,130802,084935,001*06
$PSAEAISLFS,7,010101,000159,120802,133958,001*03
$PSAEAISLFS,8,010101,000401,120802,140758,001*0E
$PSAEAISLFS,9,010101,000300,160802,042824,001*0A
$PSAEAISLFS,0,010101,000159,120802,152758,001*0D
```

Date	Result	Status
26.06.2002	Not yet completely tested	
28.08.2002	Retest: Switch off times incorrect	
20.09.2002	Retest: Switch off times ok	ok

2.6 14.6 Initialisation period

(6.7 M.1371 A2/3.3.3)

Method of measurement

Set up standard test environment with all sensors available.

- a) Switch on EUT with EUT operating in autonomous mode.
- b) Switch off EUT for approx. 0.5 s. Record transmitted messages.

Required results

Confirm that the EUT starts transmissions within 2 min after switch on.

Test details - Initialisation period			
Test item	Check	Remark	Result
Set up standard test environment with all sensors available			
a) Switch on of EUT	Check that EUT starts transmission within 2 min	First transmission after 1:58	ok
b) Switch off EUT for approx. 0.5 s	Check that EUT starts transmission within 2 min	First transmission after 1:56	ok

Date	Result	Status
19.03.2002	Test ok	ok

2.7 14.7 Channel selection

(6.9)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Switch the EUT to different channels randomly selected from the maritime mobile band as specified by ITU-R M.1084-4, Annex 4 using both 25kHz and 12.5kHz channel spacing (incl. 12.5kHz emission on a 25kHz channel):

- a) manually,
- b) by transmission of channel management message (msg 22) broadcast and addressed to EUT,
- c) by application of ACA sentence to the presentation interface.
- d) By transmission of DSC telecommand to EUT

Record the VDL messages.

Required results

Confirm that the EUT switches to Channel / bandwidth and duplex / simplex channels accordingly.

Confirm that the EUT delivers a TXT-sentence with ID 036, followed by the ACA-sentences needed to inform of changes in the AIS use of regional operating settings.

Test details - Channel selection			
Test item	Check	Remark	Result
Select channels and bandwidth according to the test items in a regional area around the actual position so that is in use.			
The VDL analyser has to be switched to the selected channels			
a) Enter <u>manually</u> :	Check that channels are used		Ok
2 simplex channels	Check bandwidth		Ok
25 kHz spacing	Check TXT output at PI		Ok
25 kHz bandwidth	Check ACA output at PI		Ok
b) Enter by using <u>msg 22</u> :	Check that channels are used	Channel 86 (1086 and 2086)	Ok
1 duplex channel	Check bandwidth		Ok
25 kHz spacing	Check TXT output at PI		Ok
25 kHz bandwidth	Check ACA output at PI		Ok
c) Enter by <u>ACA sentence</u> :	Check that channels are used		Ok
1 duplex channel	Check bandwidth		Ok
25 kHz spacing	Check TXT output at PI		Ok
12.5 kHz bandwidth	Check ACA output at PI		Ok
d) Enter by <u>DSC</u>	Check that channels are used	To be done with DSC test	
2 simplex channels	Check bandwidth		
12.5 kHz spacing	Check TXT output at PI		
12.5 kHz bandwidth	Check ACA output at PI		

Date	Result	Status
26.06.2002	Test ok	ok

2.8 14.8 Transceiver protection

(6.9 ; M.1371 A2/2.14, 2.15)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Open circuit and short circuit VHF-antenna terminals of the EUT for at least 60 s each.

Required results

The EUT shall be operative again within 2 min after refitting the antenna without damage to the transceiver.

This test should be done as the last test to be able to do all other tests in case of transmitter damage.

Test details - Transceiver protection			
Test item	Check	Remark	Result
Open circuit of VHF antenna terminal	Check that EUT starts transmission within 2 min after refitting the antenna		ok
Short circuit of VHF antenna terminal	Check that EUT starts transmission within 2 min after refitting the antenna		ok

Date	Result	Status
09.07.02	Test ok	ok

2.9 14.9 Alarms and indicators, fall-back arrangements

(6.10)

Test details - General alarm tests			
Test item	Check	Remark	Result
No alarm pending			
Alarm output repetition	Check that ALR sentences are not output with a repetition rate < 1 min	No ALR output if no alarm active	Ok ??

Date	Result	Status
27.06.02	Test ok	Ok ??

2.9.1.1 14.9.1 Loss of power supply

(6.10.1.2)

Method of measurement

Disconnect power supplies of the EUT.

Required result

Verify that the relay output is “active” when the power is “off”.

Test details - Loss of power supply			
Test item	Check	Remark	Result
Switch off power supply	Check that alarm relay output is active.		ok

2.9.2 14.9.2 Monitoring of functions and integrity

(6.10.2)

2.9.2.1 14.9.2.1 Tx malfunction

Method of measurement

Disable the transmitter by disconnecting the antenna.

Required result

Verify that an alarm sentence ALR with alarm ID 001 is sent and the relay output signals the failure state.

Verify that relay deactivates when the EUT receives an ACK and that the status field in the ALR sentence is updated.

Alternatively an ALR 001 when TX active between TX-slots is accepted; disconnecting antenna is also alarmed by ALR 002.

Test details - Tx malfunction			
Test item	Check	Remark	Result
Disconnect VHF antenna or: make TX active between scheduled slots (e.g. CW carrier)			
Stop of transmission	Check if transmission is stopped		ok
ALR output	Check that ALR sentence ID 001 is output at PI		Ok
ALR output repetition	Check that the ALR sentence is repeated with a rate of 30 s		Ok
Alarm relay	Check that alarm relay is activated	The alarm relay is activated only for a short time, not until acknowledgement <u>28.08.02 Retest:</u> Alarm relay is now permanently activated	ok
MKD display	Check that the alarm is displayed on the MKD		Ok
Send an ACK sentence	Check that alarm relay deactivated	Is already deactivated <u>28.08.02 Retest:</u> Alarm relay is not deactivated <u>19.09.02 Retest:</u> Alarm relay is deactivated	ok
	Check that ALR sentence is updated		Ok
	Check that alarm display on the MKD is updated		ok
Reconnect VHF antenna	Check that ALR sentence is updated		Ok
	Check that alarm relay is deactivated	<u>28.08.02 Retest:</u> Alarm relay is not deactivated <u>19.09.02 Retest:</u> Alarm relay is deactivated	ok
	Check that alarm display on the MKD is updated		Ok

Date	Result	Status
27.06.02	The alarm relay is activated only for a short time, not until acknowledgement	
28.08.02	Alarm relay is now permanently activated but never deactivated	
19.09.02	<u>Retest:</u> Alarm relay is deactivated	ok

2.9.2.2 14.9.2.2 Antenna VSWR

Method of measurement

Prevent the EUT from radiating with full power by mismatching the antenna for a VSWR of 3:1. During the mismatch the output power is not required to be at the rated output power.

Required result

Verify that the EUT continues transmitting. Verify that an alarm sentence ALR with alarm ID 002 is sent and the relay output signals the failure state.

Verify that relay deactivates when the EUT receives an ACK and that the status field in the ALR sentence is updated.

Test details - Antenna VSWR			
Test item	Check	Remark	Result
Connect a mismatched dummy load with a VSWR of 3:1 to the VHF antenna terminal			
Continuation of Tx	Check that transmission continues		Ok
ALR output	Check that ALR sentence ID 002 is output at PI		Ok
MKD display	Check that the alarm is displayed on the MKD		Ok
Alarm relay	Check that alarm relay is activated	The alarm relay is activated only for a short time, not until acknowledgement <u>19.09.02 Retest:</u> Alarm relay is activated	ok
Send an ACK sentence	Check that alarm relay deactivated		ok
	Check that ALR sentence is updated		Ok
	Check that alarm display on the MKD is updated		Ok
MKD acknowledge (applies to all alarms) note: NEW	Ack on MKD should clear display and update ALR sentence		Ok
Connect VHF antenna	Check that ALR sentence is updated		Ok

Date	Result	Status
27.06.02	The alarm relay is activated only for a short time, not until acknowledgement	
19.09.02	Retest: ok	ok

2.9.2.3 14.9.2.3 Rx malfunction

Manufactures shall provide documentation describing how the AIS detects Rx malfunction and that an ALR sentence with alarm ID as appropriate is sent.

Test details - Rx malfunction	
08.02.02	

Test item	Check	Remark	Result
Check the documentation			
Detection of RX malfunction	Check that documentation describes how the AIS detects Rx malfunction		ok
ALR output	Check that documentation describes that an ALR sentence with ID 003 (RX1), ID 004 (RX2) and ID 005 (DSC) is sent.		ok

2.9.2.4 14.9.2.4 Loss of UTC

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Disconnect the GNSS antenna (UTC clock lost).

Required result

Verify that the system continues to operate but changes to indirect synchronisation and that an TXT-sentence with ID 007 is sent and the relay output is not activated.

27.06.02 Test details - UTC clock lost			
Test item	Check	Remark	Result
Disconnect GNSS antenna			
Continuation of operation	Check that transmission of position report continues		Ok
Synchronisation	Check that EUT switches to indirect synchronisation	Sync state = 3	Ok
TXT output	Check that a TXT sentence with ID 007 is output at PI		Ok
Alarm relay	Check that the alarm relay output is not activated		Ok
MKD display	Check that the status display of the MKD is updated		Ok

2.9.2.5 14.9.2.5 Remote MKD disconnection, when so configured

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Disconnect the connection to the remote MKD.

b) Provide an alarm acknowledgement, ACK sentence with ID 008, to the PI.

Required result

- a) Verify that an alarm sentence, alarm ID 008, is sent and the relay output signals the failure. Verify that the AIS continues operation, with the DTE value "1" in msg 5.
- b) Verify that the relay deactivates when the EUT receives an ACK and that the status field in the ALR sentence is updated.

Test details - Remote MKD disconnection			
Test item	Check	Remark	Result
Disconnect the connection to the remote MKD.			
Continuation of Tx	Check that transmission continues		Ok
DTE flag	Check that the DTE flag in msg 5 is set to 1		Ok
ALR output	Check that ALR sentence ID 008 is output at PI		Ok
Alarm relay	Check that alarm relay is activated		ok
MKD display	Check that loss of connection to the transponder is displayed on the MKD		Ok
Send an ACK sentence	Check that alarm relay deactivated		ok
	Check that ALR sentence is updated		Ok
Reconnect MKD	Check that ALR sentence is updated		Ok
MKD display	Check that the MKD display is updated		Ok

2.9.3 14.9.3 Monitoring of sensor data

(6.10.3)

2.9.3.1 14.9.3.1 Priority of position sensors

(6.1.1.3, 6.10.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Verify the manufacturer's documentation to ascertain the configuration implemented on the EUT for position sensors (see 6.2).

Apply position sensor data in a way that the EUT operates in the states defined below :

- a) external DGNSS in use (corrected)
- b) internal DGNSS in use (corrected; msg 17) if implemented
- c) internal DGNSS in use (corrected; beacon) if implemented

- d) external EPFS in use (uncorrected)
- e) internal GNSS in use (uncorrected) if implemented
- f) no sensor position in use

Check the ALR sentence and the position accuracy flag in the VDL msg 1.

Required result

Verify that the use of position source, position accuracy flag, RAIM flag and position information complies to Table 4.

Verify that when the status is changed, an ALR (025, 026, 029, 030), or TXT (021, 022, 023, 024, 025, 027, 028) sentence is sent according to table 2 or table 3 respectively.

Verify that the status is changed after 5 s when switching downwards and 30 s when switching upwards.

19.03.2002 Test details - Position priority – changing downwards			
Test item	Check	Remark	Result
Connect sensor inputs and correction data according to the test items			
a)	Check that external position is used		ok
	Check that position accuracy flag = 1		ok
	Check that RAIM flag is set according to sensor input data		ok
b) Change from a: <ul style="list-style-type: none"> • External sensor mode from DGNSS to GNSS • Internal DGNSS if available, else internal GNSS 	Check that internal position is used		Ok
	Check that position accuracy flag = 1		Ok
	Check that RAIM flag is set according to documentation of internal GPS		ok
	Check that msg 5 is output with new ref. point		Ok
	Check that TXT sentence with ID 024 is output on PI		Ok
	Check that status display of MKD is updated according to TXT sentence		ok
c) Change from a: <ul style="list-style-type: none"> • Internal DGNSS by beacon • External sensor mode is GNSS 	Check that internal position is used		Ok
	Check that position accuracy flag = 1		Ok
	Check that TXT sentence with ID 023 is output on PI		Ok
	Check that status display of MKD is updated according to TXT sentence		ok
d) Change from c: <ul style="list-style-type: none"> • Remove correction data for Internal GNSS • External GNSS input 	Check that external position is used		Ok
	Check that position accuracy flag = 0		Ok
	Check that RAIM flag is set according to documentation of internal GPS		
	Check that msg 5 is output with new ref. point		ok

	Check that TXT sentence with ID 022 is output on PI		ok
	Check that status display of MKD is updated according to TXT sentence		ok
d) Change from a: <ul style="list-style-type: none"> Change external sensor mode to GNSS Internal GNSS available 	Check that external position is used		ok
	Check that position accuracy flag = 0		ok
	Check that RAIM flag is set according to documentation of internal GPS		----
	Check that TXT sentence with ID 022 is output on PI		ok
	Check that status display of MKD is updated according to TXT sentence	27.06.02 Retest ok	ok
e) Change from d: <ul style="list-style-type: none"> Remove external GNSS input Internal GNSS available 	Check that internal position is used		Ok
	Check that position accuracy flag = 0		Ok
	Check that RAIM flag is set according to documentation of internal GPS		----
	Check that msg 5 is output with new ref. point		Ok
	Check that ALR message with ID 025 (external EPFS lost) is output on PI		Ok
	Check that TXT sentence with ID 025 is output on PI	No TXT 025 output 27.06.02 Retest ok	ok
	Check that an alarm according to ALR message is displayed on MKD		ok
	Check that status display of MKD is updated according to TXT sentence	No status display found 27.06.02 Retest: ok	ok
f) Change from e: <ul style="list-style-type: none"> Disable internal GNSS No external GNSS input 	Check that default position is used		Ok
	Check that position accuracy flag = 0		Ok
	Check that RAIM flag is set according to documentation of internal GPS		----
	Check that ALR message with ID 026 (No sensor position) is output on PI		Ok
	Check that an alarm according to ALR message is displayed on MKD		Ok
Status change time	Check that status is changed after 5 s	No status display found 27.06.02 Retest: ok	ok

19.03.2002	Test details - Position priority – changing upwards		
Test item	Check	Remark	Result
Connect sensor inputs and correction data according to the test items			
f) Start with: <ul style="list-style-type: none"> No external GNSS input No Internal GNSS 	Check that default position is used		ok
	Check that position accuracy flag = 0		ok
	Check that RAIM flag = 0		----
Test Report No.. 734.2/0048-1/2003 / S3220	print date: 07.02.03	page 53	of 209

	Check that ALR message with ID 026 (No sensor position) is output on PI every 30 s	Every 30 s	ok
e) Change from f: <ul style="list-style-type: none"> Activate internal GNSS No external GNSS input 	Check that internal position is used		ok
	Check that position accuracy flag = 0		ok
	Check that msg 5 is output with new (internal) ref. point		ok
	Check that ALR message with ID 026 is updated		ok
	Check that TXT sentence with ID 025 is output on PI	No TXT msg 27.06.02 Retest: ok	ok
	Check that the alarm on MKD according to ALR ID 026 is updated		ok
	Check that status display of MKD is updated according to TXT ID 025	No status display found 27.06.02 Retest: ok	ok
d) Change from e: <ul style="list-style-type: none"> Apply external GNSS input Internal GNSS is available 	Check that external position is used		ok
	Check that position accuracy flag = 0		ok
	Check that msg 5 is output with new (external) ref. point		ok
	Check that ALR message with ID 025 is updated		ok
	Check that TXT sentence with ID 022 is output on PI		Ok
	Check that the alarm on MKD according to ALR ID 025 is updated		Ok
	Check that status display of MKD is updated according to TXT ID 022	No status display found 27.06.02 Retest: ok	ok
c) Change from d: <ul style="list-style-type: none"> Apply correction data for DGNSS by beacon External mode is GNSS 	Check that internal position is used		Ok
	Check that position accuracy flag = 1		Ok
	Check that msg 5 is output with new (internal) ref. point		Ok
	Check that TXT sentence with ID 023 is output on PI		Ok
	Check that status display of MKD is updated according to TXT ID 023		Ok
b) Change from c: <ul style="list-style-type: none"> Apply correction data for DGNSS by msg 17 External mode is GNSS 	Check that internal position is used		Ok
	Check that position accuracy flag = 1		Ok
	Check that TXT sentence with ID 024 is output on PI		Ok
	Check that status display of MKD is updated according to TXT ID 024		Ok
a) Change from b: <ul style="list-style-type: none"> Change external mode to DGNSS Internal DGNSS 	Check that external position is used		Ok
	Check that position accuracy flag = 1		Ok
	Check that TXT sentence with ID 021 is output on PI		Ok
	Check that status display of MKD is updated according to TXT ID 021		Ok
b) Change from d: <ul style="list-style-type: none"> Change external mode to DGNSS Internal GNSS 	Check that external position is used		Ok

	Check that position accuracy flag = 1		ok
	Check that TXT sentence with ID 021 is output on PI		ok
	Check that status display of MKD is updated according to TXT ID 021	No status display found 27.06.02 Retest: ok	ok
Status change time	Check that status is changed after 30 s	No status display 27.06.02 Retest: ok	ok

Date	Result	Status
19.03.2002	No status display	
27.06.02	Retest, status display ok now	ok

2.9.3.2 14.9.4 Heading sensor

(6.10.3.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Disconnect the inputs for HDG and ROT or set their data to invalid (e.g. by wrong checksum, "valid/invalid" flag).
- Reconnect the inputs for HDG and ROT
- Disconnect the input for ROT or set the data to invalid (e.g. by wrong checksum, "valid/invalid" flag). Establish a rate of heading change that is greater than 5 degrees in 30 seconds
- Reconnect the ROT input

Required Result

- Check that an alarm sentence ALR with alarm ID 032 for invalid HDG and an alarm sentence ID 035 for invalid ROT are sent to the PI and the "default" data is sent in VDL msg 1,2 or 3.
- Check that an alarm sentence ALR with alarm ID 031 for valid HDG and ID 033 for valid ROT is sent to the PI. Verify that, in the alarm sentences, the alarm condition flag is set to "V" and that the relay output is not activated. Check that TXT-sentences with ID 031 for valid HDG and ID 033 for ROT indicator in use are sent to the PI
- Check that TXT-sentence with ID 034 for "other ROT source in use" is sent to the PI and that the contents of the message's ROT field is the correct "direction of turn" (table 5 "ROT sensor fallback conditions," Priority 2).
- Check that a TXT-sentence with ID 033 for ROT indicator in use is sent to the PI.

19.03.2002	Test details - Heading and ROT		
Test item	Check	Remark	Result
Connect Heading and ROT input according to test items			
Start with:	Check that heading and ROT are used in VDL message		Ok
• Valid heading	Check that alarm relay is inactive		Ok
• Valid ROT	Check that no ALR output is active		Ok
a) Disconnect heading and ROT	Check that heading in VDL = default		Ok
• No heading	Check that ROT in VDL = default		Ok
• No ROT	Check that ALR message with ID 032 (heading invalid) is output on PI		Ok
	Check that ALR message with ID 035 (ROT invalid) is output on PI		Ok
	Check that alarm relay is active		ok
	Check that an alarm according to ID 032 is displayed on MKD		ok
	Check that an alarm according to ID 035 is displayed on MKD		ok
b) Reconnect heading and ROT	Check that heading in VDL ok		ok
• Valid heading	Check that ROT in VDL ok		ok
• Valid ROT	Check that ALR message with ID 032 (heading valid) and status V is output on PI	Output of ALR with ID 031, not ID 032 <u>27.06.02 Retest:</u> , output of ALR ID 32	ok
	Check that ALR message with ID 035 (ROT valid) and status V is output on PI	27.06.02 Retest:	ok
	Check that TXT message with ID 031 (Heading valid) is output on PI		ok
	Check that TXT message with ID 033 (ROT in use) is output on PI	No TXT with ID 033 27.06.02 Retest: ok	ok
	Check that alarm relay is inactive		ok
	Check that the alarm display on MKD is updated		ok
	Check that the status display on MKD is updated (heading and ROT valid)		Ok
c) Change ROT talker	Check that ROT in VDL is + 127 for ROT > 10 °/min, turning right		ok
• Valid heading	Check that ROT in VDL is + 127 for ROT < -10 °/min, turning left		ok
• ROT, talker not TI	Check that TXT message with ID 034 (other ROT in use) is output on PI		ok
	Check that the status display on MKD is updated (other ROT)	No status display found 27.06.02 Retest: ok	ok
d) Change ROT talker to TI	Check that ROT in VDL ok		ok
• Valid heading			
• ROT, talker TI			

	Check that TXT message with ID 033 (ROT in use) is output on PI	TXT ID 033 ok, in addition TXT ID 034 is output 27.06.02 Retest: no additional output of TXT ID 034	Ok
	Check that the status display on MKD is updated (ROT in use)	No status display found 27.06.02 Retest: ok	ok
c) Disconnect ROT	Check that ROT in VDL is + 127 for increasing heading	Not implemented Not required	Ok
• Valid heading			
• No ROT	Check that ROT in VDL is - 127 for decreasing heading	----	----
Change heading > 5 °/30s	Check that TXT message with ID 034 (other ROT in use) is output on PI		----
d) Reconnect ROT	Check that ROT in VDL ok		ok
• Valid heading			
• Valid ROT from TI	Check that TXT message with ID 033 (ROT in use) is output on PI	TXT message with ID 034 is output	ok

Date	Result	Status
19.03.2002	No status display, Text message with ID 034 is output if changing to TI 27.06.02 Retest: ok now	
27.06.2002		ok

2.9.3.3 14.9.5 Speed sensors

(6.10.3.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Verify the manufacturer's documentation to ascertain the configuration implemented on the EUT for position sensors (see 6.10).

- apply valid external DGNSS position and external speed data.
- disconnect external DGNSS position, disconnect the inputs for SOG, COG or set their data to invalid (e.g. by wrong checksum, "valid/invalid" flag).

NOTE: Test b) is applicable only if the internal GNSS is used as position source.

Required Result

- Check that an alarm sentence ALR with alarm ID 027 is sent to the PI and the external data for SOG / COG is sent in VDL msg 1, 2 or 3. Verify that the system continues to operate and that the relay output is not activated.

b) Check that an alarm sentence ALR with alarm ID 028 is sent to the PI and the internal data for SOG / COG is sent in VDL msg 1, 2 or 3. Verify that the system continues to operate and that the relay output is not activated.

Test details - Speed sensor			
Test item	Check	Remark	Result
Connect external speed sensor input according to test items.			
Internal GPS is available			
a) Connect external position and speed <ul style="list-style-type: none"> • External Position • External speed 	Check that external SOG is used in VDL message 1,2,3		Ok
	Check that external COG is used in VDL message 1,2,3		Ok
	Check that TXT message with ID 027 (external speed in use) is output on PI	when external speed is applied	ok
	Check that alarm relay is inactive		----
	Check that the status according to TXT msg ID 027 is displayed on MKD	No status display found 27.06.02 Retest: ok	ok
b) Disconnect external position <ul style="list-style-type: none"> • No external Position • External speed 	Check that SOG from internal GPS is used in VDL message 1,2,3		Ok
	Check that COG from internal GPS is used in VDL message 1,2,3		Ok
	Check that TXT message with ID 028 (internal speed in use) is output on PI		Ok
	Check that alarm relay is inactive		----
	Check that the status according to TXT msg ID 028 is displayed on MKD	No status display found 27.06.02 Retest: ok	ok
b) From a: Disconnect external position and speed <ul style="list-style-type: none"> • No external Position • No external speed 	Check that SOG from internal GPS is used in VDL message 1,2,3		Ok
	Check that COG from internal GPS is used in VDL message 1,2,3		Ok
	Check that TXT message with ID 028 (external speed in use) is output on PI		Ok
	Check that alarm relay is inactive		----
	Check that the status according to TXT msg ID 028 is displayed on MKD	No status display found 27.06.02 Retest: ok	ok

Date	Result	Status
27.06.2002	Test ok	ok

2.10 14.10 Display and control – Radar 1000

(6.11)

2.10.1 14.10.1 Data input/output facilities

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- a) Check size of minimum display
- b) Record received messages and check contents of minimum display.
- c) Input static and voyage related data via the minimum display

Required results

- a) The minimum display shall contain at least three lines of data, with no horizontal scrolling of the range and bearing data display..
- b) Confirm that all messages including binary and safety related and Long Range messages received can be displayed and that means to select messages and data fields to be displayed are available.
- c) Confirm that all necessary data can be input.

At least bearing, range and name of ship shall be displayed without horizontal scrolling

20.03.02		Test details a) - MKD size of display		
Test item	Check	Remark	Result	
a) Size of display	Check that at minimum 3 lines of data are available	Graphic display	ok	
	Check that range and bearing of AIS targets can be displayed without horizontal scrolling	Graphic display	ok	

20.03.02		Test details b) - MKD display of received messages		
Test item	Check	Remark	Result	
Receive messages and check display of data				
MSG 1,2,3 Display of dynamic ship data - required -	Check that received target is displayed		Ok	
	MMSI	recommended	Ok	
	Position (RNG, BRG); Check values	required	Ok	
	Position (Lat,Lon)	Recommended	Ok	
	Time	Not required	-	
	PA (Position accuracy) flag	Not required	-	
	SOG and COG	Recommended	Ok	
	True heading	Recommended	Ok	
	Navigational status	Recommended	Ok	
	RAIM flag	Not required	-	

MSG 5 Display of static and voyage related ship data - required -	MMSI	recommended	Ok
	IMO number	Not required	-
	Call sign	Recommended	Ok
	Name of ship	Required	Ok
	Type of ship and cargo	Recommended	Ok
	Dimension/Reference for position	Length recommended	Ok
	Type of EPFD	Not required	-
	Estimated time of arrival	Not required	Ok
	Maximum present static draught	Not required	Ok
	Destination	Not required	Ok
	DTE flag	Not required	-
MSG 4 Base station report - Recommended -	MMSI	recommended	-
	Position (Lat,Lon)	recommended	-
	Position (RNG, BRG); Check values	recommended	-
	Time	Not required	-
	PA flag	Not required	-
	RAIM flag	Not required	-
MSG 9 SAR aircraft position report - optional -	MMSI	Recommended	Ok
	Position (RNG, BRG); Check values	Recommended	Ok
	Position (Lat,Lon)	Recommended	Ok
	Time	Not required	-
	PA flag	Not required	-
	SOG and COG	Recommended	Ok
	RAIM flag	Not required	-
MSG 12/14 Safety related text message - Required -	MMSI	Required	Ok
	Text content	Required	Ok
	Broadcast or selective	Recommended	Ok
MSG 18,19 Class B position report - required -	MMSI	required	Ok
	Position (RNG, BRG); Check values	required	Ok
	Position (Lat,Lon)	recommended	Ok
	Time	Not required	-
	PA flag	Not required	-
	SOG and COG	Recommended	Ok
	True heading	Recommended	-
	RAIM flag	Not required	-
	Name	Recommended Could not yet be tested, because VDL generator doesn't generate msg 19 correctly	
	Type of ship and cargo	Recommended	-
	Dimension/Reference for position	Length recommended	-
	Type of EPFD	Not required	-
Test Report No.. 734.2/0048-1/2003 / S3220		print date: 07.02.03	page 60 of 209

	DTE flag	Not required	-
MSG 21 Aids to navigation report - recommended -	MMSI	Recommended	Ok
	Type of Aids to navigation	Recommended	Ok
	Name of Aids to navigation	Recommended	Ok
	Position (RNG, BRG); Check values	Recommended	Ok
	Position (Lat,Lon)	Recommended	Ok
	Time	Not required	-
	PA flag	Not required	-
	RAIM flag	Not required	-
	Type of ship and cargo	Recommended	-
	Dimension/Reference for position	Length recommended	-
	Type of EPFD	Not required	-
	Off position indicator	Recommended	
	SOG, COG shows default values		-
Note: No info dialog			
Means to select messages	Check that means to select received messages are available		Ok
Means to select data fields	Check that means to select data fields are available		Ok

20.03.02	Test details d) – Input of data		
Test item	Check	Remark	Result
MMSI number	Check that number can be input		ok
	Check that input is protected		ok
IMO number	Check that number can be input		ok
	Check that input is protected		ok
Call sign	Check that Call sign can be input		ok
	Check that input is protected		ok
Name of ship	Check that name can be input		ok
	Check that input is protected		ok
Type of ship and cargo	Check that data can be input		ok
	Check if input by number or by selection of items	both	ok
Dimension/Reference for position	Check that data for internal GPS antenna position can be input		ok
	Check that data for external EPFS position can be input	Recommended, but not required	ok
Maximum static draught	Check that data can be input		ok
Destination	Check that name of destination can be input		ok
	Check that estimated time of arrival can be input		ok

			ok
--	--	--	----

Date	Result	Data input/output facilities	Status
20/03/02	Test see details		

2.10.2 14.10.2 Initiate message transmission

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of non scheduled messages and interrogations as provided by the EUT.

Required results

Confirm that at least the transmission of safety related addressed and broadcast messages (msg 12 and msg 14) can be initiated by means of the minimum display. Confirm that transmission of messages 4, 16, 17, 18, 19, 20, 21, 22 is not possible.

NOTE: Use of messages 4, 16, 17, 18, 19, 20, 21, 22 is restricted to base stations or class B AIS.

08.02.02 Test details) – Message transmission			
Test item	Check	Remark	Result
Transmission of safety related broadcast message	Check selection between broadcast and addressed message	Selection by entering a MMSI or ID no.	ok
	Check selection of TX channel	No selection of TX channel	acc
	Check data input		ok
	Check if prepared text blocks are available	Not required Prepared text is available	ok
	Check if input of invalid characters (e.g. lower case letters) are inhibited	Lower case letters are automatically converted to upper case letters	ok
	Check display of transmission status (indication that message is transmitted)	No alarm or indication if transmission was not successful <u>20.09.02 Retest: ok, Alarm is displayed</u>	ok
Transmission of addressed safety related message	Check selection of TX channel	No selection of TX channel	acc
	Check data input		ok
	Check input of MMSI		Ok
	Check if selection of MMSI from received message (e.g. position report) is possible	Not required Selection is possible	Ok
	Check display of transmission status (indication that message is transmitted and acknowledged)	Alarm if message has not been successfully transmitted, if message was generated by the RADAR	ok

Repetition	Check if repetition of transmission is possible without entering the data again.	No repetition possible Mainly for addressed messages it is helpful to be able to repeat message not successfully transmitted	Rec.
Transmission of other messages	Check for a sample of msg 4, 16, 17, 18, 19, 20, 21, 22 that a transmission is not possible.		ok

Date	Result	Status
27.06.02	Test ok	ok

2.10.3 14.10.3 System control

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform system control / configuration commands as specified. Check indication of system status / alarms.

Required results

At least initiation of channel switching shall be possible with the minimum display. Output power may not be switched manually. Confirm that the configuration level and other functions, not intended for use by the operator, are protected by password or adequate means.

Test details - Regional area entry			
Test item	Check	Remark	Result
Presentation of the existing areas	Check that the 8 existing areas can be selected and displayed	Only the active area is displayed. It is recommended to display all 8 areas <u>20.09.02 Retest:</u> ok, all areas can be selected by next button	ok
	Check display of Channel A and B		Ok
	Check display of RX/TX mode		Ok
	Check display transmission power	High/low	Ok
	Check display of bandwidth	Auto/12.5kHz	Ok
	Check display of NE point of area		Ok
	Check display of SW point of area		Ok
	Check display of transitional zone		Ok

Entry of a new area	Check selection between changing an existing area and creating a new regional area entry	No selection. If NE and SW points are changed a new area is created	Ok
	Check input of Channel A and B		Ok
	Check input of RX/TX mode		Ok
	Check input transmission power		Ok
	Check input of NE point of area		Ok
	Check input of SW point of area		Ok
	Check input of transitional zone		Ok
	Check that the user has to confirm a second time that the new data shall be stored		Ok
Enter invalid channel	Check that entry is refused	Invalid channels are accepted <u>20.09.02 Retest:</u> Invalid channels are refused, Error message is displayed	ok
Enter too small area (<20 nm)	Check that entry is refused	Too small areas are not accepted but no error message. The operator has no chance to recognize this <u>20.09.02 Retest:</u> Error message is displayed	Ok
Enter too large area (> 200 nm)	Check that entry is refused	Error message with request to reenter data	ok
Enter a region according to M.1371-1 A2/4.1 figure 4.1.5A (4 adjacent areas)	Check that entry is refused	Area is not stored. No error message <u>20.09.02 Retest:</u> Error message is displayed	Ok
Changing an existing area	Check that existing area for changes can be selected		Ok
	Check change of Channel A and B		Ok
	Check change of RX/TX mode		Ok
	Check change transmission power		Ok
	Check change of NE point of area		Ok
	Check change of SW point of area		Ok
	Check change of transitional zone		Ok
	Check that the user has to confirm a second time that the new data shall be stored		Ok
Changing of default values	Check change of Channel A and B	No change of default values	Ok
	Check change of RX/TX mode	No change of default values	Ok
	Check change transmission power	No change of default values	ok

Date	Result	Status
27.06.02	If regional area settings are not accepted an error	

20.09.02	<p>message has to be displayed. Because the operator can not display the stored area settings he has not possibility to recognize that an entered area has not been accepted. A display of the stored regional area settings is recommended.</p> <p><u>Retest:</u> The stored regional area settings can be displayed, selected by a “next” button.</p>	ok

Test details - Alarms and status display				
ID	Test item	Check	Remark	Result
001	Tx malfunction	Check is done in 2.9.2.1		ok
002	Antenna VSWR exceeds limit	Check is done in 2.9.2.2		Ok
003	Rx cannel 1 malfunction	Check documentation	Documentation required	
004	Rx cannel 2 malfunction	Check documentation	Documentation required	
005	Rx cannel 70 malfunction	Check documentation	Documentation required	
006	General AIS failure	Check documentation	Documentation required	
008	MKD connection lost	Check is done in 2.9.2.5	Alarm after 40 s,	ok
025	External EPFS lost	Check is done in 2.9.3.1		Ok
029	No valid SOG information	Check is done in 2.9.3.3		ok
030	No valid COG information	Check is done in 2.9.3.3		ok
032	Heading lost/invalid	Check is done in 2.9.3.2		Ok
035	No valid ROT information	Check is done in 2.9.3.2		Ok
				Ok

08.02.02		Test details - Status display		
ID	Test item	Check	Remark	Result
007	UTC clock lost			Ok
021	External DGNSS in use	Check is done in 2.9.3.1		Ok
022	External GNSS in use	Check is done in 2.9.3.1		Ok
023	Internal DGNSS in use (beacon)	Check is done in 2.9.3.1		---
024	Internal DGNSS in use (msg 17)	Check is done in 2.9.3.1		---
025	internal GNSS in use	Check is done in 2.9.3.1		Ok
027	External SOG/COG in use	Check is done in 2.9.3.3		Ok
028	Internal SOG/COG in use	Check is done in 2.9.3.3		Ok
031	Heading valid	Check is done in 2.9.3.2		Ok
033	Rate of Turn indicator in use	Check is done in 2.9.3.2		Ok
034	Other ROT source in use	Check is done in 2.9.3.2		Ok

036	Channel management parameters changed	Check that status change is displayed if channel management parameters are changed.		ok

Date	Result	Status
26.06.2002	Test ok but some documentation required	ok

2.10.4 Ergonomic aspects

This are some ergonomic aspects from user view (Recommendation).

Topic	Description

2.11 14.10 Display and control – ECDIS

(6.11)

2.11.1 14.10.1 Data input/output facilities

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- d) Check size of minimum display*
- e) Record received messages and check contents of minimum display.*
- f) Input static and voyage related data via the minimum display*

Required results

- d) The minimum display shall contain at least three lines of data, with no horizontal scrolling of the range and bearing data display..
- e) Confirm that all messages including binary and safety related and Long Range messages received can be displayed and that means to select messages and data fields to be displayed are available.
- f) Confirm that all necessary data can be input.

At least bearing, range and name of ship shall be displayed without horizontal scrolling

20.03.02 Test details a) - MKD size of display			
Test item	Check	Remark	Result
a) Size of display	Check that at minimum 3 lines of data are available	Graphic display	ok
	Check that range and bearing of AIS targets can be displayed without horizontal scrolling	Graphic display	ok

20.03.02 Test details b) - MKD display of received messages			
Test item	Check	Remark	Result
Receive messages and check display of data			
MSG 1,2,3 Display of dynamic ship data - required -	Check that received target is displayed		Ok
	MMSI	Recommended Is displayed not before RX of msg <u>20.09.02 Retest: ok</u>	ok
	Position (RNG, BRG); Check values	required	Ok
	Position (Lat,Lon)	Recommended	Ok
	Time	Not required	-
	PA (Position accuracy) flag	Not required	-
	SOG and COG	Recommended	Ok
	True heading	Recommended	Ok
	Navigational status	Recommended	Ok
	RAIM flag	Not required	-
MSG 5 Display of static and voyage related ship data - required -	MMSI	recommended	Ok
	IMO number	Not required	-
	Call sign	Recommended	Ok
	Name of ship	Required	Ok
	Type of ship and cargo	Recommended	Ok
	Dimension/Reference for position	Length recommended Length and width displayed	Ok
	Type of EPFD	Not required	-
	Estimated time of arrival	Not required	Ok
	Maximum present static draught	Not required	Ok

	Destination	Not required	Ok
	DTE flag	Not required	-
MSG 4 Base station report - Recommended -	MMSI	Recommended Not displayed	-
	Position (Lat,Lon)	recommended	ok
	Position (RNG, BRG); Check values	recommended	ok
	Time	Not required	-
	PA flag	Not required	-
	RAIM flag	Not required	-
	Note:	Is handled as target, should better be handled like an AtoN <u>20.09.02 Retest:</u> ok, is handled like an AtoN	ok
MSG 9 SAR aircraft position report - optional -	MMSI	Recommended Not displayed	no
	Position (RNG, BRG); Check values	Recommended	Ok
	Position (Lat,Lon)	Recommended	Ok
	Time	Not required	-
	PA flag	Not required	-
	SOG and COG	Recommended Only up to 99 kn <u>20.09.02 Retest:</u> up to 999 kn	ok
	RAIM flag	Not required	-
	DTE flag	Not required	-
MSG 12/14 Safety related text message - Required -	MMSI	Required	Ok
	Text content	Required	Ok
	Broadcast or selective	Recommended	Ok
MSG 18,19 Class B position report - required -	MMSI	Required Not displayed <u>20.09.02 Retest:</u> ok	ok
	Position (RNG, BRG); Check values	required	Ok
	Position (Lat,Lon)	recommended	Ok
	Time	Not required	-
	PA flag	Not required	-
	SOG and COG	Recommended	Ok
	True heading	Recommended	-
	RAIM flag	Not required	-
	Name	Recommended, Msg 19 could not yet be correctly transmitted by VDL analyser	
	Type of ship and cargo	Recommended	-
	Dimension/Reference for position	Length recommended	-
	Type of EPFD	Not required	-
Test Report No.. 734.2/0048-1/2003 / S3220	print date: 07.02.03	page 68	of 209

	DTE flag	Not required	-
MSG 21 Aids to navigation report - recommended -	MMSI	Recommended	----
	Type of Aids to navigation	Recommended	ok
	Name of Aids to navigation	Recommended	ok
	Position (RNG, BRG); Check values	Recommended	----
	Position (Lat,Lon)	Recommended	ok
	Time	Not required	-
	PA flag	Not required	-
	RAIM flag	Not required	-
	Real or Virtual AtoN	Recommended	ok
	Dimension/Reference for position	Length recommended	-
	Type of EPFD	Not required	-
	Off position indicator	Recommended	-
	SOG, COG shows default values		
Means to select messages	Check that means to select received messages are available	Selected by different dialogs and graphical selection on screen	Ok
Means to select data fields	Check that means to select data fields are available	Complete set of data fields is displayed in one window	ok

20.03.02	Test details d) – Input of data		
Test item	Check	Remark	Result
MMSI number	Check that number can be input		ok
	Check that input is protected		ok
IMO number	Check that number can be input		ok
	Check that input is protected		ok
Call sign	Check that Call sign can be input		ok
	Check that input is protected		ok
Name of ship	Check that name can be input		ok
	Check that input is protected		ok
Type of ship and cargo	Check that data can be input	In administration: type of ship	ok
	Check if input by number or by selection of items	Both, Error message when selecting input by number	ok
Dimension/Reference for position	Check that data for internal GPS antenna position can be input	Is entered as offset between internal and external offset	ok
	Check that data for external EPFS position can be input	Recommended, but not required	ok
Maximum static draught	Check that data can be input	Draught (and number of persons) can only be	ok

		entered deleting the existing digits and then entering new values	
Destination	Check that name of destination can be input		ok
	Check that estimated time of arrival can be input	Note: ETA is entered by overwriting the digits. Cursor can be moved using the cursor keys	Ok

Note: changing the configuration in the ECDIS does not change the AIS configuration directly.

After Restart of ECDIS MMSI, IMO-Number and type of ship was changed in msg 5.

After Restart of Transponder the other configuration data were changed to.

The conditions of transferring configuration data to the AIS transponder should be described in the manual and/or on the ECDIS screen.

Date	Result Data input/output facilities	Status
30.08.02	Test see details	
20.09.02	Test ok	ok

2.11.2 14.10.2 Initiate message transmission

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of non scheduled messages and interrogations as provided by the EUT.

Required results

Confirm that at least the transmission of safety related addressed and broadcast messages (msg 12 and msg 14) can be initiated by means of the minimum display. Confirm that transmission of messages 4, 16, 17, 18, 19, 20, 21, 22 is not possible.

NOTE: Use of messages 4, 16, 17, 18, 19, 20, 21, 22 is restricted to base stations or class B AIS.

08.02.02 Test details) – Message transmission			
Test item	Check	Remark	Result
Transmission of safety related broadcast message	Check selection between broadcast and addressed message	Default is broadcast. Addressed message can be send by selecting a acquired targed on the screen.	ok
	Check selection of TX channel	No selection possible	acc
	Check data input		ok
Test Report No.. 734.2/0048-1/2003 S3220	print date: 07.02.03	page 70	of 209

	Check if prepared text blocks are available	Not required Prepared text blocks are available and are automatically completed with the actual ships data	ok
	Check if input of invalid characters (e.g. lower case letters) are inhibited	Characters are automatically converted to upper case characters	ok
	Check display of transmission status (indication that message is transmitted)	Alarm of failed transmission, also if not generated from ECDIS	ok
Transmission of addressed safety related message	Check selection of TX channel	No selection possible	acc
	Check data input		Ok
	Check input of MMSI	MMSI is entered by selecting a acquired targed on the screen.	Ok
	Check if selection of MMSI from received message (e.g. position report) is possible	Not required Can only be entered from received targets on the screen	ok
	Check display of transmission status (indication that message is transmitted and acknowledged)	No alarm or indication if transmission was not successful <u>20.09.02 Retest:</u> ok, Alarm is generated	ok
Repetition	Check if repetition of transmission is possible without entering the data again.	Not possible Mainly for addressed messages it is helpful to be able to repeat message not successfully transmitted	rec
Transmission of other messages	Check for a sample of msg 4, 16, 17, 18, 19, 20, 21, 22 that a transmission is not possible.	Can not be selected for transmission	ok

Date	Result	Status
27.06.02	No indication of transmission status	
20.09.02	An alarm is generated if transmission was not successful	ok

2.11.3 14.10.3 System control

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform system control / configuration commands as specified. Check indication of system status / alarms.

Required results

At least initiation of channel switching shall be possible with the minimum display. Output power may not be switched manually. Confirm that the configuration level and other functions, not intended for use by the operator, are protected by password or adequate means.

Test details - Regional area entry			
Test item	Check	Remark	Result
Presentation of the existing areas	Check that the 8 existing areas can be selected and displayed	Only the active area is displayed. It is recommended to display all 8 areas <u>20.09.02 Retest:</u> ok, all areas can be selected by next button	ok
	Check display of Channel A and B		Ok
	Check display of RX/TX mode		Ok
	Check display transmission power		Ok
	Check display of bandwidth		Ok
	Check display of NE point of area		Ok
	Check display of SW point of area		Ok
	Check display of transitional zone		Ok
Entry of a new area	Check selection between changing an existing area and creating a new regional area entry	If the changed area overlaps the previous area, it is changed. If it does not overlap, a new area is added	ok
	Check input of Channel A and B		Ok
	Check input of RX/TX mode	Not all combinations of RX/TX mode are allowed:	ok
	Check input transmission power	Selection between high and low power	ok
	Check input of NE point of area		Ok
	Check input of SW point of area		Ok
	Check input of transitional zone		Ok
	Check that the user has to confirm a second time that the new data shall be stored	There is no second confirmation required <u>20.09.02 Retest:</u> ok	
Enter invalid channel	Check that entry is refused	Invalid channels are not refused <u>20.09.02 Retest:</u> ok	
Enter too small area (<20 nm)	Check that entry is refused	Area is refused but the operator can not recognize it. There is no warning or difference in behaviour. <u>20.09.02 Retest:</u> ok, warning is displayed	ok
Enter too large area (> 200 nm)	Check that entry is refused	Error message is displayed	ok
Enter a region according to M.1371-1 A2/4.1 figure 4.1.5A (4 adjacent areas)	Check that entry is refused	Entry is refused No error message or warning is displayed <u>20.09.02 Retest:</u> ok, Alarm is displayed	ok

Changing an existing area	Check that existing area for changes can be selected		Ok
	Check change of Channel A and B		Ok
	Check change of RX/TX mode		Ok
	Check change transmission power		Ok
	Check change of NE point of area		Ok
	Check change of SW point of area		Ok
	Check change of transitional zone		Ok
	Check that the user has to confirm a second time that the new data shall be stored	There is no second confirmation required <u>20.09.02 Retest:</u> ok	ok
Changing of default values	Check change of Channel A and B	Not possible	Ok
	Check change of RX/TX mode	Not possible	Ok
	Check change transmission power	Not possible	Ok

Date	Result	Status
27.06.02	If regional area settings are not accepted an error message message or warning. to be displayed. Because the operator can not display the stored area settings he has not possibility to recognize that an entered area has not been accepted. A display of the stored regional area settings is recommended.	
20.09.02	<u>Retest:</u> The stored regional area settings can be displayed, selected by a "next" button.	ok

30.08.02		Test details - Alarms and status display		
ID	Test item	Check	Remark	Result
001	Tx malfunction	Check is done in 2.9.2.1		ok
002	Antenna VSWR exceeds limit	Check is done in 2.9.2.2		ok
003	Rx cannel 1 malfunction	Check documentation	Documentation has to be checked	
004	Rx cannel 2 malfunction	Check documentation	Documentation has to be checked	
005	Rx cannel 70 malfunction	Check documentation	Documentation has to be checked	
006	General AIS failure	Check documentation	Documentation has to be checked	
008	MKD connection lost	Check is done in 2.9.2.5		ok
025	External EPFS lost	Check is done in 2.9.3.1	No EPFS lost alarm	ok
026	No valid sensor position	Check is done in 2.9.3.1	Only ones displayed	Ok
029	No valid SOG information	Check is done in 2.9.3.3	Only ones displayed	Ok
030	No valid COG information	Check is done in 2.9.3.3	Only ones displayed	Ok
032	Heading lost/invalid	Check is done in 2.9.3.2	No alarm	Ok
035	No valid ROT information	Check is done in 2.9.3.2	No alarm	Ok
		Note: After 1 acknowledgement of an alarm the AIS transponder outputs further alarms of the same type with the Ack. flag of the ALR set to A (=acknowledged). So it is not displayed on the ECDIS. It seems that the "acknowledged" flag is not reset when the alarm condition is cleared and a new alarm is generated. <u>20.09.02 Retest: no change</u> <u>23.09.02 Retest: ok</u>		ok

02.09.02		Test details - Status display		
ID	Test item	Check	Remark	Result
007	UTC clock lost			ok
021	External DGNSS in use	Check is done in 2.9.3.1	Not tested	
022	External GNSS in use	Check is done in 2.9.3.1		Ok
023	Internal DGNSS in use (beacon)	Check is done in 2.9.3.1	Not tested	
024	Internal DGNSS in use (msg 17)	Check is done in 2.9.3.1	Not tested	
025	internal GNSS in use	Check is done in 2.9.3.1		Ok
027	External SOG/COG in use	Check is done in 2.9.3.3		Ok
028	Internal SOG/COG in use	Check is done in 2.9.3.3		Ok
031	Heading valid	Check is done in 2.9.3.2		Ok
033	Rate of Turn indicator in use	Check is done in 2.9.3.2		Ok
034	Other ROT source in use	Check is done in 2.9.3.2		Ok
036	Channel management parameters changed	Check that status change is displayed if channel management parameters are changed.		ok

Date	Result	Status
26.06.2002	Alarm indication does not work correctly	
23.09.2002	Retest: Alarm indication now ok	ok
2.09.2002	Status display ok	ok

2.11.4 Ergonomic aspects

This are some ergonomic aspects from user view (Recommendation).

Topic	Description

3 15 Physical tests

Physical test are not part of this test document.

Physical tests are done in a separate test.

4 16 Specific tests of Link Layer

(7.3)

4.1 16.1 TDMA Synchronisation

(M.1371 A1/3.1.1)

4.1.1 16.1.1 Synchronisation test using UTC

(M.1371 A1/3.1.3.4.1)

Method of measurement

Set up standard test environment; chose test conditions in a way that the EUT operates in following synchronisation modes:

- *UTC direct*
- *UTC indirect (internal GNSS receiver disabled; at least one other station UTC direct synchronised)*
- *BASE direct (internal GNSS disabled; base station with UTC direct synchronisation within range)*

Check CommState Parameter SyncState in position Report and reporting rate

Required result

Transmitted Communication state shall fit the Synchronisation mode

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Operate the EUT in an environment according to the test items and check the synchronisation state. Speed = 10 kn			
• Operate with GPS	Check that sync state is 0 (UTD direct)		Ok
	Check that report rate is 10 s		Ok
• Disable GPS by disconnection of GPS antenna, • at least one other AIS transponder with UTC direct	Check that sync state is 1 (UTC indirect)		Ok
	Check that report rate is 10 s		Ok
• Disable GPS, • One base station with UTC direct within range	Check that sync state is 1 (UTC indirect)	Sync state is 3, should be 1 (UTC indirect) <u>28.08.02 Retest:</u> No change 20.09.02 Retest: Ok, syncstate = 1	ok
	Check that report rate is 10 s		Ok

Date	Result	Status
27.06.02	Sync state if synchronised to a base station is 3, not 1 as required	
29.08.02	Retest: No change	
20.09.02	Retest: ok, sync state = 1	ok

4.1.2 16.1.2 Synchronisation test without UTC, semaphore

(M.1371 A1/3.1.1.4)

Method of measurement

Set up standard test environment without UTC available. Let EUT operate as a sync source (semaphore) for other stations. Check CommState Parameter SyncState in position Report and reporting rate.

Required results

Transmitted CommState shall fit the Synchronisation mode.

The EUT shall increase reporting rate to 2 s when acting as a semaphore.

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Operate the EUT in an environment according to the test items and check the synchronisation state. Speed = 10 kn			
• Operate without GPS	Check that sync state is 3		Ok
• Other Transponders all without GPS, • Semaphore 1)	Check that report rate is 2 s		ok

Note 1) An AIS transponder becomes semaphore, if it has the highest number of received stations. If there are more than one station with the highest number of received stations the transponder with the lowest MMSI number becomes semaphore.

Date	Result	Status
28.06.02	Test ok	ok

4.1.3 16.1.3 Synchronisation test without UTC

(M.1371 A1/3.1.1)

Method of measurement

Set up standard test environment; chose test conditions in a way that EUT operates in following sync modes:

- a) *BASE indirect (internal GNSS disabled; no station with UTC direct synchronisation or Base station within range,)*
- b) *Mobile indirect (internal GNSS disabled; other station with UTC direct synchronisation or Base station without range,)*
- c) *Enable internal GNSS in synchronisation modes other than UTC direct*

Check CommState Parameter SyncState in position Report and reporting rate.

Required results

- a) *Transmitted Communication state shall fit the Synchronisation mod*
- b) *Transmitted Communication state shall fit the Synchronisation mod*
- d) *Synchronisation mode shall revert to UTC direct*

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Operate the EUT in an environment according to the test items and check the synchronisation state. Speed = 10 kn			
<ul style="list-style-type: none"> • Disable GPS, • One base station without GPS within range 	Check that sync state is 2 (Base station indirect)	Sync state is 3, sometimes 2 <u>02.09.02 Retest:</u> Sync state is 3 <u>19.09.02 Retest:</u> Sync state is 2	ok
	Check that report rate is 10 s		Ok
<ul style="list-style-type: none"> • Operate without GPS • Other Transponders all without GPS, • Not semaphore 1) 	Check that sync state is 3		Ok
	Check that report rate is 10 s		ok
<ul style="list-style-type: none"> • Enable GPS • Other Transponders all without GPS, 	Check that sync state is 0		Ok
	Check that report rate is 10 s		ok

Date	Result	Status
27.06.02	See details	
02.09.02	Retest: Sync state is 3 if receiving msg 4 without GPS from a base station	
19.09.02	Retest: Sync state is now 2	ok

4.2 16.2 Time division (Frame format)

(M.1371 A1/3.1.2)

Method of measurement

Set the EUT to max reporting rate of 2 sec by applying a speed of >23kn and a ROT of >20%sec. Record VDL messages and check for used slots. Check parameter slot number in CommState of position report. Check slot length (transmission time)

Required results

Slot number used and slot number indicated in CommState shall match. Slot number shall not exceed 2249. Slot length shall not exceed 26,67 msec.

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Check the data recorded in 2.4.1 "14.4.1 Speed and course change" according to the test items. Check the frames with 2 s reporting rate			
Slot number	Check that slot number used and slot number indicated in CommState match		Ok
Slot count	Check that Slot number does not exceed 2249		Ok
Slot length	Check that Slot length does not exceed 26,67 ms	Not checked	----

Date	Result	Status
27.06.02	Test ok	ok

4.3 16.3 Synchronisation jitter

(M.1371 A1/3.2.2.8.4)

Definition

Synchronisation jitter (transmission timing error) is the time between nominal slot start as determined by the UTC synchronisation source and the initiation of the "transmitter on" function (T_0 see figure 3.2.2.10 in Rec. ITU-R M.1371-1).

Method of measurement

Set-up standard test environment. Set the EUT to 25 kHz bandwidth, max reporting rate of 2 sec and using

- a) UTC direct synchronisation
- b) UTC indirect synchronisation by disconnecting the GNSS antenna of the EUT.

Record VDL messages and measure the time between the nominal beginning of the slot interval and the initiation of the "transmitter on" function. Alternative methods, e.g. by evaluating the start flag and calculating back to T_0 are allowed.

Repeat the test for 12.5 kHz bandwidth.

Required results

The synchronisation jitter shall not exceed

- a) $\pm 104 \mu\text{s}$ using UTC direct synchronisation
- b) $\pm 312 \mu\text{s}$ using UTC indirect synchronisation .

09.07.02 Test details - Synchronisation jitter			
Test item	Check	Remark	Result
Operate device at 25 kHz bandwidth at a reporting rate of 2 s (speed = 25 kn). Check the slot start time T2 using the VDL analyser.			
UTC direct	Check that T2 is in the range of 323 to 343	Measured values 365-375	???
UTC indirect	Check that T2 is in the range of 302 to 364	Measured values 365-385, synchronised to test device	???

09.07.02 Test details - Synchronisation jitter			
Test item	Check	Remark	Result
Operate device at 12.5 kHz bandwidth at a reporting rate of 2 s (speed = 25 kn). Check the slot start time T2 using the VDL analyser.			
UTC direct	Check that T2 is in the range of 323 to 343	Could not be tested	----
UTC indirect	Check that T2 is in the range of 302 to 364		----

Date	Result	Status
09.07.02	Jitter at 12.5 kHz could not be tested because messages are not received	

4.4 16.4 Data encoding (bit stuffing)

Method of measurement

Setup standard test environment.

- apply a binary broadcast message (msg 8) to the VDL containing the HEX-values "7E 3B 3C 3E 7E" in the data portion and check Presentation Interface output of EUT
- apply a BBM message to the EUT initiating the transmission of msg 8 containing the HEX-values as above in the data portion and check the VDL

Required results

Confirm that

- Data output on the presentation interface conforms to transmitted data
- transmitted VDL message conforms to data input on the Presentation Interface

The data sequence 7E 3B 3C 3E 7E is appended to an application identifier of 16 bit with the value 00 68 h (DAC = 001, FI=40). So the complete sequence is:

Data in Hex	7E 3B 3C 3E 7E
Data in 6 bit ASCII text (Table 14 of 1371)	#,<0'
Hex including DAC/FI	00 68 7E 3B 3C 3E 7E
Coded in 6 bit ASCII (Table B-1)	06Qv>khvOP,4
Content of VDO/VDM (incl. 40 bit header)	80003sh0J7ps?3qv,0

Test details - Data encoding (bit stuffing)			
Test item	Check	Remark	Result
File name for BBM sentence is AIBBM_bin_stuffing.sst			
<u>RX of BBM message</u> Transmit msg 8 from VDL generator	Check that VDM is according transmitted data		ok
<u>TX of BBM message</u> Apply BBM sentence to the PI	Check that VDO output of PI is according to BBM sentence	Does not transmit broadcast message 02.09.02 Retest: ok	ok
	Check with VDL analyser that VDL message is according to BBM		ok
	Check that VDM sentence of RX is according to VDO of TX		ok

Date	Result	Status
09.07.02	Does not transmitt broadcast messages. ABK with type 3 is output, but not transmitted	
02.09.02	Retest ok	ok

4.5 16.5 Frame check sequence

(M.1371 A1/3.2.3)

Method of measurement

Apply a simulated position report message with wrong CRC bit sequence to the VDL.

Required results

Confirm that this message is not forwarded to the PI by the EUT.

Test details - Frame check sequence			
Test item	Check	Remark	Result
Transmit position report message from VDL generator			
Set CRC bit sequence to ok	Check that position report is received from EUT (VDO output)		Ok
Set CRC bit sequence to false	Check that position report is not received from EUT (VDO output)		Ok

Date	Result	Status
28.06.02	Test ok	ok

4.6 16.6 Slot allocation (Channel access protocols)

(M.1371 A1/3.3.1)

4.6.1 16.6.1 Network entry

Method of measurement

Set up standard test environment; switch on EUT. Record transmitted scheduled position reports for the first 3 frames after initialisation period. Check CommState for channel access mode

Required results

EUT shall start autonomous transmissions of msg 3 (position report) with ITDMA CommState with KeepFlag set true for first frame and msg 1 with SOTDMA CommState for consecutive frames.

Record the VDL data of the first 12 frames after switching on the EUT, 3 frames for this test and 8 frames for test 4.6.2. Generate a table and diagram from that data and check the following test items using the recorded data.

Test details – Channel access protocol			
Test item	Check	Remark	Result
Switch on EUT and record data with VDL analyser. Note the switch on time in UTC			
Transmission time	Check that first transmission of position report is within 2 min after switch on		Ok
Initial message type	Check that the network entry is done with msg 3		Ok
Keep flag	Check that the keep flag is set in msg 3		Ok

Slot offsets	Check that the slot offsets of msg 3 are in the range $375 \pm 75 = 300 \dots 450$		ok
Slot use	Check that the allocated slots are used in the next frame		ok
Message type	Check that the message type is changed to 1 after initial frame		ok
Timeout	Check that the time-out in the 2 nd frame is between 2 and 6 (decremented from initial 3..7)		ok

Date	Result	Status
28.06.02	Test ok	ok

4.6.2 16.6.2 Autonomous scheduled transmissions (SOTDMA)

(M.1371 A1/3.3.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Record transmitted scheduled position reports msg 1 and check frame structure. Check CommState of transmitted messages for channel access mode and parameters slot timeout, slot number and slot offset

Required results

Check that nominal reporting rate is achieved $\pm 20\%$ (allocating slots in selection interval SI). Confirm that the EUT allocates new slots NTS within SI after 3 to 8min. Check that slot offset indicated in CommState matches slots used for transmission.

Test details – Autonomous scheduled transmissions (SOTDMA)			
Test item	Check	Remark	Result
Record the VDL data of 8 frames operating with autonomously scheduled transmissions. Generate a table and diagram from that data and check the following test items using the recorded data. Set the condition so that the reporting rate is 10 s.			
Reporting rate	Check that the reporting rate is 10 s, 6 msg per frame		ok
Nominal increment and selection interval	Check that the allocated slots match the nominal and selection interval of 10 s reporting rate		ok
Slot interval	Check that the slot intervals are in the range $375 \pm 75 = 300 \dots 450$		Ok
Timeout	Check that the time-out is counting from 3...7 to 0		Ok

Slots used	Check that the slots indicated in CommState match the slots used		Ok
Slots allocated at time-out 0	Check that the slots are used in the next frame		Ok
	Check the slot offset is 2250 +/- Selection Interval (2175...2325)		Ok
CommState sub message	Check that for time-out 3,5,7 the number of received stations is indicated		Ok
	Check that for time-out 2,4,6 the slot number is indicated		Ok
	Check that for time-out 1 the correct value of UTC is indicated		Ok
	Check that for time-out 0 the slot increment is indicated		Ok
Alternating channels	Check that the position reports are transmitted on alternating channels		Ok
Msg 5	Check that the channel alternating of position report is not impaired by msg 5		Ok
Others	Check the recorded data for other possibly incorrect items		Ok

Date	Result	Status
25.05.02	Test ok	ok

4.6.3 16.6.3 Single message transmission (RATDMA)

(M.1371 A1/3.3.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Apply a 1 slot Binary Broadcast message (msg 8) to the PI of the EUT. Record transmitted messages.
- Apply combinations of Binary Broadcast message (msg 8), Addressed Binary message(msg 14), Broadcast Safety Related message (msg 6) and Addressed Safety Related message(msg12) to the PI of the EUT. Record transmitted messages and output of the PI of the EUT.

Required results

- Confirm that EUT transmits this msg 8 within max. 4sec. Retry with 90% channel load.

b) Confirm that maximum 20 slots can be used per frame for unannounced messages using RATDMA access scheme and that messages using the twenty first slot and above are rejected. Confirm that message ABK is sent with acknowledge type 2 (Message could not be broadcast) when the message is rejected.

02.03.-02 Test details – RATDMA transmission			
Test item	Check	Remark	Result
Apply an binary broadcast message 8 to the PI port of the EUT. File name is: AIBBM_bin.sst			
Standard test environment	Check that msg 8 is transmitted within 4 s		ok
90 % channel load Generate channel load as described below 1).	Check that msg 8 is transmitted within 4 s	Not yet tested	

02.03.02 Test details – Multi RATDMA transmissions			
Test item	Check	Remark	Result
Apply more than 20 msg 6,8,12,14 to the PI port of the EUT within one frame. File name is: AIABM_BBM_25.sst. Delay = 2 s			
Maximum transmissions per frame	Check that only 20 msg are transmitted in one frame. Msg 21 ... have to be rejected	20-22 msg transmitted in one frame <u>02.09.02 Retest: in 4 frames</u> 21 msg, in one frame 20 msg <u>19.09.02 Retest: in 3 frames</u> 21 msg, in 4 frames 20 msg	acc
ABK output	Check that ABK sentence is output with acknowledgement type = 2 for the rejected sentences.		ok

Date	Result	Status
27.05.02	21 msg in one frame	
02.09.02	Retest: in 4 frames 21 msg, in one frame 20 msg	
19.09.02	Retest: in 3 frames 21 msg, in 4 frames 20 msg	acc

4.6.4 16.6.4 Assigned operation

(M.1371 A2/3.3.6)

A fast and simple test of assigned operation has been made in paragraph 2.1.2 14.1.2 (Assigned mode).

A record of the complete operation from assignment message until end of switch back to SOTDMA should be made and evaluated.

4.6.4.1 16.6.4.1 Assigned mode using reporting rates

Method of measurement

Operate standard test environment and EUT in autonomous mode. Transmit an Assigned mode command msg 16 to the EUT with:

- a) the number of reports per 10 min which is not a multiple of 20
- b) the number of reports per 10 min which is higher than 600

Required results

- a) Confirm that EUT transmits position reports message msg 2 at a report rate that corresponds to the next highest multiple of 20
- b) Confirm that EUT transmits position reports message msg 2 at a report rate of one report per second.

Test details – Assigned Mode			
Test item	Check	Remark	Result
Send a msg 16 rate assignment with invalid offset values			
Offset value = 110 (not a multiple of 20)	Check that the reporting rate is $120/10\text{min} = 12/\text{min} = 5\text{s}$	Reporting rate = 10 s (= autonomous mode rep. rate) <u>02.09.02 Retest:</u> no change Rescheduling using msg 3 to a reporting rate of 10 s (as before). After rescheduling back to msg 1, msg 2 is not used. <u>18.09.02 Retest:</u> ok, reporting rate is 12/min	ok
Offset value = 1000 (> 600 msg/10 min)	Check that the reporting rate is $600/10\text{min} = 60/\text{min} = 1\text{s}$	Reporting rate = 10 s (= autonomous mode rep. rate) <u>02.09.02 Retest:</u> no change Rescheduling using msg 3 to a reporting rate of 10 s (as before). After rescheduling back to msg 1, msg 2 is not used. <u>18.09.02 Retest:</u> ok, reporting rate is 60/min	ok
Send a msg 16 rate assignment with EUT as second transponder in the message			

Dest. A: rate = 600 msg/10min Dest. B: rate = 120 msg/10min	Check that the EUT does reschedule to the assigned reporting rate of 120 msg/10 min = 12 msg/min = 5s	After Msg 16: 1 minute msg 1, then for 50 s no transmission, than msg 2 every 30 slots: 13:00:49 Msg 16 13:01:45 last msg 1 13:02:32 first msg 2 It is handled like a slot assignment with slot increment 30 <u>02.09.02 Retest:</u> Rescheduling using msg 3 to a reporting rate of 10 s (as before). After rescheduling back to msg 1, msg 2 is not used. <u>18.09.02 Retest:</u> ok, reporting rate is 12/min	ok
Check, that the reporting rate is increased if speed requires a higher reporting rate than that directed by the message 16. Apply a sensor speed input of 10 kn.			
Send a msg 16 with slot increment = 3 (225 = 6 s)	Check that slot offset is 225 slot and reporting rate is 6 s		Ok
Increase speed to 15 kn	Check that reporting rate is not changed		Ok
Increase speed to 25 kn	Check that the reporting rate is changed to 2 s	No change, reporting rate remains at 6 s <u>02.09.02</u> could not be retested, see note <u>18.09.02 Retest:</u> ok, Reporting rate is changed to 2 s,	ok
	Note: After assignment transmission with a rate of 12 s was done only on channel 2. After about 3 min rescheduling to a reporting rate of 10 s on both channels in autonomous mode, but msg type remained 2 <u>18.09.02 Retest:</u> Slot assignment works on both channels as required.		

Date	Result	Status
21.06.02	Test see details	
02.09.02	Retest: see details	
18.09.02	Retest: ok now	ok

4.6.4.2 16.6.4.2 Receiving test

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit an Assigned mode command (msg 16) to the EUT with:

- slot offset and increment
- designated reporting rate.

Record transmitted messages.

Required results

Confirm that EUT transmits position report msg 2 according to defined parameters and reverts to SOTDMA msg 1 with standard reporting rate after 4 to 8 min (ITU-R M.1371 A2/3.3.8.2.12).

21.06.02 Test details a)– Slot offset and increment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset A = offset to first assigned slot = 40 and slot increment parameter = 4 (increment = 125)			
Within the time-out time repeat the message 16			
Record VDL messages and evaluate record			
VDM output	Check VDM output of msg 16		Ok
First message	Check that first message is sent after 10 slots		ok
Message type	Check that message type of position report is 2		ok
Initialisation phase	Check that EUT starts immediately (after offset slots) with message 2	(see first message)	ok
Deallocation of previously used slots	Check that the slot used before assignment are deallocated using timeout value = 0 and slot offset = 0		ok
Alternating channels	Check that position report is sent alternating on channel A and B		ok
Increment	Check that the increment is 125 slots		ok
Timeout	Check that all slots of the first msg2 frame have the same timeout	Timeout value = 5	ok
	Check that the timeout is between 3 and 7	Timeout value = 5	Ok
	Check that the timeout is decremented after 1 min	<u>28.08.02 Retest:</u> Timeout is normally decremented after 1 minute. There is only 1 msg with timeout 1, not a complete frame. <u>28.08.02 Retest:</u> Timeout decremented after 1 minute at each timeout value	Ok ok
Comstate	Check that the ComState is like the ComState of msg 1		Ok

Switch back to autonomous mode	Check that the deallocates all msg 2 slots with timeout 0	Slots are not de-allocated with timeout 0 <u>28.08.02 Retest:</u> Slots are deallocated with timeout 0	ok
	Check that the EUT changes slots with timeout 0 on each channel to ITDMA slot msg 3 to start autonomous mode	Unallocated slots are used to start rescheduling. After end of timeout 1 frame there is a gap of 295 slots before start of autonomous mode using msg 3 <u>28.08.02 Retest:</u> Rescheduling is started with msg 3 using allocated slots. Start of autonomous mode is during the timeout 0 frame.	ok
	Check that EUT initialises autonomous mode like network entry	<u>18.09.02 Retest:</u> After correct rescheduling in the timeout 0 frame of assigned mode an additional frame with msg 3 is added. It allocates the same slots as the previous frame. <u>23.09.02 Retest:</u> After 1 frame and about 700 slots the timeout is set to 0. The additional frame with msg 3 seems to be removed <u>02.10.02 Retest:</u> ok, counting down of timeout is ok	ok

21.06.02 Test details b)– Rate assignment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset=reporting rate of 300msg/10 min, increment=0 Within the timeout time repeat the message 16 Record VDL messages and evaluate record			
VDM output	Check VDM output of msg 16		Ok
Initialisation phase	Check that EUT starts immediately with rescheduling to the new reporting rate		Ok
Message type	Check that message type of position report is 2 instead of msg 1	<u>28.08.02 Retest:</u> message type of position report after rescheduling is 1 <u>18.09.02 Retest:</u> ok	ok

Reporting rate	Check that the reporting is 300 msg/10 min = 30msg/frame = 2 s	Reporting rate remains at 10 s <u>28.08.02 Retest:</u> no change, reporting rate is 10 s <u>18.09.02 Retest:</u> ok	ok
Alternating channels	Check that position report is sent alternating on channel A and B		ok
Initialisation	Check that the Initialisation is according to changing reporting rate using msg 3 to allocate new slots	Because the reporting rate is not changed no rescheduling is performed <u>28.08.02 Retest:</u> no change <u>18.09.02 Retest:</u> ok	ok
Timeout	Check that the assigned timeout is between 2 and 6	Timeout 1 is also used <u>28.08.02 Retest:</u> no change, timeout 0 and 1 are also used <u>18.09.02 Retest:</u> ok	ok
Assignment repetition	Check that the timeout is extended by repetition of msg 16: Switch back is between 3 and 7 minutes after last repetition	Tx of msg 16 at: 12:19:17, 12:21:19, 12:23:14 checked by VDM output. End of assigned mode at 12:25:36, < 3 min after last repetition <u>28.08.02 Retest:</u> Could not be checked because rep. rate and msg type is not changed <u>18.09.02 Retest:</u> End of assigned mode 5 minutes after last msg 16	ok
Switch back to autonomous mode	Check that the EUT reverts to normal reporting rate between 4 and 8 minutes after last msg 16	Starts rescheduling using msg 3 after 7 min, is finished after 8 min <u>28.08.02 Retest:</u> Could not be checked because rep. rate and msg type is not changed <u>18.09.02 Retest:</u> Reverts to 10 s reporting rate after 3 min. reporting rate. After rescheduling timeout values of 0 and 1 is also used, should be in the range of 2..6 (in the frame after rescheduling) <u>02.10.02 Retest:</u> ok, all values in the range of 2...6	Ok ok

		<p>Note: If speed = 15 kn and rep rate = 6 s, and assigned rep. rate = 6 s, msg 2 is used for rescheduling, then msg 2 is used (no ok)</p> <p><u>18.09.02 Retest:</u> ok, msg 16 with the same reporting rate as actually in use is ignored</p>	
			ok

Date	Result	Status
21.06.02	Test see details	
18.09.02	Retest: Mainly ok, two minor errors	
02.10.02	Retest: ok	ok

4.6.4.3 16.6.4.3 Assignment selectivity

(M.1371 A1/3.3.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Check frame structure. Transmit an Assigned mode command (msg 16) to another AIS with a slot offset and increment pointing to a slot used by the EUT. Record transmitted messages.

Required results

Confirm that EUT does not allocate slots on a msg16 addressed to other stations.

Test details b)– Rate assignment			
Test item	Check	Remark	Result
Send a message to another MMSI			
VDM output	Check that there is no VDM output of msg 16		Ok
Wrong MMSI	Check that the EUT does not change the reporting rate		ok

Date	Result	Status
21.06.02	Test ok	ok

4.6.4.4 16.6.4.4 Slot assignment to FATDMA reserved slots

(M.1371 A1/3.3.6)

A test to check the combined operation of msg 16 assignment to slots reserved by msg 20.

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit a Data Link Management message (msg 20) to the EUT with slot offset and increment. Transmit an Assigned Mode Command (msg 16) to the EUT and command it to use one or more of those FATDMA allocated slots. Record transmitted messages.

Required results

Confirm that EUT uses the slots commanded by msg 16 for own transmissions.

Test details – Slot assignment to FATDMA reserved slots			
Test item	Check	Remark	Result
Send a message 20 from VDL Generator with slot offset and increment for slot reservation: Offset = 22, slots = 7, time-out = 7, incr. = 25			
Send a message 16 from VDL Generator assigning one or more of these reserved slots Offset = 25, incr. = 5 (= 75 slots)			
Rx of msg 20	Check that msg 20 has been received by EUT (VDM output)		Ok
Slot use	Check that slots assigned by the msg 16 are used by the EUT		Ok

Date	Result	Status
28.06.02	Test ok	ok

4.6.5 16.6.5 Fixed allocated transmissions (FATDMA)

(M.1371 A1/3.3.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit a Data Link Management message (msg 20) to the EUT with slot offset and increment. Record transmitted messages.

Required results

Confirm that EUT does not use slots allocated by msg 20 for own transmissions until timeout of 4 to 8 min.

11.02.02 Test details – Slot assignment to FATDMA reserved slots			
Test item	Check	Remark	Result
Send a message 20 from VDL Generator with slot offset and increment for slot reservation according to the description below.			
To get enough new slot allocations within time-out time set reporting rate to 2 s (speed > 25 kn)			
Record VDL messages	<p>Check that the reserved slots are not used by the EUT within a time-out of 4-8 minutes</p>	<p>Result from 4 frames, Msg 30 at beginning of each frame with timeout 1:</p> <ol style="list-style-type: none"> frame: all allocation in reserved slots frame: all allocation ok frame: 3 allocations ok, one in reserved slot frame: all (4) allocations in reserved slots <p><u>03.09.02 Retest:</u> Changed but not ok: <ul style="list-style-type: none"> Most slot have timeout 0 for some consecutive frames (wrong) The slots with timeout not 0 are all not reserved by base station (ok) The new allocated slots are in many cases reserved by base station (nok) <u>19.09.02 Retest:</u> see note 2 <u>23.09.02 Retest:</u> use of slots is ok now Msg 20 is very often not received, has to be checked <u>02.10.02 Retest:</u> ok, all messages receive, checked on channel A and B</p>	Ok
			ok

Note: It is not required but ok to set all slots which are reserved in a received msg 20 to timeout 0 in order to select a new, not reserved slot for the next frames. But this should be only 1 frame, and for the next frame the random timeout of 3...7 should be assigned, not 0 again.

Note 2: Wenn ich das richtig interpretiere, werden alle Sendungen, die nicht in freien Slots liegen, radikal gestrichen.

Nach Ablauf der jeweiligen Slot-Timeouts werden dann Slots in den freien Bereichen allokiert, und die Sendung wird wieder aufgenommen. Nach 7 Minuten ist dann die Sendefolge wiederhergestellt, und es werden korrekt alle Sendungen in freien Bereichen durchgeführt.

Soweit ist es ok, aber der Übergang ist nicht korrekt. Der Transponder hält dann seine geforderte Reporting-Rate nicht mehr ein.

Die beste Weg ist nach meiner Meinung, nach dem Empfang einer Msg 20 im folgenden Frame alle Slots zwangswise auf Timeout 0 zu setzen und bei der dann fälligen Wahl der neuen Slots die reservierten Bereiche vermeiden.

Wir würden es auch akzeptieren, wenn der Wechsel der Slots erst beim nächsten regulären Timeout 0 gemacht würde, aber besser ist die obige Vorgehensweise.

In der Praxis wird es ja vermutlich so sein, dass eine Basisstation, die diese Möglichkeit nutzt, permanent und regelmäßig ihre Msg. 20 aussendet. Wenn ein Schiff dann in ihren Bereich kommt, muss es die reservierten Slots freimachen. Auf eine Minute kommt es dann auch nicht an, wichtiger ist ein geordneter Übergang mit Freigabe der bisher benutzen Slots (durch Timeout 0) und Wahl und Allokierung/Ankündigung der nachfolgend belegten Slots.

Ein zweiter Punkt: Nach ITU-R M.1371, Absatz 3.3.8.2.16 gilt die Msg 20 nur für den Kanal, auf dem sie gesendet wurde. Im Versuch hier wird auch die Reservierung auf Kanal 2 beachtet. Das kann aber daran liegen, dass der Transponder die Msg 20 zum Teil auf beiden Kanälen empfangen hat, obwohl sie nur auf Kanal A gesendet wurde.

Date	Result	Status
28.06.02	Reserved slots are used (see details)	
03.09.02	Retest: changed, but not ok	
19.09.02	Retest: See note 2	
23.09.02	Retest: Use of slots is ok, reserved slots are not used, msg in reserved slots are timed out in the first frame and new, not reserved slots are allocated	ok
23.09.02	Msg 22 is very often not received, has to be checked	
24.09.02	Nearly all messages received	
02.10.02	Retest: all message 20 received	Ok


Test scenario: Msg 20 transmission by test system.

Msg 20 reserves slots which should not be used by mobile stations.

Msg 20 parameters:

- Msg 20 is transmitted in slot 0 in each frame
- Offset number 1: 22
- Time out 1: 1
- Number of slots: 7
- Increment: 10

FATDMA reservation

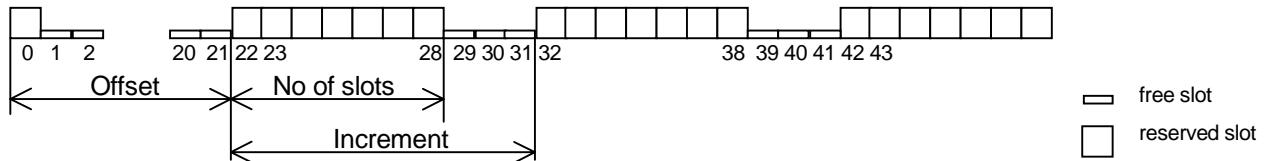

4.7 16.7 Message Formats

(M.1371 A1/3.3.7)

4.7.1 16.7.1 Received messages

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply messages according to Table 7 to the VDL. Record messages output by the PI of EUT.

Required results

Confirm that EUT outputs corresponding message with correct field contents and format via the PI or responds as appropriate.

Test details – Content of msg 1,2,3 Position report			
Test item	Check	Remark	Result
Transmit a message 1,2 or 3 from other AIS transponder or VDL generator .			
Check the field content of the fields listed under Test item.			
Message id	Check the field content		ok
Repeat indicator	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Navigational status	Check the field content		Ok
Rate of Turn	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
True heading	Check the field content		Ok
Time stamp	Check the field content		Ok
RAIM flag	Check the field content		Ok
Communication state	Check the field content		ok
	The communication state is checked in 4.6.2 16.6.2 Autonomous scheduled transmissions (SOTDMA)		

20.03.02 Test details – Content of msg 4 Base station report			
Test item	Check	Remark	Result
Transmit a msg 4 from VDL generator. Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
UTC year, month, day, hour, minute, second	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok
Communication state	Check the field content		Ok
	The communication state is checked in 4.6.2 16.6.2 Autonomous scheduled transmissions (SOTDMA)		

20.03.02 Test details – Content of msg 5 Static data			
Test item	Check	Remark	Result
Transmit a message 5 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		ok
MMSI	Check the field content		Ok
AIS version indicator	Check the field content		Ok
IMO number	Check the field content		Ok
Call sign	Check the field content		Ok
Name of ship	Check the field content		Ok
Type of ship and cargo type	Check the field content		Ok
Reference point A,B,C,D	Check the field content		Ok
Type of EPFS	Check the field content		Ok
ETA	Check the field content		Ok
Maximum present static draught	Check the field content		Ok
Destination	Check the field content		Ok
DTE flag	Check the field content		Ok

20.03.02 Test details – Content of msg 6 Addressed binary message			
Test item	Check	Remark	Result
Transmit a message 6 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

20.03.02 Test details – Content of msg 7 Binary acknowledge			
Test item	Check	Remark	Result
Transmit a message 7 from VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Sequence number 2	Check the field content		Ok
Destination ID 3 (MMSI)	Check the field content		Ok
Sequence number 3	Check the field content		Ok
Destination ID 4 (MMSI)	Check the field content		Ok
Sequence number 4	Check the field content		Ok

20.03.02 Test details – Content of msg 8 Binary broadcast message			
Test item	Check	Remark	Result
Transmit a message 8 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

20.03.02 Test details – Content of msg 9 SAR aircraft position report			
--	--	--	--

Test item	Check	Remark	Result
Transmit a message 9 from VDL generator . Check the field content of the fields listed under Test item.			
Message id	Check the field content		ok
Repeat indicator	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Altitude			Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
Time stamp	Check the field content		Ok
DTE flag	Check the field content		Ok
RAIM flag	Check the field content		Ok
Communication state			
Sync state	Check the field content		Ok
Slot time-out	Check the field content		Ok
Submessage: received stations	Check the field content		Ok
Submessage: Slot number	Check the field content		Ok
Submessage: UTC	Check the field content		Ok
Submessage: Slot offset	Check the field content		Ok

20.03.02	Test details – Content of msg 10 UTC and data inquiry		
Test item	Check	Remark	Result
Transmit a message 10 from VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
		Msg10 also on PI if not addressed to own station	rec
Msg11 response	Check for response with msg 11 if EUT is addressed		ok
Msg11 response	No response if addressed to other station		ok

20.03.02 Test details – Content of msg 11 UTC date response			
Test item	Check	Remark	Result
Transmit a msg 11 from VDL generator Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
UTC year, month, day, hour, minute, second	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok

20.03.02 Test details – Content of msg 12 Addressed safety related message			
Test item	Check	Remark	Result
Transmit a message 12 from other AIS transponder or VDL generator addressed to EUT. Check the field content of the fields listed under Test item.			
Message ID	Check the field content		ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
Safety related text	Check the field content		Ok
Transmit a message 12 from other AIS transponder or VDL generator addressed to other AIS. Message shall not be on PI.			
Msg12 to other AIS	Check PI , no VDM		Ok

20.03.02 Test details – Content of msg 13 Safety related acknowledge			
Test item	Check	Remark	Result
Transmit a message 13 from VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Sequence number 2	Check the field content		Ok
Destination ID 3 (MMSI)	Check the field content		Ok
Sequence number 3	Check the field content		Ok
Destination ID 4 (MMSI)	Check the field content		Ok
Sequence number 4	Check the field content		ok
		Msg13 also on PI if not addressed to own station	Rec

20.03.02 Test details – Content of msg 14 Safety related broadcast message			
Test item	Check	Remark	Result
Transmit a message 8 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Safety related text	Check the field content		Ok

Test details – Content of msg 15 Interrogation			
Test item	Check	Remark	Result
Transmit a message 15 from other AIS transponder or VDL generator . Response on this msg is tested under 6.3 18.2 (M.1371 A1/5.3) Interrogation responses			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Message ID 1.1	Check the field content		Ok
Slot offset 1.1	Check the field content		Ok
Message ID 1.2	Check the field content		Ok
Slot offset 1.2	Check the field content		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Message ID 2.1	Check the field content		Ok
Slot offset 2.1	Check the field content		Ok
		Msg15also on PI if not addressed to own station	rec

Test details – Content of msg 16 Assigned mode command			
Test item	Check	Remark	Result
Transmit a message 16 from VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID A (MMSI)	Check the field content		Ok
Offset A	Check the field content		Ok
Increment A	Check the field content		Ok
Destination ID B (MMSI)	Check the field content		Ok
Offset B	Check the field content		Ok
Increment B	Check the field content		Ok
		Msg16 also on PI if not addressed to own station	Rec

20.03.02 Test details – Content of msg 17 GNSS binary broadcast message			
Test item	Check	Remark	Result
Transmit a msg 17 from VDL generator			
Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
Skource ID (MMSI)	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Message type	Check the field content		Ok
StationId	Check the field content		
Zcount	Check the field content		
Sequence number	Check the field content		
N	Check the field content		
Health	Check the field content		

20.03.02 Test details – Content of msg 18 Standard Class B position report			
Test item	Check	Remark	Result
Transmit a msg 18 from VDL generator.			
Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
True Heading	Check the field content		Ok
Time stamp	Check the field content		Ok
RAIM flag	Check the field content		Ok
CommState selector	Check the field content		Ok
Communication state - Selector = 0 (SOTDMA)			
Sync state	Check the field content		Ok
Slot time-out	Check the field content		Ok
Submessage: received stations	Check the field content		Ok
Submessage: Slot number	Check the field content		Ok
Submessage: UTC	Check the field content		Ok
Submessage: Slot offset	Check the field content		Ok
Communication state - Selector = 1 (ITDMA)			
Sync state	Check the field content		Ok
Slot increment	Check the field content		Ok
Number of slots	Check the field content		Ok
Keep flag	Check the field content		Ok

Test details – Content of msg 19 Extended Class B position report			
Test item	Check	Remark	Result
Transmit a msg 19 from VDL generator. Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
True Heading	Check the field content		Ok
Time stamp	Check the field content		Ok
Name of ship	Check the field content		Ok
Type of ship and cargo	Check the field content		Ok
Dimension of ship/Refpoint A,B,C,D	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok
DTE flag	Check the field content		Ok

20.03.02 Test details – Content of msg 20 Data link management message			
Test item	Check	Remark	Result
Transmit a message 20 from VDL generator . Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Offset number 1	Check the field content		Ok
Number of slots 1	Check the field content		Ok
Time-out 1	Check the field content		Ok
Increment 1	Check the field content		Ok
Offset number 2	Check the field content		Ok
Number of slots 2	Check the field content		Ok
Time-out 2	Check the field content		Ok
Increment 2	Check the field content		Ok
Offset number 3	Check the field content		Ok
Number of slots 3	Check the field content		Ok
Time-out 3	Check the field content		Ok
Increment 3	Check the field content		Ok
Offset number 4	Check the field content		Ok
Number of slots 4	Check the field content		Ok
Time-out 4	Check the field content		Ok
Increment 4	Check the field content		Ok

Test details – Content of msg 21 ATON report			
Test item	Check	Remark	Result
Transmit a msg 18 from VDL generator. Check the field content of the fields listed under Test item.			
Message id	Check the field content		ok
User ID (MMSI)	Check the field content		Ok
Type of aids to navigation	Check the field content		Ok
Name of aids to navigation	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Dimension of ship/Refpoint A,B,C,D	Check the field content		Ok
Type of EPFD	Check the field content		Ok
Time stamp	Check the field content		Ok
Off position indicator	Check the field content		Ok
RAIM flag	Check the field content		Ok
Virtual/Pseudo AtoN flag	Check the field content		Ok
Assigned mode flag	Check the field content		Ok
Name of AtoN extension	Check the field content		ok

Test details – Content of msg 22 Channel management			
Test item	Check	Remark	Result
Transmit a msg 22 from VDL generator. Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Channel A	Check the field content		Ok
Channel B	Check the field content		Ok
Tx/Rx mode	Check the field content		Ok
Power flag	Check the field content		Ok
Area addressed			
Longitude of NE corner	Check the field content		Ok
Latitude of NE corner	Check the field content		Ok
Longitude of SW corner	Check the field content		Ok
Latitude of SW corner	Check the field content		Ok
Addressed or broadcast flag	Check that flag = 0		Ok
Selective addressed			
Station ID 1 (MMSI)	Check the field content		
Station ID 2 (MMSI)	Check the field content		
Addressed or broadcast flag	Check that flag = 1		
Channel A bandwidth	Check the field content		Ok
Channel B bandwidth	Check the field content		Ok

Transitional zone	Check the field content		Ok

Message content result overview

The PI output results are an overview of the above tables of the various received messages. Response results can be derived from other tests as mentioned in the "response result" column

Message type	PI out Yes/no	PI output Result	Response required (in addition to PI output)	Response result
Msg1,2,3			No	
Msg 4			No	
Msg 5			No	
Msg 6			Tx of ackn. msg 7	(6.1.2)
Msg 7			ABK output, no further repetitions	(2.1.4.1)
Msg 8			No	
Msg 9			No	
Msg 10			Tx of msg 11 UTC/date response	
Msg 11			No	
Msg 12			Tx of ackn. msg 13, Display on MKD	(6.2)
Msg 13			ABK output, no further repetitions	(2.1.4.1)
Msg 14			Display on MKD	(2.10.1)
Msg 15			Tx of requested message 3, 5	(6.3)
Msg 16			Change of TDMA mode, position report using msg 2	(4.6.4)
Msg 17			Internal GNSS receiver shall switch to differential mode	
Msg 18			No	
Msg 19			No	
Msg 20			Has to avoid using reserved slots	4.6.5
Msg 21			no	
Msg 22			Addition of new area to the regional area table	5.2

Date	Result	Status
20.03.2002	Test ok	ok

4.7.2 16.7.2 Transmitted messages

(M.1371 A1/3.3.7)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of messages relevant for a mobile station according to Table 7 by the EUT.

Record transmitted messages.

Required results

Confirm that EUT transmits messages with correct field contents and format or responses as appropriate.
 Confirm that messages 4, 9, 16, 17, 18, 19, 20, 21, 22 are NOT being transmitted by the EUT.

The message contents are checked using the VDL analyser

11.02.02 Test details – Message 1,2,3 Position report			
Test item	Check	Remark	Result
The message content of message 1,2,3 is checked in 2.3.1 Information content of msg 1			

11.02.02 Test details – Message 5 Static data			
Test item	Check	Remark	Result
The message content of message 5 is checked in 2.3.2 Information content of msg 5.			

20.03.02 Test details – Content of msg 6 Addressed binary message			
Test item	Check	Remark	Result
This test can be done in combination with test 2.1.4.1 14.1.4.1 Transmit an addressed message Apply PI sentence: File AIABM_bin.sst Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

20.03.02 Test details – Content of msg 7 Binary acknowledge			
Test item	Check	Remark	Result
This test can be done in combination with test 6.1.2 18.1.2 Acknowledgement			
Message 6 has to be transmitted by other AIS or VDL generator			
Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Omitted		
Sequence number 2	Omitted		
Destination ID 3 (MMSI)	Omitted		
Sequence number 3	Omitted		
Destination ID 4 (MMSI)	Omitted		
Sequence number 4	Omitted		

20.03.02 Test details – Content of msg 8 Binary broadcast message			
Test item	Check	Remark	Result
This test can be done in combination with 6.4 18.3 Broadcast messages			
Apply PI sentence: File AIBBM_bin.sst			
Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

07.02.02 Test details – Content of msg 10 UTC and date inquiry			
Test item	Check	Remark	Result
activate transmission of msg 10 if implemented (not required)			

20.03.02 Test details – Content of msg 11 UTC date response			
Test item	Check	Remark	Result
Transmit a msg 10 from VDL generator to request transmission of msg 11 by EUT Check the field content of the fields listed under Test item.			
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
UTC year, month, day, hour, minute, second	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok

20.03.02 Test details – Content of msg 12 Addressed safety related message			
Test item	Check	Remark	Result
This test can be done in combination with test 2.1.4.1 14.1.4.1 Transmit an addressed message Apply PI sentence: File AIABM_safety.sst Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
Safety related text	Check the field content		Ok

20.03.02 Test details – Content of msg 13 Safety related acknowledge			
Test item	Check	Remark	Result
This test can be done in combination with test 6.1.2 18.1.2 Acknowledgement			
Send message 12 from other transponder or VDL generator			
Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Ommitted		
Sequence number 2	Ommitted		
Destination ID 3 (MMSI)	Ommitted		
Sequence number 3	Ommitted		
Destination ID 4 (MMSI)	Ommitted		
Sequence number 4	Ommitted		

20.03.02 Test details – Content of msg 14 Safety related broadcast message			
Test item	Check	Remark	Result
This test can be done in combination with 6.4 18.3 Broadcast messages			
Apply PI sentence: File AIBBM_safety..sst			
Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Safety related text	Check the field content		Ok

Test details – Content of msg 15 Interrogation			
Test item	Check	Remark	Result
This test can be done in combination with 6.3 18.2 (M.1371 A1/5.3) Interrogation responses Apply PI sentence: File AIAIR_35_5_bin.sst Check the field content of the fields listed under Test item.			
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		ok
Destination ID 1 (MMSI)	Check the field content		Ok
Message ID 1.1	Check the field content		Ok
Slot offset 1.1	Check the field content = 0		Ok
Message ID 1.2	Check the field content		Ok
Slot offset 1.2	Check the field content = 0		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Message ID 2.1	Check the field content		Ok
Slot offset 2.1	Check the field content = 0		Ok

Date	Result	Status
20/03/02	Msg 15 not yet implemented	
28.06.02	Msg 15 still not implemented	
03.08.02	Retest: ok	ok

5 17 Specific tests of Network Layer

(7.4)

5.1 17.1 Dual channel operation

(M.1371 A1/4.1)

5.1.1 17.1.1 Alternate transmissions

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode on default channels AIS1, AIS2. Record transmitted scheduled position reports on both channels. Check CommState for slot allocation.

Required results

Confirm that EUT allocates slots in both channels alternating. Repeat check for data link access period.

03.06.02		Test details – Alternate transmissions		
Test item	Check	Remark	Result	
Set-up EUT in autonomous mode, set report rate to 10sec with external sensor input. Record transmitted scheduled position reports on both channels. Check Comm State for slot allocation.				
Alternate transmissions	Check that the EUT transmission is alternating		ok	
Comm state	Check that the slots of each channel are allocated on the same channel		ok	
Same test on network entry (data link access period)				
Alternate transmissions	Check that the EUT transmission is alternating		ok	
Comm state	Check that the slots of each channel are allocated on the same channel		ok	

Date	Result	Status
03.06.02	Test ok	ok

5.2 17.2 Regional area designation by VDL message

(M.1371 A1/4.1))

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply Channel management messages (msg 22) to the VDL defining two adjacent regional areas 1 and 2 with different channel assignments for both regions and a transitional zone extending 4nm either side of the regional boundary. At least one channel shall be 12.5kHz channel. Let the EUT approach region 1 from outside region 2 more than 5 nm away from region boundary transmitting on default channels. Record transmitted messages on all 6 channels.

Region	Primary channel	Secondary channel
Region 1	CH A1	CH B1
Region 2	CH A2	CH B2
Default region	AIS 1	AIS 2

Required results

Check that the EUT transmits and receives on the primary channels assigned for each region alternating channels and doubling reporting rate when passing through the transitional zones. EUT shall revert to default autonomous operation on the regional channels after leaving the transitional zones.

Item	Area	Channels in use
1	default region	AIS1, AIS2
2	first transitional zone	AIS1, CH A 2
3	region 2	CH A 2, CH B 2
4	second transitional zone	CH A 2, CH A 1
5	region 1	CH A 1, CH B 1

03.06.02		Test details – Channel management by VDL msg 22		
Test item		Check	Remark	Result
Set-up EUT in autonomous mode transmitting on channel AIS1/AIS2, send 2 Msg 22 by VDL generator, defining 2 adjacent areas with channels A1, B1 and A2, B2. Use external sensor input to simulate a voyage through both areas. Set transitional zone to 4nm. Set the position outside the areas.				
Set the positions near the limits of the transitional zones to check the dimensions				
PI output	Check that the msg 22 are output on PI			ok
MKD display defined area	Check that the defined area is correctly displayed on MKD	Only the area in use is displayed. We recommend to display all stored area settings - not required - <u>23.09.02 Retest: ok</u>		

ACA output	Check that ACA output indicate the settings of R1 and R2	The actually entered new area is output as ACA sentence on PI port All stored areas are output in ACA sentences on request by AIACQ,ACA sentence	Ok ok
<u>Item 1:</u>	Check that channels AIS1 and AIS2 are in use		ok
<u>Item 2:</u> Move position into transitional area of region 2	Check that EUT keeps old channels for 1 min. timing out the transmissions of AIS2	Transmission on channel AIS2 is finished immediately after changing position. There are no messages with time-out and comstate 0 to release the allocated slots <u>03.09.02 Retest:</u> channel AIS2 is now timed out with msg1, timeout=0	ok
	Limits of transitional zone: The TZ is 4 nm (= 7 minutes), area border at 12°	At lat = 12°04: default channels in use At lot = 12°03: channels of TZ in use. It seems that the ZT limit is not at 4 nm but at 4 minutes lat <u>03.09.02 Retest:</u> At lat = 12°08: default channels in use At lot = 12°06: channels of TZ in use.	ok
	Check that channel AIS 1 and A2 are used		ok
	Check that reporting rate is doubled	The reporting rate is not doubled <u>03.09.02 Retest:</u> Reporting rate is doubled	ok
<u>Item 3:</u> Move position into region 2	Check that EUT keeps transitional channels for 1 min. timing out the transmissions of AIS 1	After changing position to 12°56 two messages are transmitted on AIS1, but not with time-out 0, then channel is changed <u>03.09.02 Retest:</u> Timing out of channel AIS1 is ok now	ok
	Check that channel A2 and B2 are used		ok
	Check that reporting rate is changed back to normal reporting rate	Normal transmission rate	ok
<u>Item 4:</u> Move position into transitional area between region 1 and 2	Check that channels A2 and A1 are used	Same errors as with item 2	ok

	Check that reporting rate is doubled	The reporting rate is not doubled <u>03.09.02 Retest:</u> Reporting rate is doubled	ok
<u>Item 5:</u> Move position into region 1	Check that channels A1 and B1 are used		ok
	Check that reporting rate is changed back to normal reporting rate	Normal reporting rate	ok
Move position into transitional area of region 1	Check that channels A1 and AIS1 are used		ok
	Check that reporting rate is doubled	Reporting rate is not doubled <u>03.09.02 Retest:</u> Reporting rate is doubled	ok
Move position out of the transitional zone of region 1	Check that channels AIS1 and AIS2 are used		ok
	Check that reporting rate is changed back to normal reporting rate	Normal reporting rate	ok

Date	Result	Status
31.05.02	The regional area settings are not stored during power off. According to ITU-R M.1371 §4.1.7 “Resumption of operation after power on” “the mobile station should operate using the stored operating settings of that identified region.”	
03.06.02	There are mainly 3 failures: <ul style="list-style-type: none"> - The TZ value seems to be used in minutes of Lat, not in nautical miles - The reporting rate is not doubled in the transitional zones - The allocated slots are not released by transmitting one frame with time-out 0 	
03.09.02	Retest: all 3 items ok now	ok

5.3 17.3 Regional area designation by serial message

(M.1371 A1/4.1.3)

Repeat test 17.2 using ACA serial message for channel assignment.

04.06.02 Test details – Channel management by ACA sentence on PI			
Test item	Check	Remark	Result

Set-up EUT in autonomous mode transmitting on channel AIS1/AIS2, send 2 ACA sentences to the PI, defining 2 adjacent areas with channels A1, B1 and A2, B2. Use external sensor input to simulate a voyage through both areas. Set transitional zone to 1nm. Set the position outside the areas.

Areas are in SW quadrant. File name is AIACA_Region_17_3_SW.sst

Set the positions near the limits of the transitional zones to check the dimensions

MKD display defined area	Check that the defined area is correctly displayed on MKD or output on PI in ACA sentence on request	ok
<u>Item 1:</u>	Check that channels AIS1 and AIS2 are in use	ok
<u>Item 2:</u> Move position into transitional area of region 1	<p>Check that EUT keeps old channels for 1 min. timing out the transmissions of AIS2</p> <p>Limits of transitional zone: The TZ is 1 nm (= 1.15 minutes), area border at 13°W Border of TZ is at 13°01.15</p>	<p>There are no messages with time-out and comstate 0 to release the allocated slots</p> <p><u>03.09.02 Retest:</u> channel AIS2 is now timed out with msg1, timeout=0</p> <p>At lon = 13°01.1 and 13°00.9: default channels in use At lon = 13°00.8: channels of TZ in use.</p> <p><u>03.09.02 Retest:</u> At lon = 13°01.2: default channels in use At lon = 13°01.1: channels of TZ in use.</p>
	Check that channel AIS 1 and A1 are used	ok
	Check that reporting rate is doubled	<p>The reporting rate is not doubled</p> <p><u>03.09.02 Retest:</u> Reporting rate is doubled</p>
<u>Item 3:</u> Move position into region 1	<p>Check that EUT keeps transitional channels for 1 min. timing out the transmissions of AIS 1</p> <p>Limits of transitional zone: The TZ is 1 nm (= 1.15 minutes), area border at 13°W Border of TZ is at 12°58.85</p>	<p>No timing out</p> <p><u>03.09.02 Retest:</u> timing out now ok</p>
	Check that channel A1 and B1 are used	ok
	Check that reporting rate is changed back to normal reporting rate	Normal reporting rate
<u>Item 4:</u> Move position into transitional area between region 1 and 2	<p>Check that channels A2 and A1 are used</p> <p>Check that reporting rate is doubled</p>	<p>ok</p> <p>The reporting rate is not doubled</p> <p><u>03.09.02 Retest:</u> Reporting rate is doubled</p>

<u>Item 5:</u> Move position into region 2	Check that channels A2 and B2 are used		ok
	Check that reporting rate is changed back to normal reporting rate	Normal reporting rate	ok
Move position into transitional area of region 1	Check that channels A2 and AIS1 are used		ok
	Check that reporting rate is doubled	The reporting rate is not doubled <u>03.09.02 Retest:</u> Reporting rate is doubled	ok
Move position out of the transitional zone of region 1	Check that channels AIS1 and AIS2 are used		ok
	Check that reporting rate is changed back to normal reporting rate	Normal reporting rate	ok

Date	Result	Status
04.06.02	See test 17.2	
03.09.02	Retest ok	ok

5.4 17.4 Power setting

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit channel management message (msg 22) defining output power high/low.

Repeat test using ACA and manual input.

Required result

Check that EUT sets output power as defined.

Test details – Power setting by msg 22			
Test item	Check	Remark	Result
The EUT has to be in an area with regional operating settings and the channels as used in the following msg 22.	Transmit a msg 22 from VDL generator like the following: 22,0,2345,0,2086,1086,0,1,[MMSI(MSB)], [MMSI(LSB)],1,0,0,,0		
Channel switch	Check that the EUT doesn't switch channels		ok
Power low	Check that the transmitting power is changed from high to low		ok

MKD	Check the low power settings are displayed on MKD		ok
Transmitt the same message 22, but power setting to 0 = high power			
Power high	Check that EUT reverts to high power	Low power <u>03.09.02 Retest:</u> could not address the EUT with MMSI <u>20.09.02 Retest:</u> no change <u>23.09.02 Retest:</u> Power setting is ok, but MMSI addressing is incorrect (no 5 x 0-Bit added at the end. <u>02.10.02 Retest:</u> MMSI addressing ok	ok

Test details – Power setting by ACA			
Test item	Check	Remark	Result
Apply the following message at PI: File name = AIACA_region_in.sst. Set power flag to 1 = low power and channels to actually used channels			
Power low	Check that the transmitting power is changed from high to low	<u>03.09.02 Retest:</u> no difference in output power between high and low poser <u>19.09.02 Retest:</u> switches to low power. See note!	ok
MKD	Check the low power settings are displayed on MKD	Power setting is displayed correctly	ok
Transmitt the same ACA sentence, but power setting to 0 = high power			
Power high	Check that EUT reverts to high power	<u>03.09.02 Retest:</u> no difference in output power between high and low poser <u>19.09.02 Retest:</u> switches to low power. See note!	ok

Note:	<p>Beim Wechsel der Sendeleistung wird ein komplettes Rescheduling aller Slots durchgeführt. Alle alten Slots werden freigegeben und neue, andere allokiert. Die Update-Rate wird nicht verändert.</p> <p>Diese Vorgehensweise ist völlig unnötig und hat nur Nachteile:</p> <ul style="list-style-type: none"> - Sie belastet den Kanal, weil während des Rescheduling-Frames die doppelte Zahl an Sendungen stattfindet. - Sie erfordert bei allen empfangenden Transpondern entsprechende Änderungen der Allocation Table, die bei Empfangsproblemen immer mit Fehlern behaftet sein können. <p>Es reicht völlig, dem Sender eine neue Sendeleistung vorzugeben.</p> <p>In ITU-R M1371 §4.1.5 steht z.B: The transitional behaviour is necessary only when the channels are changing.</p> <p>Das betrifft hier zwar die Übergänge beim Einfahren in ein Gebiet mit Regional Settings, aber ich denke, man kann ihn auch für diesen Fall ansetzen.</p> <p>02.10.02 Retest: ok, no rescheduling</p>	ok
-------	--	----

Test details – Power setting by manual input			
Test item	Check	Remark	Result
Set the power level of the region in use to low power, Don't change the channels			
Power low	Check that the transmitting power is changed from high to low	<p>03.09.02 Retest: no difference in output power between high and low poser</p> <p>19.09.02 Retest: switches to low power.</p> <p>See note above (ACA setting)!</p>	ok
Set power level back to high power.			
Power high	Check that EUT reverts to high power		ok

Date	Result	Status
04.06.02	High and low power are indicated on MKD and in ACA output, but actual output power seems to be always low power	
03.09.02 20.09.02	Retest: no change Retest: Power setting now ok	ok

5.5 17.5 Message priority handling

(M.1371 A1/4.1.8)

Method of measurement

Set-up standard test environment and operate test equipment with 90% channel load. Set the EUT to max reporting rate of 2 sec by applying a speed of >23kn and a ROT of >20°/sec. Record VDL messages and check for used slots. Initiate the transmission of two 5 slot messages (msg 12 and msg 8) by the EUT. Record transmitted messages on both channels.

Required results

Check that EUT transmits the messages in correct order according to their priority (ITU-R M.1371 A/3.3.8.1 table 13).

Test details – Message priority handling			
Test item	Check	Remark	Result
Simulate a channel load of 90% on both channels, set reporting rate to 2 s Apply an BBM sentence with msg 8 and immediately following an ABM sentences with msg 12 to the PI port. File name is AIBBM_ABMM_17_5.sst Check transmissions by VDL analyser.			
Transmission order	Check that msg 12 is transmitted first because of higher priority	Message 12 transmitted first	ok

Date	Result	Status
16.01.2002	Not yet tested	

5.6 17.6 Slot reuse (link congestion)

(M.1371 A1/4.4)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit a Data Link Management message (msg 20) to the EUT with slot offset and increment to allocate slots for a base station. Assure that at test receiver location the signal level received from EUT exceeds the signal level received from test transmitter. Record transmitted messages and check frame structure. Set up additional test targets to simulate a VDL load of >90% until slot reuse by EUT is observed.

Required results

Check that the nominal reporting rate for Position Report msg 1 is achieved $\pm 10\%$ (allocating slots in selection interval SI) under link congestion conditions. Confirm that the slot occupied by the most distant station (within selection interval) is used by the slot reuse algorithm.

Check that a station is not subject to slot reuse more than once a frame. Check that slots allocated by a local base station are not subject to slot reuse.

Used test procedure:

In one frame 2 blocks of 60 targets in consecutive slot are transmitted. To avoid problems by system overloading every 10th slot is not used. One block is transmitted at the beginning of the frame and one at the middle.
The EUT is set to 2 s reporting rate. So the 1st and the 15th selection interval is covered by these transmissions of the same targets.



The gray area is covered by targets, the red area is the selection interval.

The targets are numbered from 1 to 60 and transmitted in the order of the IDs. They are devided into 2 groups:

- The even numbered targets have a low distance,
- the odd numbered targets have a high distance to the EUT

In addition 4 slots within the selection intervals are reserve by a message 20.

This test have to be run for at minimum 30 minutes to observe a sufficient number of slot allocations (every 3-8 min). The selected slots of selection interval 1 and 15 at time-out have to be checked.

Test details – Slot reuse			
Test item	Check	Remark	Result
This test can be done as described before.			
Reporting rate, use of selection interval	Check that the slots are selected within the SI	Transmission on VDL is continued PI output on high channel load is noncontinuous. Only a part of the VDM sentences is output <u>03.09.02 Retest:</u> Slots are selected within the SI	nok
Slot reuse	Check that only the slots of odd numbered targets are used	EUT has used also even (near) slots, should use only odd numbered (distant) slots. Only a few slot changes have been checked. Has to be checked more detailed <u>03.09.02 Retest:</u> No change, Slots of distant and near targets are selected: targeted lds of used slots: 32 22 27 26 33 25 26 20 <u>07.10.02 Retest:</u> 2 different tests done. In both tests also slots of near station are used. <u>11.10.02 Retest:</u> only slots of distant stations are used <u>107.10.02 Retest:</u> in the first test in many cases a initial timeout of 0 was selected, only 3...7 are allowed <u>11.10.02 Retest:</u> only time-out values of 3...7 are used	ok
	Check that a the slot of a target is not used twice in a frame		ok
Reserved Slot	Check that slots reserved by msg 20 are not used	Will be tested when slot reuse works correctly	Not tested

Date	Result	Status
03.09.02	See details	
10.09.02	Retest: ok	ok

5.7 17.7 Management of received regional operating settings

(7.4.1)

5.7.1 17.7.1 Test for replacement or erasure of dated or remote regional operating settings

(7.4.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Send a valid regional operating setting to the EUT by msg 22 with the regional operating area including the own position of the EUT. Consecutively send a total of seven (7) valid regional operation settings to EUT, using both msgs 22 and DSC telecommands, with regional operating areas not overlapping to the first and to each other. Perform the following in the order shown:

- a) Send a ninth msg 22 to the EUT with valid regional operating areas not overlapping with the previous eight regional operating areas.
- b) Step 1: Set own position of EUT into any of the regional operating areas defined by the second to the ninth telecommands sent to the EUT previously.

Step 2: Send a tenth telecommand to the EUT, with a regional operating area which partly overlaps the regional operating area to which the EUT was set by Step 1 but which does not include the own position of the EUT.

- c) Step 1: Move own position of EUT to a distance of more than 500 miles from all regions defined by previous commands.

Step 2: Consecutively set own position of EUT to within all regions defined by the previous telecommands.

Required results

After the initialization, the EUT should operate according to the regional operating settings defined by the first msg 22 sent.

- a) The EUT shall return to the default operating settings.
- b) Step 1: Check that the EUT changes its operating settings to those of that region which includes own position of the EUT.

Step 2: Check that the EUT reverts to the default operating settings.

Note: Since the regional operating settings to which the EUT was set in Step 1 shall be erased due to Step 2, and since there is no other regional operating setting due to their non-overlapping definition, the EUT shall return to default.

- c) Step 1: Check that the EUT operates with the default settings.

Step 2: Check that the EUT operates with the default settings.

05.06.02 Test details – Test of replacement or erasure of dated or remote regional operating settings			
Test item	Check	Remark	Result
The following check of area entries can be done by MKD or by request of ACA			

Send by ACA • 1 area including own position • 7 areas not overlapping, not including own position File name: AIACA_8_regions_17_7_1.sst	Check that area 1...7 are displayed on MKD	Only the area in use is displayed on MKD. We recommend to display all stored area settings <u>20.09.02 Retest:</u> all stored areas can be displayed on ECDIS and Radar	ok
	Check that all 8 areas are output on PI after request by sentence xxAIQ,ACA		ok
	Check that all areas are accepted	Areas with one corner on the corner of another area are not accepted <u>03.09.02 Retest:</u> Areas with adjacent corners are accepted	ok
a) Send a 9. msg 22 to the EUT	Check that the first area is deleted	The last area is deleted, the first area in use remains active (see clarifications to 1371, 2.54.) <u>03.09.02 Retest:</u> no change <u>20.09.02 Retest:</u> ok	ok
	Check that the EUT returns to the default operating settings	Does not return to default operating settings because first area is not deleted <u>03.09.02 Retest:</u> no change <u>20.09.02 Retest:</u> ok	
b) step 1: Set own position to one of the 7 areas	Check that the EUT changes its operating settings according to that region		Ok
b) step 2: Send an area overlapping the area of step 1 not including own position	Check the overlapped area is deleted and replaced by the new one		Ok
	Check that the EUT reverts to the default operating settings		Ok
d) <u>Erasure by distance:</u> Move own position of EUT to a distance of more than 500 miles from all regions defined by previous commands	Check that all areas are deleted		ok
<u>Check of erasure:</u> Set own position of EUT to within all regions defined by the previous telecommands.	Check that the EUT operates with the default settings because the areas are deleted		ok

Date	Result	Status
05.06.02	<u>Test ok except:</u> Areas with one corner on the corner of another area should be accepted.	

03.09.02	The general rule is that areas should not be accepted if the transitional zones of more than 2 areas are overlapping on one place. Retest: Area is now accepted	ok
03.09.02	Retest: The first area (in use) is not deleted but the next.	
20.09.02	Retest: ok	ok

5.7.2 17.7.2 Test of correct input via Presentation Interface or MKD

(7.4.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform the following tests in the following order:

- a) *Send msg 22 or a DSC telecommand with valid regional operating settings to the EUT with a regional operating area, which contains the current position of own station.*
- b) *Input a different, valid regional operating setting via the MKD.*
- c) *Send a different regional operating setting with a regional operating area which partly overlaps the regional operating area input via the MKD to the EUT via the Presentation Interface in the previous step, and which contains the present position of own station.*
- d) *Input the default operating settings via the MKD for the regional operating area, which was received by the previous command via the Presentation Interface.*
- e) *Send msg 22 or a DSC telecommand with a different regional operating setting to the EUT with a regional operating area, which contains current position of own station.*
- f) *Within two hours, after e), send a different regional operating setting to the EUT via Presentation Interface with a valid regional operating area overlapping the regional operating area sent to the EUT by msg 22 or a DSC telecommand.*

Required results

- a) *Confirm that the EUT uses the regional operating settings commanded by msg 22 or DSC telecommand.*
- b) *Step 1: Confirm that the regional operating settings of the previous msg 22 or DSC telecommand are displayed to the user on the MKD for editing.*

Step 2: Check, that the EUT allows the user to edit the displayed regional operating settings. Check, that the EUT does not accept incomplete or invalid regional operating settings. Check, that the EUT accepts a complete and valid regional operating setting.

Step 3: Check, that the EUT prompt the user to confirm the intended change of regional operating settings. Check, that the EUT allows the user to return to the editing menu or to abort the change of the regional operating settings.

Step 4: Check, that the EUT uses the regional operating settings input via the MKD.

- c) *Check, that the EUT uses the regional operating settings received via the Presentation Interface.*
- d) *Check, that the EUT accepts the default operating settings for the regional operating area received in c). Check, that the EUT uses the default operating settings.*

- e) *Check, that the EUT uses the regional operating settings commanded to it by msg 22 or DSC telecommand.*
- f) *Check, that the EUT does not use the regional operating setting commanded to it via the Presentation Interface.*

05.06.02 Test details – Correct input via Presentation Interface or MKD			
Test item	Check	Remark	Result
Send msg 22 with same settings as in 17.2 Channel management, set position of own ship into this area			
a) Use of settings	Confirm that the EUT uses the regional operating settings commanded by msg 22		Ok
b) MKD input	<u>Step 1:</u> Confirm that the regional operating settings of the previous msg 22 is displayed to the user on the MKD for editing.		ok
Entering new area by MKD	<u>Step 2:</u> Check, that the EUT allows the user to edit the displayed regional operating settings.		ok
	Check, that the EUT does not accept incomplete or invalid regional operating settings.	To large area: error message Incomplete message: empty field to be filled is displayed	ok
	Check, that the EUT accepts a complete and valid new regional operating setting.		ok
	<u>Step 3:</u> Check, that the EUT prompt the user to confirm the intended change of regional operating settings		Ok
Move position inside the new area	Check, that the EUT allows the user to return to the editing menu or to abort the change of the regional operating settings.		ok
	<u>Step 4:</u> Check, that the EUT uses the regional operating settings input via the MKD.		ok
c) New area by ACA	Check, that the EUT uses the regional operating settings received via PI		Ok
Input a new area via PI (ACA sentence) overlapping area of b), position inside			
d) Default settings via MKD	Check, that the EUT accepts the default operating settings for the regional operating area	Accepts channel 2086 and 1086, which are the default channels now, but does not accept 2087 and 2088 03.09.02 Retest: ok, channels 2087 and 2088 are accepted	ok
Input the default operating settings via the MKD for the regional operating area of c)	Check, that the EUT uses the default operating settings		ok

e) Area setting by VDL Send message 22 with a different regional operating setting to the EUT with a regional operating area, which contains current position of own station	Check, that the EUT uses the regional operating settings commanded to it by message 22		ok
f) Priority of VDL msg Rejection of a shipborne (ACA) regional operating setting when overlapping a setting from base station not older than 2 hours (Clarifications to 1371, 2.54 paragraph 4	Check, that the EUT does not accept the regional operating setting commanded to it via the Presentation Interface.		ok

Date	Result	Status
05.06.02	Test ok, acceptance of channel 2087 and 2088 has to be clarified	
03.09.02	Retest: channel 2087 and 2088 are accepted	ok

5.7.3 17.7.3 Test of addressed telecommand

(7.4.1)

Method of measurement

Set-up a standard test environment and operate EUT in autonomous mode. Perform the following tests in the following order:

- Send msg 22 or a DSC telecommand with valid regional operating settings, that are different from the default operating settings, to the EUT with a regional operating area, which contains the current position of own station.*
- Send an addressed msg 22 or an addressed DSC telecommand to the EUT with different regional operating settings than the previous command.*
- Move the EUT out of the regional operating area defined by the previous addressed telecommand into an area without regional operating settings.*

Required results

- Check, that the EUT uses the regional operating settings commanded to it in a).*
- Check, that the EUT uses the regional operating settings commanded to it in b).*
- Check, that the EUT reverts to default.*

Test details – Test of addressed telecommand			
Test item	Check	Remark	Result
a) Send msg 22 with valid regional operating settings, with a regional operating area, which contains the current position of own station.	Check, that the EUT uses the regional operating settings commanded to it		ok
b) Send an addressed DSC msg to the EUT with different regional operating settings	Check, that the EUT uses the regional operating settings commanded to it		ok
b) Send an addressed msg 22, addressed as ID 2 , to the EUT with different regional operating settings	Check, that the EUT uses the regional operating settings commanded to it		ok
c) Move the EUT out of the regional operating area defined by the previous addressed telecommand	Check, that the EUT reverts to default		ok

Date	Result	Status
05.06.02	Test ok	ok

5.7.4 17.7.4 Test for invalid regional operating areas (three regional operating areas with same corner)

(7.4.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform the following tests in the following order after completion of all other tests related to change of regional operating settings:

- Send three different valid regional operating settings with adjacent regional operating areas, their corners within eight miles of each other, to the EUT by msg 22 or DSC telecommand, Presentation Interface input and manual input via MKD. The current own position of the EUT shall be within the regional operating area of the third regional operating setting.
- Move current own position of the EUT consecutively to the regional operating areas of the first two valid regional operating settings.

Required test results

- Check, that the EUT uses the operating settings that were in use prior to receiving the third regional operating setting.
- Check, that the EUT consecutively uses the regional operating settings of the first two received regional operating areas.

05.06.2002	Test details – Test for invalid regional operating areas (three regional operating areas with same corner)
------------	--

Test item	Check	Remark	Result
a) Send three different valid regional with adjacent corners by ACA, File name: AIACA_region_17_7_4.sst Position inside 3 rd area.	Check, that the 3 rd area is refused and settings are not used		ok
b) Move own position to the first 2 areas	Check, that the EUT uses the operational settings of these areas		ok

Date	Result	Status
05.06.2002	Test ok	ok

5.7.5 17.7.5 Self-Certification of other conditions

(7.4.1)

The fulfilment of all other conditions of 7.4.1 shall be self-certified by the manufacturer.

Date	Result	Status
05.06.2002	Not requiered	ok

5.8 17.8 Continuation of autonomous mode reporting rate

(M.1371- 1 A2/3.3.6, IALA Technical clarifications to recommendation ITU- R M.1371- 1)

Method of test

When in the presence of an assigned mode command and in a transition zone, check that the EUT continues to report at the autonomous mode-reporting rate.

Required result

Ensure that the autonomous reporting rate is maintained.

05.06.02 Test details – Continuation of autonomous mode reporting rate			
Test item	Check	Remark	Result
Set the EUT into a transitional zone Send assignment commands msg 16 with an higher update rate to the EUT			
Rate assignment command in a transitional zone	Check that an rate assignment command is ignored in a transitional zone	Message type is changed to 2, reporting rate is not changed. Assigned update rate = 2 s <u>03.09.02 Retest:</u> ok, Msg 22 is ignored	ok
Slot assignment command in a transitional zone	Check that an slot assignment command is ignored in a transitional zone	The slot assignment command is not ignored <u>03.09.02 Retest:</u> ok, Msg 22 is ignored	

Date	Result	Status
05.06.02	Transmission is finished after assignment command with increment values of 4 or 5 according to the table in Technical clarifications to M.1371 (2.45).	
03.09.02	Retest: Msg 22 is ignored in a transitional zone	ok

6 18 Specific tests of Transport Layer

(7.5)

6.1 18.1 Addressed messages

(M.1371 A1/5.3.1)

6.1.1 18.1.1 Transmission

(M.1371 A1/5.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Set up a test target for scheduled transmissions on channel AIS1 only. Initiate the transmission of an addressed binary message (msg 6) by the EUT (test target as destination). Record transmitted messages on both channels.

Required results

Check that the EUT transmits msg 6 on channel AIS1. Repeat test for AIS2.

Basic test of addressed message is made in **2.1.4.1 “14.1.4.1 Transmit an addressed message”**

The test procedure is modified in that way that the test target is transmitting on both channels, and in case of channel = 0 it is checked that the transmission is always on that channel on that the target transponder was last received.

14.02.02 Test details - Addressed binary message 6			
Test item	Check	Remark	Result
Transmit an addressed binary message 6 by sending an ACA sentence to the PI. PI sentence: File AIABM_bin.sst: !AIABM,1,1,2,000005002,x,6,06P0test,0 Change transmission channel x according to test item Transmit some messages for each test item and check the used channel.			
Channel = 0 (autoselect)	Check tx on last received channel	Rx on A -> Tx on A Rx on B -> Tx on B	Ok
Channel = 1 (ch. A)	Check Tx on channel A		Ok
Channel = 2 (ch. B)	Check Tx on channel B		Ok
Channel = 3 (ch. A+B)	Check Tx on channel A+B	Transmission only on channel A 03.09.02 Retest: ok, Msg 6 is transmitted on channel A and B	ok

14.02.02 Test details - Addressed safety related message 12			
Test item	Check	Remark	Result
Transmit an addressed safety related message 12 by sending an ACA sentence to the PI. PI sentence: File AIABM_safety.sst: !AIABM,1,1,2,000005002,x,12,D5CD,0 (D5CD = „TEST“. Change transmission channel x according to test item Transmit some messages for each test item and check the used channel.			
Channel = 0 (autoselect)	Check tx on last received channel	Rx on A -> Tx on A Rx on B -> Tx on B	Ok
Channel = 1 (ch. A)	Check Tx on channel A		Ok
Channel = 2 (ch. B)	Check Tx on channel B		Ok
Channel = 3 (ch. A+B)	Check Tx on channel A+B	Transmission only on channel A <u>03.09.02 Retest:</u> ok, Msg 6 is transmitted on channel A and B	ok

14.02.02 Test details - 4 addressed binary messages 6			
Test item	Check	Remark	Result
Transmit an set of 4 addressed binary messages 6 by sending 4 ABM sentences to the PI. Transmission channel is 1. PI sentence: File AIABM_4_bin.sst: A response is automatically transmitted by the addressed transponder ID 5002			
VDO output of EUT	Check that the 4 messages are transmitted directly without waiting for ackn.		ok
Channel	Check Tx on channel A and B as indicated in the ABM sentence	3 and 1 on channel A, 0 and 2 on channel B	Ok
Message sequence number	Check that sequence number in VDL msg = Sequential message identifier of ABM sentences		Ok
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check msg on VDL analyser		ok
TX of ackn. msg 7 (VDO)	Check that ackn msg 7 is transmitted by addressed transponder (VDO)		ok
RX of msg 7 (VDM)	Check that the ackn. msg 7 is received by EUT (VDM)		ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	\$AIABK,000003005,A,6,1,0 \$AIABK,000003005,A,6,3,0 \$AIABK,000003005,A,6,0,0 \$AIABK,000003005,A,6,2,0 2 message have not been received	ok

		ABM order: 3,0,1,2 VDO order: 3,1,0,2 TX order: 2,1,3,0 <u>03.09.02 Retest:</u> ABM order: 3,0,1,2 VDO order: 0,1,2,3 Tx order: 0,1,2,3	Acc.
--	--	---	------

Date	Result	Status
28.06.02	Test ok, but the order of ABM sentences, VDO outputs and Transmissions is different	
03.09.02	Retest: Transmission (VDO, Tx on VDL) are in a different order than ABM sentences	Acc.

6.1.2 18.1.2 Acknowledgement

Method of measurement

Operate standard test environment and EUT in autonomous mode. Apply up to 4 addressed binary messages (msg 6; EUT as destination) to the VDL on Channel AIS 1. Record transmitted messages on both channels. Repeat with AIS2.

Required results

Confirm that EUT transmits a binary acknowledge message (msg 7) with the appropriate sequence numbers within 4 sec on the channel where the msg 6 was received. Confirm that EUT transmit the result with an appropriate message to PI.

A basic receive test is made in 2.1.4.2 14.1.4.2 Receive addressed message.

The content fields of the transmitted acknowledgement should be checked in 4.7.2 16.7.2 Transmitted messages.

Test details - Acknowledgement of binary message 6			
Test item	Check	Remark	Result
Transmit 4 addressed binary message with consecutive Sequential message identifiers from other Transponder			
File name: AIABM_4_bin.sst			
Rx of messages (VDM)	Check that the messages are received by VDM output on PI of EUT		ok
Transmission of acknowledgement msg 7	Check transmission of ackn. by VDO output of EUT		ok
Sequence numbers	Check that sequence number in ackn = sequence number of Rx message	Sequence number in ackn. is the number of last received msg 6. If e.g. 3 msg 6 received (number 3 last) and then 3 ack. Transmitted all ackn have the sequence number 3. 28.06.02 Retest: error still exists <u>03.09.02 Retest: sequence numbers ok</u>	ok
Ackn. channel	Check that ackn Tx channel = Rx channel	Cannot be checked because sequence number is not ok <u>03.09.02 Retest: Ackn. channels ok</u>	ok
RX of ackn. msg 7	Check that the ackn. msg are received by Transmitter (VDM/ABK)		ok

Date	Result	Status
26.06.02	Sequence number in ackn. is not correct (see details)	
03.09.02	Retest: Sequence numbers ok now	ok

6.1.3 18.1.3 Transmission Retry

(M.1371 A1/5.3.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of up to 4 addressed binary messages by the EUT which will not be acknowledged (i.e. destination not available). Record transmitted messages.

Required results

Confirm that EUT retries the transmission up to 3 times (configurable) for each addressed binary message. Confirm that the time between transmissions is 4 to 8 sec. Confirm that EUT transmit the overall result with an appropriate message to PI.

Basic test of addressed message is made in **2.1.4.1 “14.1.4.1 Transmit an addressed message”**

Test details - Addressed binary message 6			
Test item	Check	Remark	Result
	Transmit an addressed binary message 6 by sending an ABM sentence to the PI. PI sentence: File AIABM_bin.sst: The message is addressed to a not available transponder. So no acknowledgement is received. Record the VDO output of VDE with time stamp.		
VDO output of EUT	Check the transmission by VDO		ok
Number of repetitions	Note and check the number of repetitions	4 transmissions, 3 repetitions	ok
Repetition timing	Record the repetition timing. Note the time between repetitions and check that it is 4..8 s	Time to ABM sentence: Msg 6 at 3, 9, 15, 21s ABK at 25 s	ok
ABK sentence	Note and check the ABK sentence Confirm the type = 1 (broadcast but no acknowledgement)	Type is 1	ok
Message sequence numbers	Check message sequence numbers of transmissions and ABK	\$AIABK,000001005,A,6,2,1	ok

Test details - Addressed binary message 12			
Test item	Check	Remark	Result
Transmit an addressed safety related message 12 by sending an ABM sentence to the PI. PI sentence: File AIABM_safety.sst: The message is addressed to a not available transponder. So no acknowledgement is received. Record the VDO output of VDE with time stamp.			
VDO output of EUT	Check the transmission by VDO		ok
Number of repetitions	Note the number of repetitions	4 transmissions, 3 repetitions	ok
Repetition timing	Record the repetition timing. Note the time between repetitions and check that it is 4...8 s	Time to ABM sentence: Msg 12 at 4, 9, 16, 22 s ABK at 26 s	ok
ABK sentence	Note and check the ABK sentence Confirm the type = 1 (broadcast but no acknowledgement)	Type is 1	ok
Message sequence numbers	Check message sequence numbers of transmissions and ABK	\$AIABK,000001005,A,12,2,1	ok

Date	Result	Status
28.06.02	Test ok	ok

6.2 18.1.4 Acknowledgement of Addressed safety related messages

Repeat test under 18.1.2 with addressed safety related message.

The contents of the acknowledgement should be entered in test 4.7.2 16.7.2
 Transmitted messages

28.06.02 Test details - Acknowledgement of safety related text message 12			
Test item	Check	Remark	Result
Transmit 4 safety related text messages 12 with consecutive sequential message identifiers from other Transponder			
Rx of messages (VDM)	Check that the messages are received by VDM output on PI of EUT		ok
Transmission of acknowledgement msg 13	Check transmission of ackn. by VDO output of EUT		ok
Sequence numbers	Check that sequence number in ackn = sequence number of Rx message	Sequence number in ackn. is the number of last received msg 12. <u>03.09.02 Retest:</u> sequence numbers ok	Ok
Ackn. channel	Check that ackn Tx channel = Rx channel	Cannot be checked because sequence number is not ok <u>03.09.02 Retest:</u> Ackn channels	ok
RX of ackn. msg 13	Check that the ackn. msg are received by Transmitter (VDM/ABK)		ok

Date	Result	Status
28.06.02	Sequence number in ackn. is the number of last received msg 12.	
03.09.02	Retest: Sequnce nuber in ackn. is ok	ok

6.3 18.2 (M.1371 A1/5.3) Interrogation responses

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply an interrogation message (msg 15; EUT as destination) to the VDL according to message table 7 for responses with msg 5 and slot offset set to defined value on channel AIS 1. Record transmitted messages on both channels.

Required results

Check that EUT transmits the appropriate interrogation response message as requested on channel AIS1. Repeat test for AIS2.

A simple operational test is made in 2.1.3.2 14.1.3.2 Interrogation response

The check of the contents of the transmitted message should be entered in 4.7.2
 16.7.2 Transmitted messages

The test cases "case 1" to "case 4" are the four cases as defined in ITU-R M1371, "3.3.8.2.11 Message 15 Interrogation"

The requests have to be made by the VDL generator, because a mobile transponder cannot generate requests with slot offset.

Test details - case 1- Interrogation of msg 5, Ch 1			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 5 with given slot offset A response shall automatically be transmitted by the EUT Request is transmitted on channel 1			
RX of request by EUT	Check that the request message is received by the EUT (VDM)	Interrogations are not received <u>03.09.02 Retest:</u> Interrogation is received.	ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		ok
Response on VDL	Check the response on VDL with the VDL analyser, note slot offset	Offset = 50	ok
Response channel	Check that the response is transmitted on the request channel		ok

Test details - case 1 - Interrogation of msg 5, Ch 2			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 5 with given slot offset A response shall automatically be transmitted by the EUT Request is transmitted on channel 2			
RX of request by EUT	Check that the request message is received by the EUT (VDM)	Interrogation is received.	ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		ok
Response on VDL	Check the response on VDL with the VDL analyser, note slot offset	Offset = 50	ok
Response channel	Check that the response is transmitted on the request channel		ok

06.09.02 Test details - case 2 - Interrogation of msg 3 and 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3 and 5 from EUT with given slot offsets A response shall automatically be transmitted by the RUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response 1 (VDO)	Check that response is transmitted by EUT (VDO)		Ok
Response 1 on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset 1 defined in the request is used		Ok
TX of response 2 (VDO)	Check that response is transmitted by EUT (VDO)		Ok
Response 2 on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset 2 defined in the request is used		Ok

06.09.02 Test details - case 3 Interrogation of msg 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3 from other AIS and msg 5 from EUT with given slot offsets A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response msg 5 is transmitted by EUT (VDO)		Ok
Response on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset defined in the request 2.1 is used		Ok

Test details - case 4 - Interrogation of msg 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3,5 from other AIS and msg 5 from EUT with given slot offsets			
A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response msg 5 is transmitted by EUT (VDO)		Ok
Response on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset defined in the request 2.1 is used		ok

Date	Result	Status
06.09.02	Test ok	ok

6.4 18.3 Broadcast messages

(M.1371 A1/5.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of 5 binary broadcast messages (msg 8) by the EUT. Record transmitted messages on both channels.

Required results

Check that EUT transmits the msg 8 messages on channels A and B alternating.

Test of multislots broadcast messages is done in 2.2 14.2 Multiple slot messages

The check of message contents should be entered in 4.7.2 16.7.2 Transmitted messages

19.03.2002 Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit 5 binary broadcast messages 8 by sending 5 BBM sentences to the PI. PI sentence: File AIBBM_bin_5.sst: !AIBBM,1,1,[7;8;9;0;1],0,8,06P0test1,0 AIS channel for broadcast is 0: autoselect The file contains 5 BBM sentences with consecutive sequential message identifiers.			
VDO output of EUT	Check the VDO output on PI		ok
Channel	Check Tx alternating channels A and B	Transmission on Channel B, in VDO channel A <u>28.08.02 Retest:</u> All transmissions on channel B, Should be alternating channels A and B <u>02.10.02 Retest:</u> with 4 s delay between the BBM sentences it is ok, channels are alternating VDO output channel is ok now, according to Tx channel.	ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	AIABK,,,8,7,3 AIABK,,,8,1,3 AIABK,,,8,8,3 AIABK,,,8,9,3 AIABK,,,8,0,3	ok
Message sequence number	Check that message sequence number in ABK = Sequential message identifier of BBM sentence	Other order of sequence numbers than in AIBBM	ok
MMSI	Check Transmitter MMSI		ok

19.03.02 Test details - Safety related broadcast message 14			
Test item	Check	Remark	Result
Transmit 5 safety related broadcast messages 14 by sending 5 BBM sentences to the PI. PI sentence: File AIBBM_safety_5.sst: !AIBBM,1,1,[6;7;8;9;0],0,8,D5CDi,0 AIS channel for broadcast is 0: autoselect The file contains 5 BBM sentences with consecutive sequential message identifiers.			
VDO output of EUT	Check the VDO output on PI	Test5,test1, test3, test2,test4 Order of transmission is different to the order of BBM input	ok

Channel	Check Tx alternating channels A and B	All transmissions on the same channel, not alternating 28.08.02 Retest: See binary msg 8 <u>02.10.02 Retest:</u> with 4 s delay between the BBM sentences it is ok, channels are alternating	ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	AIABK,,,14,0,3 AIABK,,,14,6,3 AIABK,,,14,8,3 AIABK,,,14,7,3 AIABK,,,14,9,3	Ok
Message sequence number	Check that message sequence number in ABK = Sequential message identifier of BBM sentence	Message sequence numbers are according to the transmitted messages	Ok
MMSI	Check Transmitter MMSI		Ok

Date	Result	Status
19.03.02	Not alternating channel of transmission	
28.08.02	Retest: still not alternating, but channel in VDO output is ok now	
02.10.02	<u>Retest:</u> with 4 s delay between the BBM sentences it is ok, channels are alternating	ok

7 19 Specific Presentation Interface Tests

(7.6)

7.1 19.1 General

The EUT (Equipment Under Test) including all necessary test equipment shall be set-up and checked that it is operational before testing commences.

The manufacturer shall provide sufficient technical documentation of the EUT and its interfaces in particular.

The following tests shall be carried out under "Normal" environmental conditions as defined in IEC 60945.

Where appropriate, tests against different clauses of this and other chapters may be carried out simultaneously.

Test details - General interface tests			
Test item	Check	Remark	Result
Checksum	Check that the output sentences include a checksum		Ok
	Check that the checksum is correct		Ok

Date	Result	Status
01.07.02	Test ok	ok

7.2 19.2 Check of the manufacturer's documentation

(7.6.1)

The following checks for formal consistency and compliance shall be made for all ports

- approved sentences against IEC 61162
- proprietary sentences against IEC 61162
- usage of fields as required for different functions including provided default values or settings
- transmission intervals against IEC 61162
- configuration of hardware and software if this is relevant to the interface performance and port selection

The following checks for compliance with IEC 61162

- *output drive capability*
- *load on the line of inputs*
- *electrical isolation of input circuits*

14.02.02 Test details - Check of manufacturers documentation			
Test item	Check	Remark	Result
Approved sentences	Check approved sentences against IEC 61162		
Proprietary sentences	Check proprietary sentences against IEC 61162		
Usage of Fields	Check usage of fields		
Transmission intervals	Check transmission intervals		
Hardware configuration	Check hardware configuration		
Output drive capability	Check output drive capability		
Input load	Check input load		
Electrical Isolation	Check electrical isolation		

Date	Result	Status
16.01.2002	Not yet tested	

7.3 19.3 Electrical test

(7.6.1)

Method of test

Input / Output Ports configured as IEC 61162-1 or IEC 61162-2 shall be tested according to the relevant standard with regard to minimum and maximum voltage and current at the input terminals.

Required results

The interfaces shall fulfil the requirements of the relevant standards.

14.02.02		Test details - Electrical test of inputs		
Test item	Check	Remark	Result	
Minimum voltage	Check that input works with minimum input voltage			
Maximum voltage	Check that input is not damaged by maximum input voltage			
Input current	Check the input current against the IEC 61162-1 or IEC 61162-2			

Date	Result	Status
16.01.2002	Not yet tested	ok

7.4 19.4 Test of input sensor interface performance

(7.6.2)

Method of measurement

Connect all inputs and outputs of the EUT as specified by the manufacturer and simulate VDL-messages using test system. Operate inputs with simulated sensor data that are both the relevant data and additional data with formatters not provided for the relevant input. Each sensor input shall be loaded with 70 to 80 percent of the interface's capacity. Record the VDL and output from the EUT's high speed port.

Required results

Verify that the output on the VDL and the presentation interface agree with simulated input and all output data is transmitted without loss or additional delay

14.02.02 Test details - Test of input sensor interface performance			
Test item	Check	Remark	Result
Load all 3 sensor inputs with 70-80 % of the interface's capacity			
1 Sensor input at 4800 with position data			
1 Sensor input at 4800 with log data			
1 Sensor input at 38400 with heading and ROT data			
VDL contents	Check that the VDL contents agree with in input data		Ok
VDO output	Check that VDO outputs on both high speed ports agree with the sensor input data		Ok
Loss of data	Check that VDL messages are transmitted without loss of sensor data		Ok
	Check that output data at VDO output are sent without loss of sensor data		Ok
Delay of data	Check that there is no delay from sensor input change to VDL messages		Ok
	Check that there is no delay from sensor input change to VDO output		Ok

Date	Result	Status
09.07.02	Test ok, but heading input could not be set to 38400 Baud, Has to be repeated when setting is possible <u>06.09.02 Retest:</u> Has been repeated with 38400 baud, ok Delay between changing data and change on VDL is about 5 s constantly (reporting rate 2 s)	ok

7.5 19.5 Test of sensor input

(7.6.2)

Method of measurement

Set-up standard test environment and operate inputs with simulated sensor data. Record VDL output.

- a) simulate sensor information for position, speed, heading, ROT
- b) simulate invalid and unavailable data

Required results

- a) Verify that the recorded VDL message contents agree with the simulated sensor information.
- b) Verify that affected data is set to default values.

Switch off internal GPS to get default values in case of invalid sensor data. The intention of this test is to check the conversion of sensor input data to the VDL messages, VDO output and MKD display including the test, if invalid and unavailable data are recognised.

Fall back behaviour at sensor fail is checked in another test (see 2.9.3 - 14.9.3 Monitoring of sensor data).

For message content of VDL messages 1, 2, 3 (position reports) no special test is required. Please enter the results of this test in that test table (go to 2.3.1 "Information content of msg 1" at the end of this test

7.5.1 GLL sentence

Test details – GLL position input			
Test item	Check	Remark	Result
Apply simulated GLL sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst			
Set status/mode to A,A Check on VDL	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
Check VDO output on PI	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
Check Display on MKD	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
Set status/mode to A,D (differential mode)	Check PA-Flag = 1 on VDL		Ok
	Check PA-Flag = 1 in VDO		Ok
	Check display of differential mode on MKD	Indication of DGNSS in dialog "Transponder state"	Ok
Set <u>status/mode to V.N</u> (invalid data) Check on VDL	Check latitude = 91°		Ok
	Check longitude = 181°		Ok

	Check PA-Flag = 0		Ok
Check on VDO output of PI	Check latitude = 91°		Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok
Check display on MKD	Check latitude = "----"	Empty field	Ok
	Check longitude = "----"	Empty field	Ok
	Check PA-Flag = 0	Indication "invalid" in dialog "Transponder state"	ok
Set status/mode to A,A Change for latitude the number of digits after decimal point from 2 to 6	Check that latitude on VDL is correct for all numbers	If more than 4 digits after decimal point in input sentence then all lower digits as minutes are set to 0 06.09.02 Retest: ok	ok
Set status/mode to A,A Change for longitude the number of digits after decimal point from 2 to 6	Check that longitude on VDL is correct for all numbers	Same as latitude 06.09.02 Retest: ok	ok
No GBS sentence applied	Check that RAIM-Flag = 0		ok
Note:		GLL sentence is only accepted after DTM sentence indicating W84	ok

7.5.2 GGA sentence

Test details - GGA GPS position input			
Test item	Check	Remark	Result
Apply simulated GGA sentence to the sensor input			
File name is ais02_gga_vtg_hdt_rot.sst			
Set <u>Mode = 1 (autonomous)</u> Check on VDL	Check latitude	Note: not implemented (not required)	ok
	Check longitude		
	Check PA-Flag = 0		
Set <u>mode = 2 (differential)</u> Check on VDL	Short check data ok		
	Check PA-Flag = 1 on VDL		
Set <u>mode = 3 (GPS-PPS)</u> Check on VDL	Short check data ok		
	Check PA-Flag = 0 on VDL		
Set <u>mode =4 (RTK fixed)</u> Check on VDL	Short check data ok		
	Check PA-Flag = 1 on VDL		
Set <u>mode =5 (RTK float)</u> Check on VDL	Short check data ok		
	Check PA-Flag = 1 on VDL		
Set <u>mode = 6 (dead reck.)</u> Check on VDL	Short check default data		
Set <u>mode = 7 (manual)</u> Check on VDL	Short check default data		
Set <u>mode = 8 (simulated)</u> Check on VDL	Short check default data		
Set <u>mode = 0 (no fix)</u> Check on VDL	Check latitude = 91°		
	Check longitude = 181°		
	Check PA-Flag = 0		

7.5.3 GNS sentence

Test details – GNS satellite position input			
Test item	Check	Remark	Result
Apply simulated GNS sentence to the sensor input, check on VDL			
File name is ais03_gns_vtg_hdt_rot.sst			
Set Mode = AA (autonomous GPS/GLONASS) Check on VDL	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
	Check RAIM-Flag = 0		Ok
Set Mode = AN (autonomous GPS/no GLONASS)	Short check data ok		Ok
	Check PA-Flag = 0 on VDL		Ok
Set Mode = NA (no GPS/autonomous GLONASS)	Short check data ok		Ok
	Check PA-Flag = 0 on VDL		Ok
Set Mode = DA (differential GPS/ autonomous GLONASS)	Short check data ok		Ok
	Check PA-Flag = 1 on VDL	PA-flag = 0 06.09.02 Retest: ok	ok
Set Mode = DD (differential GPS/ differential GLONASS)	Short check data ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = DN (differential GPS/ no GLONASS)	Short check data ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = AD (autonomous GPS/ differential GLONASS)	Short check data ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = ND (no GPS/ differential GLONASS)	Short check data ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = NN (no GPS/ no GLONASS)	Check latitude = 91°		Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok
Note:		GNS sentence is only accepted after DTM sentence indicating W84	ok

7.5.4 RMC sentence

Test details – RMC position input			
Test item	Check	Remark	Result
Apply simulated RMC sentence to the sensor input			
File name is ais04_rmc_hdt_rot.sst			
Set <u>status/mode to A,A</u> Check on VDL	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
	Check SOG	= default 06.09.02 Retest: ok	ok
	Check COG (required)	= default 06.09.02 Retest: COG is now used, but the magnetic variation fields is added to the COG input 16.09.02 Retest: COG ok	ok
Set <u>status/mode to A,D</u> (differential mode)	Short check of valid data		Ok
	Check PA-Flag = 1 in VDO		Ok
Set <u>status/mode to V,N</u> (invalid data) Check on VDL	Check latitude = 91°		Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok
	Check SOG = 102.3		Ok
	Check COG = 360°		Ok
Set <u>status/mode to V,A</u> (invalid data) Check on VDL (Test if also status is evaluated)	Check latitude = 91°	Data from RMC in use 06.09.02 Retest: ok	ok
	Check longitude = 181°	Data from RMC in use 06.09.02 Retest: ok	Ok
	Check PA-Flag = 0	Data from RMC in use 06.09.02 Retest: ok	Ok
	Check SOG = 102.3	Could not be tested (default in any case) 06.09.02 Retest: ok	ok
	Check COG = 360°		ok

7.5.5 DTM sentence

01.07.02 Test details – DTM reference datum			
Test item	Check	Remark	Result
Apply simulated position sentences with DTM. Start with datum not WGS 84, change to WGS 84 and back to not WGS 84			
Apply <u>GLL</u> sentence with DTM File name: ais1d_gll_dtm_vtg_hdt_rot.sst Datum = not WGS 84	Check on VDL that data are default data		Ok
Set Datum = WGS 84	Check that data are valid		Ok
Set Datum = not WGS 84	Check that data are changed to default	After about 30 s	Ok
Apply <u>GGA</u> sentence with DTM File name: ais2d_gga_dtm_vtg_hdt_rot.sst Datum = not WGS 84	Check on VDL that data are default data	GGA sentence not implemented	ok
Set Datum = WGS 84	Check that data are valid		
Set Datum = not WGS 84	Check that data are changed to default		
Set Datum = WGS 84	To get valid data for further tests		ok

7.5.6 GBS sentence

01.07.02 Test details – GBS input			
Test item	Check	Remark	Result
Apply simulated gll sentence with GBS sentence to the sensor input File name is ais01g_gll_vtg_gbs_hdt_rot.sst			
	Check that RAIM-Flag = 1	RAIM-Flag = 0 06.09.02 Retest: RAIM flag =1	ok

7.5.7 VTG sentence

Test details – VTG speed input			
Test item	Check	Remark	Result
Apply simulated VTG sentence to the sensor input			
File name is ais01_gll_vtg_hdt_rot.sst			
Set mode to A (autonomous)	Check SOG		Ok
Check on VDL	Check COG		Ok
Check VDO output on PI	Check SOG		Ok
	Check COG		Ok
Check Display on MKD	Check SOG		Ok
	Check COG		Ok
Set mode to D (differential)	Short check SOG/COG ok		Ok
Set mode to N (invalid)	Check SOG = 102.3 (default)		Ok
	Check COG = 360 (default)		Ok
Check VDO output on PI	Check SOG = 102.3 (default)		Ok
	Check COG = 360 (default)		Ok
Check Display on MKD	Check SOG = “----“		Ok
	Check COG = “----“		Ok
Set mode to E (estimated)	Short check SOG/COG default		Ok
Set mode to M (manual)	Short check SOG/COG default		Ok
Set mode to S (simulated)	Short check SOG/COG default		Ok
Delete SOG-N field and add SOG K-Field (speed in km/h)	Check SOG value in VDL It has to be converted into knots or set to default		Ok

7.5.8 VBW sentence

01.07.02 Test details – VBW log input with VTG sentence valid			
Test item	Check	Remark	Result
Apply simulated VBW sentence to the sensor input			
File name is ais06_gll_vtg_vbw_hdt_rot.sst			
<u>Status of bottom track: A</u> (valid) Ahead and across speed available. Check on VDL	Check that SOG = resultant of ahead and across speed COG = calculated from SOG vector and heading	COG is calculated from VBW and heading, but incorrectly (see note) <u>06.09.02 Retest:</u> ok	ok
Check on VDO output of PI	Check SOG = VDL SOG value		Ok
	Check COG = VDL COG value		ok
Check on MKD	Check SOG = VDL SOG value		Ok
	Check COG = VDL COG value		ok
<u>Status of bottom track: V</u> (invalid) Ahead and across speed not empty. Water speed valid ! Check on VDL	SOG from VTG		Ok
	COG from VTG		Ok
Check on VDO output of PI	SOG from VTG		Ok
	COG from VTG		Ok
Check on MKD	SOG from VTG		Ok
	COG from VTG		Ok
<u>Status of bottom track: A</u> (valid) Ahead available, across speed empty (e.g. single axis log)	SOG from VTG		Ok
	COG from VTG		Ok
<u>Status of bottom track: A</u> (valid) Ahead and across speed available, Heading invalid	SOG from VTG		Ok
	COG from VTG		Ok
Note:		VTG and VBW data are used alternately even if VTG is invalid. Probably the latest sensor input is used <u>06.09.02 Retest:</u> ok	ok
Note:		The VBW is only used if DTM with W84 is available. <u>06.09.02 Retest:</u> no change <u>16.09.02 Interpretation:</u> It is ok not to use the VBW because speed source has to be switched to internal GPS if position source is switched to internal GPS	ok

Note: The amount of angle between COG and heading is wrong: e.g VBW= 12.0,2.0:
angle should be 9.5° ($\arctan 2/12$), but is 16°

The sign of angle is also wrong: at positive across direction (to starboard) the angle has
to be positive but is negative.

Test details – VBW log input, no VTG			
Test item	Check	Remark	Result
Apply simulated VBW sentence to the sensor input, GPS disconnected, No VTG speed available File name is ais08_gll_vbw_hdt_rot.sst			
<u>Status of bottom track: A</u> (valid) Ahead and across speed available. Check on VDL	Check that SOG = resultant of ahead and across speed	The VBW is only used if DTM with W84 is available. <u>06.09.02 Retest:</u> no change <u>16.09.02 Retest:</u> no change. Reason maybe switching to internal Position source.	acc
	COG = calculated from SOG vector and heading	COG is calculated from VBW and heading, but incorrectly (see note) <u>06.09.02 Retest:</u> ok	ok
Check on VDO output of PI	Check SOG = VDL SOG value		ok
	Check COG = calculated from SOG vector and heading	COG is calculated from VBW and heading, but incorrectly (see note)	ok
Check on MKD	Check SOG = VDL SOG value		ok
	Check COG = calculated from SOG vector and heading	COG is calculated from VBW and heading, but incorrectly (see note)	ok
<u>Status of bottom track: V</u> (invalid) Ahead and across speed not empty. Water speed valid ! Check on VDL	SOG = default		Ok
	COG = default		Ok
Check on VDO output of PI	SOG = default		Ok
	COG = default		Ok
Check on MKD	SOG = default		Ok
	COG = default		Ok
<u>Status of bottom track: A</u> (valid) Ahead available, across speed empty (e.g. single axis log)	SOG = default	SOG = ahead speed	Acc.
	COG = default		Ok
<u>Status of bottom track: A</u> (valid) Ahead and across speed available, Heading invalid	SOG from VBW or default	SOG calculated from VBW	ok
	COG = default		ok

7.5.9 OSD sentence

Test details – OSD own ship data input			
Test item	Check	Remark	Result
Apply simulated OSD sentence to the sensor input			
File name is ais07_osd.sst			
Heading status = A (valid)	Check SOG from OSD	Not implemented	ok
Speed reference = B (bottom)	Check COG from OSD		
Check on VDL	Check heading from OSD		
Check VDO output on PI	Check SOG from OSD		
	Check COG from OSD		
	Check heading from OSD		
Check Display on MKD	Check SOG from OSD		
	Check COG from OSD		
	Check heading from OSD		
Set <u>speed reference to P</u> (Positioning system)	Check SOG and COG from OSD		
Set <u>speed reference to R</u> Radar tracking	Check SOG and COG from OSD		
Set <u>speed reference to W</u> (Water speed)	Check SOG = default		
	Check COG = default		
	Check heading from OSD		
Set <u>speed reference to M</u> (Manual)	Check SOG = default		
	Check COG = default		
	Check heading from OSD		
Set <u>speed reference to P</u> (Positioning system)	Check SOG and COG = default		
Set speed reference to P (Positioning system)	Check SOG from OSD		
	Check COG from OSD		
	Check heading = default		
Change speed reference from N (kn) to K (km/h)	Check SOG value in VDL It has to be converted into knots		

7.5.10 HDT sentence

02.07.02		Test details – HDT heading input		
Test item	Check	Remark	Result	
Apply simulated HDT sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst				
Heading value = 359.0	Check heading on VDL		Ok	
	Check heading on VDO		Ok	
	Check heading in MKD		Ok	
Change value to 359.9	Check that heading on VDL = 359 or 0, not 360		Ok	
Delete heading value (empty field)	Check that heading = default on VDL		Ok	
	Check that heading = default on VDO		Ok	
	Check that heading = default on MKD		Ok	

7.5.11 ROT sentence

Test details – ROT Rate of Turn input			
Test item	Check	Remark	Result
Apply simulated ROT sentence to the sensor input, Talker = TI File name is ais01_gll_vtg_hdt_rot.sst			
ROT status = A (valid) ROT value = 0.0 degr./min	Check ROT on VDL		Ok
	Check ROT on VDO		Ok
	Check ROT on MKD	Display only 2 digits	Acc
Change rate of turn to different values according to the check column and check the VDL value. The VDL value has to be the nearest value according the conversion formula (see conversion table)	10 converted to 10.0 (15)		Ok
	20 converted to 19.7 (21)		Ok
	60 converted to 61.1 (37)		Ok
	180 converted to 177.2 or 182.8 (63/64)		Ok
	360 converted to 361.6 (90)		Ok
	720 converted to 708.7 (126)		Ok
	-20 converted to 19.7 (-21)		Ok
	-720 converted to -708.7 (-126)		Ok
Set ROT status = V (invalid)	Check that ROT = default on VDL (default = -731.4 = -128)		Ok
	Check that ROT = default on VDO		Ok
	Check that ROT = default on MKD		Ok
ROT status = A (valid) ROT value = 0.0 degr./min Set Talker = HE	Check ROT = 0.0 on VDL		Ok
	Check ROT = 0.0 on VDO		Ok
	Check ROT = 0.0 on MKD		Ok
Change rate of turn to different values according to the check column and check the VDL value. Values have to be according to 6.10.3.6	9 converted to 0		Ok
	11 converted to 720		Ok
	- 9 converted to 0		Ok
	-11 converted to -720		Ok

7.5.12 Additional Tests

Test details – Additional Tests			
Test item	Check	Remark	Result
Apply simulated sensor sentences to the sensor input			
File name is ais01_gll_vtg_hdt_rot.sst			
Send sentences without checksum, check on VDL	Check position		Ok
	Check SOG/COG		Ok
	Check heading		Ok
	Check ROT		Ok
Send sentences with false checksum, check on VDL	Check position = default		Ok
	Check SOG/COG = default		Ok
	Check heading = default		Ok
	Check ROT = default		Ok
Back to valid checksum Set baud rate of simulator to 38400 Bd, The purpose is to check if input survives wrong baudrate.	Check position = default		Ok
	Check SOG/COG = default		Ok
	Check heading = default		Ok
	Check ROT = default		Ok
Set baud rate of simulator and sensor input also to 38 400, check on VDL	Check position	Value = default 06.09.02 Retest: ok	ok
	Check SOG/COG	Value = default 06.09.02 Retest: ok	ok
	Check heading	Value = default 06.09.02 Retest: ok	ok
	Check ROT	Value = default 06.09.02 Retest: ok	ok
Note:		This may be a problem of interface configuration handling or of the sensor input problem after switch on	

7.5.13 Check of different inputs

Test details – Different inputs			
Test item	Check	Remark	Result
Apply simulated sensor sentences to the sensor inputs File name of 1 st part is ais01_gll_vtg_hdt_rot.sst			
Connect simulator to sensor input 2. Change configuration according to the used input	Check position Check SOG/COG Check heading Check ROT		Ok Ok Ok Ok
Connect simulator to sensor input 3. Change configuration according to the used input	Check position = default Check SOG/COG = default Check heading = default Check ROT = default		Ok Ok Ok Ok
• Connect simulator output 1 to sensor input 1 and apply GLL and VTG. File name is ais10_gll_vtg.sst • Connect simulator output 2 to sensor input 2 and apply VBW . , File name is ais11_vbw.sst • Connect simulator output 3 to sensor input 3 and apply HDT and ROT. File name is ais12_hdt_rot.sst	Check position Check SOG and COG Check heading Check ROT		Ok Ok Ok Ok

7.5.14 Sensor sentences overview

Supported sentences overview					
09.07.02	Sentence	Description	Required	Supported	Result
		This list is derived from the results of the above tests of the single sentences for overview, not an additional test			
	GLL	Geographical Latitude Longitude	required	Yes	ok
	GGA		optional	No	----
	GNS		required	Yes	ok
	RMC		required (COG)	Yes	ok
	DTM		required	Yes	Ok
	GBS		required	Yes	ok
	VTG	Velocity True Ground	optional	Yes	Ok
	VBW	Velocity Bottom Water	required	Yes	ok
	OSD	Own Ship Data	optional	No	----
	HDT	Heading	required	Yes	Ok
	ROT	Rate of Turn	required	Yes	Ok

Date	Result	Status
09.07.02	Some failures, see details	
20.09.02	Retests: all sentences ok	ok

7.6 19.6 Test of high speed output

(7.6.3)

Method of measurement

Set up standard test environment and simulate VDL-position reports using test system. Record output from the EUT high speed port (see table 11).

Required results

Verify that the recorded message contents agree with the simulated VDL contents (VDM) and own transmitted data (VDO) and in accordance with the sentence specifications of IEC 61162-1.

Date	Format	Result	Status
09.07.02	VDM	See test details below	Ok
09.07.02	VDO	See test details below	Ok
	ALR	Test is done in 2.9 Alarms and indicators	

	ABK	Test is done in 2.1.4.1 and 6.1 Addressed operation and in 2.2 and 6.4 Broadcasts messages	
	ACA	Test is done in 5.3 Management of regional area settings	
	TXT	Test is done in 2.9 Alarms and indicators	

07.02.02 Test details - Message content of VDM messages			
Test item	Check	Remark	Result
Transmit a position report from VDL analyser or another AIS transponder			
Check the following items on VDO output on PI compared with the transmitted values			
VDM Header	Check the total number of sentences = 1		Ok
	Check the sentence number = 1		Ok
	Check the Sequential message identifier = Null field		Ok
	Check the AIS channel = A, B		Ok
	Check the number of fill bits = 0		Ok
Message ID	Check the message ID = 1		Ok
MMSI	Check MMSI		Ok
Navigational status	Check the navigational status		Ok
ROT	Check the rate of turn		Ok
SOG	Check the Speed over Ground		Ok
Position accuracy	Check the Position accuracy		Ok
Position Longitude	Check the Position Longitude		Ok
Position Latitude	Check the Position Latitude		Ok
COG	Check the COG		Ok
Heading	Check the Heading		Ok
Time stamp	Check the Time stamp		Ok
RAIM flag	Check the RAIM flag		Ok
Communication state in SOTDMA (msg 1)	Check the sync state		Ok
	Check the Slot time-out		Ok
	Check the received stations		Ok
	Check the slot number		Ok
	Check the UTC time		Ok
	Check the Slot offset		ok
Communication state in ITDMA (msg 3)	Check the sync state		Ok
	Check the Slot increment		ok
	Check the number of slots		ok
	Check the keep flag		Ok

Test details - Message content of VDO messages			
Test item	Check	Remark	Result
Check the following items of msg 1,3 on VDO output on PI compared with the transmitted values of the own transmission according to the sensor input data			
Output rate	Check that the output rate = 1 s According to IEC 61993-2 §7.6.3.4 the output rate shall be 1 s		Ok
VDO Header	Check the total number of sentences = 1		Ok
	Check the sentence number = 1		Ok
	Check the Sequential message identifier = Null field		Ok
	Check the AIS channel = A, B if transmitted, else empty		Ok
	Check the number of fill bits = 0		Ok
Message ID	Check the message ID = 1		Ok
MMSI	Check MMSI		Ok
Navigational status	Check the navigational status		Ok
ROT	Check the rate of turn		Ok
SOG	Check the Speed over Ground		Ok
Position accuracy	Check the Position accuracy		Ok
Position Longitude	Check the Position Longitude		Ok
Position Latitude	Check the Position Latitude		Ok
COG	Check the COG		Ok
Heading	Check the Heading		Ok
Time stamp	Check the Time stamp		Ok
RAIM flag	Check the RAIM flag		Ok
Communication state in SOTDMA (msg 1)	Check the sync state		Ok
	Check the Slot timeout		Ok
	Check the received stations		Ok
	Check the slot number		Ok
	Check the UTC time		Ok
	Check the Slot offset		Ok
Communication state in ITDMA (msg 3)	Check the sync state		Ok
	Check the Slot increment		Ok
	Check the number of slots (0 = 1 slot)		Ok
	Check the keep flag		Ok

Date	Result	Status
------	--------	--------

09.07.02	Test ok	ok

7.7 19.7 High speed output Interface performance

(7.6.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Increase the VDL load to >90%. Record transmitted messages and check PI output of EUT on port for "external Display" and "auxiliary Display".

Required results

Confirm that EUT outputs all received messages to the PI. Repeat test for port "auxiliary display".

Date	Result	Status
23.02.2002	SAM Testprotocoll checked	ok
08.02.2002	Test with improved VDL generator in BSH lab.	ok

7.8 19.8 Test of high speed input

(7.6.3)

Method of measurement

Set-up standard test environment. Apply simulated input data, in accordance with the sentence specifications of IEC 61162-1 and 7.6.3.3 table 10, to the EUT and record VDL output.

Required results

Verify that the VDL message contents agree with simulated input data.

Date	Format	Result	Status
09.07.02	VSD	See test details below	Ok
09.07.02	SSD	See test details below	Ok
	ABM	Test is done in 2.1.4.1 and 6.1 Addressed operation	
	BBM	Test is done in 2.2 and 6.4 Broadcasts messages	
	ACA	Test is done in 5.3 Management of regional area settings	
	ACK	Test is done in 2.9 Alarms and indicators	
	AIR	Test is done in 2.1.3.1 Interrogation	

Test details – Evaluation of SSD sentence			
Test item	Check	Remark	Result
Apply an SSD sentence to an high speed input (PI)			
VDL transmission	Check that msg 5 is transmitted after change of data by SSD sentence		Ok
Call sign	Check that the new call sign is transmitted in msg 5		Ok
	Check that the new call sign is displayed on MKD		Ok
Ship's name	Check that the new ship's name is transmitted in msg 5		Ok
	Check that the new ship's name is displayed on MKD		Ok
A – Distance from bow B – Distance from stern C – Distance from port D – Distance from starboard	Check that the new dimensions are transmitted in msg 5		Ok
	Check that the new dimensions are displayed on MKD	Ship length is displayed correctly on MKD	Acc.
DTE indicator flag	Check if the DTE flag is entered in VDL message 5 Not required	DTE flag is not according to SSD sentence but set by check of connection to MKD	ok

Test details – Evaluation of VSD sentence			
Test item	Check	Remark	Result
Apply an VSD sentence to an high speed input (PI)			
VDL transmission	Check that msg 5 is transmitted after change of data by VSD sentence		Ok
Navigational status	Check that the new Navigational status is transmitted in msg 1		Ok
	Check that the Navigational status is displayed on MKD		Ok
Type of ship and cargo	Check that the new type is transmitted in msg 5		Ok
	Check that the new type of ship is displayed on MKD		Ok
Maximum actual static draught	Check that the new draught is transmitted in msg 5		Ok
	Check that the new draught is displayed on MKD		Ok
Destination	Check that the new destination is transmitted in msg 5		Ok
	Check that the new destination is displayed on MKD		Ok
Estimated Time of Arrival (ETA)	Check that the new ETA is transmitted in msg 5		Ok
	Check that the new ETA is displayed on MKD		Ok
Regional application flag	Check if the regional application flag is entered in VDL message 1		Ok
Persons on board	Check if the persons on board are displayed on MKD Not required	Number of persons is not displayed	ok

Date	Result	Status
09.07.02	Test ok	ok

8 20 DSC functionality tests

(M.1371 A3)

8.1 20.1 General

(M.1371 A3/1)

- (a) For the tests in this clause, set the EUT into autonomous mode using channels AIS1 and AIS2 with a reporting interval of 2 s (for method of measurement see also IEC 61993-1).
- (b) Check with a sequence of valid calls consisting of a test signal number 1, a geographic call from ITU-R M.493, a test signal number 1, an individual call from ITU-R M.493 and a test signal number 1 that the EUT correctly receives and processes the three tests calls and its correct AIS operation is not affected by the interleaved calls.
- (c) Check that the EUT does not respond to invalid calls - incorrect MMSI, position outside addressed geographic area, different course, or ship's type.
- (d) Send to the EUT a standard test signal number 1 but with symbol numbers 104 and 03 followed by values 01 and 120 (Activate alternate system with group number 1 and sequence number 120). Check that the EUT does not respond.

Test details – General DSC functions check			
Test item	Check	Remark	Result
This is a first check that DSC transmission, reception and addressing is working in principle. Special addressing and data content checking is done in special tests			
Start DSC transmission of Test signal 1 (Position and name request) File name is "eutTest_Signal_1.sst"	Check that the call is answered -> Contents are checked in a special test		ok
Start DSC transmission of area addressed call (Position and name request) File name is "area_pos_name_rq.sst"	Check that the call is answered within 20 s Contents are checked in a special test		ok

Test details (b) – Sequence of 5 calls			
Test item	Check	Remark	Result
Set reporting interval to 2 s and record VDL			
Start DSC transmission of test sentence File name is "Sequence_20_1.sst" Delay between the calls is 3 s	Check that the three test signal 1 calls are acknowledged		ok
	Check that the two M.493-calls are not acknowledged		ok
	Check that the schedule of the AIS position reports is not changed by the transmission of the DSC calls		ok
Increase the channel load so that there are no 20 free succeeding slots (1 position report every 5 s) Transmit test signal 1	Check that no responses are transmitted by the EUT	After 1 frame when all allocated slots are recognized no responses are transmitted	ok

Test details (c), (d) – Check of addressing			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1 (Position and name request) File name is "eut\Test_Signal_1.sst"			
Change MMSI according to the test item			
With correct MMSI	Check that the call is answered		ok
Change MMSI to not matching value	check that call is not answered		Ok
Start DSC transmission of area call (Position and name request) File name is "area_pos_name_rq.sst"			
Change position, course and type of ship according to the test item			
Position inside area	Check that the call is answered within 20 s		Ok
Change position to outside the area,	check that call is not answered		ok
Position inside area again, add course matching the course of ship,	check that call is answered		ok
Change course to a value differing > 2 degrees	Check that call is not answered		ok
Delete course, add matching type of ship	check that call is answered	Type = 69	ok
Change type of ship to All ships of this type	check that call is answered	Call with 60	ok
Change type of ship	Check that call is not answered		ok
Position inside area , area now in a critical region (lon about 180 degr.) File name =area_pos_name_rq_180.sst	Check that the call is answered within 20 s	Area is around Lat=0°, Lon=180°, size=1°: Pos: Lon= 179°10E is ok, Lon= 179°10W no response,	

		27.06.02 Retest: ok	ok
Change position to outside the area,	check that call is not answered		ok
Start DSC transmission of Selective call with command "Activate alternate system" File name is "eut\sel_act_alt_system.sst"			
Sel. Call with symbols: 104+03+01+120 (68+03+01+78)hex	Check that EUT does not transmit a response		ok
all ships call 116 with EOS 117	Check that EUT does not transmit a response		ok

Date	Result	Status
06.06.02	Error with area call at 180°, see details	
27.08.02	Retest ok	ok

8.2 20.2 Regional area designation

(M.1371 A3/5)

Perform the test specified in 17.2 using the following DSC command:

Send to the EUT a standard test signal number 1 but with symbol numbers appropriate to the geographical regions and channels specified in the test. Note the transition boundary is 5nm in this test.

Test details – Regional area designation			
Test item	Check	Remark	Result
Send a <u>selective</u> region setting call File name "eut\sel_set_region.sst"	Check that an acknowledgement is received	No acknowledgement <u>27.08.02 Retest:</u> Ackn rec.	ok
	Check that an ACA sentence is output at PI port	No ACA output <u>27.08.02 Retest:</u> ACA output: \$AIACA,,,,,,,,,,2087,0,2088,0,0 ,0,,1,123300 \$PSAEASDSC,ERROR:NON E. MSG OK. Position is inside area <u>20.09.02 Retest:</u> ok, ACA is output	ok
	Check that new region is stored in the region list of the EUT	Not stored in the entry list queried by AIQ,ACA <u>20.09.02 Retest:</u> ok, area is stored	ok
Test Report No.. 734.2/0048-1/2003 / S3220	print date: 07.02.03	page 173 of 209	

	Check that transition zone is 5 nm		ok
Send a <u>area addressed</u> region setting call File name "area_set_region.sst"	Check that an acknowledgement is received		ok
	Check that an ACA sentence is output at PI port	ACA output: \$AIACA,,,,,,,,,2087,0,2088,0,0 ,0,,1,123305 <u>20.09.02 Retest:</u> ok, ACA is output	ok
	Check that new region is stored in the region list of the EUT	Is not stored <u>20.09.02 Retest:</u> ok, area is stored	ok
Send a selective call <u>with channel setting</u> in the area in use. File name"eutsel_set_ais_channel.sst"	Check that an acknowledgement is received		Ok
	Check that AIS channels are set according to the call content	20.09.02 Channels are not changed <u>23.09.02 Retest:</u> ok	ok
	Check that new AIS channels are used for transmission and reception		----

27.08.02 Test details – Channel management test of 17.2			
Test item	Check	Remark	Result
Set-up EUT in autonomous mode transmitting on channel AIS1/AIS2, send 2 DSC messages, defining 2 adjacent areas with channels A1, B1 and A2, B2. Use external sensor input to simulate a voyage through both areas. Set the position outside the areas.			
Set the positions near the limits of the transitional zones to check the dimensions. The transitional zone is 5 nm by default			
MKD display defined area	Check that the defined areas are correctly displayed on MKD or output as ACA on request	<u>27.08.02:</u> Can not be tested because no area can be defined by DSC <u>20.09.02</u> Can now be tested, but is not yet done <u>09.10.02:</u> test is performed	ok
Item 1:	Check that channels AIS1 and AIS2 are in use		ok
Item 2: Move position into transitional area of region 2	Check that EUT keeps old channels for 1 min. timing out the transmissions of AIS2		ok
	Check that channel AIS 1 and A2 are used		ok
	Check that reporting rate is doubled		Ok

<u>Item 3:</u> Move position into region 2	Check that EUT keeps transitional channels for 1 min. timing out the transmissions of AIS 1		Ok
	Check that channel A2 and B2 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok
<u>Item 4:</u> Move position into transitional area between region 1 and 2	Check that channels A2 and A1 are used		Ok
	Check that reporting rate is doubled		Ok
<u>Item 5:</u> Move position into region 1	Check that channels A1 and B1 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok
Move position into transitional area of region 1	Check that channels A1 and AIS1 are used		Ok
	Check that reporting rate is doubled		Ok
Move position out of the transitional zone of region 1	Check that channels AIS1 and AIS2 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok

Date	Result	Status
27.08.02	Retest: it was not possible to enter a regional area setting. DSC messages are received according to the PI output.	
20.09.02	Not yet tested	
09.10.02	Test ok	ok

8.3 20.3 Scheduling

(M.1371 A3/2)

Check that the time sequence of the TDMA messages is not changed when the EUT transmits a DSC signal.

Send a valid geographical call to the EUT. Check that the response is transmitted after a random delay distributed over the range of 0 to 20 s and subject to the restrictions of ITU-R M.1371 A3/2.2..

Send a valid geographical call to the EUT followed by a signal consisting of test signal 1 with a signal level of -107 dBm at the receiver input of 25 s duration. Check that the response is not transmitted.

Test details – Scheduling			
Test item	Check	Remark	Result
Set reporting interval to 2 s and record VDL			
Start DSC transmission of test signal 1 File name: "eut\test_signal_1.sst" Delay between calls is 3 s	Check that the schedule of the AIS position reports is not changed by the transmission of the DSC calls		ok
Send area addressed calls with a rate of 30 s for about 30 min. File name is "area_pos_name_rq.sst"	Record the transmissions and responses with time stamp and enter delay times in a prepared Excel sheet. Add diagram and check times		Ok
Start DSC transmission Test sequence 20.3 (Area call + 25 s test signal 1) File name: "test_sequence_20_3.sst"	Check that EUT does not transmit a response	EUT transmits a response 20.09.02 Retest: ok, no transmission. Request was received.	ok

Date	Result	Status
14.03.02	First 2 items ok, last item not tested	
28.08.02	Transmits a response if a DSC signal is received	
20.09.02	Retest: No transmission (2 tests)	ok

8.4 20.4 Polling

(M.1371 A3/3)

- (a) Check that the EUT is capable of receiving, processing and automatically transmitting a response to the following calls from ITU-R M.825: 101 (command to duplex-channel), 102, 103, 108, 109, 111, 112, and 116. The sequence of calls consisting of test signals number 1 and valid geographic calls shall demonstrate the capability of the EUT to operate on single frequency channels as well as on two frequency channels.
- (b) Verify through this test, that ships maritime mobile service identify (MMSI), ship name, ships length and type of ship is programmed into the EUT.
- (c) Send a standard test signal number 1 with additional symbols number 109 and 116 and check that the reply messages 100, 119 and 120 are programmed automatically.
- (d) Check that when information is not available to respond to a command the transmitted response is followed by the symbol 126.
- (e) Send a standard test signal number 1 with additional symbol 101 followed by channel number 87. Repeat the test with channel number 88 and with symbol 104 and 00 followed by channel number 2087 and 2088. Check in all cases that the response is made on channel 70.

- (f) Send a DSI sentence to CH 4 and CH 5 (see annex D) with an individual station address and with command sets 103 (report your position) and 111 (report ship name). Check that the EUT does not transmit a DSC message.
- (g) Set the RF output power of the EUT high / low using the appropriate DSC command. Check that the output power is set accordingly.

14.03.02 Test details (a),(b),(c) – Information polling			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is “eut\Test_Signal_1.sst”.			
Modify sentence according test item			
Set channel (101+xx) (101+ch 76) (65h+4Ch)	Check that direct answer on channel xx Check if following answers on channel xx		ok ok
Request automatic position report (102+xx)	Check that immediate response with EOS=BQ is received Check automatic reporting rate Check that further TX are transmitted with EOS = RQ (117)	EOS = BQ <u>14.06.02: Retest B177</u> EOS = RQ	ok ok ok
	Check that automatic reporting is finished after 5 transmissions (without ackn. by base station)		Ok
	Check that the automatic reporting is not finished with ackn. by base station.		
Send message with 102+00	Check that the automatic position report is finished	No acknowledgement, but automatic report is finished 28.06.02 Retest: Ackn. is transmitted now	Ok ok
Request position (103)	Check position in response Check time Check type of ship	Longitude is ok, after 1. Symbol of latitude 1 invalid symbol is inserted <u>14.06.02: Retest B177</u> Latitude ok now	ok ok ok
Request length of ship (108=6Ch)	Check length of ship (124=7Ch)	Length = 180	Ok
Request course (109=6Dh)	Check course (119=77h)	Course = 350	Ok
Request ships name (111=6Fh)	Check name (115=73h)	<u>14.06.02: Retest B177</u> Name ok	ok
Request ackn. (112=70h)	Check ackn. (110=6Eh)		Ok
Request speed (116=74h)	Check speed (120=78h)		ok
(C) Request test signal 1 (pos, name request) + 109 + 116	Check automatic response submitting name, position,	Response is transmitted but not received by test equipment.	

(6F 67 6D 74))	course and speed	Call seems to be cut before the end by TX time limitation, without name request ok <u>14.06.02: Retest B177</u> Call correctly received	ok
Send test signal 1 (101+72)=(65h+48h) (set DSC channel to a simplex channel) + Geographically addressed call. File: sel_check_channel.sst	Check that the communication on selected simplex channel is working		ok
Send test signal 1 (101+60) =(65h+3Ch) (set DSC channel to a duplex channel) + Geographically addressed call.	Check that the communication on selected duplex channel is working	Response on 156.025 kHz (ship station frequency of channel 60)	ok
		All polling responses are transmitted with EOS =RQ, Should be BQ because it doesn't request a response but is a response <u>14.06.02: Retest B177</u> EOS = BQ	ok

14.03.02	Test details (d) – polling, information not available		
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eutTest_Signal_1.sst"			
Change request symbols according to the test item.			
Request position (103)	Check position in response	Symbol 126	ok
Request length of ship (108)	Check length of ship (124)	Length of ship could not be deleted	----
Request course (109)	Check course (119)	Symbol 126	ok
Request ships name (111)	Check name (115)	Name of ship could not be deleted	----
Request speed (116)	Check speed (120)	Symbol 126	ok

14.03.02 Test details (e) – Use of AIS channels for DSC			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eut\Test_Signal_1.sst". Modify sentence according test item. The call also includes a position request.			
Set channel (101+87) (65 57 67)			
Set channel (101+87) (65 57 67)	Check that command is ignored	No response, Response should be transmitted on ch. 70 <u>28.06.02 Retest:</u> no response <u>06.09. 02 Retest</u> with pos. request included: ok	ok
Set channel (101+88) (65 58 67)	Check that command is ignored	No response, Response should be transmitted on ch. 70 <u>28.06.02 Retest:</u> no response <u>06.09. 02 Retest</u> with pos. request included: ok	ok
Set channel (104+00+2087) (68 00 14 57 67)	Check that command is ignored	No response, Response should be transmitted on ch. 70 <u>28.08.02 Retest:</u> After transmission of this sentence the transponder stops operation and restarts.(same as with 104.00.2088) <u>20.09.02 Retest:</u> ok, Response on ch 70	ok
Set channel (104+00+2088) (68 00 14 58 67)	Check that command is ignored	No response, Response should be transmitted on ch. 70 <u>28.08.02 Retest:</u> After transmission of this sentence the transponder stops operation (PI output stops) and restarts. Could be reproduced, with correct channels ok <u>20.09.02 Retest:</u> ok, Response on ch 70	ok

Test details (f) – DSI sentence check			
Test item	Check	Remark	Result
Apply DSI sentence to the PI interface. File name is ais_dsi.sst			
ON CH4 = PI interface	Check that the EUT does not transmit a DSC message.		ok
ON CH5 = Pilot port	Check that the EUT does not transmit a DSC message.	Not tested	----

Test details (g) – Power setting check			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eut\Test_Signal_1.sst".			
Modify sentence according test item			
Ad symbols to set power = 2 watt (low power) (Symbols 104+ 01+ 02)	Check that response is transmitted with low power	Is transmitted with high power There is no difference in output power between the 2 setting <u>06.09. 02 Retest:</u> No change <u>20.09.02 Retest:</u> ok, TX with low power	ok
Ad symbols to set power = 12.5 watt (low power) (Symbols 104+ 01+ 12)	Check that response is transmitted with high power	Is transmitted with high power	ok

Date	Result	Status
14.03.02	See details	
28.08.02	Retest, see details	
20.09.02	Retest: ok	ok

9 21 Long Range functionality tests

(9)

9.1 21.1 LR interrogation

(9.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply a LR addressed interrogation message to the LR-interface port of EUT; Record LR output port and AIS high-speed output port Set EUT to

- *Automatic response*
- *Manual response via MKD*
- *Manual response via PI*

Required results

Check that EUT displays LR interrogation messages and sends to PI.

Check that EUT outputs a LR position report message

- *Automatically (and indicates action on display)*
- *After manual confirmation via MKD*
- *After manual confirmation via PI*

Test details – LR automatic response, all data			
Test item	Check	Remark	Result
Set EUT to automatic response. Apply an addressed request to the LR port of EUT requesting all possible information File name: LRI_LRF_MMSI_all.sst			
Response	Check that a response is output on LR port		ok
Display on MKD	Check that the request is displayed on MKD	An alarm "AIS interrogation" is displayed	ok
	Check that replay status is displayed on MKD	Reply status is not indicated <u>06.09.02 Retest:</u> no change On ECDIS as MKD it is indicated if manual confirmation is required. <u>20.09.02 Retest:</u> After manual setting of auto mode on ECDIS indication is output <u>23.09.02 Retest:</u> ok	ok
PI output	Check that LR interrogation and response is output on PI	Interrogation is output in proprietary sentence, incl. Automatic/manual indication	ok
Contents of LRF response	Check output of LRF sentence		ok
	Check that sequence number = request		ok

	Check MMSI = requestor	Ok
	Check name of requestor	Ok
	Check function request = request	Ok
	Check that function reply is according to the availability of data (2=avail, 3= not av.)	Ok
Contents of LR1 response	Check output of LR1 sentence	Ok
	Check that sequence number = request = LRF	Ok
	Check own MMSI	Ok
	Check MMSI of responder = responder of request	Ok
	Check ship's name	Ok
	Check Call sign	Ok
	Check IMO number	Ok
Contents of LR2 response	Check output of LR2 sentence	ok
	Check that sequence number = request = LRF	ok
	Check MMSI of responder = responder of request	ok
	Check date, UTC	ok
	Check Lat, Lon	Ok
	Check COG	Ok
	Check SOG	Ok
Contents of LR3 response	Check output of LR3 sentence	Ok
	Check that sequence number = request = LRF	Ok
	Check MMSI of responder = responder of request	Ok
	Check destination	Ok
	Check ETA	Ok
	Check draught	
	Check ship/cargo	Ok
	Check length of ship	Ok
	Check breadth of ship	Ok
	Check ship type	Ok
	Check persons	Number of persons is marked as not available, and field is empty <u>20.09.02 Retest:</u> ok, Number of persons is marked as available and provided
		ok
Test Report No.. 734.2/0048-1/2003 / S3220	print date: 07.02.03	page 182 of 209

	Number of persons is available on MKD but not delivered on LR request <u>06.09.02 Retest:</u> no change <u>20.09.02 Retest:</u> no change <u>23.09.02 Retest:</u> ok, number of persons is included	ok

08.07.02 Test details – LR automatic response, selected data			
Test item	Check	Remark	Result
Set EUT to automatic response. Apply an addressed request to the LR port of EUT requesting selected information File name: LRI_LRF_MMSI_all.sst, modified by deleting not requested information			
Request A			
Name	Check that only LF and LR1 is transmitted		Ok
Call sign	Check that function request field = request		Ok
IMO number	Check that function reply status field matches request and data availability		Ok
	Check that the requested fields are not empty		Ok
Request A,E,F			
Name	Check that only LF and LR1 and LR2 is transmitted		Ok
Call sign	Check that function request field = request		Ok
IMO number	Check that function reply status field matches request and data availability		Ok
COG	Check that requested fields are provided		Ok
SOG	Check that only requested fields are not empty		Ok
Request C,E,F			
Position	Check that only LF and LR2 are transmitted		Ok
COG	Check that function request field = request		Ok
SOG	Check that function reply status field matches request and data availability		Ok
	Check that requested fields are provided		Ok
	Check that only requested fields are not empty		Ok
Request P,W			
Ship/cargo	Check that only LF and LR3 is transmitted		Ok
Persons	Check that function request field = request		Ok
	Check that function reply status field matches request and data availability		Ok
	Check that requested fields are provided		Ok
	Check that only requested fields are not empty	Note: Number of persons is not available, but displayed on MKD 06.09.02 Retest: no change	Rec.

Test details – Manual Confirmation			
Test item	Check	Remark	Result
Set EUT to manual response. Apply an addressed request to the LR port of EUT requesting all possible information File name: LRI_LRF_MMSI_all.sst			
Display on MKD	Check that the request for manual response is displayed on MKD	Requested contents are displayed On ECDIS alarm is generated, but the requested information is not displayed. <u>20.09.02 Retest:</u> ok, requested information is displayed.	Ok ok
	Check that response is transmitted after manual confirmation on MKD	On Radar 1000 ok On ECDIS no reply possible The “Reply”-Button is grey and can not be pressed. The requested information is not displayed. <u>20.09.02 Retest:</u> ok, requested information is displayed.	Ok ok

Test details – Confirmation via PI			
Test item	Check	Remark	Result
Set EUT to external response if implemented (not required). Apply an addressed request to the LR port of EUT requesting all possible information File name: LRI_LRF_MMSI_all.sst			
Confirmation via PI	Check that the request for manual response is output on PI	Private sentences are used for request and confirmation	Ok
	Check that response is transmitted after external confirmation via PI	Private sentences are used for request and confirmation	Ok

Date	Result	Status
08.07.02	Test ok, but reply status (Replied or not) should be indicated on MKD and PI output (see details)	Ok

--	--	--

9.2 21.2 LR “all ships” interrogations

(9.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply a LR “all ships” interrogation message to the LR-interface port of EUT defining a geographical area which contains own ships position; Record LR output port. Set EUT to

- Automatic response
- Manual response.

Repeat check with own ship outside specified area.

Required results

Check that EUT outputs a LR position report message

- Automatically (and indicates action on display)
- After manual confirmation.

No response shall be output on the repeat check.

08.07.02 Test details – Area addressing - Automatic response			
Test item	Check	Remark	Result
Set EUT to automatic response			
Apply an area addressed request to the LR port of EUT requesting position and speed information			
Own position in Area File name: LRI_LRF_area_CEF.sst	<p>Check that the request is automatically responded</p> <p>Check that the request and response status is displayed on MKD</p> <p>Check that the request and response is output on PI</p>		ok
Own position not in Area File name: LRI_LRF_out_area_CEF.sst	<p>Check that the request is not responded</p> <p>Check that the request is not displayed on MKD</p> <p>Check that the request is not output on PI</p>	<p>An alarm is generated</p> <p>Is displayed on MKD <u>06.09.02 Retest:</u> is not displayed on MKD</p> <p>Proprietary sentence is output on PI</p>	<p>ok</p> <p>Ok</p>

--	--	--	--

08.07.02 Test details – Area addressing – Manual confirmation			
Test item	Check	Remark	Result
Set EUT to automatic response Apply an area addressed request to the LR port of EUT requesting position and speed information			
Own position in Area File name: LRI_LRF_area_CEF.sst	Check that the request is displayed on MKD	Requested contents are displayed	ok
	Check that response is transmitted on confirmation on MKD		Ok
	Check that the request and response is output on PI	Only the request is output on PI	Acc
Own position not in Area File name: LRI_LRF_out_area_CEF.sst	Check that the request is not displayed on MKD	Request is displayed on MKD Request should not be displayed on MKD to avoid unnecessary load of the operator <u>06.09.02 Retest: No display</u>	ok
	Check that the request is not output on PI	Request is output on PI, but no indication if position is inside the area or not. Should be either not output or indicated that position is out of area <u>06.09.02 Retest: no output</u>	ok

Date	Result	Status
08.07.02	Request is output on PI and displayed on MKD if position is out of area <u>06.09.02 Retest: No output on PI and display on MKD if position is out of area</u>	ok

9.3 21.3 Consecutive LR “all ships” interrogations

(9.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Set EUT to automatic mode. Apply 5 LR “all ships” interrogation messages to the LR-interface port of EUT defining a geographical area which contains own ships position;

Record LR output port. Set the control flag in the LRI message to

- 0 (reply on first interrogation only)
- 1 (reply on all applicable interrogations)

Required results

Check that EUT outputs a LR position report message

- On the first interrogation only
- On all interrogations.

Test details – Area addressing - Automatic response			
Test item	Check	Remark	Result
Set EUT to automatic response			
Apply some area addressed requests to the LR port of EUT requesting position and speed information			
File name: LRI_LRF_area_CEF.sst			
Control flag = 1 (reply on all requests)	Check that the 1. request is automatically responded		Ok
	Check that the following interrogations are responded		Ok
Control flag = 0 (reply only on first request) Change MMSI to get the first response	Check that the 1. request is automatically responded		Ok
	Check that the following interrogations are not responded		Ok
	Check that the following interrogations are not displayed on MKD	Request is displayed on MKD Request should not be displayed on MKD to avoid unnecessary load of the operator 06.09.02 Retest: No display	ok
	Check that the following interrogations are not output on PI	Request is output on PI, but no indication if position is inside the area or not. Should be either not output or indicated that position is out of area 06.09.02 Retest: No output	ok

Date	Result	Status
08.07.02	Request is output on PI and displayed on MKD in case of repetition not requiring a response	
06.09.02	Retest: No output on PI and display on MKD in case of repetition not requiring a response	ok

Bundesamt für Seeschifffahrt und Hydrographie
Federal Maritime and Hydrographic Agency



Annex A

Test equipment

A.1 Test equipment summary

#	description	type	identification
1	VDL analyser / Generator	Attingimus UAIS Test unit	S/N 001 BSH PC5593 SW AISterm V1.0rev47 AISmain V1.47011120R
2	Target simulator	Simutech	BSH PC3007 SW BSHSIM7T
3	Presentation Interface Monitor	BSH	BSH PC 3481 BSH PC 3544 SW NewMoni V2.1
4	DSC Testbox	DEBEG 3817 DEBEG 6348	S/N 475533
Auxiliaries:			
5	Digital Multimeter	Voltcraft	S/N 1010365036
6	Fluke Scopemeter	123	BSH 101275/2001
7	5 Converters RS 422 to RS 232		
8	1 fixed voltage power supply (24 V/10A)		
9	3 adjustable power supplies (30 V/5 A)		
10	active retransmitting GPS antenna		

for a description of pos. 1-4 see below

A.1.1 VDL analyser / generator

The VDL analyser/generator:

- receives the radio data telegrams transmitted by the AIS under test, slotwise evaluates their radio parameters (field strength, SNR, etc.) and provides a transparent display of the decoded radio data telegrams (VDL messages).
- transmits radio data telegrams which have been entered/edited via a control panel. The AIS under test receives these messages and either passes the received data to its presentation interface and/or responds as appropriate.
- records all data contained in the received radio telegrams and radio parameters in a data base for offline evaluation and documentation purposes.
- simulates AIS targets by transmitting position reports of virtual targets up to the maximum channel capacity.

A.1.2 Target simulator

The target simulator consists of a standard PC with

- special Radar and Target Simulator software

- extension boards for generation of Radar signals and RS422 serial output signals

Connection of AIS Test system

For tests of AIS transponders the data of 60 moving targets defined in the Radar Simulator are transferred to the VDL Generator and transmitted on VHF. Thus the AIS VHF data link is loaded with simulated AIS targets.

Connection of display systems

Radar systems as well as ECDIS systems will have the ability to receive, process and display AIS information in the near future. In order to test this feature the data of moving targets defined in the Radar Simulator are transferred to the RADAR (together with video, sensor data etc as known).

Connection of AIS under Test

The AIS under test can be connected to the own ship sensor outputs in order to provide full control over own ships dynamic data (for tests of reporting rates, channel management...).

A.1.3 Presentation Interface Monitor

The Presentation Interface Monitor is a PC software running on two standard PCs.

It is used to

- simulate Sensor inputs
- analyse the AIS high speed input / output
- analyse the AIS long range function
- generate DSC calls for the DSC test box and to display, log and evaluate the received DSC calls from EUT.

For that purpose it includes the functions:

- coding / decoding of NMEA 6-bit data fields
- online AIS message filtering
- online AIS message editing
- load and transmit predefined sequences
- online modification of transmitted sequences

A.1.4 DSC Testbox

The DSC test box includes:


- A standard VHF DSC controller DEBEG 3817 with open interface
- A standard VHF radiotelephone DEBEG 6348

The software modification of the DSC controller comprises a remote control input/output facility

- to transmit DSC calls according to ITU 825-3 generated in an external device on DSC channel 70 and
- to output received DSC calls from the EUT to the external device.

The Presentation Interface Monitor is used to generate the DSC calls and to display, log

and evaluate the received DSC calls.

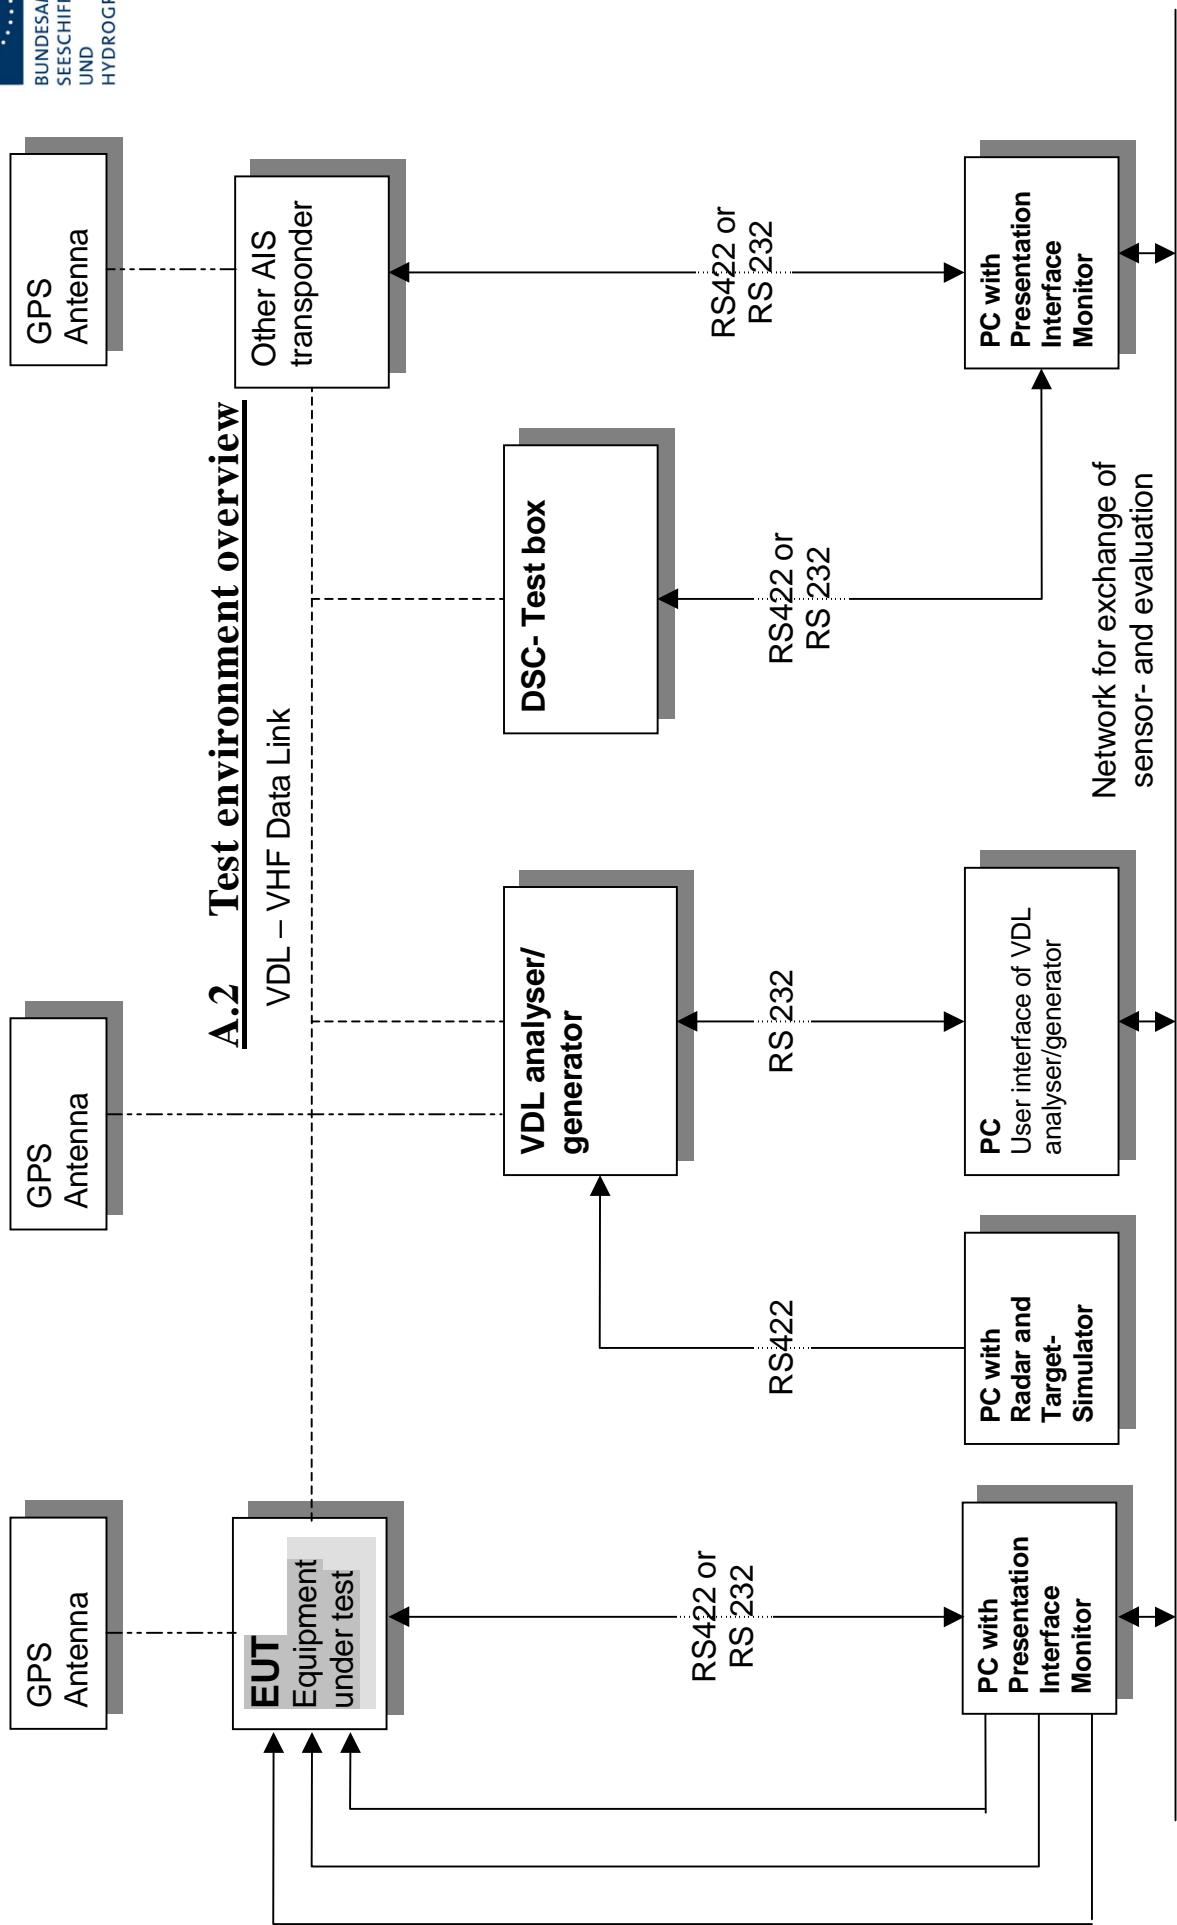

Annex B IEC 61162 test sentences

B.1 Sensor input

Sensor input sentences	
File name	Description
Sentences	
AIS01_gll_vtg_hdt_rot.sst	Standard sensor input sentences \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS01d_dtm_gll_vtg_hdt_rot.sst	Standard sensor input with DTM \$GPDTM,999,,,,,,P90 \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS01g_gll_vtg_gbs_hdt_rot.sst	Standard sensor input with GBS sentence \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$GPGBS,141800.00,2.6,2.8,4.2,,,, \$TIHDT,359.9,T \$TIROT,0.0,A
AIS01x_gll_vtg_hdt_rot_180.sst	Standard sensor input at Longitude of 180° \$GPGLL,0001.00,N,17959.00,W,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS02_gga_vtg_hdt_rot.sst	Sensor Input set with GGA position \$GPGGA,092854,5330.1234,N,01001.2345,E,1,3,1.2,65.2,M,45.1,M,,, \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS02d_dtm_gga_vtg_hdt_rot.sst	Sensor Input set with GGA position and DTM \$GPDTM,999,,,,,,P90 \$GPGGA,092854,5330.1234,N,01001.2345,E,1,3,1.2,65.2,M,45.1,M,,, \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS03_gns_vtg_hdt_rot.sst	Sensor input set with GNS position \$GNGNS,122500.00,5330.1234,N,01001.2345,E,AA,5,1.2,35.5,41.1,, \$GNVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS04_rmc_hdt_rot.sst	Sensor input set with RMC position and speed

\$GPRMC,122500.00,A,5330.1234,N,01001.2345,E,11.2,352.2,120202,2.0,A,A
 \$TIHDT,359.9,T
 \$TIROT,0.0,A

AIS06_gll_vtg_vbw_hdt_rot.sst	Sensor input set with speed by VBW and VTG
-------------------------------	--

\$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A
 \$GPVTG,350.0,T,,M,10.0,N,,K,A
 \$VDVBW,11.00,01.00,A,12.00,02.00,A,,V,,V
 \$TIHDT,359.9,T
 \$TIROT,0.0,A

AIS07_osd.sst	Single OSD sentence
---------------	---------------------

\$INOSD,359.9,A,5.2,B,12.6,B,150.0,1.2,N

AIS08_gll_vbw_hdt_rot.sst	Standard sensor input with VBW instead of VTG
---------------------------	---

\$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A
 \$VDVBW,11.00,01.00,A,12.00,02.00,A,,V,,V
 \$TIHDT,359.9,T
 \$TIROT,0.0,A

AIS09_gll_osd.sst	Sensor input set with GLL and OSD
-------------------	-----------------------------------

\$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A
 \$INOSD,359.9,A,5.2,B,12.6,B,150.0,1.2,N

AIS10_gll_vtg.sst	GPS receiver sentences (GLL and VTG)
-------------------	--------------------------------------

\$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A
 \$GPVTG,350.0,T,,M,10.0,N,,K,A

AIS11_vbw.sst	Log sentence VBW
---------------	------------------

\$VDVBW,11.00,01.00,A,12.00,02.00,A,,V,,V

AIS12_hdt_rot.sst	Gyro sentences (HDT and ROT)
-------------------	------------------------------

\$TIHDT,359.9,T
 \$TIROT,0.0,A

--	--

B.1.1 Settings (VSD,SSD)

Settings (VSD,SSD)	
File name	Description
Sentences	
AISSD_transpondertype.sst	Settings of static data, specific set for each transponder type
\$AISSD,callsign,name,100,20,15,10,1,GP	
AIVSD_Hamburg.sst	Settings of voyage related data
\$AIVSD,51,11.5,26,HAMBURG,131020,20,05,0,0	

B.1.2 Messages (ABM, BBM)

The addressed messages include a MMSI number which is changed according to the actual MMSI number of the EUT

Messages (ABM, BBM)	
File name	Description
Sentences	
AIABM_bin.sst	Standard addressed binary message !AIABM,1,1,2,000001005,1,6,06P0test,0
AIABM_safety.sst	Standard addressed safety related message !AIABM,1,1,2,000001005,1,12,D5CD,0
AIABM_4_bin.sst	Set of 4 addressed binary messages !AIABM,1,1,3,000008001,1,6,06P0test,0 !AIABM,1,1,0,000008001,2,6,06P0test,0 !AIABM,1,1,1,000008001,1,6,06P0test,0 !AIABM,1,1,2,000008001,2,6,06P0test,0
AIABM_4_safety.sst	Set of 4 addressed safety related messages !AIABM,1,1,0,000001005,1,12,D5CD,0 !AIABM,1,1,1,000001005,1,12,D5CD,0 !AIABM,1,1,2,000001005,1,12,D5CD,0 !AIABM,1,1,3,000001005,1,12,D5CD,0
AIBBM_bin.sst	Standard binary broadcast message !AIBBM,1,1,6,1,8,06P0test,0
AIBBM_safety.sst	Standard safety related broadcast message !AIBBM,1,1,6,1,14,D5CD,0
AIBBM_5_bin.sst	Set of 5 binary broadcast messages !AIBBM,1,1,7,0,8,06P0test1,0 !AIBBM,1,1,8,0,8,06P0test2,0 !AIBBM,1,1,9,0,8,06P0test3,0 !AIBBM,1,1,0,0,8,06P0test4,0 !AIBBM,1,1,1,0,8,06P0test5,0
AIBBM_5_safety.sst	Set of 5 safety related broadcast messages !AIBBM,1,1,6,0,14,D5CDi,0 !AIBBM,1,1,7,0,14,D5CDj,0 !AIBBM,1,1,8,0,14,D5CDk,0 !AIBBM,1,1,9,0,14,D5CDl,0 !AIBBM,1,1,0,0,14,D5CDm,0
AIBBM_bin_stuffing.sst	Special message for bit stuffing test !AIBBM,1,1,6,1,8,06Qv>khvOP,4
AIBBM_multi_bin.sst	Long 5 slot binary broadcast message !AIBBM,4,1,6,2,8,06P0456789012345678901234567890123456789,0 !AIBBM,4,2,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,3,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,4,6,2,8,012345678901234567890123456789012345678901,4
AIBBM_multi_bin_long.sst	Longer than 5 slots binary broadcast message

!AIBBM,4,1,6,2,8,06P0456789012345678901234567890123456789,0 !AIBBM,4,2,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,3,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,4,6,2,8,01234567890123456789012345678901234567890123,0	
AIBBM_multi_bin_1.sst	Longer than 5 slots binary broadcast message, all bits 1
	!AIBBM,4,1,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwww,0 !AIBBM,4,2,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwww,0 !AIBBM,4,3,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwwww,0 !AIBBM,4,4,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwwwwwww,0
AIBBM_ABM_17_5.sst	Set of 2 long messages 8 and 12 for message priority test
	!AIBBM,4,1,6,2,8,06P0456789012345678901234567890123456789,0 !AIBBM,4,2,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,3,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,4,6,2,8,0123456789012345678901234567890123456789,0 !AIABM,4,1,2,000001005,1,12,0123456789012345678901234567890123456789,0 !AIABM,4,2,2,000001005,1,12,0123456789012345678901234567890123456789,0 !AIABM,4,3,2,000001005,1,12,0123456789012345678901234567890123456789,0 !AIABM,4,4,2,000001005,1,12,0123456789012345678901234567890123456789,0
Dsi.sst	DSI sentence to check that DSI are not transmitted
	\$AIDSI,1,1,2210393930,,,03,,11,,
AIAIR_5.sst	Simple interrogation for msg 5
	\$AIAIR,000001005,5,,,,
AIAIR_35_5.sst	Interrogation of msg 3 and 5 from ID1 and msg 5 from ID2
	\$AIAIR,000005002,3,,5,,000007001,5,,

B.1.3 Regional operational settings (ACA)

Regional operational settings (ACA)	
File name	Description
Sentences	
AIACA_Region_in_ch86.SST	Region around standard position with test channels
\$ECACA,2,5400.0,N,01030.0,E,5300.0,N,00930.0,E,4,2086,0,1086,0,0,1,,,	
AIACA_Region_out_ch74_76.SST	Region not including standard position with channels 74 and 76
\$ECACA,2,5500.0,N,00900.0,E,5400.0,N,00800.0,E,4,0074,0,0076,0,0,1,,,	
AIACA_Region_17_3_SW.SST	2 adjacent regions in SW quadrant, for test 17.3
\$ECACA,2,3000.00,S,01200.00,W,3100.00,S,01300.00,E,1,2081,0,1081,0,0,1,,,	
\$ECACA,2,3000.00,S,01100.00,W,3100.00,S,01200.00,E,1,2082,0,1082,0,0,1,,,	
AIACA_8_Regions_17_7_1.SST	8 different regions to fill quickly the complete list, for test 17.7.1

\$ECACA,,5400.00,N,01030.00,E,5300.00,N,00930.00,E,2,72,0,74,0,0,1,,, \$ECACA,,5200.00,N,00700.00,E,5100.00,N,00600.00,E,2,2060,0,1060,0,0,1,,, \$ECACA,,5200.00,N,00900.00,E,5100.00,N,00800.00,E,2,2061,0,1061,0,0,1,,, \$ECACA,,5200.00,N,01100.00,E,5100.00,N,01000.00,E,2,2062,0,1062,0,0,1,,, \$ECACA,,5200.00,N,01300.00,E,5100.00,N,01200.00,E,2,2063,0,1063,0,0,1,,, \$ECACA,,5200.00,N,01500.00,E,5100.00,N,01400.00,E,2,2064,0,1064,0,0,1,,, \$ECACA,,5100.00,N,00800.00,E,5000.00,N,00700.00,E,2,2065,0,1065,0,0,1,,, \$ECACA,,5100.00,N,01000.00,E,5000.00,N,00900.00,E,2,2066,0,1066,0,0,1,,, 	
AIACA_Region_17_7_2_c.SST	Region for test 17.7.2 c
\$ECACA,2,5430.00,N,01200.00,E,5300.00,N,01100.00,E,4,2083,0,1083,0,0,1,,,	
AIACA_Region_17_7_2_f.SST	Region for test 17.7.2 f
\$ECACA,2,5300.00,N,01320.00,E,5200.00,N,01200.00,E,4,2081,0,1081,0,0,1,,,	
AIACA_Region_17_7_4.SST	4 adjacent regions for test 17.7.2 f
\$ECACA,2,5800.00,N,00800.00,E,5700.00,N,00700.00,E,4,2081,0,1081,0,0,1,,,	
\$ECACA,2,5800.00,N,00900.00,E,5700.00,N,00800.00,E,4,2082,0,1082,0,0,1,,,	
\$ECACA,2,5700.00,N,00800.00,E,5600.00,N,00700.00,E,4,2083,0,1083,0,0,1,,,	
\$ECACA,2,5700.00,N,00900.00,E,5600.00,N,00800.00,E,4,2084,0,1084,0,0,1,,,	
AIACA_Region_Ion180.SST	Special region at longitude = 180°
\$ECACA,2,0100.00,N,17900.00,W,0100.00,S,17900.00,E,2,0074,0,0076,0,0,1,,,	
AIACA_Set_channel.SST	Set channel command, without area co-ordinates
\$ECACA,,N,,W,,N,,W,2,2074,0,2076,0,0,1,,,	
Request_ACA.SST	Request of ACA sentences from EUT
\$ECAIQ,ACA	

B.1.4 Long range requests

The of long range requests include a MMSI number which is changed according to the actual MMSI number the EUT

Long Range (LRI, LRF)	
File name	Description
Sentences	
LRI_LRF_MMSI_all.sst	Request of all data addressed by MMSI \$LRLRI,5,0,211003000,000002002,, \$LRLRF,5,211003000,VTS,ABCEFIOPUW,
LRI_LRF_area_CEF.sst	Request of some data addressed by area \$LRLRI,6,1,211003000,,6000.0,N,2000.0,E,4000.0,N,0500.0,E \$LRLRF,6,211003000,VTS,CEF,
LRI_LRF_out_area_CEF.sst	Request of some data addressed by area, standard position not in area \$LRLRI,6,1,211003000,,6000.0,N,1500.0,E,5500.0,N,0800.0,E \$LRLRF,6,211003000,VTS,CEF,
LRI_LRF_area_at_180_CEF.sst	Request of some data addressed by area, area around longitude of 180° and latitude of 0° \$LRLRI,6,1,211003000,,0500.0,N,17500.0,W,0500.0,S,17500.0,E \$LRLRF,6,211003000,VTS,CEF,
LRF_ack_all.sst	For external confirmation of request \$LRLRF,5,211003000,VTS,ABCEFIOPUW,

B.1.5 DSC sentences

The sentences are listed as they are applied to the DSC Testbox for transmission of DSC test calls. There is a special format used based on an earlier definition of NMEA private sentences.

The frame for transmitting a DSC call is:

\$PDEBT,CCDSC,T,00014600<call content>FF

The <call content> has to be entered in Hex code, 2 hex numbers for each 7 bit DSC symbol, without spaces, beginning with the format specifiere which included only ones. The DSC coding and addition of redundancy (3 bit symbol redundancy and symbol repetition) are done by the test box. The content description of the calls is available on request.

The DSC sentences include MMSI number which is changed according to the actual MMSI number the EUT


DSC Sentences	
File name	Description

Sentences	
Test_Signal_1.sst	Standard test signal no 1, selective position and name request. \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E676F75FF
area_pos_name_rq.sst	Position and name request addressed to an area, standard position inside \$PDEBT, CCDSC, T, 000146006705280000091E003C003C0067150A27271E676F75FF
area_pos_name_rq_180.sst	Position and name request addressed to an area around a longitude of 180° and latitude of 0°. \$PDEBT, CCDSC, T, 0001460067000300014F1E003C003C0067150A27271E676F75FF
sel_set_region.sst	Selective regional setting by DSC, standard pos. outside, channel 61 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E68090A3D00680A143D00680C053C00011400680D053200010A0075FF
sel_set_region_in.sst	Selective regional setting, standard position inside, channel 72, 73, 12.5 kHz \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E680900480A680A00490A680C052800010300680D051E00005D0075FF
sel_set_region_17_7_2.sst	Selective regional setting for test 17.7.2 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E6809145200680A0A5200680C051E00012800680D051400011E0075FF
sel_set_region_17_2.sst	2 regional settings for DSC test according to 17_2 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E6809145200680A0A5200680C051E00012800680D051400011E0075FF \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E6809145100680A0A5100680C051400012800680D050A00011E0075FF
sel_set_ais_channel_ch65.sst	Setting AIS channel to 65 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E68090A4100680A14410075FF
area_set_region.sst	Area addressed regional setting, standard position inside address, but not inside area, Ch 60 \$PDEBT, CCDSC, T, 000146006705280000091E003C003C0067150A27271E68090A3C00680A143C00680C051400005A00680D050A0000500075FF
all_ship_set_region.sst	All ship call with regional setting \$PDEBT, CCDSC, T, 000146007467150A27271E68090A3E00680A143E00680C052800011400680D051E00010A007FFF
all_ship_set_channel.sst	All ship call setting DSC channel \$PDEBT, CCDSC, T, 000146007467150A27271E65467FFF


Annex C test diagrams

C.1 GMSK modulation 12.5 and 25 kHz bandwidth

26. 06.02 - 14.7 - Modulation DEBEG 3400 - 25 kHz Channel 1086(A)

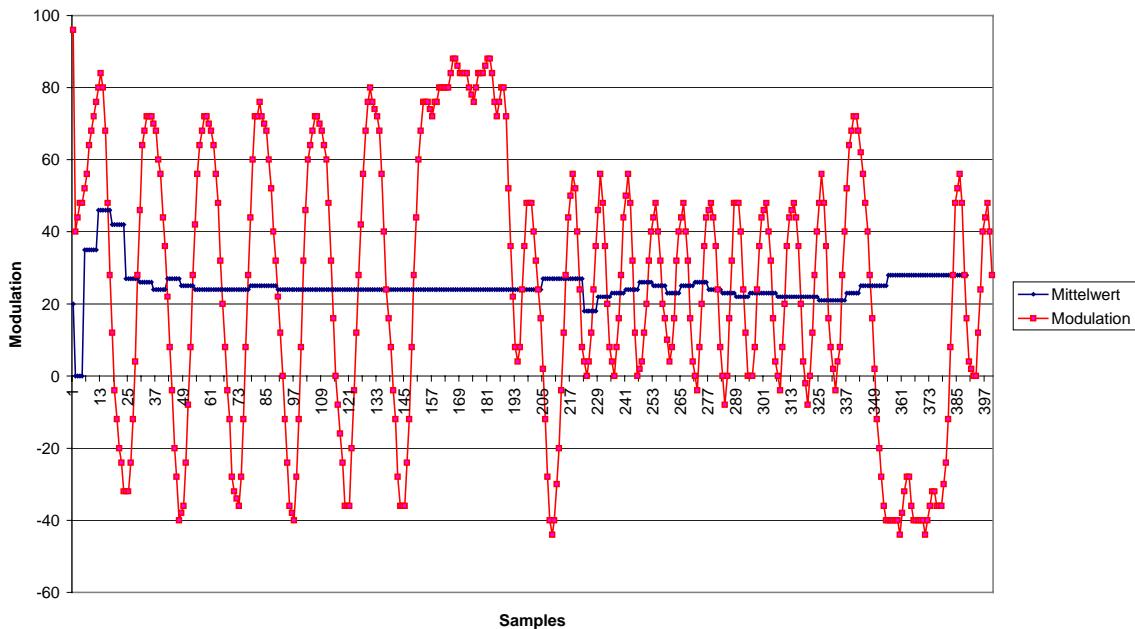


26. 06.02 - 14.7 - Modulation DEBEG 3400 - 12,5 kHz Channel 1086(A)

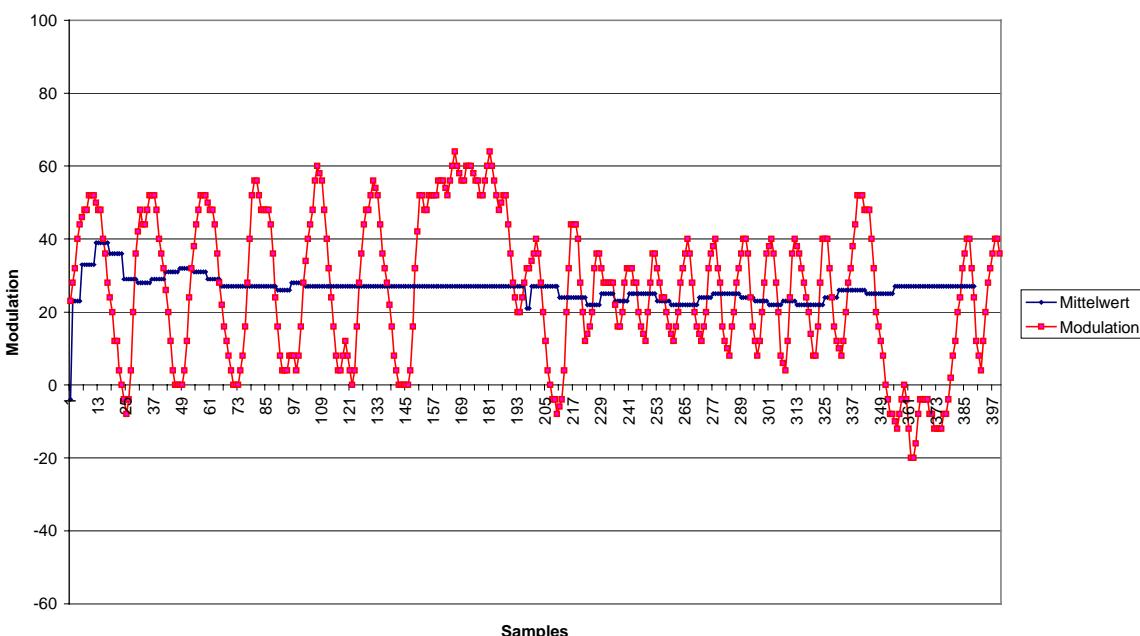


C.2 Reporting rate by speed

28.08.02 SAM DEBEG 3400 - Reporting rate by speed - Slots

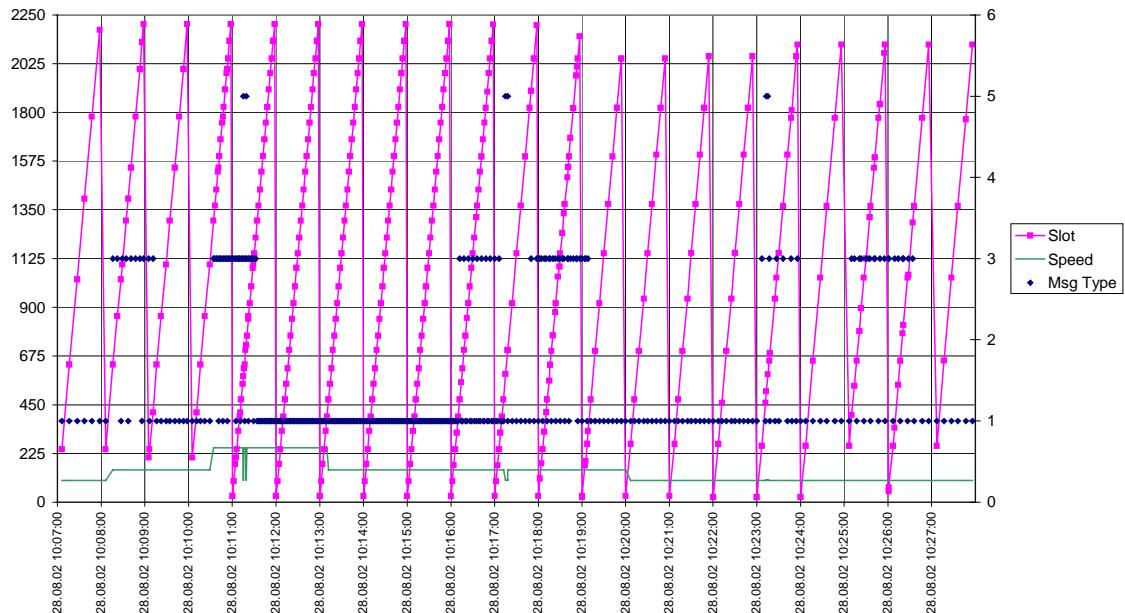


28.08.02 SAM DEBEG 3400 - Reporting rate by speed - Slot offset

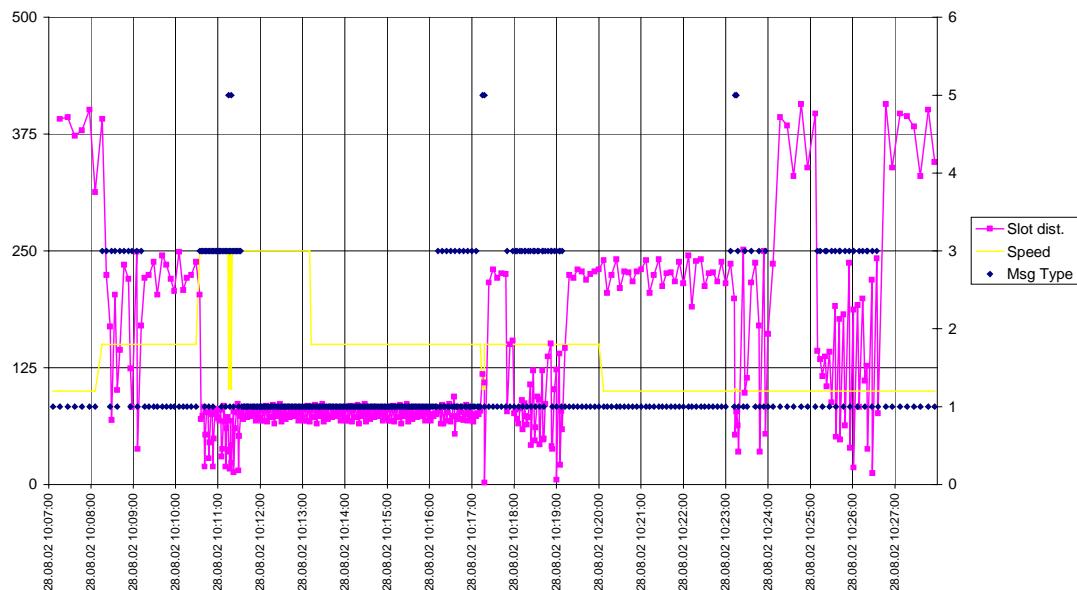


C.3 Report rate by heading

08.10.02 SAM DEBEG 3400 - Reporting rate by heading at 15 kn - Slots

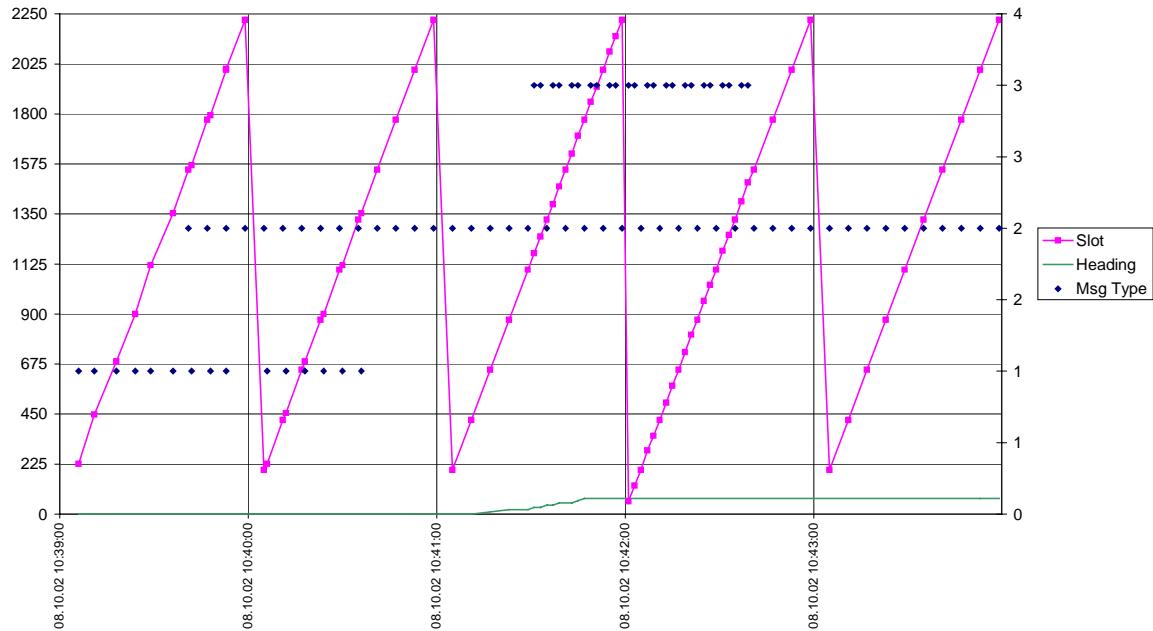


08.10.02 SAM DEBEG 3400 - Reporting rate by heading at 15kn in assigned mode - Slot offset

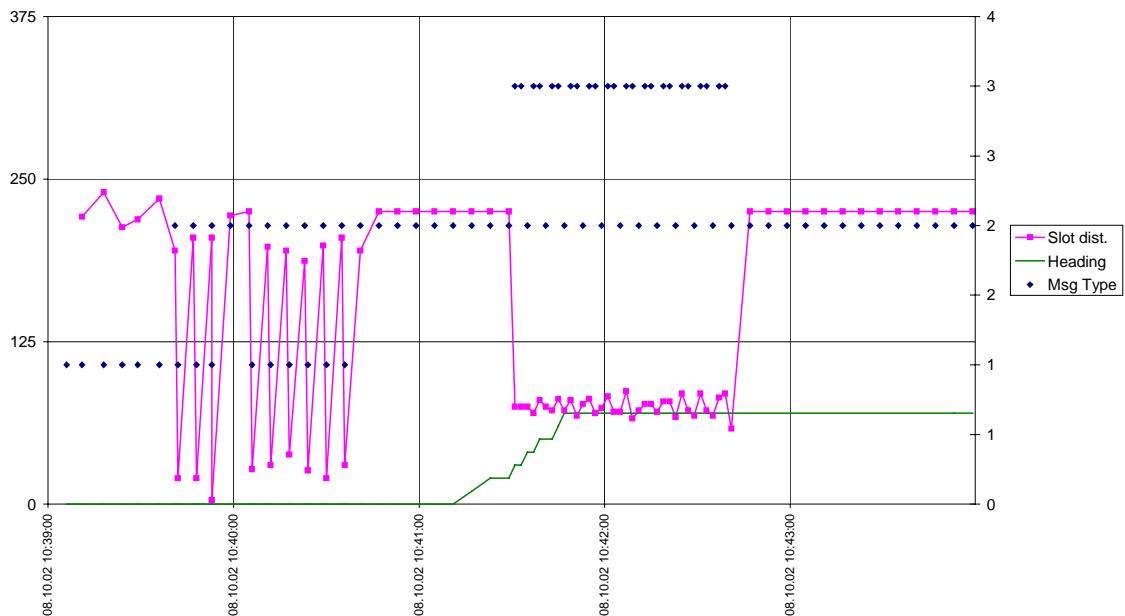


C.4 Network entry phase

28.06.02 - 16.6.1 - DEBEG 3400 - Network entry

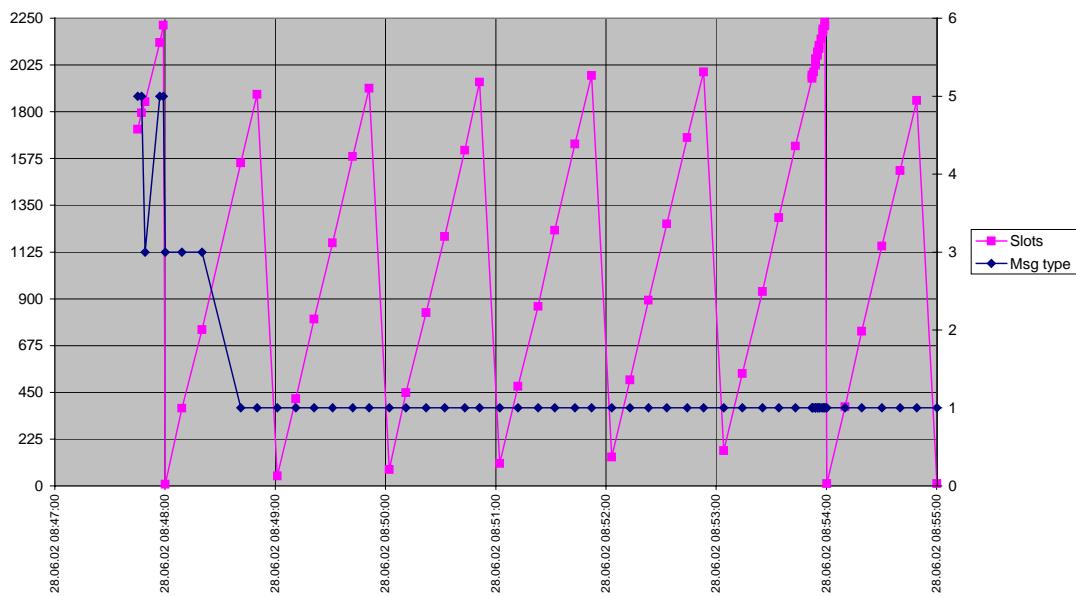


SAM DEBEG 3400 - Network entry

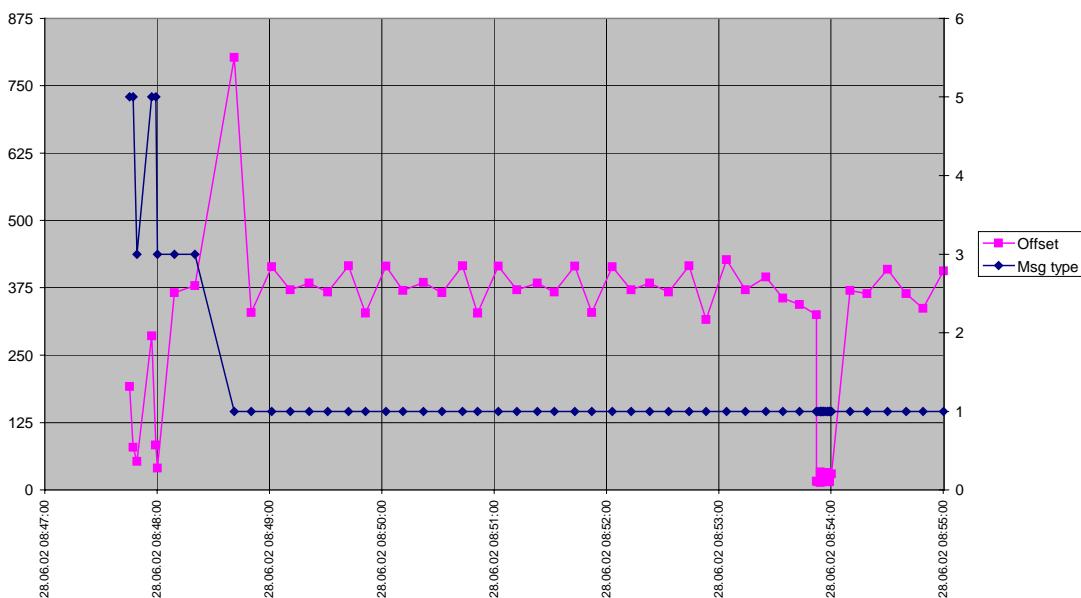


C.5 Assigned mode / report rate

DEBEG 3400 - 14.1.2 + 16.6.4.2 - Rate Assignment

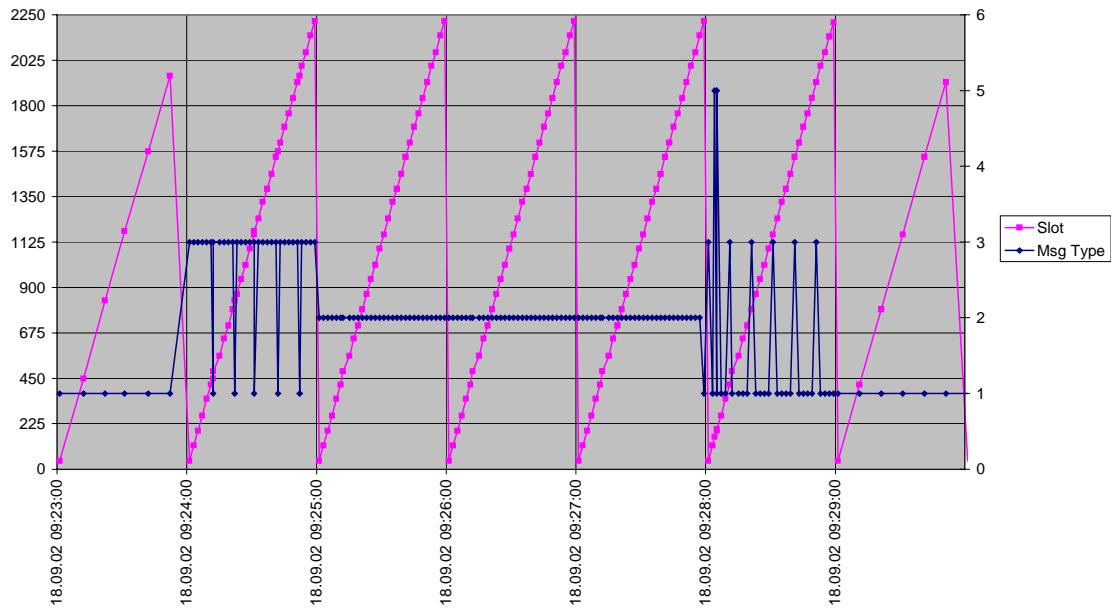


DEBEG 3400 - 14.1.2 + 16.6.4.2 - Rate assignment - Slot offset

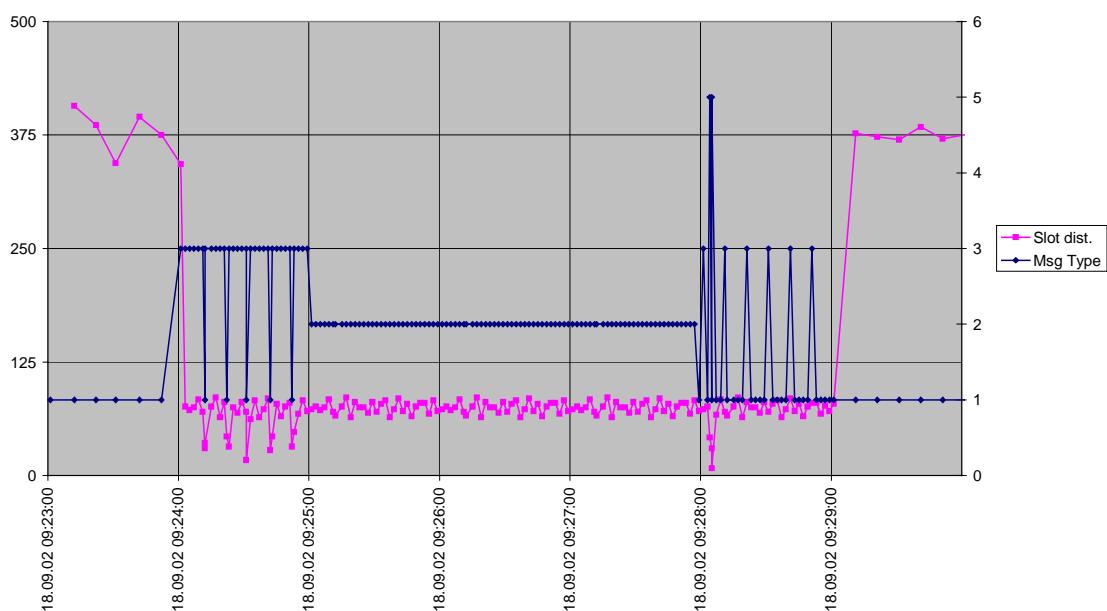


C.6 Assigned mode / slot assignment

DEBEG 3400 - 14.1.2 + 16.6.4.2 - Slot Assignment

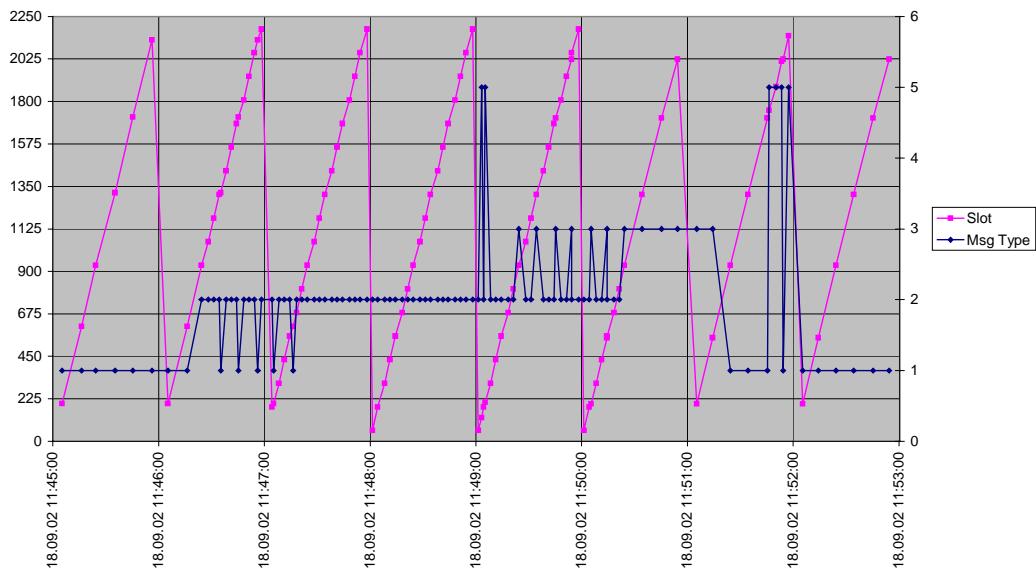


DEBEG 3400 - 14.1.2 + 16.6.4.2 - Slot assignment - Slot offset

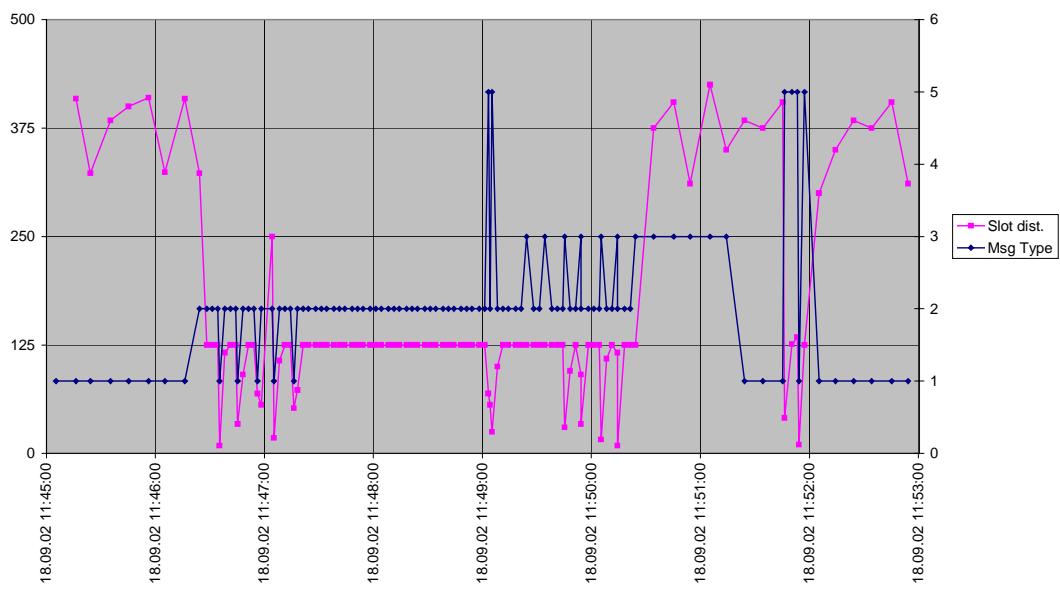

C.7 DSC response time

see test clause 8.4

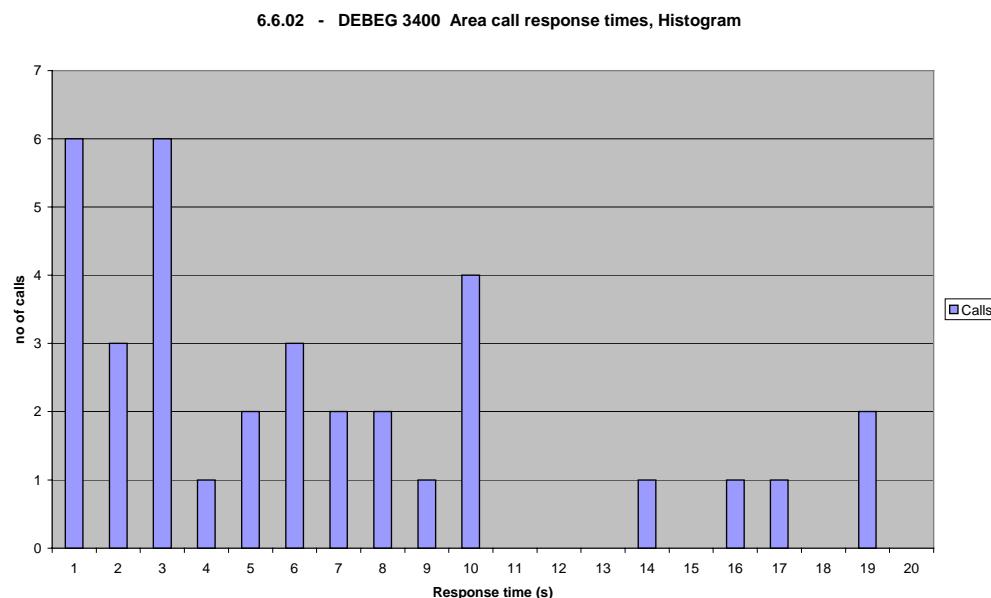


Annex D Photos of equipment under test



Picture 1: Main unit, Front/top view




Picture 2: Main unit, Top view / label

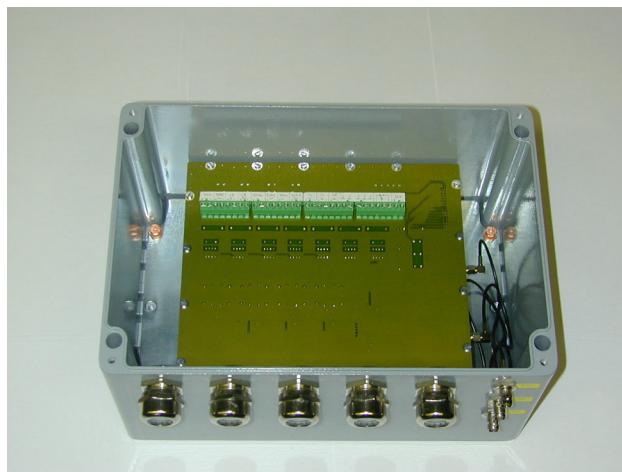

Picture 3: Main unit, Top view (open)

Configuration of DEBEG 3400 with Radarpilot Atlas1000:

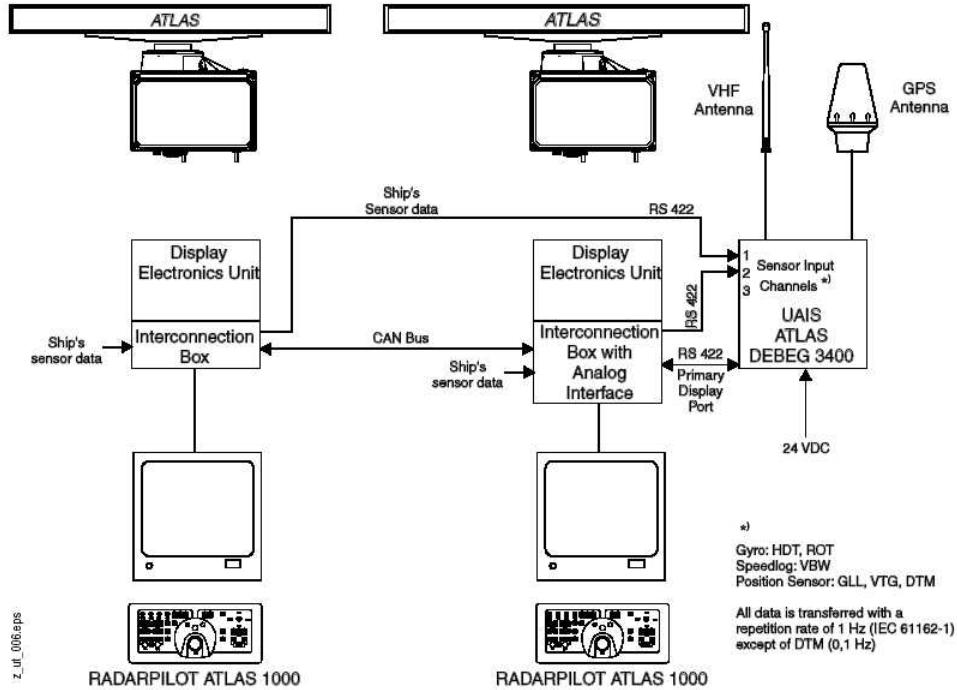

Configuration of DEBEG 3400 with Atlas Chartpilot:

