

Honeywell

OneWireless
OWA 100 OneWireless Adapter
User Manual

34-XY-25-40
Revision 1
September 2010

Notices and Trademarks

Copyright 2010 by Honeywell International Inc.
Revision 1 September 2010

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Honeywell, PlantScape, Experion PKS, and TotalPlant are registered trademarks of Honeywell International Inc.

Other brand or product names are trademarks of their respective owners.

Honeywell Process Solutions

1860 West Rose Garden Lane

Phoenix, AZ 85027

About This Document

This document describes mounting, installation, wiring, operation and maintenance of the OWA 100 Wireless Adapter are covered in other documents.

Honeywell does not recommend using devices for critical control where there is a single point of failure or where single points of failure result in unsafe conditions. OneWireless is targeted at open loop control, supervisory control, and controls that do not have environmental or safety consequences. As with any process control solution, the end-user must weigh the risks and benefits to determine if the products used are the right match for the application based on security, safety, and performance. Additionally, it is up to the end-user to ensure that the control strategy sheds to a safe operating condition if any crucial segment of the control solution fails.

Revision Information

Document Name	Document ID	Revision Number	Publication Date
OWA 100 Adapter User Manual	34-XY-25-40	1	September 2010

References

The following list identifies all documents that may be sources of reference for material discussed in this publication.

Document Title
Getting Started with Honeywell OneWireless Solutions
OneWireless Wireless Builder User's Guide
OneWireless Builder Parameter Reference

Support and contact info

United States and Canada

Contact: Honeywell Process Solution
Global Technical Support: Phone 1-800 423-9883.
Honeywell Field Solutions Customer Support: Phone 1-800-343-0228
Calls are answered by dispatcher between 6:00 am and 4:00 pm Mountain Standard Time.
Emergency calls outside normal working hours are received by an answering service and returned within one hour.

Outside US: Phone 001-215/641-3610

Email: ask-ssc@honeywell.com

Mail: Honeywell Process Solutions
1860 West Rose Garden Lane
Phoenix, AZ, 85027

Europe

Contact: Honeywell TAC-EMEA
Phone: +32-2-728-2732
Facsimile: +32-2-728-2696
Mail: TAC-BE02
Hermes Plaza
Hermeslaan, 1H
B-1831 Diegem, Belgium

Pacific

Contact: Honeywell Global TAC – Pacific
Phone: 1300-300-4822 (toll free within Australia)
+61-8-9362-9559 (outside Australia)
Facsimile: +61-8-9362-9564
Mail: Honeywell Limited Australia
5 Kitchener Way
Burswood 6100, Western Australia
Email: GTAC@honeywell.com

India

Contact: Honeywell Global TAC – India
Phone: +91-20- 6603-9400
Facsimile: +91-20- 6603-9800
Mail: Honeywell Automation India Ltd.
56 and 57, Hadapsar Industrial Estate
Hadapsar, Pune –411 013, India
Email: Global-TAC-India@honeywell.com

Korea

Contact: Honeywell Global TAC – Korea
Phone: +82-2-799-6317
+82-11-9227-6324
Facsimile: +82-2-792-9015
Mail: Honeywell Co., Ltd
17F, Kikje Center B/D,
191, Hangangro-2Ga
Yongsan-gu, Seoul, 140-702, Korea
Email: Global-TAC-Korea@honeywell.com

People's Republic of China

Contact: Honeywell Global TAC – China
Phone: +86- 21-5257-4568
Mail: Honeywell (China) Co., Ltd
33/F, Tower A, City Center, 100 Zunyi Rd.
Shanghai 200051, People's Republic of China
Email: Global-TAC-China@honeywell.com

Singapore

Contact: Honeywell Global TAC – South East Asia
Phone: +65-6580-3500
Facsimile: +65-6580-3501
+65-6445-3033
Mail: Honeywell Private Limited
Honeywell Building
17, Changi Business Park Central 1
Singapore 486073
Email: GTAC-SEA@honeywell.com

Taiwan

Contact: Honeywell Global TAC – Taiwan
Phone: +886- 7- 536-2567
Facsimile: +886-7-536-2039
Mail: Honeywell Taiwan Ltd.
17F-1, No. 260, Jhongshan 2nd Road.
Cianjen District
Kaohsiung, Taiwan, ROC
Email: Global-TAC-Taiwan@honeywell.com

Japan

Contact: Honeywell Global TAC – Japan
Phone: +81-3-6730-7160
Facsimile: +81-3-6730-7228
Mail: Honeywell Japan Inc.
New Pier Takeshiba, South Tower Building,
20th Floor, 1-16-1 Kaigan, Minato-ku,
Tokyo 105-0022, Japan
Email: Global-TAC-JapanJA25@honeywell.com

World Wide Web

Honeywell Solution Support Online:

<http://www.honeywell.com/ps>

Elsewhere

Outside US: Phone 001-215/641-3610 or call your nearest Honeywell office.

Training Classes

Honeywell Automation College:
<http://www.automationcollege.com>

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol	Definition
	ATTENTION: Identifies information that requires special consideration.
	TIP: Identifies advice or hints for the user, often in terms of performing a task.
CAUTION	Indicates a situation which, if not avoided, may result in equipment or work (data) on the system being damaged or lost, or may result in the inability to properly operate the process.
	<p>CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.</p> <p>CAUTION symbol on the equipment refers the user to the product manual for additional information. The symbol appears next to required information in the manual.</p>
	ESD HAZARD: Danger of an electro-static discharge to which equipment may be sensitive. Observe precautions for handling electrostatic sensitive devices.
	Protective Earth (PE) terminal: Provided for connection of the protective earth (green or green/yellow) supply system conductor.

continued

Symbol	Description
	The Factory Mutual® Approval mark means the equipment has been rigorously tested and certified to be reliable.
	The Canadian Standards mark means the equipment has been tested and meets applicable standards for safety and/or performance.
	The Ex mark means the equipment complies with the requirements of the European standards that are harmonised with the 94/9/EC Directive (ATEX Directive, named after the French "ATmosphere EXplosible").
	For radio equipment used in the European Union in accordance with the R&TTE Directive the CE Mark and the notified body (NB) identification number is used when the NB is involved in the conformity assessment procedure. The alert sign must be used when a restriction on use (output power limit by a country at certain frequencies) applies to the equipment and must follow the CE marking.

Symbol	Description
 N314	<p>The C-Tick mark is a certification trade mark registered to ACMA (Australian Communications and Media Authority) in Australia under the Trade Marks Act 1995 and to RSM in New Zealand under section 47 of the NZ Trade Marks Act. The mark is only to be used in accordance with conditions laid down by ACMA and RSM. This mark is equal to the CE Mark used in the European Union.</p> <p>N314 directly under the logo is Honeywell's unique supplier identification number.</p>
	<p>Brazil – National Agency for telecommunications</p>

Contents

Support and contact info	iii
1. INTRODUCTION	1
1.1 SAFETY MESSAGES.....	1
Warnings.....	1
1.2 Purpose	1
1.3 Scope.....	1
1.4 OneWireless network overview	1
1.5 About the OWA 100 OneWireless Adapter	2
Outputs	2
2. SPECIFICATIONS	3
2.1 European Union Usage.....	3
2.2 Certifications and approvals.....	4
Provisioning Device	5
2.3 Agency compliance information.....	5
FCC compliance statements	5
IC compliance statements	5
Radio Frequency (RF) statement.....	6
European Union Conformity.....	6
Restriction	6
Japanese Restrictions	6
2.4 Honeywell European (CE) Declaration of Conformity (DoC).....	7
European Declaration of Conformity statements.....	8
For more information about the R&TTE Directive	9
2.5 IECEx Conditions of Certification:	9
2.6 ATEX Conditions for Safe Use:.....	9
3. CONFIGURATION	10
3.1 SAFETY MESSAGES.....	10
Warnings.....	10
3.2 Installation	11
3.3 Connecting to network	12
3.4 Configuration.....	13

4. OPERATION	19
4.1 Overview	19
OWA 100 Adapter display modes	19
4.2 OWA 100 Adapter connection status.....	19
4.3 Provisioning device menus.....	21
Overview	21
Main menu.....	21
Security and Node Deployment.....	22
Device Local Configuration.....	24
Read Node Information	25
Advanced Options	27
5. MAINTENANCE/REPAIR	29
5.1 Parts	29
5.2 Replacing the battery.....	29
When to replace	29
Tools required	29
Procedure.....	29
6. CERTIFICATION INSTALLATION REQUIREMENTS.....	32
6.1 Certification Drawings	32
7. REFERENCE DATA	38
7.1 Product Specifications	38
OPERATING CONDITIONS.....	38
SPECIFICATIONS	38
PHYSICAL SPECIFICATIONS	39

Tables

Table 1 OWA 100 Adapter connection status	19
Table 2 Buttons for Device Local Configuration	24
Table 3 Read Node Information	25
Table 4 Advanced Options	28
Table 5 Battery replacement procedure	31

Figures

Figure 1-1 OWA 100 Adapter Functional Diagram.....	2
Figure 3-1 & Figure 3-2.....	Error! Bookmark not defined.
Figure 3-3.....	12
Figure 3-4 OWA 100 – TWO-WIRE CONFIGURATION	13
Figure 3-5 OWA 100 – TWO-WIRE CONFIGURATION WITH RESISTOR	13
Figure 3-6 OWA 100 – 4-WIRE PASSIVE DEVICE CONFIGURATION.....	14
Figure 3-7 OWA 100 – 4-WIRE PASSIVE DEVICE CONFIGURATION WITH RESISTOR	14
Figure 3-8 OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION	15
Figure 3-9 OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION WITH NO 4-20 mA LOOP.....	15
Figure 3-10 OWA 100 – AS A ROUTER, NO WIRED DEVICE	16
Figure 3-11 OWA 100 – AS A ROUTER, NO WIRED DEVICE	16
Figure 3-12 OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION WITH NO 4-20 mA LOOP.....	17
Figure 3-13 REMOTE INSTALLATION	17
Figure 4-1 Main menu.....	21
Figure 4-2 Security and Node Deployment	22
Figure 4-3 Device Local Configuration screen	24
Figure 4-4 Read Node Information	25
Figure 4-5 Advanced Options	27
Figure 5-1 Battery replacement	30

1. Introduction

1.1 Safety Messages

These instruction procedures may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol (⚠). Please refer to the following safety messages before performing an operation preceded by this symbol.

Warnings



WARNING

Failure to follow these instructions could result in death or serious injury.

- Make sure only qualified personnel perform the installation.

Explosions could result in death or serious injury.

- Before connecting the OWA 100 OneWireless Adaptor in an explosive atmosphere, make sure the instruments are installed in accordance with intrinsically safe or nonincendive field wiring practices.
- Verify that the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

Delete line

1.2 Purpose

This manual describes the Honeywell OneWireless OWA 100 Adapter installation, function, operation and maintenance.

1.3 Scope

The manual includes:

- Details of topics that relate uniquely to the Honeywell OWA 100 Adapter
- This manual covers installation, mounting and wiring of the OneWireless OWA 100 Adapter.

1.4 OneWireless network overview

OneWireless is an all digital, serial, two-way communication mesh network that interconnects industrial field sensors to a central system.

OneWireless has defined standards to which field devices and operator stations communicate with one another. The communications protocol is built as an "open system" to allow all field devices and equipment that are built to OneWireless standard to be integrated into a system, regardless of the device manufacturer. This interoperability of devices using OneWireless technology is to become an industry standard for automation systems.

1.5 About the OWA 100 OneWireless Adapter

The OWA 100 Adapter is designed with an OneWireless interface to allow wired HART devices to operate in a compatible distributed OneWireless system. The adapter will interoperate with any OneWireless-registered device and provide the HART diagnostic and process information to any ISA100.11a compliant system.

The OWA 100 Adapter includes OneWireless electronics for operating in a 2.4GHz network.

Outputs

The Process Variable (PV) is available for monitoring and alarm purposes. Available PV update rates are 1, 5, 10, 30 seconds and are set on Wireless Builder. Slower update rates extend battery life.

Figure 1 shows a block diagram of a OWA 100 Adapter's operating functions.

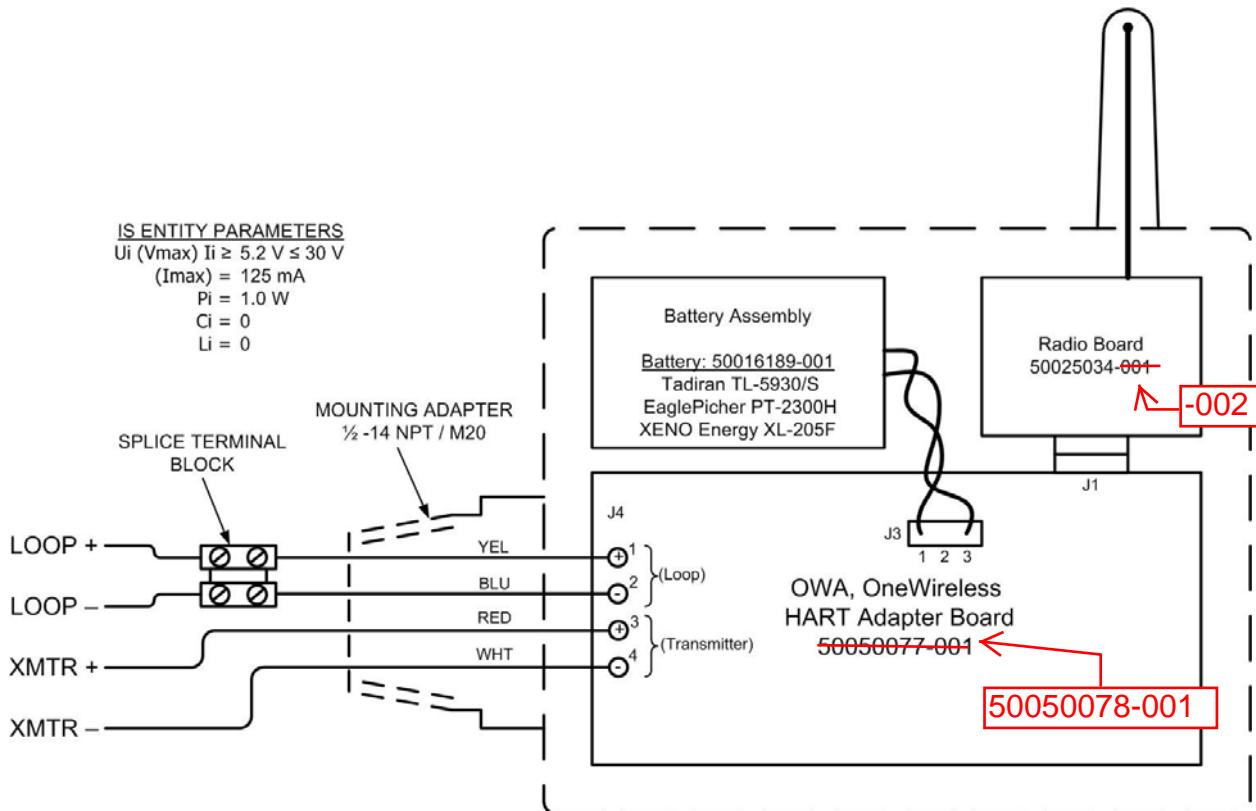


Figure 1-1 OWA 100 Adapter Functional Diagram

2. Specifications

2.1 European Union Usage

This product may be used in any of the following European Union nations.

Country	ISO 3166 2 letter code	Country	ISO 3166 2 letter code
Austria	AT	Latvia	LV
Belgium	BE	Liechtenstein	LI
Bulgaria	BG	Lithuania	LT
Cyprus	CY	Malta	MT
Czech Republic	CZ	Netherlands	NL
Denmark	DK	Norway	NO
Estonia	EE	Poland	PL
Finland	FI	Portugal	PT
France	FR	Romania	RO
Germany	DE	Slovakia	SK
Greece	GR	Slovenia	SI
Hungary	HU	Spain	ES
Iceland	IS	Sweden	SE
Ireland	IE	Switzerland	CH
Italy	IT	United Kingdom	BG

2. Specifications

2.2. Certifications and approvals

2.2 Certifications and approvals

OneWireless Adaptor

Refer to product label for applicable ratings.

Approval / Item	Ratings / Description
CSA Intrinsically Safe	IS - CI I, Div. 1, Gp ABCDEFG; T4 (-40°C ≤ Ta ≤ +85°C); DIP CI II, Div. 1, Gp EFG, CL III, Div. 1; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X
	IS - CI I, Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +85°C); IP66
CSA Non-Incendive	NI - CI I, Div. 2, Gp ABCD; T4 (-40°C ≤ Ta ≤ +85°C); DIP A22, CI II, Div. 2, Gp FG; CL III, Div. 2; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X
	NI - CI I, Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +85°C); Type 4X
FM Approvals Intrinsically Safe	IS - CI I, Div. 1, Gp ABCDEFG; T4 (-40°C ≤ Ta ≤ +85°C); DIP CI II, Div. 1, Gp EFG, CL III, Div. 1; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X
	IS - CI I, Zone 0/1; AEx ia IIC; T4 (-40°C ≤ Ta ≤ +85°C); Zone 20/21; Ex ta IIIC T90°C T500 95°C , IP66
FM Approvals Nonincendive	NI - CI I, Div. 2, Gp ABCD; T4 (-40°C ≤ Ta ≤ +85°C); DIP CI II, Div. 2, Gp FG; CL III, Div. 2; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X
	NI - Zone 2; AEx nA IIC, T4 (-40°C ≤ Ta ≤ +85°C); Zone 22, AEx tc IIIC T90°C, IP66
FM-ATEX 10.xxxxX Intrinsically Safe	IS - Zone 0; Ex II 1 GD Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; Ex ta IIIC T90°C T500 95°C , Da, IP66
FM-ATEX 10.xxxxX Non Sparking	NS - Zone 2; Ex II 3 GD Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, Ex tc IIIC T90°C, Dc, IP66
IECEx-FM10.xxxxX Intrinsically Safe	IS - Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; Ex ta IIIC T90°C T500 95°C , Da, IP66
IECEx-FM10.xxxxX Non Sparking	NS - Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, Ex tc IIIC T90°C, Dc, IP66
SAEx S/10-xxxX Intrinsically Safe	IS - Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; Ex ta IIIC T90°C T500 95°C , Da, IP66
SAEx S/10-xxxX Non Sparking	NS - Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, Ex tc IIIC T90°C, Dc, IP66
INMETRO 10EC02CPxxxX Intrinsically Safe	IS - Zone 0; BR-Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; BR-Ex ta IIIC T90°C T500 95°C , Da, IP66
INMETRO 2010EC02CPxxxX Non Sparking	NS - Zone 2; BR-Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, BR-Ex tc IIIC T90°C, Dc, IP66
Enclosure Type	Type 4X, IP 66

For detailed OWA 100 Adapter specifications see the following Specification and Model Selection Guide.

- OWA 100 Adapter (document 34-XY-03-43)

Provisioning Device

Install the Provisioning Device application on any PDA having

- Windows Mobile version 4.2+
- Infrared port.

2.3 Agency compliance information

This section contains the Federal Communications Commission (FCC), Industry Canada (IC) and Radio Frequency compliance statements for the OneWireless Multinode device.



ATTENTION

OWA 100 ADAPTER 100 units must be professionally installed in accordance with the requirements specified in the *OneWireless Agency Compliance Professional Installation Guide*.

FCC compliance statements

- This device complies with Part 15 of FCC Rules and Regulations. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- Intentional or unintentional changes or modifications must not be made to the Multinode unless under the express consent of the party responsible for compliance. Any such modifications could void the user's authority to operate the equipment and will void the manufacturer's warranty.

IC compliance statements

- To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropic radiated power (EIRP) is not more than that permitted for successful communication.
- Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- This Class A digital apparatus complies with Canadian ICES-003.
- French: Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

2. Specifications

2.3. Agency compliance information

Radio Frequency (RF) statement

To comply with FCC's and Industry Canada's RF exposure requirements, the following antenna installation and device operating configurations must be satisfied.

- This device must not be co-located with any other antenna or OWA 100 Adapter device and have a separation distance of at least 20cm from all persons.

European Union Conformity

The XYR 6000 Wireless Transmitters are in conformity with the applicable portions of the ETSI standards as required by the R&TTE Directive 1999/5/EC.

Restriction

France restricts outdoor use to 10mW (10dBm) EIRP in the frequency range of 2,454-2,483.5 MHz. Installations in France must limit EIRP to 10dBm, for operating modes utilizing frequencies in the range of 2,454 – 2,483.5MHz.

~~Japanese Restrictions~~

~~For locations in Japan the transmitter power is restricted to 12.14dBm/Mhz {(32mW (15.4 dBm)} maximum EIRP including the antenna.~~

2.4 Honeywell European (CE) Declaration of Conformity (DoC)

This section contains the European Declaration of Conformity (DoC) statement for the OWA 100 OneWireless Adapter.

R&TTE Directive	1999/5/EC	EMC Directive	2004/108/EC	ATEX Directive	94/9/EC
Standards Applied					
EN 300 328 V1.7.1	Emissions Specification				
EN301 893 V1.4.1	Emissions Specification and Method				
EN 301 489-17 V1.2.1	Immunity Specification				
EN 301 489-1 V1.6.1	Immunity Method				
IEC 61326-1:06	Electrical Equipment for Measurement, Control and Laboratory Use – EMC Requirements – Part 1: General Requirements				
IEC 60079-0:07	Electrical Apparatus for Explosive Gas Atmospheres – General Requirements				
IEC 60079-11:07	Electrical Apparatus for Explosive Gas Atmospheres – Intrinsic Safety				
IEC 60529:01	Degrees of protection provided by enclosures (IP Code)				
IEC 60079-31:08	Explosive Atmospheres – Part 31: Equipment Dust Ignition Protection by Enclosure "t"				
IEC E60079-15:02	Electrical Apparatus for Explosive Atmospheres – Part 15: Equipment protection by type of protection "n"				
EN 60079-0:09	Electrical Apparatus for Explosive Gas Atmospheres – General Requirements				
EN 60079-11:07	Electrical Apparatus for Explosive Gas Atmospheres – Intrinsic Safety				
EN 60529:92 (R04)	Degrees of protection provided by enclosures (IP Code)				
EN 60079-31:09	Explosive Atmospheres – Part 31: Equipment Dust Ignition Protection by Enclosure "t"				
EN 60079-15:05	Electrical Apparatus for Explosive Atmospheres – Part 15: Equipment protection by type of protection "n"				
Manufacturer Name and Address	Honeywell Field Solutions 512 Virginia Drive, Fort Washington, PA 19034				
Compliance Statement	The OWA 100 complies with the harmonized standards listed above. Typical product line systems and configurations have been tested for conformity.				
	Frederick M. Kent Sr. Principal Approvals Engineer		09/xx/2010		
(Signature)	(Name / Position)			(Date)	

2. Specifications

2.4. Honeywell European (CE) Declaration of Conformity (DoC)

European Declaration of Conformity statements

Language	Statement
Česky (Czech):	Honeywell tímto prohlašuje, že tento OWA 100 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk (Danish):	Undertegnede Honeywell erklærer herved, at følgende udstyr OWA 100 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch (German):	Hiermit erklärt Honeywell , dass sich das Gerät OWA 100 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti (Estonian):	Käesolevaga kinnitab Honeywell seadme OWA 100 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, Honeywell , declares that this OWA 100 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español (Spanish):	Por medio de la presente Honeywell declara que el OWA 100 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική (Greek):	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Honeywell ΔΗΛΩΝΕΙ ΟΤΙ OWA 100 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
Français (French):	Par la présente Honeywell déclare que l'appareil OWA 100 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano (Italian):	Con la presente Honeywell dichiara che questo OWA 100 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski (Latvian):	Ar šo Honeywell deklarē, ka OWA 100 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių (Lithuanian):	Šiuo Honeywell deklaruojama, kad šis OWA 100 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands (Dutch):	Hierbij verklaart Honeywell dat het toestel OWA 100 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malta (Maltese):	Hawnhekk, Honeywell , jiddikjara li dan OWA 100 jikkonforma mal-ħtiġiġiet esenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Magyar (Hungarian):	Alulírott, Honeywell nyilatkozom, hogy a OWA 100 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Polski (Polish):	Niniejszym Honeywell oświadcza, że OWA 100 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi

Language	Statement
	postanowieniami Dyrektywy 1999/5/EC.
Português (Portuguese):	Honeywell declara que este OWA 100 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko (Slovenian):	Honeywell izjavlja, da je ta OWA 100 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky (Slovak):	Honeywell týmto vyhlasuje, že OWA 100 splňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi (Finnish):	Honeywell vakuuttaa täten että OWA 100 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska (Swedish):	Härmed intygar Honeywell att denna OWA 100 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Íslenska (Icelandic):	Hér með lýsir Honeywell yfir því að OWA 100 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk (Norwegian):	Honeywell erklærer herved at utstyret OWA 100 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

For more information about the R&TTE Directive

The following website contains additional information about the Radio and Telecommunications Terminal Equipment (R&TTE) directive:

<http://ec.europa.eu/enterprise/rtte/faq.htm>

2.5 IECEx Conditions of Certification:

The enclosure is non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Zone 0, Gb according to IEC 60079-0. Therefore when it is used within a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

2.6 ATEX Conditions for Safe Use:

The enclosure is non-conducting and the area of the non-conducting part exceeds the maximum permissible areas for Category II 1 G (Zone 0) Gb according to EN 60079-0. Therefore when it is used within a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

3. Configuration

3.1 Safety Messages

These instruction procedures may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol (⚠). Please refer to the following safety messages before performing an operation preceded by this symbol.

Warnings



WARNING

Failure to follow these instructions could result in death or serious injury.

- Make sure only qualified personnel perform the installation.

Explosions could result in death or serious injury.

- Before connecting the OWA 100 OneWireless Adaptor in an explosive atmosphere, make sure the instruments are installed in accordance with intrinsically safe or nonincendive field wiring practices.
- Verify that the operating atmosphere of the transmitter is consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

Replace with attached page.

3. Configuration

3.1 Safety Messages

These instruction procedures may require special precautions to ensure the safety of the personnel performing the operations. Information that potentially raises safety issues is indicated by a warning symbol (⚠). Please refer to the following safety messages before performing an operation preceded by this symbol.

Warnings



WARNING – POTENTIAL ELECTROSTATIC CHARGING HAZARD

The OWA 100 OneWireless Adaptor enclosure is non-conductive Lexan, EXL9330 Polycarbonate and may generate an ignition-capable level of electrostatic charge under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions (such as high-pressure steam), which might cause a build-up of electrostatic charge on non-conducting surfaces.



WARNING

Failure to follow these instructions could result in death or serious injury.

- Make sure only qualified personnel perform the installation.
- Explosions could result in death or serious injury.
- The OWA 100 OneWireless Adapter can only be opened for battery insertion and activation, or installed in a potentially hazardous location when the location is declared to be non-hazardous.
- Before mounting the OWA 100 OneWireless Adapter to an existing field transmitter, verify that the instruments are installed in accordance with applicable intrinsically safe or nonincendive field wiring practices.
- Verify that the certification parameters of the OneWireless Adapter are consistent with the appropriate hazardous locations certifications.

Electrical shock could cause death or serious injury.

- Use extreme caution when making contact with the leads and terminals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

3.2 Installation

3-1

1. Loosen the four M4 screws to remove the cover, (See Figure 5-1)
If a new battery needs to be installed follow the directions for Replacing the Battery in Section 5.2.
If a battery is installed remove the shipping tag between the battery and battery holder and replace the cover.
2. Remove termination cover to which the adapter is to be connected. **(See Note)**
3. Remove plastic protective cover on adapter hub
4. Insert wires through conduit entry of the unit to which it is to be mounted then start to thread the adapter hub into the conduit entry. Use the hex on the adapter hub (smaller hex - See Figure 3-2) to securely tighten the adapter hub to the unit. To reorient the antenna of the adapter loosen the jam nut (Turn larger hex nut CC when looking at the front of the OWA 100 Adapter) and rotate the unit to the desired antenna location then retighten the jam nut. Note: The rotation of the unit is limited to 350 degrees.
5. Install the four wires per the OWA 100 Adapter Interconnection Diagram per Figure 3-4 to Figure 3-13.
6. Replace the termination cover.

Note: It is the User/Installer's responsibility to install the 100 Adapter in accordance with the national and local code requirements.

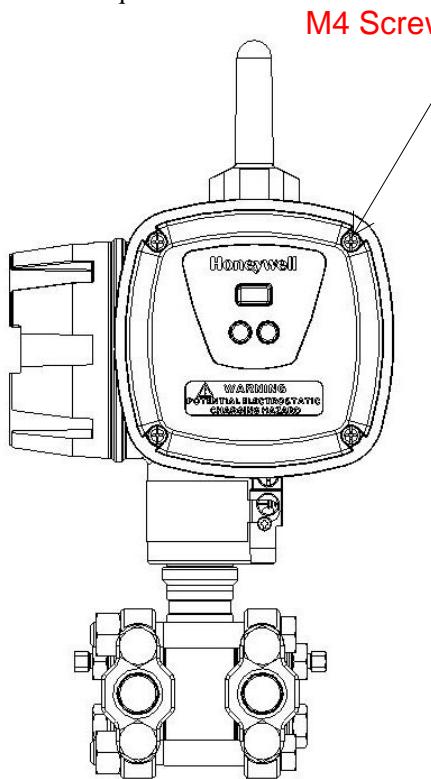


Figure 3-1

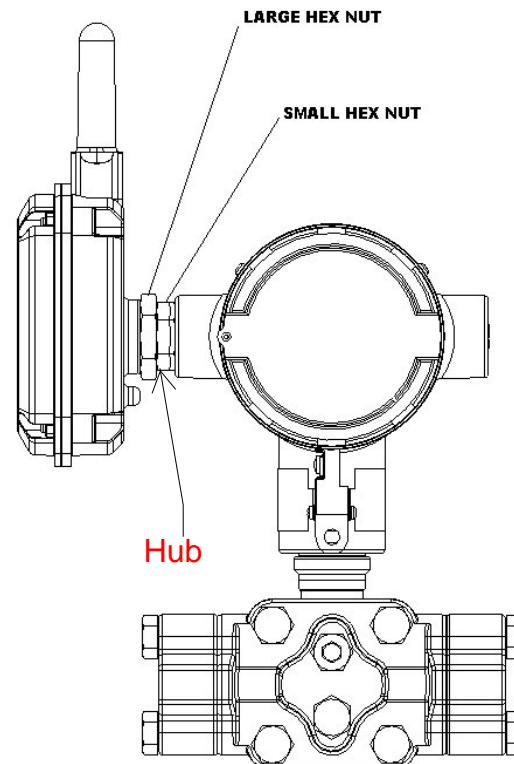


Figure 3-2

3. Configuration

3.3. Connecting to network

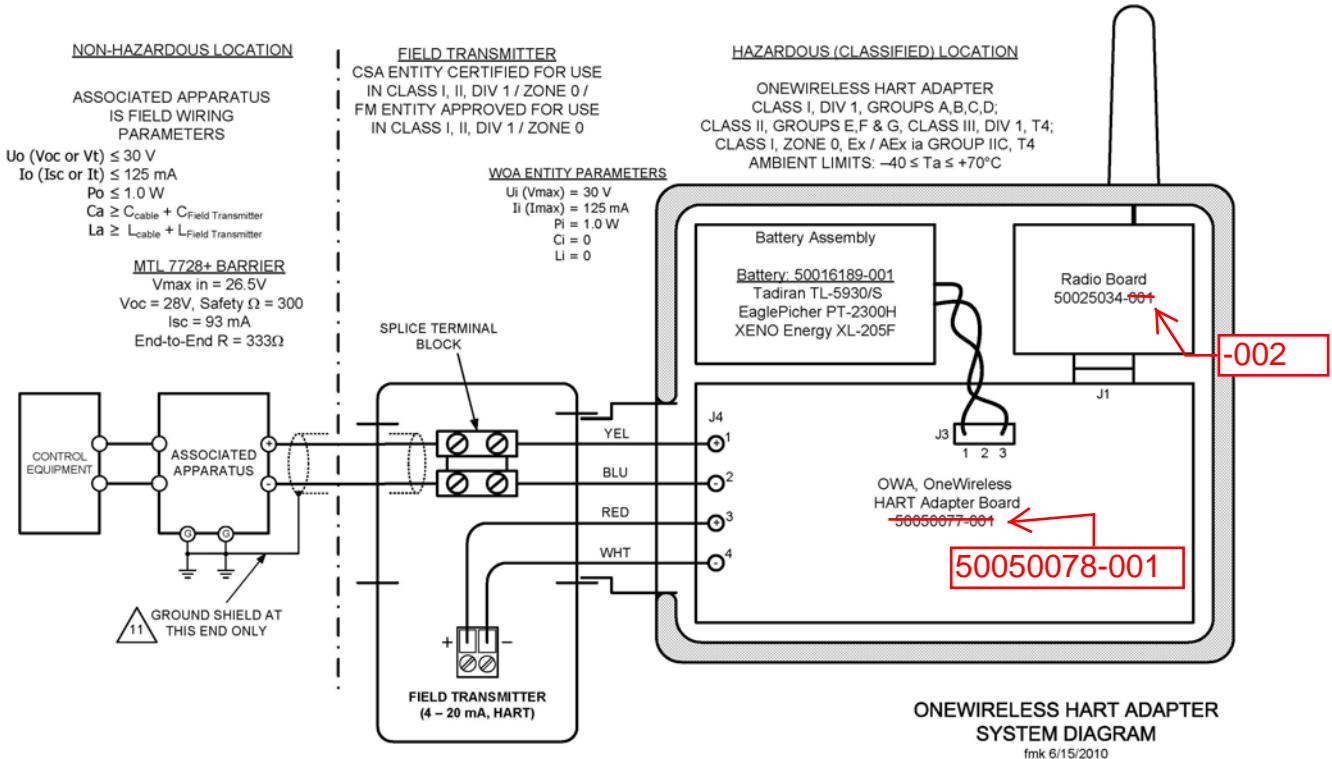


Figure 3-3

3.3 Connecting to network

Before the adapter can be configured it must be unlocked with a security key so it can join the network. Use the Provisioning Device Pocket PC software to receive security keys from the Key Server manager, then aim the Pocket PC at the OWA 100 Adapter and transmit a key.

Use Provisioning Device to connect your OWA 100 Adapter to the OneWireless network. See page X.

See Getting Started with Honeywell OneWireless Solutions for more information.

3.4 Configuration

The OWA 100 Adapter contains the electronics interface compatible for connecting to the OneWireless network. An operator uses the Wireless Builder application to configure blocks and to change operating parameters. These changes are written to the OWA 100 Adapter when it is authenticated by a security key. No local configuration of device is required.

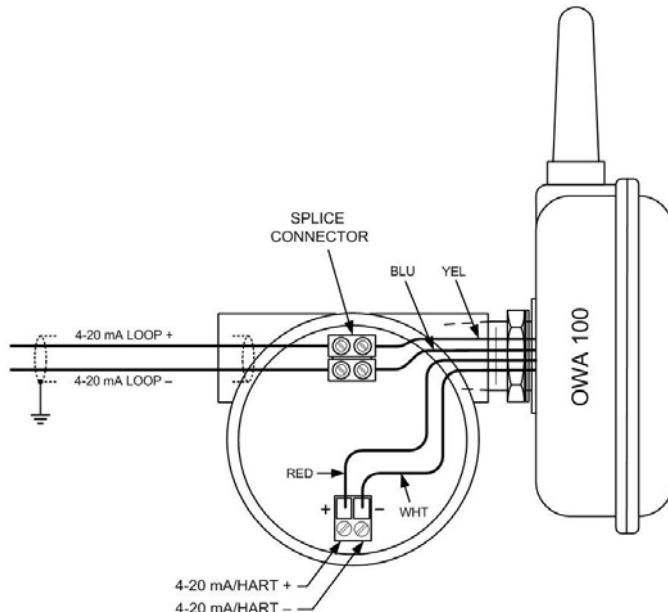


Figure 3-4 OWA 100 – TWO-WIRE CONFIGURATION


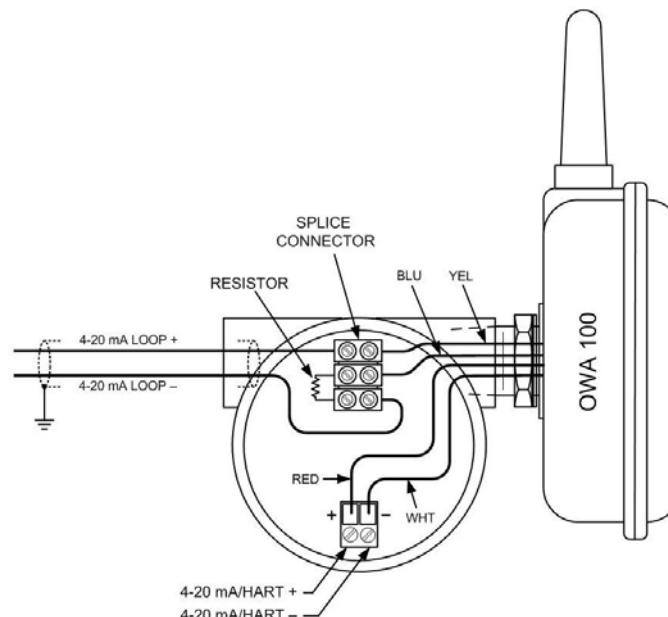


Figure 3-5 OWA 100 – TWO-WIRE CONFIGURATION WITH RESISTOR


3. Configuration

3.4. Configuration

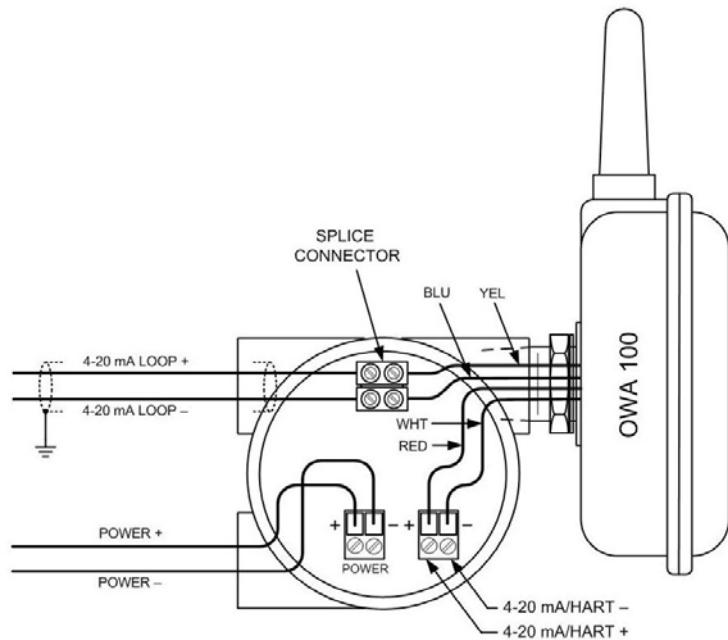


NOTE: A passive loop exists when the wired device is not supplying power to the 4-20mA loop. It is important to verify if the wired device is operating in the active or passive mode.

Figure 3-6 OWA 100 – 4-WIRE PASSIVE DEVICE CONFIGURATION

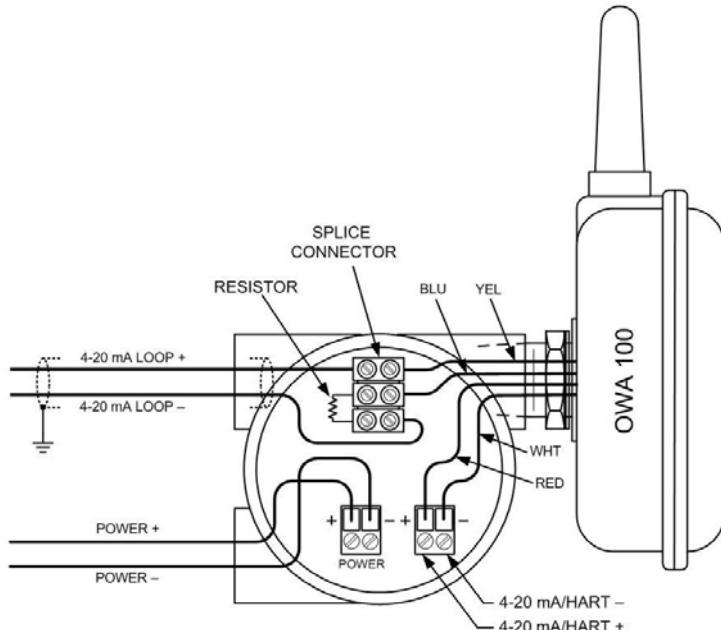

NOTE: A passive loop exists when the wired device is not supplying power to the 4-20mA loop. It is important to verify if the wired device is operating in the active or passive mode.

Figure 3-7 OWA 100 – 4-WIRE PASSIVE DEVICE CONFIGURATION WITH RESISTOR

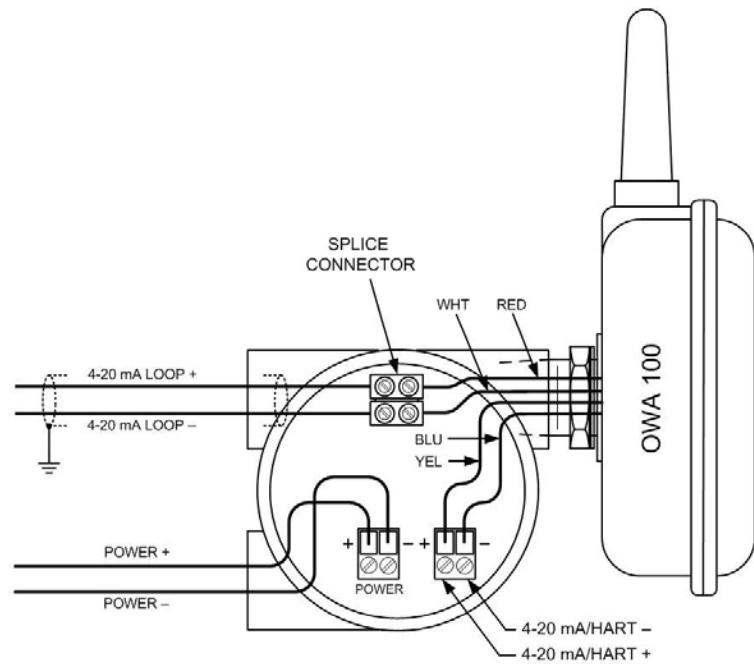

NOTE: An active loop exists when the wired device is supplying power to the 4-20mA loop. It is important to verify if the wired device is operating in the active or passive mode.

Figure 3-8 OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION

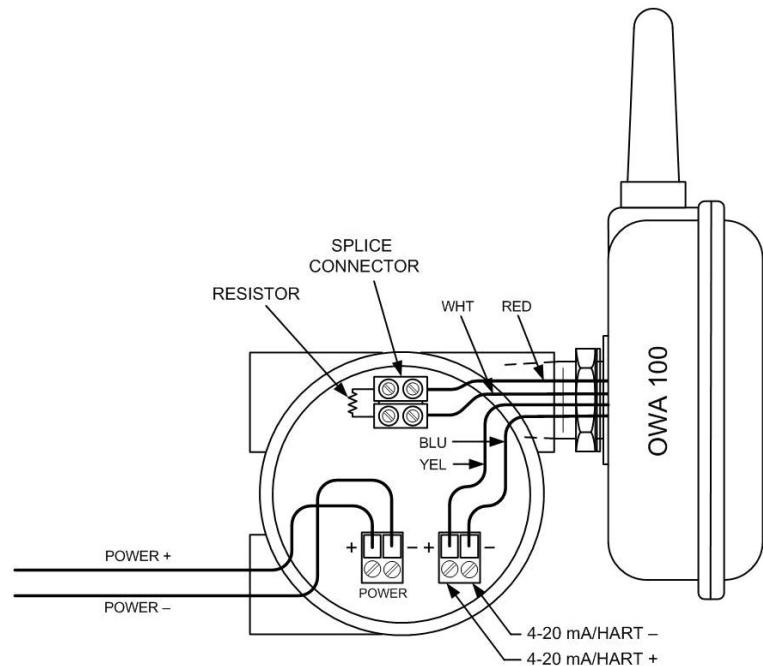


Figure 3-9 OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION WITH NO 4-20 mA LOOP

3. Configuration

3.4. Configuration

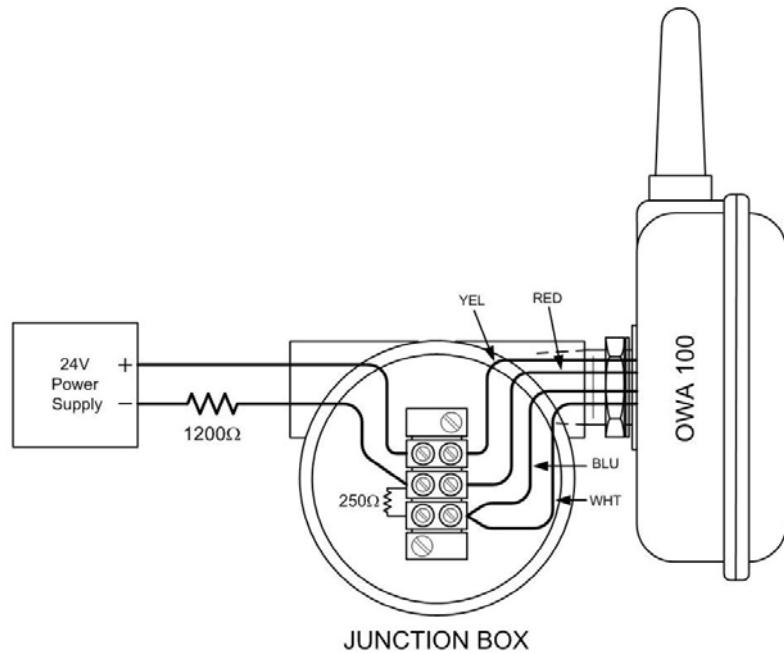


Figure 3-10 OWA 100 – AS A ROUTER, NO WIRED DEVICE

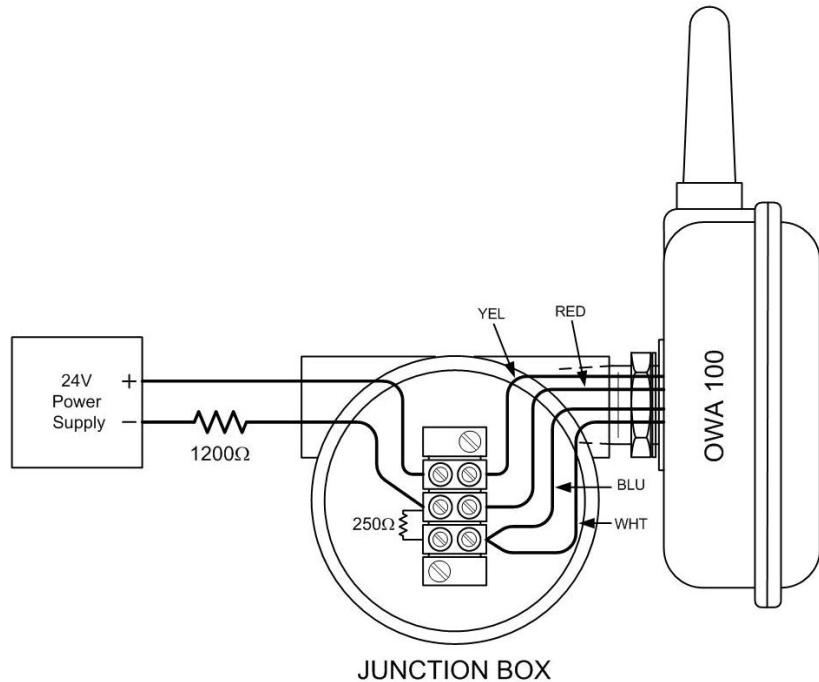


Figure 3-11 OWA 100 – AS A ROUTER, NO WIRED DEVICE

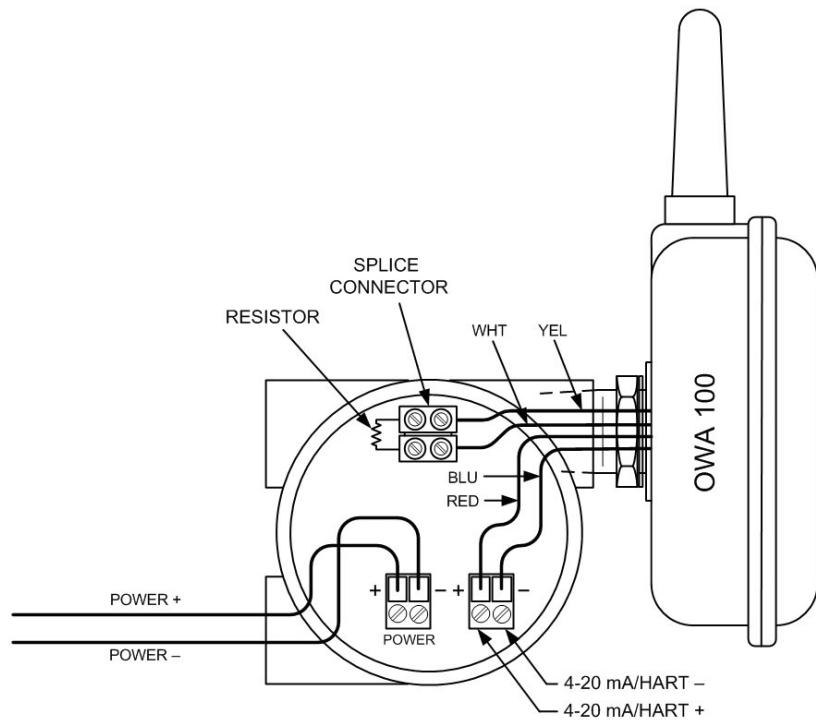


Figure 3-12 OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION WITH NO 4-20 mA LOOP

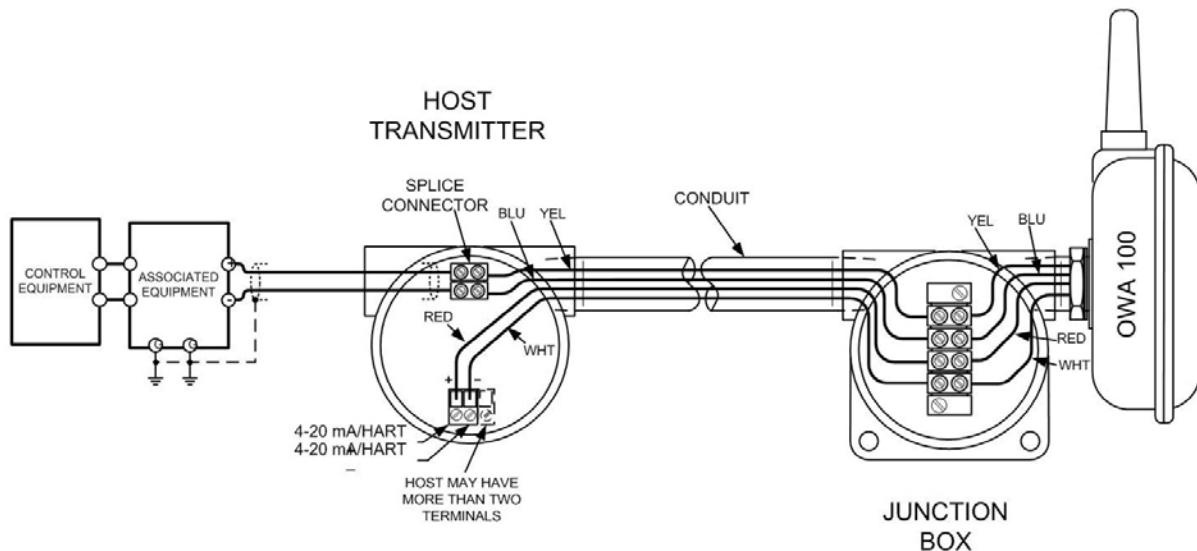


Figure 3-13 REMOTE INSTALLATION

Is this meant to be a blank page?

4. Operation

4.1 Overview

OWA 100 Adapter display modes

The OWA 100 Adapter contains one Red LED and one Green LED that are used to indicate status.

1. No Lights = No Power (No battery power and no 4-20 mA scavenging power)
2. Steady Red = No Key
3. Steady Red, Slow Blinking Green = Discovery in Progress
4. Steady Green, Slow Blinking Red = Securing in Progress
5. Slow Blinking Green = Unit is connected to OneWireless System
6. Slow Blinking Red = No Radio Connection
7. One Red Blink and no Green = Low battery warning
8. Two Red Blinks and no Green = No HART Connection (cannot communicate with HART transmitter)

4.2 OWA 100 Adapter connection status

Table 1 OWA 100 Adapter connection status

Displayed status	Definition	What to do
2	Transmitter needs a key from the Provisioning Device and is not transmitting.	Transmit a key to the transmitter. See page 22.
6	Transmitter is in between discovery attempts.	<p>If Transmitter does not make a connection within five minutes, do the following:</p> <ul style="list-style-type: none"> • Check that Key is correct for the network you are trying to join. • Check that Multinode(s) in the local area are turned on and are already a secure part of the network. • Check if KeyServer is active. • Check the KeyServer Event Log to see if the Transmitter is actively trying to join. Errors in the Event Log show that the Transmitter is trying to join but that there are problems. Consult the OneWireless Wireless Builder documentation for troubleshooting errors.
3	Transmitter has not made a connection to a Multinode and is in discovery (searching for a connection to a Multinode). Transmitter will automatically enter a power saving mode if it cannot make a connection and will retry later.	Wait for connection. If Transmitter does not make a connection within five minutes, see NOT CONN in this table.

4. Operation

4.2. OWA 100 Adapter connection status

Displayed status	Definition	What to do
4	Transmitter has connected with the network and is validating its key.	Wait for connection. If Transmitter does not make a connection within five minutes, see NOT CONN in this table.
5	Transmitter has validated the key and has made a secure connection with at least one infrastructure node	For units with radio firmware build 53 or higher: No action required. For units with radio firmware build 52: Transmitter will periodically look for a second Multinode in order to form a redundant connection to the network. If connected with only one Multinode Wireless Builder will display a Secondary Multinode Address of 0.
8	The OWA 100 Adapter cannot communicate with the HART Transmitter	<ol style="list-style-type: none">1. Check the wiring between OWA 100 Adapter and the HART Transmitter2. Check that a 4-20mA signal is present3. Using a Secondary Master confirm that the HART Transmitter will respond to HART messages.

4.3 Provisioning device menus

Overview

Hold the Provisioning Device no more than 6" (15 cm) from the OWA 100 Adapter and aim the infrared beam at the OWA 100 Adapter window while tapping on the screen command or button.

Main menu

The main menu is shown below. Details start on the next page.



Figure 4-1 Main menu

Security and Node Deployment

Use this to:

- receive new security keys,
- transmit security keys for connecting the OWA 100 Adapter (or other nodes) to the OneWireless network,
- clear all security keys from the PDA,
- clear the OWA 100 Adapter's key and reset its configuration to factory default (such as for decommissioning).

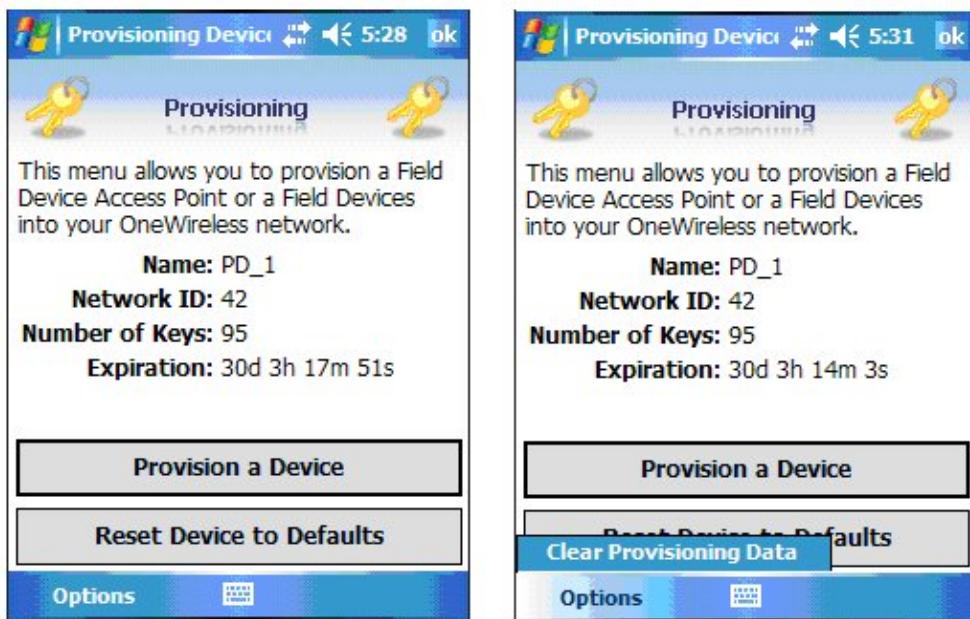


Figure 4-2 Security and Node Deployment

To connect your OWA 100 Adapter to the OneWireless network perform the following steps.

Step	Action
1	<p>If the PDA contains no keys, obtain new security keys from the PC application Key Server Manager.</p> <p>To do this, select Receive Security Keys. Keys can be received either through Infrared (by aiming PDA at the infrared dongle) or through an ActiveSync/USB connection. See Key Server Communication Method under Advanced options on page 27 for details.</p> <p>Important: The Comm Method settings must match in the PC's Key Server Manager and in the Provisioning Device (both must be set to Infrared or both to ActiveSync) in order for your PDA to receive security keys. See Key Server Communication Method under Advanced options on page 27 for details.</p>
2	<p>When the Provisioning Device has valid unexpired keys, aim it at the OWA 100 Adapter and transmit a key to the OWA 100 Adapter. The OWA 100 Adapter will validate the key and then use it to make a connection to the OneWireless Network. The OWA 100 Adapter may continue to show the diagnostic message "NO KEY" for a brief time while it validates the key before showing the "DISCOVER" message.</p> <p>To verify your OWA 100 Adapter has been authenticated, see the Connection prompt on the Read Node Info screen (page 25).</p>

To decommission your OWA 100 Adapter from the OneWireless network, select **Clear Key and Restart Node**. This clears the OWA 100 Adapter's key, network and security configurations, and resets the OWA 100 Adapter to its factory default settings. To do this perform the following steps.

Select **Clear Keys from Handheld** (under Advanced Options) when:

- The PDA has keys from one system, but you have moved your Provisioning Device to another system, or
- you want to clear all keys so that you cannot deploy any more keys without going to the key server manager and getting more.

For more details on keys, refer to Getting Started with Honeywell OneWireless Solutions.

4. Operation

4.3. Provisioning device menus

Device Local Configuration

Use Device Local Configuration buttons (Table 2) to navigate the OWA 100 Adapter menus (Table 1) and to make selections and changes. You can also use the PDA buttons.



Figure 4-3 Device Local Configuration screen

Table 2 Buttons for Device Local Configuration

Button	Function
	<ul style="list-style-type: none">Enter the Menu Tree.Enter submenu of the menu that is appearing on the screen.Execute action.Submit the entered number while doing number entry.Read value of certain displayed parameters.
	<ul style="list-style-type: none">Go to the next menu in the same level.View quick view parameters in Normal Display Sequence (PV Display).During number entry, increment the digit or change +/- sign.
	<ul style="list-style-type: none">Go to the previous menu in the same level.View quick view parameters in Normal Display Sequence (PV Display).During number entry, decrement the digit or change +/- sign.
	<ul style="list-style-type: none">Go to the upper menu level.When changing a number value, move cursor to the left/more significant digit, then wrap around to the least significant digit.

Read Node Information

Use this to read the OWA 100 Adapter's information shown in Figure 4-4. Similar to quick view parameters on the OWA 100 Adapter display. (See Table 2)



Figure 4-4 Read Node Information

Replace table 3 per
next page

Table 3 Read Node Information

Item	Description
Tag	The name given to this OWA 100 Adapter
Serial	OWA 100 Adapter serial number. This is the WBSN on the OWA 100 Adapter's nameplate. Do not confuse this with the other nameplate item marked "Serial."
NwAddr	Network Address of the device in hexadecimal.
DevRev	Device Revision: This parameter changes whenever objects and parameters are added, deleted, or their data type or range changes. It does not change if the application firmware changes without affecting the device description. Range: 0 to 65535.
Build	Sensor firmware and radio firmware build numbers.
Radio	Hardware radio type, DSSS WFN ID: Wireless Field Network ID. Range: 0 to 255.

New Table 3 part 1

Table 10 Read Node Information

Item	Description
Tag Name:	The name given to this transmitter
Vendor:	Manufacturer of device
Model:	Description of device
Revision:	Software revision of sensor firmware
Radio Version:	Software revision of radio firmware
Serial Number:	Transmitter serial number. This is the WBSN on the transmitter's nameplate. Do not confuse this with the other nameplate item marked "Serial."
Network ID	Network Address of the device in hexadecimal.
IP Address:	IP Address of radio

New Table 3 part 2

Item	Description
Device Role:	Function of the device in the wireless network. No Routing – Device functions only as a transmitter I/O Router – Device functions both as a transmitter and as a field router
Join Status:	The first line displays one of the following connection states. No Security Key – No security key has been deployed to the device or multinode. The user must give a security key to the device or multinode before it will join the wireless sensor network. Not Joined – A security key exists in the device or multinode, but no connection has been formed. The device or multinode is waiting to form a connection and will automatically retry shortly. Users may transmit a new security key in order to force the device or multinode to immediately retry to form a connection. Discover – The device is attempting to form a connection to the wireless sensor network. The device is discovering multinode and, if a multinode is found, will transition to the securing state. Securing – The device is attempting to form a connection to the wireless sensor network. The device has discovered one or two multinode and is attempting to form a secure session. If successful, the device will transition to the connected state. Joining – The device is negotiating the parameters of the wireless connection. Joined the network – A secure connection is formed with the network. The second line contains detailed state information useful for problem reporting.

Advanced Options

Advanced options are non-typical configuration commands.

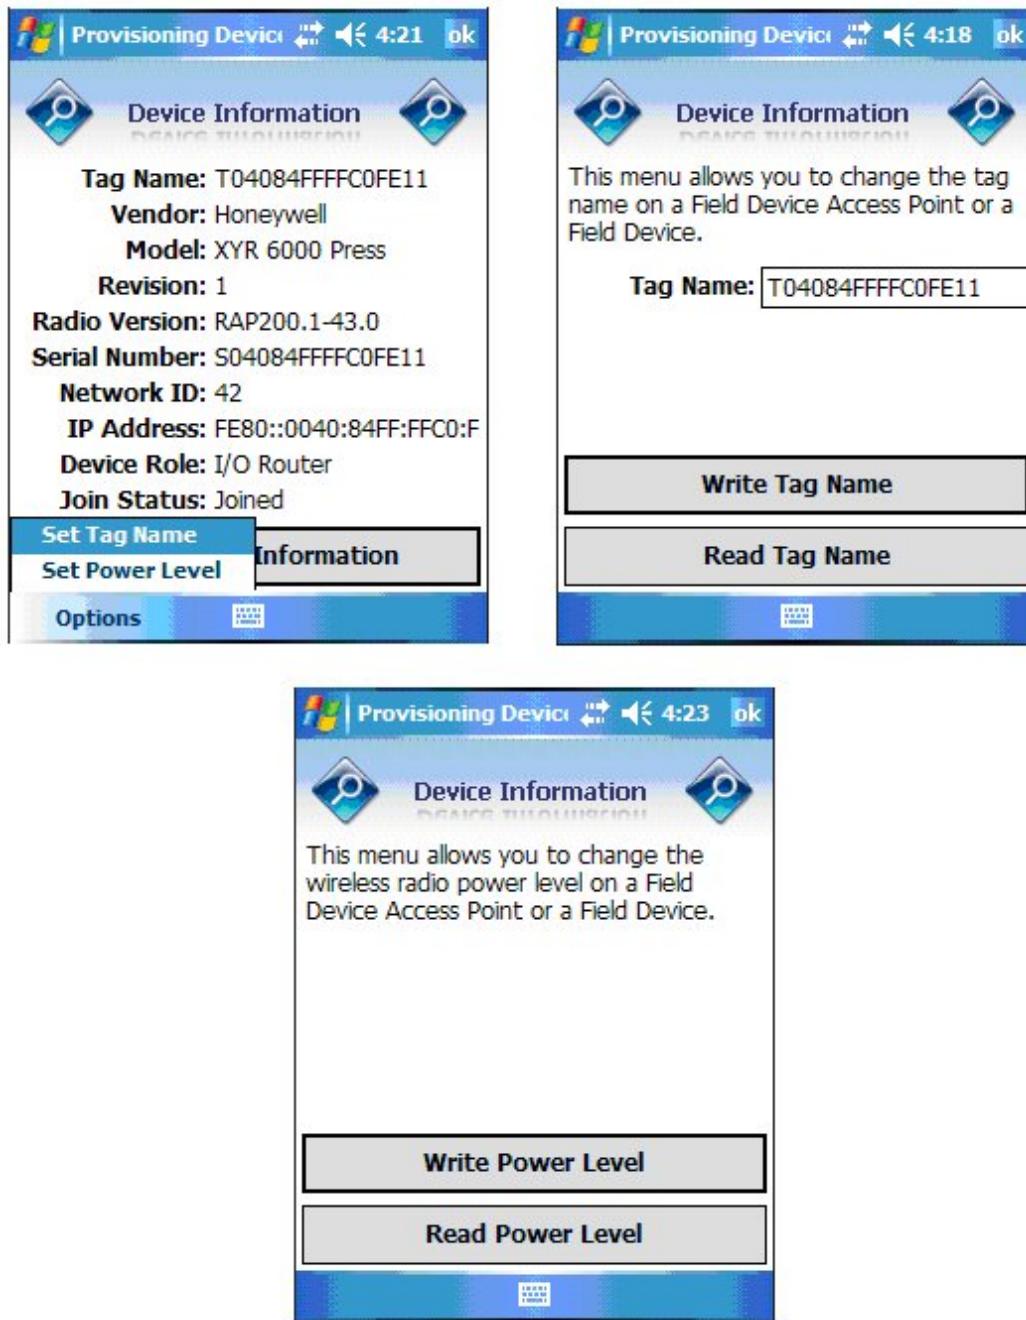


Figure 4-5 Advanced Options

4. Operation

4.3. Provisioning device menus

Table 4 Advanced Options

Item	Description
Key Server Communication Method	<p>Determines how the PDA will receive security keys from the PC's Key Server Manager application. From the Comm Method menu select one of the following methods.</p> <p>ActiveSync – Select this to receive keys over a USB connection, such as while the PDA battery is being charged in its base.</p> <p>Infrared – Select this to receive keys over the infrared port.</p> <p>Important: The Comm Method settings match in the PC's Key Server Manager and in the Provisioning Device (both must be set to Infrared or both to ActiveSync) in order for your PDA to receive security keys.</p>
Read Tracelog Flag	Not available for OWA 100 Adapter. Used with multinode. Reads conditional tracelog flag value. Tracelog flags are used to enable and disable logging functionality used for field support.
Write Tracelog Flag	Not available for OWA 100 Adapter. Used with multinode. Writes conditional tracelog flag value. Tracelog flags are used to enable and disable logging functionality used for field support.
Select Infrared Communication Port	Overrides the detected infrared communication port detected on your PDA. If infrared communication is not functioning, you can override the detected settings using this option.
Read TX Power Level	Reads the transmission power level of the OWA 100 Adapter radio.

Item	Description
Read TX Power Level	Reads the transmission power level of the transmitter radio.

5. Maintenance/Repair

5.1 Parts

The following replacement parts may be ordered from Honeywell.

Part number	Qty.	Description
50056644-501	1	REMOTE MOUNTING KIT FOR 1/2 NPT OWA 100 ADAPTER
50056644-502	1	REMOTE MOUNTING KIT FOR M20 OWA 100 ADAPTER
30671907-001	1	PIPE MOUNT BRACKET KIT (SS) FOR MOUNTING OWA 100 ADAPTER
50026010-001	2	3.6V LITHIUM THIONYL CHLORIDE (Li-SOCl ₂) BATTERY
50026010-002	4	3.6V LITHIUM THIONYL CHLORIDE (Li-SOCl ₂) BATTERY
50026010-003	10	3.6V LITHIUM THIONYL CHLORIDE (Li-SOCl ₂) BATTERY

5.2 Replacing the battery

When to replace

When the OWA 100 Adapter displays a LOW BAT message, see OWA 100 Adapter display modes on page 19, you have 2-4 weeks to replace both batteries before they expire. When batteries are removed or expired, all OWA 100 Adapter data is retained in the OWA 100 Adapter's non-volatile memory.

Tools required

- #1 Phillips Screwdriver and

Procedure



ATTENTION

The battery must be replaced only by a trained service technician.



WARNINGS

- Risk of death or serious injury by explosion. Do not open OWA 100 Adapter enclosure when an explosive gas atmosphere is present.
- The battery must not be changed in an explosive gas atmosphere.
- The batteries used in this device may present a risk of fire or chemical burn if mistreated. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate.
- When installing the battery, do not snag the battery terminal on the clip or the battery may be damaged. Do not apply excessive force.
- Do not drop. Dropping the battery may cause damage. If a battery is dropped, do not install the dropped battery into the OWA 100 Adapter. Dispose of dropped battery promptly per local regulations or per the battery manufacturer's recommendations.



SHOCK HAZARD

Depending on your installation, OWA 100 Adapter input wiring sources may contain high voltage. Disconnect all power from OWA 100 Adapter input sources before accessing the batteries. Failure to do so could result in death or serious injury if the input terminals or wires are accidentally touched.

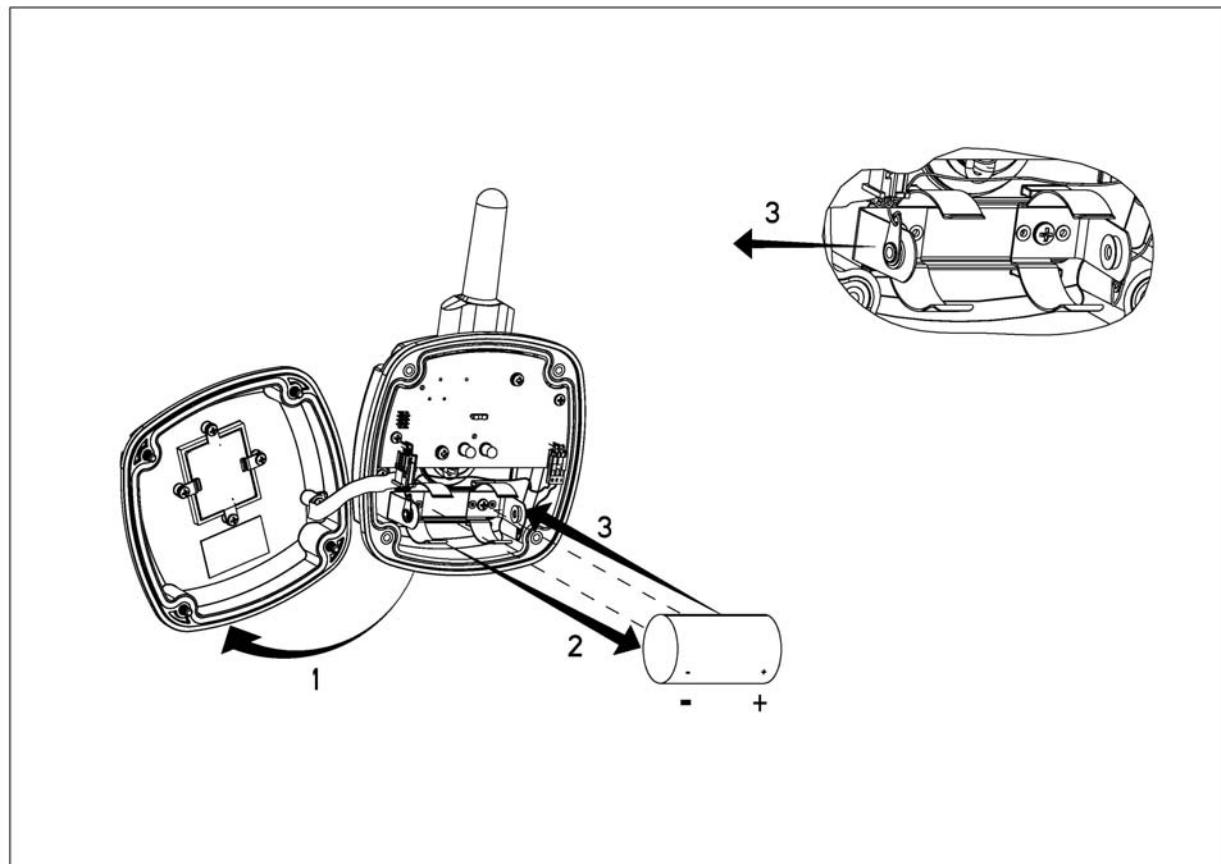


Figure 5-1 Battery replacement

Table 5 Battery replacement procedure

Step	Action
 ATTENTION	<p>Use only the following 3.6V lithium thionyl chloride (Li-SOCl₂) batteries (non-rechargeable), size D. No other batteries are approved for use in OWA 100 Adapter.</p> <ul style="list-style-type: none">• Xeno Energy XL-205F• Eagle Picher PT-2300H• Tadiran TL-5930/s
1	Loosen (4) M4 screws and remove the cover.
2	Remove the old battery from the battery holder. If needed, pry out the battery by using a slotted screwdriver as a lever.
3	Install battery as follows to avoid snagging the battery terminal on the clip and damaging the battery.
4	Replace the cover and tighten the (4) M4 screws.
5	Dispose the used battery promptly per local regulations or the battery manufacturer's recommendations. Keep away from children. Do not disassemble and do not dispose of in fire.

delete space

Align the new battery with the clips and angle the positive (+) end of the battery into the positive (+) battery terminal clip. Using a thumb and forefinger pull the negative terminal clip outward and push down on the battery until fully seated in both clips. Do not apply excessive force when pushing the battery down.

6. Certification Installation Requirements

6.1 Certification Drawings

Use the following drawings and accompanying notes and text for hazardous locations. **Any deviation from the installation requirements could void the certification.** For non-hazardous locations you can use the same drawings without the accompanying notes and text.

COPYRIGHT 2010, HONEYWELL INTERNATIONAL INC. NEITHER THIS DOCUMENT NOR THE INFORMATION CONTAINED HEREIN SHALL BE REPRODUCED, USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AUTHORIZATION OF HONEYWELL. USE, DUPLICATION, OR DISCLOSURE OF THIS DOCUMENT IS SUBJECT TO THE RESTRICTIONS SET FORTH IN A WRITTEN AGREEMENT. NOTHING CONTAINED HEREIN SHALL BE CONSTRUED AS CONFERRING BY IMPLICATION, ESTOPPEL, OR OTHERWISE ANY LICENSE TO ANY PATENT, TRADEMARK, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT OF HONEYWELL OR ANY THIRD PARTY.		PRE REL	A1				
		ISS	REVISION & DATE		APPD		
			XXXXXX 04/23/10				

OWA 100 – OneWireless Adapter

**CSA CERTIFIED & FM APPROVED; CLASS I, II & III, DIVISIONS 1 & 2,
GROUPS A, B, C, D, E, F & G; Ex / AEx ia / nA [nL] IIC, ZONES 0 / 1 & 2**

NOTES:

1. Intrinsically safe installation shall be in accordance with the Canadian Electrical Code (CEC), part I, Section 18 for Canada, ANSI/NFPA 70, NEC® Articles 504 and 505 for the USA, and ANSI/ISA RP12.06.01.
2. CSA or FM ENTITY approved equipment shall be installed in accordance with the manufacturer's Intrinsic Safety Control Drawing.
3. The Intrinsic Safety ENTITY concept allows the interconnection of two ENTITY Approved Intrinsically safe devices with ENTITY parameters not specifically examined in combination as a system when:
Uo or Voc (or Vt in the USA) ≤ Ui or Vmax, Io or Isc (or It in the USA) ≤ li or Imax, Ca or Co Ci + Ccable, La or Lo Li + Lcable, Po ≤ Pi. Where two separate barrier channels are required, one dual-channel or two single-channel barriers may be used, where in either case, both channels have been Certified for use together with combined entity parameters that meet the above equations.
4. System Parameters:
OWA 100 and Field Transmitter Vmax, Voc or Uo, Imax, Isc or Io;
OWA 100 Ci + Ccable Control Apparatus Ca,
OWA 100 Li + Field Transmitter Li + Lcable Control Apparatus La.
5. When the electrical parameters of the cable are unknown, the following values may be used: Capacitance – 197pF/m (60 pF/ft), Inductance – 0.66H/m (0.020 H/ft).
6. Control equipment that is connected to Associated equipment must not use or generate more than 250 V.
7. Associated equipment must be CSA Certified under the ENTITY Concept in Canada and FM ENTITY listed in the USA. Associated equipment may be installed in a Class I, Division 2 Hazardous (Classified) location if so approved.
8. Non-Galvanically isolated equipment (grounded Zener Barriers) must be connected to a suitable ground electrode per NFPA 70, Article 504 and 505 in the USA and CEC Part I, Section 10 in Canada. The resistance of the ground path must be less than 1.0 ohm.
9. Divisions 1 & 2, and Zone 0: WARNING: EXPLOSION HAZARD – SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR USE IN HAZARDOUS LOCATIONS.
10. NO REVISION OF THIS CONTROL DRAWING IS PERMITTED WITHOUT AUTHORIZATION FROM CSA AND FM Approvals.
11. For release approvals see ECO # 00XXXXX.

MASTER FILE TYPE: VISIO

CERTIFICATION DOCUMENT ENGINEERING CHANGE ORDERS (ECOs) MUST BE AUTHORIZED BY APPROVALS ENGINEERING	DRAWN			Honeywell	
	CHECKED			CSA & FM Control Drawing OWA 100 OneWireless Adapter Divisions 1 & 2 / Zones 0 / 1 & 2	
	DEV ENG	NOTE 11			
	MFG ENG				
	QA ENG				
	TOLERANCE UNLESS NOTED		A / A4	50054461	
	ANGULAR DIMENSION		SCALE – NONE	USED ON	SH 1 OF 6


OWA 100	Field Transmitter	Associated Apparatus
U_i or $V_{max} = 30V$	$U_i, V_{max},$ or $V_t \geq$	U_o, V_{oc} or $V_t \leq 30V$
I_i or $I_{max} = 125 mA$	$I_i, I_{max},$ or $I_t \geq$	I_o, I_{sc} or $I_t \leq 125 mA$
P_i or $P_{max} = 1.0 W$	$P_{max} \geq P_o$	$P_o \leq \frac{(V_{oc} \text{ or } V_t \cdot I_{sc} \text{ or } I_t)}{4} \leq 1.0 W$
$C_i = 0$	Associated Apparatus $C_a - C_{cable} - C_i$ of other transmitter connected to two-channel barrier.	$C_a \text{ (or } C_o) > 0$
$L_i = 0$	Associated Apparatus $L_a - L_{cable} - L_i$ of other transmitter connected to two-channel barrier.	$L_a \text{ (or } L_o) > 0$

CSA CERTIFIED & FM APPROVED CONTROL DRAWING OWA 100 – TWO-WIRE CONFIGURATION

NON-HAZARDOUS LOCATION

ASSOCIATED APPARATUS IS FIELD WIRING PARAMETERS

U_o (V_{oc} or V_t) $\leq 30 V$
 I_o (I_{sc} or I_t) $\leq 125 mA$
 $P_o \leq 1.0 W$
 $C_a \geq C_{cable} + C_{\text{Field Transmitter}}$
 $L_a \geq L_{cable} + L_{\text{Field Transmitter}}$

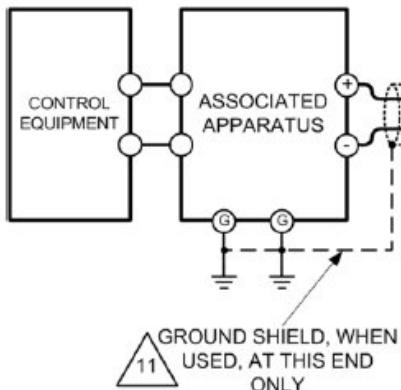

HAZARDOUS (CLASSIFIED) LOCATION

OWA 100 OneWireless Adapter


CLASS I, DIV 1 & 2, GROUPS A,B,C,D; CLASS II, DIV 1 & 2, GROUPS E, F & G, CLASS III, DIV 1 & 2, T4; CLASS I, ZONE 0/1, Ex / AEx ia GROUP IIC, T4, CLASS I, ZONE 2, Ex / AEx nA GROUP IIC, T4

AMBIENT LIMITS: $-40 \leq T_a \leq 85^\circ C$

TRANSMITTER ENTITY PARAMETERS

U_i (V_{max}) $\geq 30 V$
 I_i (I_{max}) $\geq 125 mA$
 $P_i \geq 1.0 W$

AUXILIARY TERMINAL

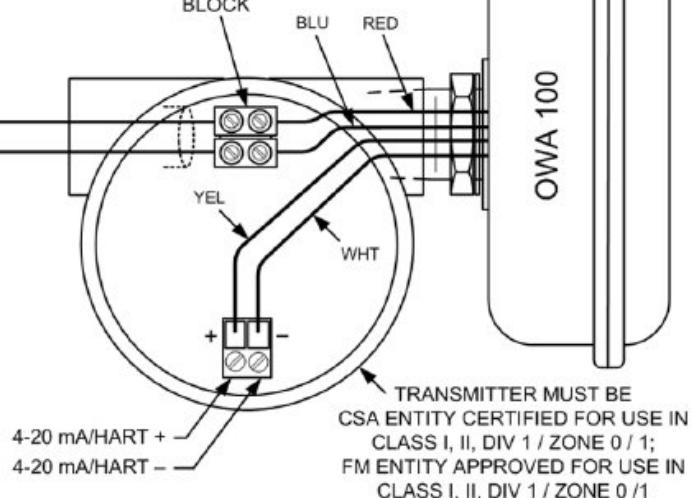

Honeywell

A
/A4

50054461


SCALE - NONE

REV A1


DATE 4/23/10

SH 2 OF 6

OWA 100 – TWO-WIRE CONFIGURATION WITH RESISTOR

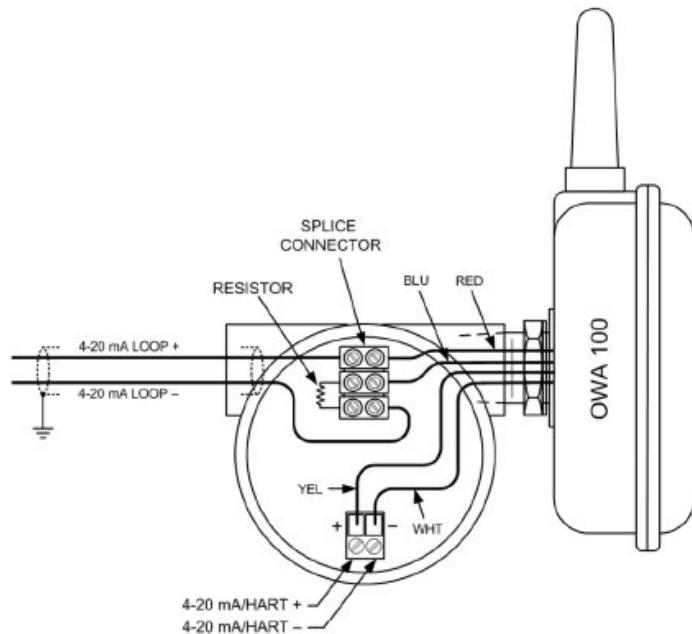

OWA 100 – 4-WIRE PASSIVE DEVICE CONFIGURATION

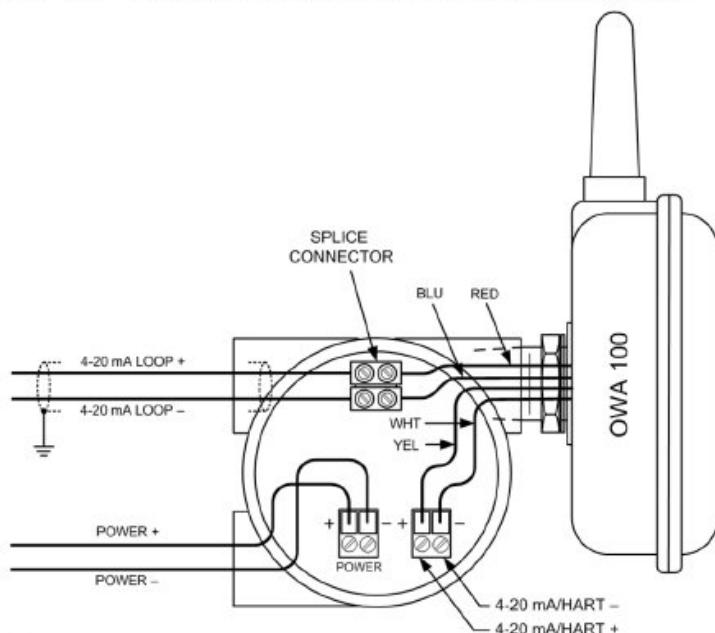

NOTE: A passive loop exists when the wired device is not supplying power to the 4-20 mA loop.
It is important to verify if the wired device is operating in the active or passive mode.

Honeywell

A
/A4

50054461


SCALE - NONE

REV A1

DATE 4/22/10


SH 3 OF 6

OWA 100 – 4-WIRE PASSIVE DEVICE CONFIGURATION WITH RESISTOR

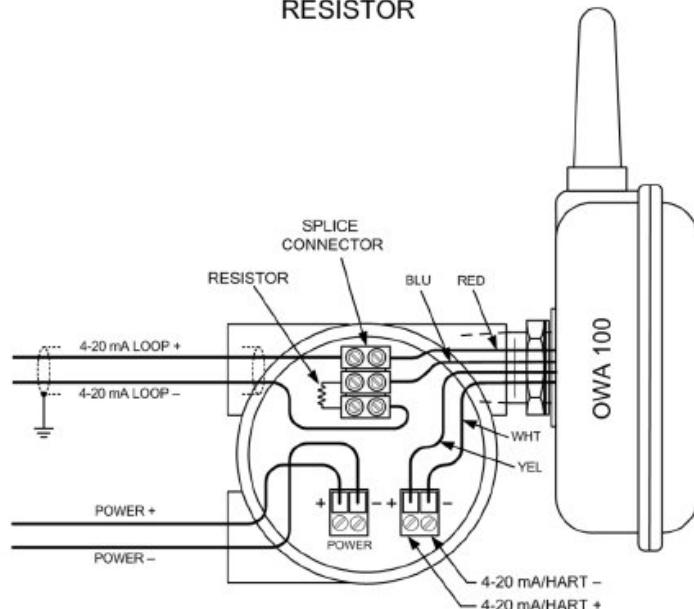

NOTE: A passive loop exists when the wired device is not supplying power to the 4-20 mA loop. It is important to verify if the wired device is operating in the active or passive mode.

OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION

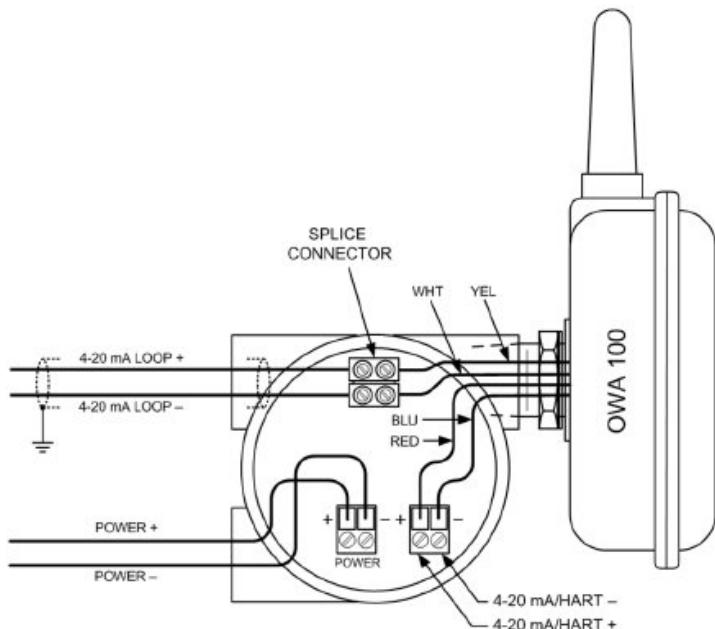

NOTE: An active loop exists when the wired device is supplying power to the 4-20 mA loop. It is important to verify if the wired device is operating in the active or passive mode.

Honeywell

A
/A4

50054461


SCALE - NONE

REV A1

DATE 4/23/10


SH 4 OF 6

OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION WITH RESISTOR

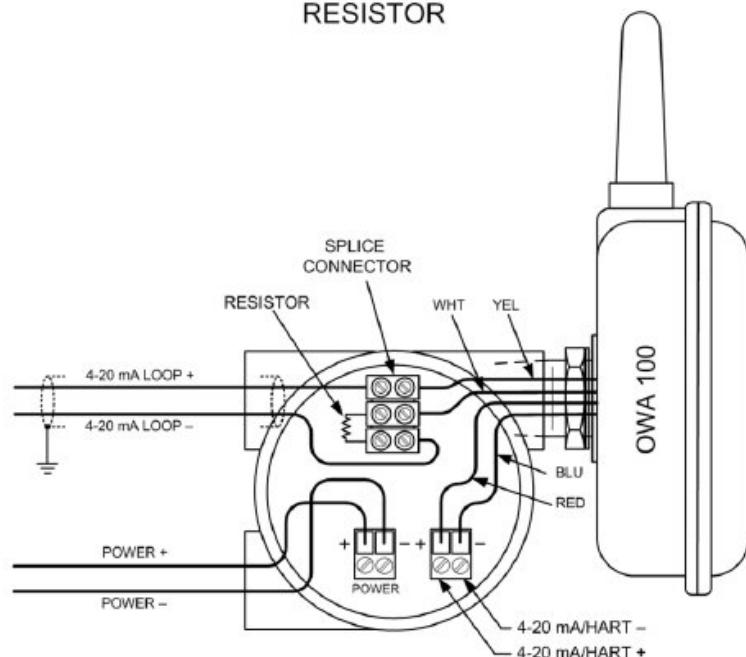

NOTE: An active loop exists when the wired device is supplying power to the 4-20 mA loop.
It is important to verify if the wired device is operating in the active or passive mode.

OWA 100 – 4-WIRE ACTIVE DEVICE CONFIGURATION
WITH NO 4-20 mA LOOP.

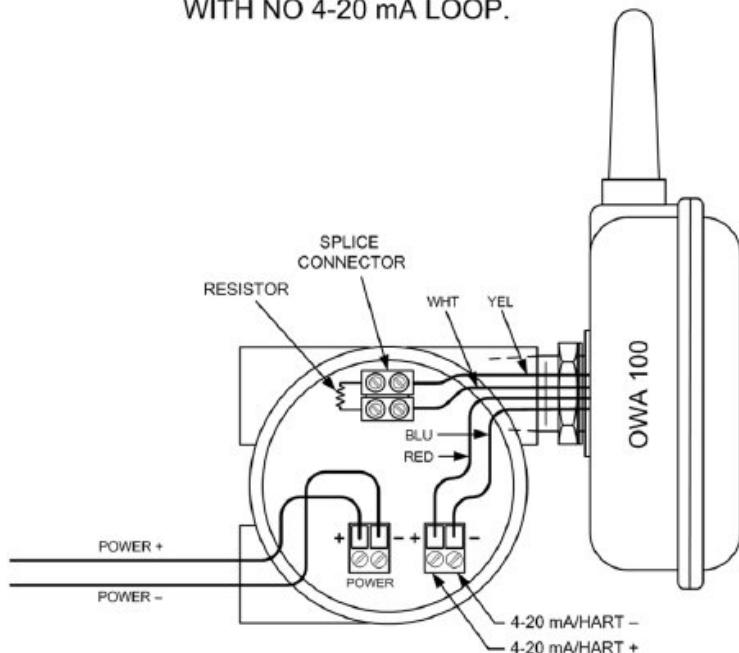

Honeywell

A
/A4

50054461


SCALE - NONE

REV A1

DATE 4/23/10

SH 5 OF 6

OWA 100 – AS A ROUTER, NO WIRED DEVICE

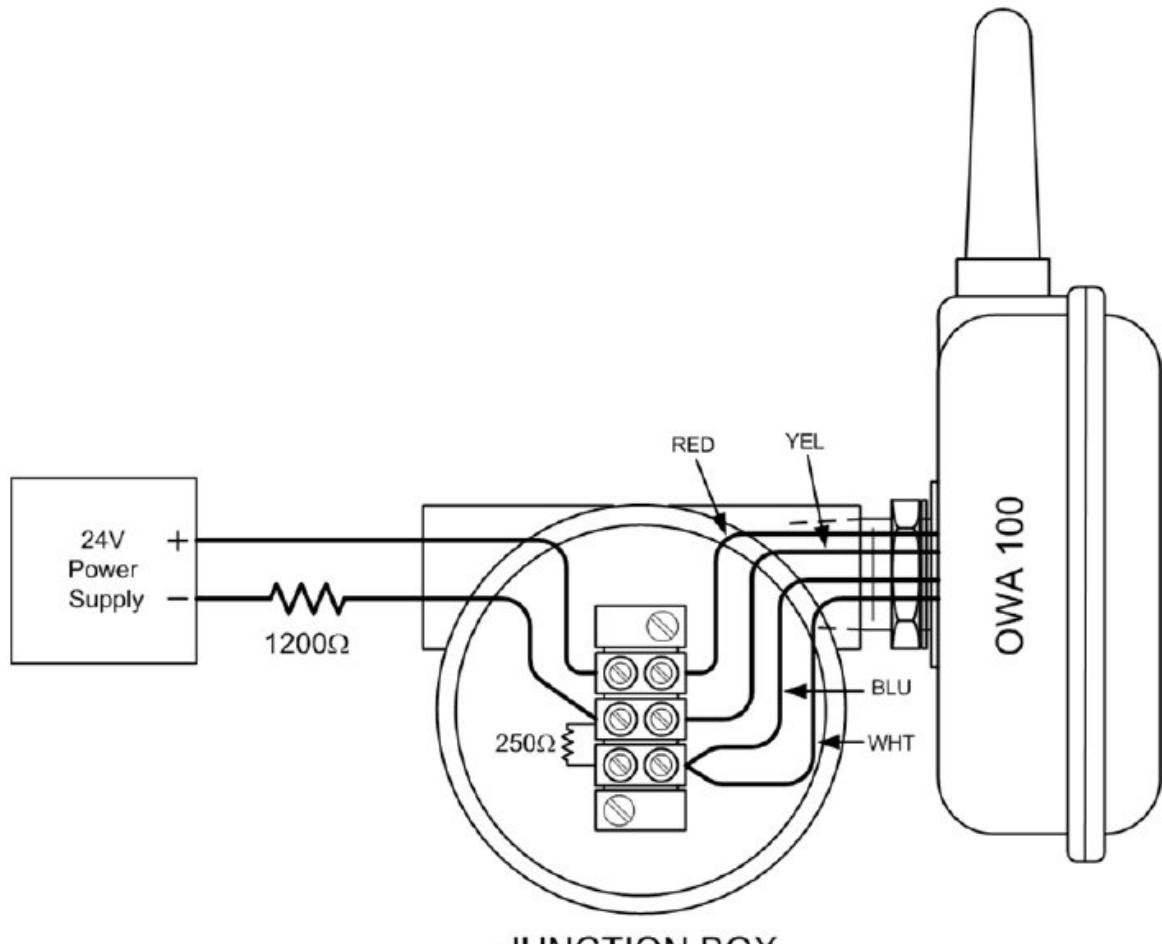

Honeywell

A
A4

50054461

SCALE - NONE

REV A1

DATE 4/23/10

SH 6 OF 6

7. Reference Data

7.1 Product Specifications

Operating Conditions

Parameter	Reference Condition		Rated Condition		Operative Limits		Transportation and Storage							
	°C	°F	°C	°F	°C	°F	°C	°F						
Ambient Temperature**	25 ±1	77 ±2	-40 to 85	-40 to 185	-40 to 85	-40 to 185	-40 to 85	-40 to 185						
Humidity (%RH)	10 to 55		0 to 100		0 to 100		0 to 100							
Vibration	Maximum of 4g over 15 to 200 Hz													
Shock	Maximum of 40g													
Power	Battery powered 3.6V Lithium thionyl chloride (LiSOCl ₂) battery non rechargeable, size D													
	Connected into a powered 4-20ma loop for power scavenging; power drop due to adapter is XX across the loop; minimum load on loop is 250 Ohms													

** The ambient limits shown are for ordinary non-hazardous locations only. Refer to the appropriate control drawing, FM/CSA, ATEX, or IECEx for the ambient limits when installed in hazardous locations.

Specifications

Parameter	Description
Input	Any 2 or 4-wire HART device
Wireless Communication	ISA100.11a Compliant 2,400 to 2,4835 MHz (2.4 GHz) Industrial, Scientific and Medical (ISM) band per FCC 15.247 / IEEE 802.15.4-2006. Every data packet transmitted in either direction is verified (CRC check) and acknowledged by the receiving device. USA – FCC Certified; Canada – IC Certified; European Union – RTTE/ETSI Conformity
RF Transmitter Power	NA Selection – 125 mW (20.9 dBm) maximum transmit power not including antenna per FCC/IC, or 400 mW (26.0 dBm) maximum EIRP including antenna for USA and Canadian locations EU Selection – 10 mW (10.0 dBm) maximum EIRP including antenna per RTTE/ETSI for EU locations.
Data	PV Data Publish Cycle Time: Configurable from 1 second to 2 minutes Rate: 250 Kbps ISA100.11a Compliant output
Antenna	Integral – <u>2</u> dBi omnidirectional monopole
Signal Range*	Nominal 305 m (1,000 feet) with a clear line of sight*
CE Conformity	These transmitters conform with the protection requirements of European Council Directives: 2004/108/EC, the EMC Directive and 1999/5/EC, the Telecommunications Directive per EN 300 328, V1.7.1 (2004-11), EN 300 489-1, V1.6.1 (2005-09), EN 300 489-17, V1.2.1 (2002-08), EN 301 893 V1.4.1 and EN 61326-1:2005, Electrical Equipment for Measurement, Control and Laboratory Use – EMC Requirements

Hazardous Location Certifications	<p>CSA IS – ENTITY - Cl I, Div. 1, Gp ABCDEFG; T4 (-40°C ≤ Ta ≤ +85°C); DIP Cl II, Div. 1, Gp EFG, CL III, Div. 1; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X; IS – ENTITY - Cl I, Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +85°C); IP66</p> <p>CSA NI - Cl I, Div. 2, Gp ABCD; T4 (-40°C ≤ Ta ≤ +85°C); DIP A22, Cl II, Div. 2, Gp FG; CL III, Div. 2; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X; NI - Cl I, Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +85°C); Type 4X</p> <p>FM Approvals IS – ENTITY - Cl I, Div. 1, Gp ABCDEFG; T4 (-40°C ≤ Ta ≤ +85°C); DIP Cl II, Div. 1, Gp EFG, CL III, Div. 1; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X; IS – ENTITY - Cl I, Zone 0/1; AEx ia IIC; T4 (-40°C ≤ Ta ≤ +85°C); Zone 20/21; Ex ta IIIC T90°C T500 95°C , IP66</p> <p>FM Approvals NI - Cl I, Div. 2, Gp ABCD; T4 (-40°C ≤ Ta ≤ +85°C); DIP Cl II, Div. 2, Gp FG; CL III, Div. 2; T4 (-40°C ≤ Ta ≤ +85°C); Type 4X; NI - Zone 2; AEx nA IIC, T4 (-40°C ≤ Ta ≤ +85°C); Zone 22, AEx tc IIIC T90°C , IP66</p> <p>FM-IECEx IS – ENTITY - Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; Ex ta IIIC T90°C T₅₀₀ 95°C, Da, IP66;</p> <p>FM-IECEx NS - Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, Ex tc IIIC T90°C, Dc, IP66</p> <p>FM-ATEX IS – ENTITY - Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; Ex ta IIIC T90°C T₅₀₀ 95°C, Da, IP66</p> <p>FM-ATEX NS - Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, Ex tc IIIC T90°C, Dc, IP66</p> <p>SAEx IS – ENTITY - Zone 0; Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; Ex ta IIIC T90°C T₅₀₀ 95°C, Da, IP66</p> <p>SAEx NS - Zone 2; Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, Ex tc IIIC T90°C, Dc, IP66</p> <p>INMETRO IS – ENTITY - Zone 0; BR-Ex ia IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gb; Zone 20; BR-Ex ta IIIC T90°C T₅₀₀ 95°C, Da, IP66</p> <p>INMETRO NS - Zone 2; BR-Ex nA IIC, T4 (-40°C ≤ Ta ≤ +70°C), Gc; Zone 22, BR-Ex tc IIIC T90°C, Dc, IP66</p>
--	--

* Actual range can vary depending on site topography.

Physical Specifications

Parameter	Description
Mounting	½" NPT or M20 Stainless Steel fitting that allows the adapter to be attached directly to the conduit entry of any 2 or 4-wire HART device (standard options). Mounting should result in the antenna being vertically oriented. An optional Remote Mounting Kit is available.
Housing	Molded Lexan Polycarbonate V0 Rating and UV Stable. Meets NEMA 4X (hosedown and corrosion resistant), IP 66 (dust/tight/hosedown).
Dimensions	See Error! Reference source not found.
Net Weight	Approximately 1.0lb/(0.45Kg)

Sales and Service

For application assistance, current specifications, pricing, or name of the nearest Authorized Distributor, contact one of the offices below.

Asia Pacific Global Technical Support

Field Instruments

Phone: +65 6580 3156
Fax: +65 6445-3033

Australia

Honeywell Limited
Phone: +(61) 7-3846 1255
FAX: +(61) 7-3840 6481
Toll Free 1300-36-39-36
Toll Free Fax:
1300-36-04-70

China – PRC - Beijing

Honeywell China Inc.
Phone: +(86-10) 8458-3280
Fax: +(86-10) 8458-4650

China – PRC - Shanghai

Honeywell China Inc.
Phone: (86-21) 5257-4568
Fax: (86-21) 6237-2826

China – PRC - Chengdu

Honeywell China Inc.
Phone: +(86-28) 6613-5078
Fax: +(86-28) 8678-7061

China – PRC - Xi'an

Honeywell China Ltd - Xi'an.
Phone: +(86-29) 8833-7490
Fax: +(86-29) 8833-7489

China – PRC - Shenzhen-

Honeywell China Inc.
Phone: +(86) 755-2518-1226
Fax: +(86) 755-2518-1221

Indonesia

PT Honeywell Indonesia
Phone: +(62) 21-535-8833
FAX: +(62) 21-5367 1008

India Automation India Ltd.

Honeywell Ltd.
Phone: +(91) 6603-9400
Fax: +(91) 6603-9600

Japan

Honeywell Inc.
Phone: +(81) 3 6730 7197
Fax: +(81) 3 6730 7228

Malaysia

Honeywell Engineering Sdn Bhd
Phone: +(603) 7958-4788
Fax: +(603) 7958-8922

New Zealand

Honeywell Limited
Phone: +(64-9) 623-5050
Fax: +(64-9) 623-5060
Toll Free (0800) 202-088

Singapore

Honeywell Pte Ltd.
Phone: +(65) 6580 3278
Fax: +(65) 6445-3033

South Korea

Honeywell Korea Co Ltd
Phone: +(822) 799 6114
Fax: +(822) 792 9015

Thailand

Honeywell Systems (Thailand) Ltd.
Phone: +(662) 693-3099
FAX: +(662) 693-3089

Taiwan R.O.C.

Honeywell Taiwan Ltd.
Phone: +(886-2) 2245-1000
FAX: +(886-2) 2245-3243

SE Asia Countries

see Honeywell Pte Ltd (Singapore)
for: Philippines, Pakistan, Cambodia, Guam, Laos, Myanmar, Vietnam, East Timor

SE Asia Countries

see Honeywell
Automation India Ltd for:
Bangladesh
Nepal
Sri Lanka

EUROPE

Austria

Honeywell Austria GmbH
Phone: +43 (316)400123
FAX: +43 (316)40017

Belgium

Honeywell SA/NV
Phone: +(32) (0)2728 24 07
FAX: +(32) (0)2728 22 45

Bulgaria

Honeywell EOOD
Phone: +(359) 2 40 20 900
FAX: +(359) 2 40 20 990

Czech Republic

Honeywell spol. s.r.o.
Phone: +(420) 242 442 232
FAX: +(420) 242 442 131

Denmark

Honeywell A/S
Phone: +(45) 39 55 55 55
FAX: +(45) 39 55 55 58

Finland

Honeywell OY
Phone: +(358) (0)20752 2753
FAX: +(358) (0) 20752 2751

France

Honeywell SA
Phone: +(33) (0)1 60198075
FAX: +(33) (0) 60198201

Germany

Honeywell AG
Phone: +(49) (69)8064-299
FAX: +(49) (69)806497336

Hungary

Honeywell Kft.
Phone: +(36-1) 451 4300
FAX: +(36-1) 451 4343

Italy

Honeywell S.p.A.
Phone: +(39)0292146307
FAX: +(39) 0292146377

The Netherlands

Honeywell B.V.
Phone: +(31) (0) 20 5656200
FAX: +(31) (0) 20 5656210

Norway

Honeywell A/S
Phone: +(45) 39 55 55 55

Poland

Honeywell Sp. zo.o
Phone: +(48) 22-6060900
FAX: +(48) 22-6060901

Portugal

Honeywell Portugal Lda
Phone: +(351) 21 424 5000
FAX: +(351) 21 424 50 99

Romania

Honeywell Bucharest
Phone: +(40) (0) 21 2316437
FAX: +(40) (0) 21 2316439

Russian Federation (RF),

ZAO "Honeywell"
Phone: +(7) (95) 796 98 00
FAX: +(7) (495) 797 99 64

Slovak Republic

Honeywell s.r.o.
Phone: +(421) 2-58247 410
FAX: +(421) 2-58247 415

Spain

Honeywell S.A.
Phone: +(34) (0)91313 61 00
FAX: +(34) (0)91313 61 30

Sweden

Honeywell AB
Phone: +(46) 8 775 55 00
FAX: +(46) 8 775 56 00

AFRICA

Mediterranean & African Distributors
Honeywell SpA
Phone: +(39) (02) 250 10 604
FAX: +(39) (02) 250 10 659

South Africa (Republic of) and sub saharan

Honeywell Southern Africa
Honeywell S.A. Pty. Ltd.
Phone: +27 11 6958000
FAX +27 118051504

NORTH AMERICA

Canada

Honeywell LTD
Phone: 1-800-737-3360
FAX: 1-800-565-4130

USA

Honeywell Process Solutions,
Phone: 1-800-423-9883
Or 1-800-343-0228
Email: ask-ssc@honeywell.com

SOUTH AMERICA

Argentina

Honeywell S.A.I.C.
Phone: +(54-11) 4383-3637
FAX: +(54-11) 4325-6470

Brazil

Honeywell do Brasil & Cia
Phone: +(55-11) 7266-1900
FAX: +(55-11) 7266-1905

Chile

Honeywell Chile, S.A.
Phone: +(56-2) 233-0688
FAX: +(56-2) 231-6679

Mexico

Honeywell S.A. de C.V.
Phone: +(52) 55 5259-1966
FAX: +(52) 55 5570-2985

Puerto Rico

Honeywell Inc.
Phone: +(809) 792-7075
FAX: +(809) 792-0053

Trinidad

Honeywell Inc.
Phone: +(868) 624-3964
FAX: +(868) 624-3969

Venezuela

Honeywell CA
Phone: +(58-2) 238-0211
FAX: +(58-2) 238-3391

Honeywell Process Solutions

1860 West Rose Garden Lane
Phoenix, Arizona 85027

www.honeywell.com/ps

34-XY-25-40 Rev.1

September 2010

©2010 Honeywell International Inc.

Honeywell