

## Inside This Manual

### IMPORTANT! PLEASE READ CAREFULLY AND SAVE:

This user's manual contains important information about your product's operation. If you are installing this system for use by others, you must leave this manual - or a copy of it - with the end user.

## Contents

### Chapter One: Introduction and Set Up

Product features	3
Before you begin	4
Parts checklist	4
Tabletop installation	5

### Chapter Two: Quick Start Guide

How to set the clock	7
How to set the alarm	8
How to set radio presets	9
How to operate the answering machine	10
How to operate the CD player	11
How to store speed dial contacts	12

### Chapter Three: Clock Radio Operations

Clock radio features	13
Setting the Time	14
Wake Alarms	15
Snooze buttons	16
Sleep buttons	16

1

## Inside This Manual

## Contents

### Chapter Four: Telephone Operations

Telephone set up	17
Caller I.D. features	18
Handset features	20
Digital answering machine features	22
Directory Features	24
Message indicator	27
Changing the battery	28

### Chapter Five: CD Player Operations

Listening to the CD player	29
----------------------------	----

### Chapter Six: Care and Trouble Shooting

Troubleshooting guide	30
Care and Maintenance	32
Guarantee	33
FCC registration information	34
Warning notice	35

2

## Product Features

Your Caller I.D. phone stores and displays specific information, provided by your local telephone company, to subscribers of Caller I.D. or similar caller identification services. You must subscribe to one of these services from your phone company in order to use the Caller I.D. features of this unit.


Your Caller I.D. phone enables you to:

- Identify callers before you answer the phone.
- View the time and date of each incoming call.
- Store up to 80 Caller I.D. entries sequentially.
- Know who called while you were away.

To get the most from your new phone, we suggest that you take a few minutes right now to read through this user's guide.


**REMINDER:** This product requires a subscription to a Caller I.D. service from your telephone company to use Caller I.D. functions. Check for name and service availability.

**IMPORTANT:** Because cordless phones operate on electricity, you should have at least one phone in your house that isn't cordless, in case the power in your home goes out.

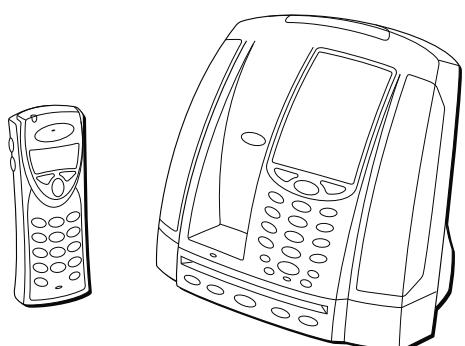

3

## Before You Begin

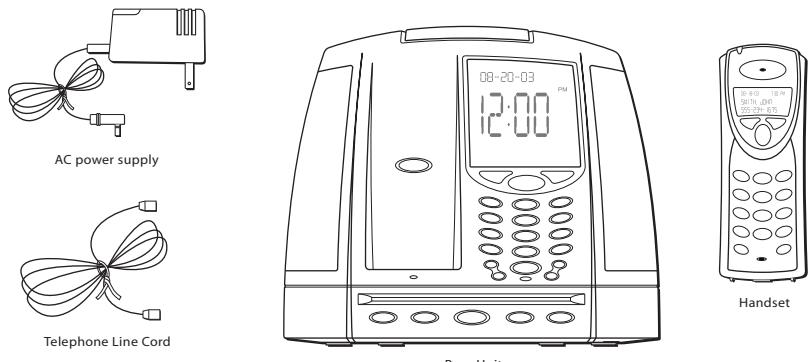

## Parts Checklist

Make sure your package includes the items shown above.




## Modular Jack Requirements

You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one.

**INSTALLATION NOTE:** Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If such interference continues, move the cordless telephone farther away from the TV or VCR.

4

## Table Top Installation

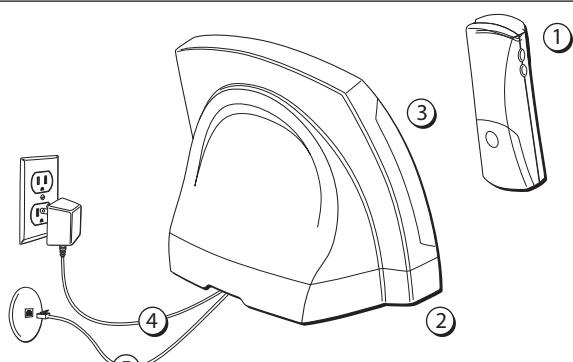

1. Set the **RINGER** switch on the handset to **ON**.
2. Turn on ringer and set number of rings (0,3,5) on bottom of base unit. This determines the number of rings before the answering machine is activated.

3. Place the handset in the base.
4. Plug the power supply cord into the base and then into an AC outlet. The **CHARGE/IN USE** light comes on indicating that the battery is charging.
5. After charging, connect the telephone cord to the phone and then to the wall jack.

**NOTE:** The phone automatically defaults to touch tone dialing. To change to pulse (rotary) dialing, see "Tone/Pulse Dialing" on page 16. If you don't know which type of service you have, check with the phone company.

**CAUTION:** Use only the power supply that came with this unit. Using other power supplies may damage the unit.

5

## Table Top Installation

### Ring Settings and Activation

The ring count setting will prompt this unit to pick up an incoming call with the answering machine after zero, three or five rings. There is a ringer switch on the bottom of the unit. The following positions on this ringer switch allow you to set the number of rings to 0, 3, or 5.


### Electronic Back up

Your cordless phone uses an integrated memory chip that saves your time and date settings, speed dial phone numbers, outgoing answering machine greeting and saved answering machine messages. This memory chip will save these preference settings in your system for as long as 72 hours without power.

### Digital Security System

Your cordless phone uses a digital security system to provide protection against false ringing, unauthorized access, and charges to your phone line.

When you place the handset in the base, the unit verifies its security code. After a power outage or battery replacement, you should place the handset in the base for about 20 seconds to reset the code.

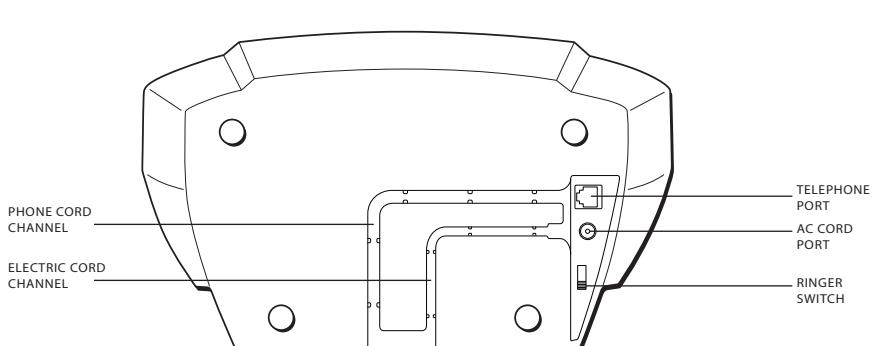

6

## Quick Start Guide

### How To Set The Clock


Press **TIME SET** button to activate clock /date function.

Press **TIME SET** button to scroll through the active time segment.

Press **▼** and **▲** buttons to adjust the time and date.

Press **TIME SET** button to confirm.

Note: Time and date may also be set automatically by utilizing your phone line's caller I.D. options.

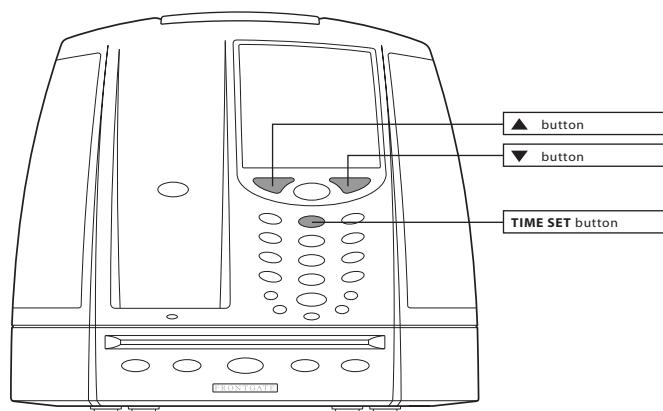

7

## Quick Start Guide

### How To Set The Alarm

Press and hold **ALARM 1** button for 2 seconds until alarm icon and time begin to flash.

Press **▼** and **▲** buttons to adjust the hour.


Press **TIME SET** button to confirm hour and enable minute to flash.

Press **▼** and **▲** buttons to adjust the minute.

Press **TIME SET** to confirm the alarm time set.

The alarm symbol on the display shows that the alarm is set.

To set **ALARM 2** repeat above steps with **ALARM 2** button

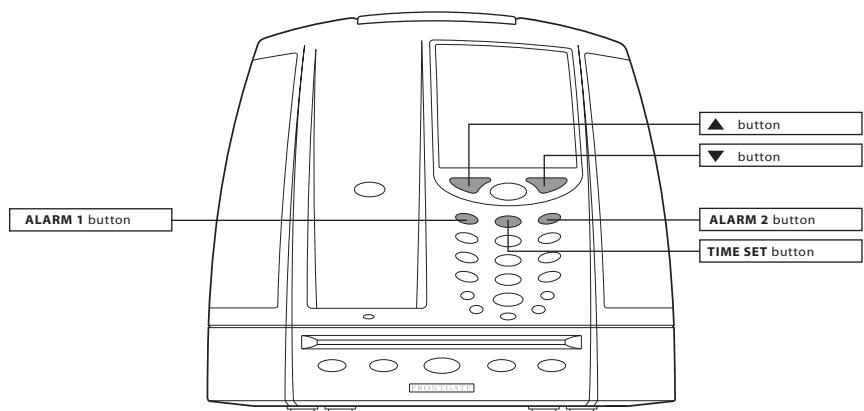

8

## Quick Start Guide

### How To Set Radio Presets


Set the **AM/FM** switch to the desired band.

Press **▼** or **▲** tune buttons to find the desired station.

Press and hold preset **1** for 2 seconds.

The **MEMORY** symbol on the display shows that the station is set.

To set preset **2** and **3**, repeat the above steps with buttons **2** and **3**

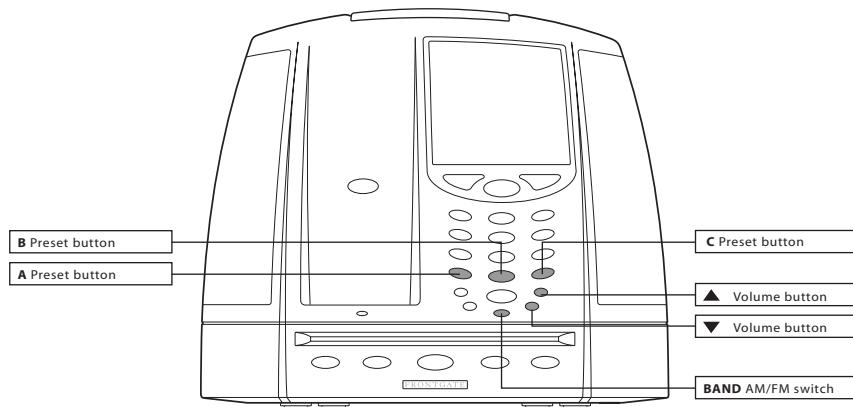

9

## Quick Start Guide

### How To Operate The Answering Machine

1. To record your greeting, press and hold the **REC** button until the unit beeps.

2. After the beep, record your greeting. Continue to hold the **REC** button while speaking.

3. Release the **REC** button when you have finished recording your greeting. The unit will automatically play the recorded greeting back.


4. To rerecord the greeting, repeat the process.

Use the **PLAY** button to play the first saved voice message, followed by the next message until all messages are played.

In the answering machine mode, use the **DELETE** button to delete the selected voice message from memory. You may also hold the **DELETE** button for 2 seconds to delete all the messages.

Use the **▼** or **▲** button to go to the next or previous saved voice message.

Use the **STOP** button to stop during the message retrieval process.

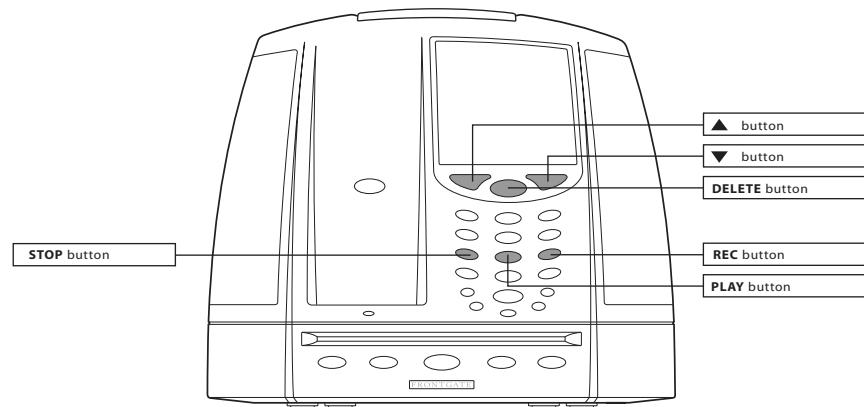

10

## Quick Start Guide

### How To Operate the CD Player

Insert a compact disc and the CD player will automatically activate.

Press **►||** to play the CD or wait 5 seconds for the autostart.


Press **►||** again to pause the CD player.

Press **◀||** or **||▶** buttons to skip through CD tracks.

Press and hold **◀||** or **||▶** to search through CD tracks

Press **▼** or **▲** volume buttons to select the desired volume level.

Press **▲** button to eject the compact disk.

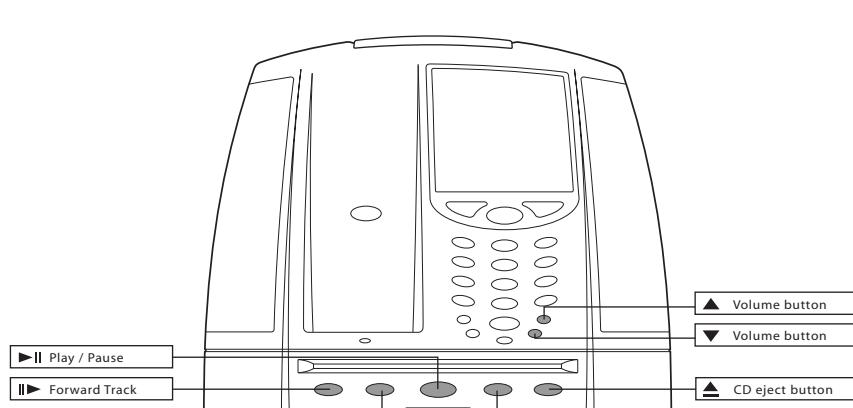

11

## Quick Start Guide

### How To Set Up Telephone Directory

The phone must be OFF when you store numbers.


Press the **DIR** button. The display will show **PHONE BOOK**.

Press the **FLASH/EDIT** button to create a new phone entry.

Use the keypad to store a name (up to 16 characters). To advance to next letter press the **►** directional button. Use the **1** button as a space.

Press the **▼** directional button and dial the telephone number you wish to store.

Press and hold the **REDIAL/SAVE** button when finished to store the number.

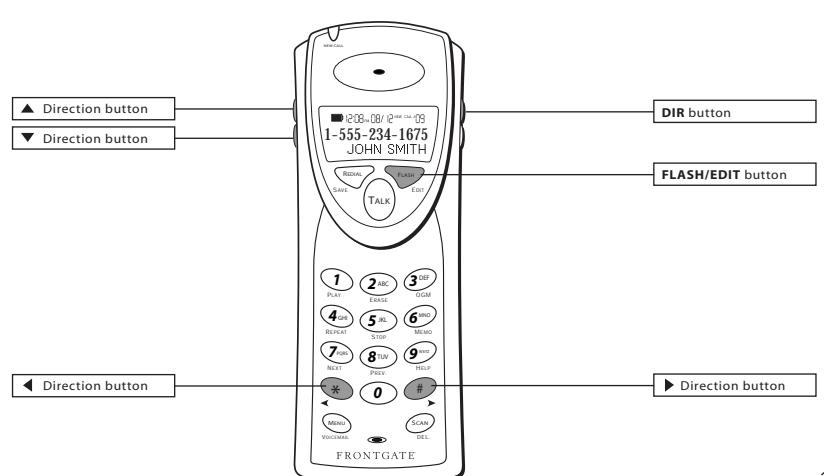

12

## Clock Radio Operations

### AM / FM Antenna

A built-in ferrite rod antenna is used for AM / FM reception. Rotating the unit slightly may improve reception for distant AM stations.

### Power

Use the **RADIO ON/OFF** button to turn the radio on or off.

### Band

Use the **FM/AM** button to select which broadcast band you want the radio to receive.

### Volume

Use the **VOLUME** buttons to adjust the unit volume.

### Changing Stations

Use the **TUNE** buttons to change the radio station. When you hold down and release either button, the radio scans to the next station. If you simply tap the tune buttons the radio will scan point by point.

### Storing Stations in Memory

Use the **1,2,3** preset buttons to store radio station settings. AM and FM stations can be stored with each button.

1. Set the **FM/AM** button to the desired band.

2. Use the **TUNE** buttons to find the selected station.

3. Press and hold the preset button (**1,2 or 3**) for two seconds where you want to store the station. The **MEMORY** symbol on the display shows that the station is set.

### Using the Presets

1. Set the **AM/FM** button to the setting of the desired preset station.

2. Press the memory location button where the station is stored (**1,2,or 3**). The radio tunes to that station

13

## Clock Radio Operations

### Setting the Time

NOTICE: The time is set automatically when the first Caller ID information is received. However, the time can also be set manually by using the **TIME SET** button.

1. Press and hold the **TIME SET** button for 2 seconds. The hour blinks on the display.
2. Use the **▼** and **▲** directional scroll buttons to adjust the hour. AM or PM is displayed on the screen.
3. Press and release the **TIME SET** button again. The minutes blink on the display.
4. Use the **▼** and **▲** directional scroll buttons to adjust the minutes.
5. Press and release the **TIME SET** button again. The month blinks on the display.
6. Use the **▼** and **▲** directional scroll buttons to adjust the day.
7. Press and release the **TIME SET** button again. The day blinks on the display.
8. Use the **▼** and **▲** directional scroll buttons to adjust the month.
9. Press and release the **TIME SET** button again. The year blinks on the display.
10. Use the **▼** and **▲** directional scroll buttons to adjust the year.
11. Press and release the **TIME SET** button to store the information and exit the setup.

### Adjusting the Display

Use the **DISPLAY** button to adjust the brightness of the display and the backlighting for the control buttons. There are three levels of brightness, off, low, and high. The default mode is off. Press the **DISPLAY** button once for low brightness, press again for maximum brightness. Press yet again to return to the default mode, off.

### Adjusting the Nite Lite

Use the **NITE LITE** button to turn on the backlighting for the **SNOOZE** bar. There are three levels of light intensity, off, low, and high. Default mode is off. Press the nite lite button once for low. Press again for high. Press yet again to return to default off mode.

14

## Clock Radio Operations

### Wake Alarms

Two different alarm times can be set using the **ALARM 1** and **ALARM 2** buttons. Each alarm can be set to radio, compact disk or standard alarm and last for about one hour.

#### Setting the Alarm Type

- To set the alarm to wake you with the radio, push the **ALARM 1** or **ALARM 2** button once and the LCD display will show that the chosen wake alarm is set to **RADIO**. The last radio station tuned will be set for the alarm activation.
- To set the alarm to wake you with a compact disk, simply insert the preferred compact disk, push the **ALARM 1** or **ALARM 2** button twice and the LCD display will show that the chosen wake alarm is set to **CD**. If there is no CD in the CD player and the wake alarm is set to **CD**, the alarm will automatically play the standard alarm.
- To set the alarm to wake you with a standard alarm, push the **ALARM 1** or **ALARM 2** button three times and the LCD display will show that the chosen wake alarm is set to **ALARM**.

#### Setting the Alarm Time

- Press and hold the **ALARM 1** or **ALARM 2** button for 2 seconds. The hour will blink on the display in the wake alarm time.
- Use the **UP** and **DOWN** directional arrow scroll buttons to adjust the hour. AM or PM is displayed on the screen.
- Press and release the **TIME SET** button. The minutes will blink on the display in the wake alarm time.
- Use the **UP** and **DOWN** directional arrow scroll buttons to adjust the minutes.
- Press and release **TIME SET** to store the information and exit the wake alarm setup. The alarm symbol on the display shows that the alarm is set.

### Wake Alarms

Once a wake alarm has been set, it can be turned off or on by pressing and releasing the appropriate **ALARM** button and scrolling through the various wake alarm types until there is no wake alarm designated.

15

## Clock Radio Operations

### Snooze


After the alarm comes on, you can use the **SNOOZE** button to delay the alarm from coming on again for 7 more minutes (up to 59 minutes total). You may tap the **SNOOZE** button or simply wave your hand over the infrared sensor in the **SNOOZE** button itself to delay the alarm.

### Sleep

Use the **SLEEP** button to set the radio to automatically turn off after a chosen amount of time (up to 60 minutes).

1. Make sure the radio is OFF.
2. Press and hold the **SLEEP** button. The radio turns on automatically and **SLEEP 60 MIN** shows on the display.
3. Use the **UP** and **DOWN** directional arrow scroll buttons to adjust the sleep time in 10 minute increments. The radio plays for the desired amount of time and then turns off.

**Note:** To turn the radio off before the total sleep time has passed press the **RADIO ON / OFF** button.

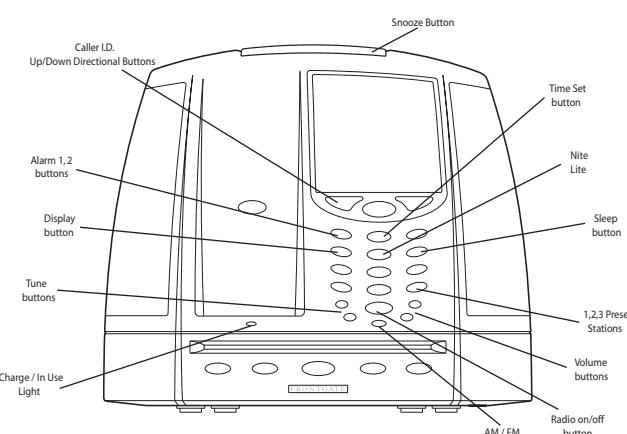

16

## Telephone Operations

### Setting the Area Code

**IMPORTANT:** For proper Caller I.D. operation, you must enter your area code.

1. Make sure that the phone is OFF.
2. Press and hold the **CHANNEL** button for 2 seconds. AREA CODE is shown in the display.
3. Enter your 3-digit area code using the number keys.
4. Phone will beep twice to confirm the entry.
5. **NOTE:** If you make a mistake, repeat steps 1-3

### Tone/Pulse Dialing


This adjustment allows you to select tone (touch-tone) or pulse (rotary) mode dialing. The phone is automatically set for touch-tone use.

### Tone

1. Turn the phone off.
2. Press and hold the **CHANNEL** button until the phone beeps.
3. Phone will beep twice to confirm the entry.
4. Press **TONE** (\*).


### Pulse

1. Turn the phone off.
2. Press and hold the **CHANNEL** button until the phone beeps.
3. Phone will beep twice to confirm the entry.
4. Press **PULSE** (#).

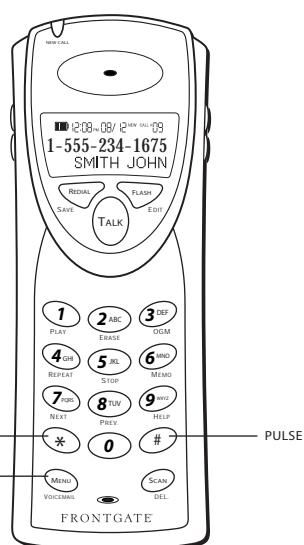

## Telephone Operations

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date and time; or the name, phone number, date and time. The unit can store up to 80 calls for later review.

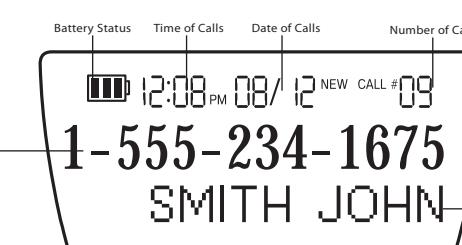

### Caller I.D. with Call Waiting

Provided you subscribe to Caller I.D. with Call Waiting service from your phone company, you are able to see who is calling when you hear the call waiting beep. The caller identification information appears in the display after you hear the tone.

**NOTE:** Press the **FLASH** button to put the current person on hold so that you can answer the incoming call.

**VERY IMPORTANT:** The Caller I.D. feature of this product requires a subscription to Caller I.D. service from your telephone company.

### Receiving and Storing Calls

When you receive a call, the information is transmitted by the phone company to your Caller I.D. Telephone between the first and second ring.

When the memory is full, a new call automatically replaces the oldest call in the memory.

17

18

## Telephone Operations

### Reviewing Caller ID Calls

As calls are received and stored, the display is updated to let you know how many calls have been received.

Press the **▼** directional button on the base unit (down volume button on handset) to scroll through the call records from the most recent to the oldest.

Press the **▲** directional button on the base unit (up volume button on handset) to scroll through the call records from the oldest to newest.

### Deleting Records From Caller ID

Use the **DELETE** button on the base unit (scan/delete button on handset) to erase the record currently shown in the display or all records.

### Deleting the Current Record From Caller ID

1. Use the **▼** and **▲** directional buttons on the base unit (volume buttons on the handset) to display the desired Caller I.D. record.
2. Press **DELETE** on the base unit (scan/delete on the handset). The display shows **ERASE CALL ID?**
3. Press **DELETE** again to erase all record.

### Deleting All Records From Caller ID

1. Use the **▼** and **▲** directional buttons on the base unit (volume buttons on the handset) to display the desired Caller I.D. record.
2. Press and hold **DELETE** on the base unit (scan/delete on the handset). The display shows **ERASE ALL?**
3. Press **DELETE** again to erase all records.

### Dialing a Caller I.D. Number

1. Make sure the phone is OFF.
2. Use the **▼** and **▲** directional buttons on the side of the handset to display the desired Caller I.D. record.
3. Press **TALK**. The number dials automatically.

19

20

## Telephone Operations

### Finding the Handset

This feature helps to locate a misplaced handset.

Press the **PAGE** button on the base. The handset beeps continuously for about 2 minutes or until you press any button on the handset or the **PAGE** button on the base a second time.

**NOTE:** You can still page the handset with the ringer off.

### Ringer Switch

The **RINGER** switch must be **ON** for the handset to ring during an incoming call.

### Volume


The **VOLUME** buttons (on side of handset) control the volume of the handset's earpiece, with four listening levels.

### Low Battery

The battery icon indicates the battery power level. The handset will beep four times if the battery level is low.

### New Call Indicator

The new call indicator will blink if a new call has been received.

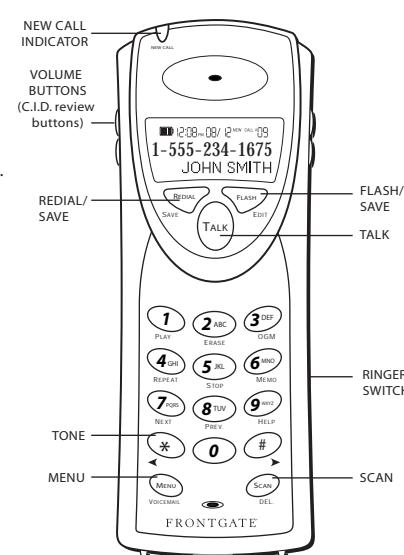

21

22

## Telephone Operations

### Digital Answering Machine - Base Unit Operation

Most of the answering machine functions can also be accessed by using the phone handset.

When the handset is idle, press the **REMOTE** button on the side of the handset. The handset will go into Remote Mode. The answering machine will announce the number of messages and how many of them are new on the handset.

All the dial pad's secondary functions are operational after the **REMOTE** button has been pressed. You are now able to access the answering machine remotely by using the cordless handset.

### Handset Operation


1. While in the Help menu, press **1**/Play to play messages.
2. If you wish to erase the currently playing message, press **2**/Erase.
3. If you wish to set OGM, press **3**/OGM.
4. If you wish to repeat the current messages, press **4**/Repeat.
5. If you wish to stop message playback, press **5**/Stop.
6. If you wish to record Memory, press **6**/Memo.
7. If you wish to go to the next message, press **7**/Next.
8. If you wish to go to the previous message, press **8**/Prev.

**NOTE:** Press the **Remote** button at any time you wish to exit the remote mode and return the handset to the idle state.

### "Two Way" Feature

The Two-Way feature allows you to record the conversation between the caller and you.

1. When a call comes in, press the **REMOTE** button and then press **TALK**, the conversation between the caller and you will be recorded from beginning to end.
2. During the conversation, if you press the **REMOTE** button, the conversation will be recorded from the time you pressed the **REMOTE** button until the conversation is over.

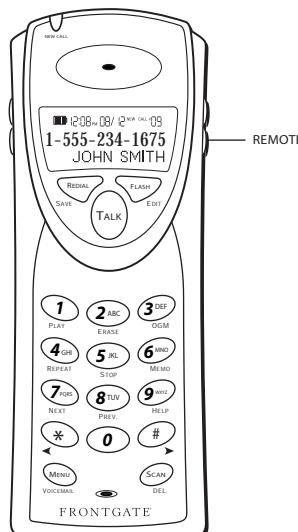

23

24

## Telephone Operations

### Receiving a Call

1. Check the display on the handset or base unit to see who is calling.
2. Press the **TALK** button.
3. When finished, press **TALK** again to hang up.

### Making a Call

To make a call, press the **TALK** button before you dial and press it again to hang up.

### Redial

Press the **REDIAL** button to redial the last telephone number that you dialed (up to 32 digits). If you get a busy signal, and want to keep dialing the number, just press **REDIAL** again (you don't have to turn the phone off and back on).

### Flash

Use the **FLASH** button to activate custom calling services such as call waiting or call transfer, which are available through your local phone company.

**TIP:** Don't use the **TALK** button to activate custom calling services such as call waiting, or you'll hang up the phone.

### Scan Button

While talking, you might need to manually change the channel in order to get rid of static. Press and release the **SCAN** button to advance to the next clear channel.

### Temporary Tone

This feature enables Pulse (rotary) service phone users to access touch-tone services offered by banks, credit card companies, etc., by pressing the **TONE** button to temporarily make the phone touch-tone compatible. To get information about your bank account, for example, you would:

1. Call the bank's information line.
2. Press the **TONE** button (\*) after your call is answered.
3. Follow the voice instructions to complete your transaction.
4. Hang up when finished. The phone returns to Pulse (rotary) service.

## Telephone Operations

### Digital Answering Machine - Base Unit Operation

The digital answering machine feature on this unit allows users to store 10 minutes of in-coming messages. This feature is fully integrated into the unit's Caller I.D. and display interface.

### Recording a Message

Use the **REC** button to record your personal greeting.

1. To record your greeting, press and hold the **REC** button until the unit beeps.
2. After the beep, record your greeting. Continue to hold the **REC** button while speaking.
3. Release the **REC** button when you have finished recording your greeting. The unit will automatically play the recorded greeting back.
4. To rerecord the greeting, repeat the process.

**Note:** This unit is loaded with a default greeting if you chose not to record your own greeting. If you would like to hear this greeting, quickly press and release the **REC** button.

### Play Button

Use the **PLAY** button to play the first saved voice message, followed by the next message until all messages are played.

### Delete Button

In the answering machine mode, use the **DELETE** button to delete the selected voice message from memory. You may also hold the **DELETE** button for 2 seconds to delete all the messages.

### Stop Button

In the answering machine mode, use the **STOP** button to go to stop the digital answering machine from playing the recorded messages.

### Skip Functionality

In the answering machine mode, use the **▼** or **▲** directional buttons on the base unit to skip to the previous or next recorded message on the digital answering machine.

## Telephone Operations

### Digital Answering Machine - Handset Operation

Most of the answering machine functions can also be accessed by using the phone handset.

When the handset is idle, press the **REMOTE** button on the side of the handset. The handset will go into Remote Mode. The answering machine will announce the number of messages and how many of them are new on the handset.

All the dial pad's secondary functions are operational after the **REMOTE** button has been pressed. You are now able to access the answering machine remotely by using the cordless handset.

### Handset Operation


1. While in the Help menu, press **1**/Play to play messages.
2. If you wish to erase the currently playing message, press **2**/Erase.
3. If you wish to set OGM, press **3**/OGM.
4. If you wish to repeat the current messages, press **4**/Repeat.
5. If you wish to stop message playback, press **5**/Stop.
6. If you wish to record Memory, press **6**/Memo.
7. If you wish to go to the next message, press **7**/Next.
8. If you wish to go to the previous message, press **8**/Prev.

**NOTE:** Press the **Remote** button at any time you wish to exit the remote mode and return the handset to the idle state.

### "Two Way" Feature

The Two-Way feature allows you to record the conversation between the caller and you.

1. When a call comes in, press the **REMOTE** button and then press **TALK**, the conversation between the caller and you will be recorded from beginning to end.
2. During the conversation, if you press the **REMOTE** button, the conversation will be recorded from the time you pressed the **REMOTE** button until the conversation is over.

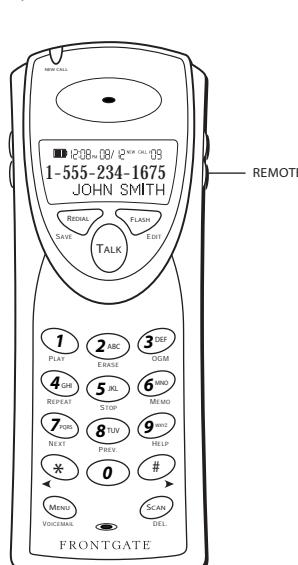

## Telephone Operations


### Store a Number In Directory

The phone must be OFF when you store numbers.

1. Press the **DIR** button. The display will show **PHONE BOOK**.
2. Press the **FLASH/EDIT** button to create a new phone entry.
3. Use the keypad to store a name (up to 16 characters). Use the following letter table for how to program the letters using the number pad. To advance to the next letter press the **►** directional button. Use the **1** button as a space.

5	666	44	66	1	7777	6	444	8	44
J	O	H	N	space	S	M	I	T	H

4. Press **▼** directional button on the side of the handset, and dial the number you wish to store (up to 16 digits). Press the **REDIAL/SAVE** button to insert a pause in the dialing sequence.
5. Press and hold the **REDIAL/SAVE** button when finished to store the number into memory.

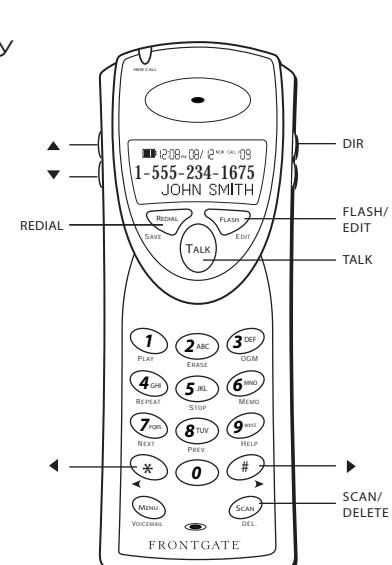

**NOTE:** If you mistype entering the phone number, you can move through the number and edit it by pressing **◀** or **▶** buttons. To delete a character or number inside the cursor, press the **SCAN/DELETE** button.

23

24

## Telephone Operations

### Changing a Stored Number in the Directory

Use the same procedure to change a stored number as you do to store a number - you're just replacing the phone number with a different one (reference page 24).

### Using Call Back

You can also use **TALK** button to dial numbers stored in memory.

1. Make sure the phone is OFF.
2. Press **DIR**.
3. Use the arrow buttons to scroll through the numbers stored in memory until the desired number is shown.
4. Press **TALK**. The number dials automatically.

**IMPORTANT:** If you make test calls to emergency numbers stored in memory, remain on the line and briefly explain the reason for the call to the dispatcher. Also, it's a good idea to make these calls in off-peak hours, such as early morning or late evening.

### Chain Dialing From the Directory

Use this feature to make calls which require a sequence of numbers such as using a calling card for a frequently called long distance number. Basically, you dial each part of the sequence from memory. The following example shows how you can use chain dialing to make a call through a long distance service.

The Number for	Directory Location
Long distance access number	7
Authorization code	8
Frequently called long distance number	9

1. Make sure the phone is ON.
2. Press **DIR** and then press 7.
3. When you hear the access tone, press **DIR** and then press 8.
4. At the next access tone, press **DIR** and then 9.

25

## Telephone Operations

### Inserting a Pause In the Dialing Sequence

Press the **REDIAL** button to insert a delay in the dialing sequence of a stored telephone number when a pause is needed to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). Each pause counts as 1 digit in the dialing sequence.

### Reviewing and Deleting Stored Numbers

1. Make sure the phone is OFF.
2. Press **DIR**.
3. Use the **UP** and **DOWN** directional buttons (volume buttons) to scroll through the numbers stored in memory until the desired number is shown (or press the memory location 0-9).
4. While the entry is displayed, press **SCAN/DELETE** to delete the entry. The display shows **ERASE NUMBER?**
5. Press **DELETE** a second time to delete the entry.

26

## Telephone Operations

### Display Indicators

The following indicators show the status of a message or of the unit.

<b>ERROR</b>	Caller information has been interrupted during transmission or the phone is excessively noisy.
<b>ENTER NAME</b>	Prompt telling you to enter a name for one of the 10 memory locations.
<b>ERASE ALL?</b>	Prompt asking if you want to erase all Caller I.D. records.
<b>ERASE CALL ID?</b>	Prompt asking if you want to erase the current Caller I.D. record that is shown on the display.
<b>ERASE NUMBER</b>	Prompt asking if you want to erase one of the 10 numbers stored in the phone's outgoing memory.
<b>END OF LIST</b>	Indicates there is no additional information in the Caller I.D. memory.
<b>NEW</b>	Indicates call or calls have not been reviewed.
<b>UNKNOWN</b>	The incoming call is from an area not serviced by Caller I.D. or the information was not sent.
<b>PAGING YOU</b>	Someone has pressed the <b>PAGE</b> button on the base.
<b>BLOCKED</b>	The person is calling from a number that has been blocked from transmission.
<b>REPT</b>	Repeat call message. Indicates that a new call from the same number was received more than once.

### Handset Sound Signals

Signal	Meaning
A long pulsing tone	Signals an incoming call
One short beep, one long beep	Page signal
Three short beeps	Out of range
Four short beeps	Low battery warning


27

## Changing the Battery

Make sure the telephone is **OFF** before you replace the battery.

1. Remove the battery compartment door.
2. Disconnect the cord attachment to the battery pack and remove the battery pack from the handset.
3. Insert the new battery pack and connect the cord into the jack inside the handset.
4. Put the battery compartment door back on.
5. Place handset in the base to charge.

**Allow the phone to charge for 12 hours before using the first time. If you don't charge the phone properly (for 12 hours) when you first set up the phone, performance of the battery will be compromised.**

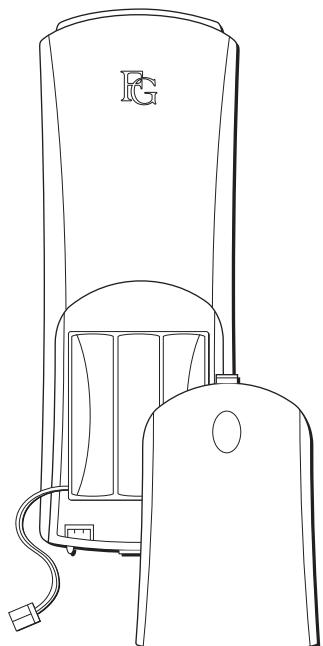


28

## CD Player Operations

### Listening to the CD Player

1. Insert a compact disk and the compact disk player will automatically activate.
2. Press **►||** to play the CD or wait 5 seconds for the autostart.
3. Press **►||** again to pause the CD player.
4. Press **◀||** or **||▶** buttons to skip CD tracks.
5. Press and hold **◀||** or **||▶** buttons to scan through a particular track. Release the button at the point you wish to stop the scan.
6. Press the **■** to stop the CD player. If you press **►||** after a CD has been stopped, the CD player will start from the point at which it was stopped.
7. Press the **▲** button to eject the compact disk

**Note:** If there is already a CD located in the CD player, simply press the **►||** button to begin compact disk functionality

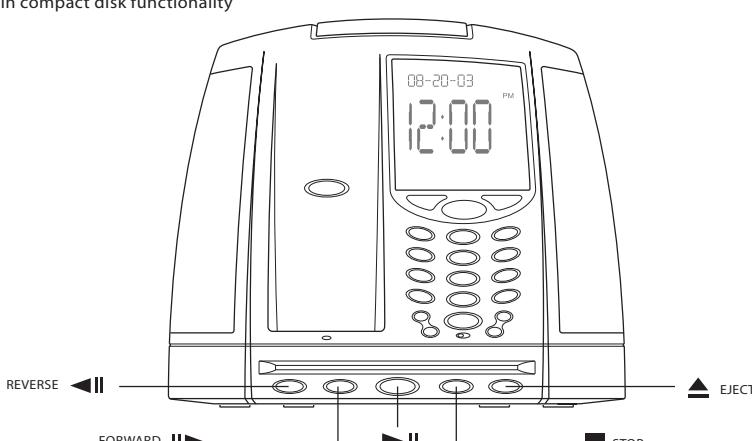

29

## Troubleshooting Guide

### Caller I.D.

Problem	Solution
No Display	Is battery fully charged? Try replacing the battery. If you are using AC power, make sure that the unit is connected to a non-switched electrical outlet. Disconnect the unit from the plug and plug it in again. Did you order Caller I.D. service from your local telephone company? The display won't function correctly unless you order Caller I.D. service from your phone company.

Caller ID Error Message	The unit displays this message if it detects anything other than valid Caller I.D. information during the silent period after the first ring. This message indicates either the presence of noises on the line, or that an invalid message has been sent from the telephone company.
-------------------------	--

### Telephone

Problem	Solution
No Dial Tone	Check installation - Is the base power cord connected to a working outlet? - Is the telephone line cord connected to the base unit and the wall jack?  Disconnect the base from the wall jack and connect another phone to the same jack. If there is no dial tone in the second phone, the problem might be wiring from your local service.
Is the handset out of range?	Make sure the battery is properly charged (12 hours).
Is the battery pack installed correctly?	Did the handset beep when you pressed the <b>TALK</b> button? Did the <b>CHARGE/IN USE</b> indicator come on? The battery may need to be charged.

30

## Troubleshooting Guide

### Telephone

Problem	Solution
Dial tone is okay, but can't dial out	Make sure the tone/pulse setting is programmed correctly.
Handset does not ring	Make sure the RINGER switch on the handset is turned on. You may have too many extension phones on your line. Try unplugging some phones. See solutions for "No dial tone."
You experience static, noise, or fading in and out	Change channels Is the handset out of range? Move closer to the base. Does the base need to be relocated? Charge battery. Make sure base is not plugged into an outlet with another household appliance.
Handset beeps continuously, as if the battery is low	Place handset in base for 20 seconds to reset the security code. If that doesn't work, charge batter for 12 hours. Clean charging contacts on handset and base with a soft cloth, or an eraser. See solutions for "No dial tone." Replace battery.
Memory dialing	Did you program the memory keys correctly? Did you follow proper dialing sequence? Make sure the TONE/PULSE setting is programmed correctly. Did you reprogram numbers into memory after power outage or battery replacement?

31

## Care and Maintenance

### Causes of Poor Reception

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into an AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

### General Guidelines

- Do not touch the laser lens on the CD player.
- Temperature changes may cause condensation on the laser lens. If condensation forms on the lens, leave the unit alone for about an hour or until the condensation is evaporated.
- Do not leave the unit exposed directly under sunlight or extreme heat such as inside a car parked in the sun. This can cause damage or malfunction.
- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- To prevent dust from reaching internal components, do not leave compartment doors open.
- Do not cover unit with a cloth.

### Handling of Compact Disc

- Treat your CDs carefully. Always pick up the CDs by their edge and put them back in their holders immediately after use.
- Always wipe the compact disc from center to the edge of disc with a soft dry cloth.

32

## Guarantee

### The Frontgate 395-Day Signature Guarantee

Our no-questions-asked Signature Guarantee gives you 395 days to put this product to the test. If it fails to meet your expectations in any way, return it within 13 months, and we'll promptly replace it or refund the cost, whichever you prefer.

Frontgate Customer Service  
1-800-436-2100  
8879 Union Centre Blvd.  
West Chester, OH 45069

E-mail: [customerservice@frongate.com](mailto:customerservice@frongate.com)

33

## Warning

To prevent fire or shock hazard do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure. To prevent fire or shock hazard, do not expose this appliance to rain or moisture.



SEE MARKING ON BOTTOM / BACK OF PRODUCT

### Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Follow all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or ground-type plug. A polarized plug had two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long period of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been exposed to rain or moisture, does not operate normally, or has been dropped.

34

## FCC Registration Information

Your telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

### 1 Notification to the Local Telephone Company

The FCC requires that you connect your cordless telephone to the nationwide telephone network through a modular telephone jack (USOC RJ11C or RJ11W).

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

### 2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

MADE IN CHINA

35

### **§ 15.105 Information to the user.**

b) For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.

### **§ 15.19 Labelling requirements.**

Receivers associated with the operation of a licensed radio service, e.g., FM broadcast under part 73 of this chapter, land mobile operation under part 90, etc., shall bear the following statement in a conspicuous location on the device:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

### **§ 15.21 Information to user.**

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

### **§ 15.214 Cordless telephones.**

(c) The label required under subpart A of this part shall also contain the following statement: "Privacy of communications may not be ensured when using this phone."