



P25 SRM9022 Mobile Radio



P25 – Conventional/Trunking Operating Instructions

TNM-U-E-0055 Issue 2.1a

TMC Radio Pty. Ltd.
1270 Ferntree Gully Road
Scoresby
Victoria, 3179
Australia



ASSOCIATED DOCUMENTATION

The following documentation is available for use with the SRM9000 series of products:

TNM-U-E-0060	SRM9022-P25 Mobile Radio Brief User Guide
TNM-U-E-0074	SRM9030-P25 Mobile Radio Operating Instructions

To order copies of any of the above publications, or any other TMC Radio product, contact TMC Radio on +61 3-9730-3800 or send a Fax on +61 3-9730-3968.

The TMC Radio web site also has a comprehensive list of documentation available for download.

<http://www.tmcradio.com>

ABOUT THIS DOCUMENT

This publication is copyright and no part may be reproduced without prior permission of TMC Radio.

Due to our policy of continuous improvement to our products and services, technical specifications and claims, correct at time of publication, may be subject to variation without prior notice.

TMC Radio has endeavoured to ensure that the information in this document is fairly and accurately stated, but does not accept liability for any errors or omissions.

SAFETY

1. Do NOT operate your radio, without a handsfree kit, whilst driving a vehicle.
2. Do NOT operate your radio in an explosive atmosphere.
Obey the 'Turn Off Two-way Radios' signs where these are posted, e.g. on a petrol station forecourt.
3. Do NOT touch the antenna while the radio is transmitting.

HINTS FOR USING THE RADIO

- When speaking, hold the microphone a few centimetres from your mouth and speak across it, rather than into it.
- Keep the length of your conversation to a minimum and replace the microphone on its cradle after use.
- When it is possible to move location, avoid making calls from known poor signal-strength areas such as the radio systems fringe areas (limit of range) or from screened or shadowed areas, e.g. an underground car park or underpass.
- To avoid unnecessary drain on the vehicle battery, keep the engine running when using the radio for extensive periods of time.

CONTENTS

1. INTRODUCTION	6
1.1 Overview	6
1.2 Configuration	6
1.3 Modes of P25-SRM9022 Operation	6
2. CONTROLS	7
3. MENU SYSTEM	9
3.1 Menu Navigation	10
4. MENU SCREENS	12
4.1 Channel Screen	12
4.2 Menus	14
4.2.1 Zone Menu	14
4.2.2 Squelch	15
4.2.3 Mute Adjust	16
4.2.4 Phonebook Menu	17
4.2.5 Phonebook Edit	19
4.2.6 User Options	22
4.2.7 Contrast	23
4.2.8 Alert Volume	23
4.2.9 Radio Info	24
4.2.10 Mode Menu	26
4.2.11 RSSI (Received Signal Strength Indication)	26
4.2.12 Crypto	27
4.2.13 Setup	28
4.2.14 Stored Calls	29
4.2.15 Messages	30
4.2.16 Scan Edit Menu	38
4.2.17 No Menu	40
5. COMMON FUNCTIONS AND FACILITIES	41
5.1 Switch-On/Switch-Off	41
5.2 Default Screen –Trunked Mode	41
5.3 Volume Adjustment	41
5.4 Receiving (Single Channel Screen)	42
5.5 Received Individual Calls	42
5.5.1 Stored Calls Screen	43
5.5.2 Received Call Pop-Up Menu	43
5.6 Transmitting	44
5.7 Scan/vote Functions	44
5.7.1 Scan/Vote Screen	45

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

5.8	Keypad Lock	46
5.9	Encryption	46
5.10	Emergency Alarm	46
5.10.1	Receiving Emergency Calls	46
5.10.2	Making an Emergency Call	46
6.	SPECIAL FUNCTION KEYS.....	48
6.1	Alarm.....	48
6.2	Announce	48
6.3	Channel Up and Down	48
6.4	Crypto	48
6.5	DTMF Send 1/2 (P25 Analogue)	48
6.6	Key Lock.....	48
6.7	Low Power.....	49
6.8	Menu	49
6.9	Mode	49
6.10	Mute.....	49
6.11	Reset	49
6.12	Scan.....	50
6.13	Scan Edit.....	50
6.14	Scrambler On/Off (P25 Analogue).....	50
6.15	Skip.....	50
6.16	Squelch	50
6.17	Talkaround.....	50
6.18	Zone.....	51
7.	APPENDICES.....	52
7.1	Alert Tones And Messages	52
7.2	Glossary	52
7.3	Acronyms	53
7.4	Compliance with RF Energy Exposure Guidelines (United STATES and Canada).....	55

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

1. INTRODUCTION

1.1 OVERVIEW

The Simoco SRM9000 Series Radios are a family of versatile Digital Signal Processor (DSP) controlled, software-defined two-way mobile radios.

These Operating Instructions describe the operation of the APCO P25 Standard compliant Mobile Radio, consisting of an SRM9000 Transceiver, a MA-MAB-2 Option Board, and SRM9022 Controller Microphone.

The P25-SRM9022 Radio may be customised to your operational requirements using the Field Personality Programmer (FPP). Your Simoco representative can help in programming your radio facilities to meet your present and future requirements.

1.2 CONFIGURATION

The P25-SRM9022 Radio must be configured using the P25 Field Personality Programmer (FPP) prior to operation. The configuration process defines the radio channels, signalling and other settings so that the radio will operate with your system

1.3 MODES OF P25-SRM9022 OPERATION

The SRP9100 P25 Radio operates in Analogue FM and P25 Conventional and Trunked Digital modes.

Radio Channels are organised in groups of up to 250 per zone. Up to 64 zones may be defined.

Generally, zones can be programmed with channels belonging to common function groups.

A radio channel can be defined as either Analogue, Conventional P25 Channel or Trunked P25 network, and a Zone may contain a mix of Analogue or Conventional P25 Channels.

2. CONTROLS



Figure 1 – SRM9022 Controller Microphone

The SRM9022 Controller Microphone has the following features:

- 6 function Buttons
- 10 additional indirect Function Buttons
- 1000 Channels
- 64 Zones
- 250 Channels per zone max.
- LCD 102x64 graphic display. 8 lines of 14 characters (small font). 3 fonts, small medium and large. Context based soft menu labels.
- LED indicator

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

SRM9022 Key	Label	Function
Power On/Off		This pushbutton turns the radio on and off. To turn the radio on, press and hold the button until the radio turns on. To turn the radio off, press and hold the button for 2 seconds until the radio turns off.
PTT		Push-to-Talk. Hold the microphone about 10cm from the mouth. Press and hold the PTT switch and speak. Release to listen.
Volume Up		Increase Volume.
Volume Down		Decrease Volume.
Function Key F1		Programmable Function key. Default – Menu Select.
Function Key F2		Programmable Function key. Default – Channel Down.
Function Key F3		Programmable Function key. Default – Channel Up.
Function Key F4		Programmable Function key. Default – OK.
Function Key F5		Programmable Function key. Default – Alarm.
Function Key F6		Programmable Function key. Default – Reset / Cancel.
Keypad	1 2 3 4 5 6 7 8 9 * 0 #	Keypad can be used to select a Channel or Special Function. E.g. 12# will select channel 12.

Indicator LED		Function
Green		Green LED when receiving a signal.
Red		Red LED when the radio is transmitting.

3. MENU SYSTEM

This section details the operation of the menu system for the SRM9022 P25.

The SRM9022 has a menu system that is configurable by the FPP. The FPP has a pool of menu entries that can be applied as required in the order required. In simple configurations, no menu can be programmed, if required. See Figure 4 for example menu.

Pressing the “M” key from the top-level channel screen enters the menu system. This key has a soft menu label above it titled “MENU”.

The menus possible are:

- **Zone** (usually the first menu, as often accessed)
- **Squelch**
- **Mute Adjust** (FM) / **Monitor** (Digital)
- **Phonebook**
- **Phonebook Edit**
- **User Options**
- **Contrast**
- **Alert Volume**
- **Radio Info**
- **Mode**
- **RSSI**
- **Crypto**
- **Setup**
- **Stored Calls**
- **Messages**
- **Scan Edit**
- **No Menu**

To assist the user in menu key selection, a soft menu label may appear above the function keys. The label shows the user the current function for that key which may change between different menus.

Programming of menus is a configuration task normally performed by the system manager using the FPP software.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

3.1 MENU NAVIGATION

Pressing the “**M**” key selects **Menu** mode from the main Channel Screen. Once in menu mode, the ▼ and ▲ keys cycle through the menus.

To exit **Menu** mode, press the “**M**” key again or the Menu timeout will exit automatically. Generally, pressing “**M**” key while in a menu backs up to the next highest level of menu and the “**OK**” button selects the menu screen.

The ▼ and ▲ keys are used to navigate through a list of options such as channels, or increase/decrease a value.

When the **Menu** key is first pressed, the numeric keys become short cut keys to functions. Numeric keys can be programmed (using FPP) with functions i.e. Scan.

To access this, you can press the “**M**” or menu key from the channel screen and then the numeric key assigned to that function.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

Note: Example Menus only shown.
Other Menus may be configured with the FPP


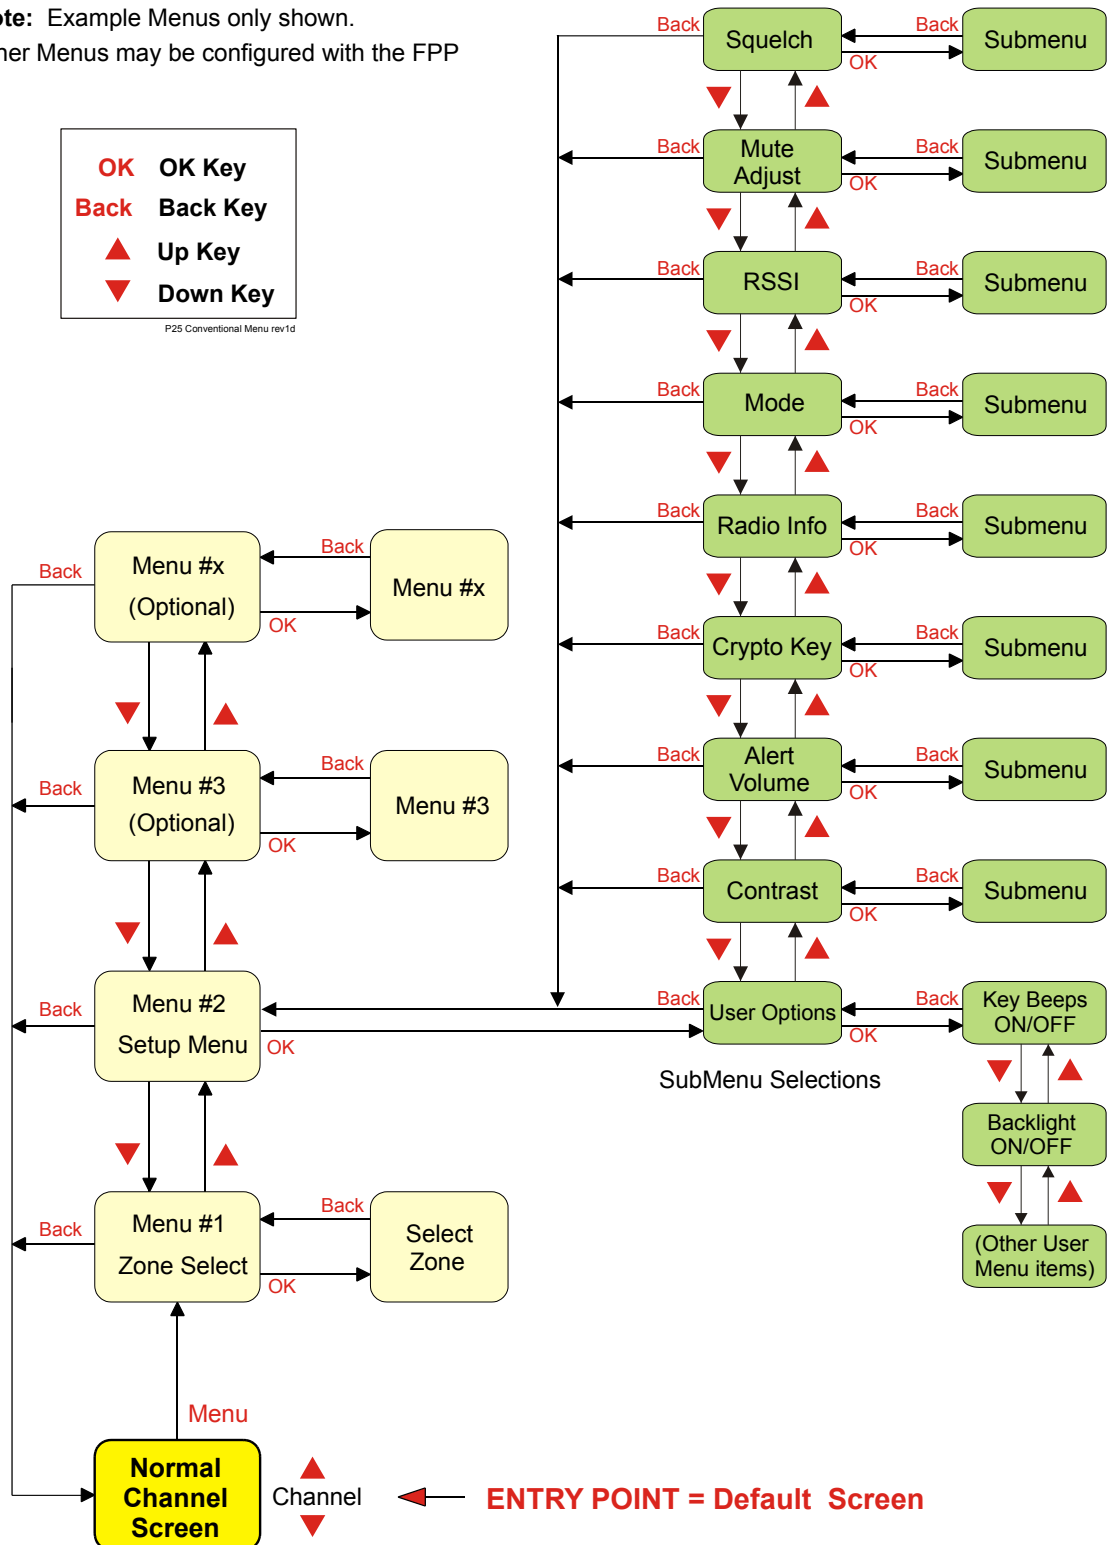


Figure 2 - Menu Navigation


P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4. MENU SCREENS

4.1 CHANNEL SCREEN

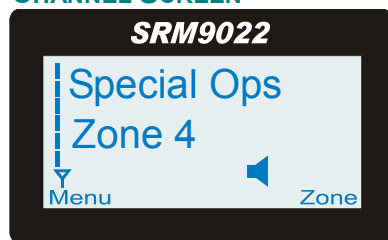

Typical Display

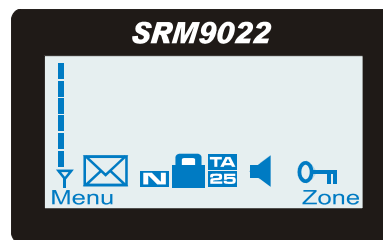

Icons

The Channel Screen shows the current channel and allows channel selection.

The **Channel Name** (top line) shows the text associated with the currently selected radio channel.

The **Zone Name** (middle) shows the text associated with the currently selected radio zone.

The **RSSI Bars** indicate the signal strength of the current channel.

The **Battery Bars** indicate the battery charge level.

Pressing the “M” key enters the **Menu** mode.

The lower part of the screen is reserved for icons.

Radio channels may be configured with the Field Programmer as specific frequencies or as auto scan types. When an auto scan channel is selected, it will immediately go into scan mode. Selecting another non-autoscan channel will stop the scan.

If a radio channel is defined as a P25 Conventional Digital Channel, it will only receive P25 digital signals.

If a radio channel is defined as an Analogue FM channel, it will receive both P25 Digital* and Analogue FM signals.

A radio channel defined as a P25 Trunked network will automatically start searching for the pre-programmed network, and only receive signals from that network once it has service.

* While in Analogue mode, all unencrypted digital P25 traffic will be heard regardless of NAC or Talkgroup.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

ICONS	INDICATION
	A filled speaker indicates that a signal is present and the audio can be heard from the speaker.
	The outline speaker icon indicates that a signal is present and the radio is muted. This could be another user group, for instance. You should not transmit while other traffic is using the channel.
	Scan Indicator. When radio is on a scan channel and scanning, the arrow will rotate.
	Transmit Indicator.
	Received Signal Strength Indication (RSSI). A stronger signal will display more bars above the “antenna” icon
	Encryption Indicator. The icon is shown when the selected channel is programmed for encryption. If an unencrypted signal is received, the icon will not be shown.
	25 = Digital Mode Indicator
	Selective Mute. Only radio signals specifically directed to the user or the channel’s defined talkgroup will be heard on the speaker
	Normal Mute. Only radio signals from the users own network will be heard on the speaker
	Monitor. All P25 digital radio signals on the channel will be heard
	All keys except PTT, or any function assigned as Alarm, will be disabled. Press the OK key for 2 seconds to unlock all keys
	Talk Around enabled indicator. When shown, Talk Around is active
	Scrambler indicator (analogue only)
	Emergency mode. Blinking icon indicates that the emergency button has been pressed.
	Individual Addressing Mode. When shown, the radio will transmit to an individual address instead of a talkgroup.
	Envelope icon. Indicates that a message(s) stored if icon steady, icon flashes if unread message(s) stored.
	Trunking mode. Icon is shown when a trunking system has been selected. V10b
	Connecting icon. Shown when a text message is being sent and the connection is in progress

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

!	Connection Fail icon. Shown when a text message transmission has failed.
*	Radio has stopped on a scan channel.

4.2 MENUS

The menu structure on the SRP9100 is configurable using the Field Programmer. A system administrator usually tailors the order and presence of the menu options to specific customer requirements.

This section will describe all the possible menus.

Normally the menus are divided into two menu lists.

These are normally the Main menu list and the Setup menu list.

In the default configuration, the Main menu contains the Zone screen and a Setup screen. This allows access to the second “Setup” menu level.

4.2.1 Zone Menu

The Zone Screen is used for changing Zones. A Zone is normally defined as a group of radio channels with a common operational role.



When the “Zone” menu option is displayed, press the “OK” button to enter the “Zone” select screen.



Once the “Zone” menu appears, press the ▼ and ▲ keys to choose the required Zone. Press the “OK” key to select the required Zone. The radio will return to the channel screen and select the first channel in the new Zone.

Direct access to the “Zone” menu from other screens can also be programmed to one of the function buttons with the Field Programmer.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.2 Squelch

This menu allows the channel's default squelch mode to be modified.

If the selected channel is changed or the radio is switched off, the channel's default squelch setting will be restored.



Press the "OK" key for the "Squelch" Menu



P25 Squelch Screen

For a P25 digital channel, pressing the ▼ and ▲ keys will allow selection of either **Monitor**, **Normal** or **Selective** squelch mode.

For an analogue channel, pressing the ▼ and ▲ keys will allow selection of either **Monitor** or **Normal** squelch mode.

Digital Channel Monitor Mode:

The radio will receive any decryptable or clear P25 digital voice signals. The Network Access Code (NAC) is not checked. An "M" icon on the display indicates monitor mode.

Digital Channel Normal Mode:

When **Normal** squelch is selected, the radio will receive all decryptable or clear digital transmissions with the correct NAC. Reception is not conditional upon the talkgroup or Unit ID. An "N" icon on the display indicates normal squelch.

Digital Channel Selective Mode

If **Selective** squelch is chosen, the radio will only receive decryptable or clear digital transmissions with the correct NAC and Talk Group ID (TGID) or correct NAC and Unit ID. An "S" icon indicates **Selective** squelch.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

Analogue Channel Monitor Mode:

The radio will receive any Analogue voice or P25 digital signals. Digital NAC or Analogue CTCSS is not checked. An “M” icon indicates monitor.

Analogue Channel Normal Mode:

When **Normal** mute is selected, the radio will receive correctly addressed Analogue radio transmissions and all decryptable or clear digital transmissions. An “N” icon indicates Normal.

Pressing the “OK” key returns to the main channel screen.

Pressing the “Back” or “M” key returns to the next highest menu level

4.2.3 Mute Adjust

From the menu list, step through the menu options with the ▼ and ▲ keys until the “Mute Adjust” menu is displayed.



Press the “OK” key for the Mute adjustment screen.



Analogue Mute Screen

The mute adjustment will be applied to all the radio's analogue channels.

Use the ▼ and ▲ keys to adjust the mute threshold. A numeric value of the present mute level is shown.

The “OK” key returns to the default channel screen with the selected mute setting.

It is recommended that the default mute setting of 4 be used. The SRM9000 series radios have a carrier noise mute and this means the mute will open at the point where an analogue signal is sufficiently noise free to be intelligible with a setting of 4.

Where the default is not acceptable, it may be adjusted for analogue channels

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

- 0 corresponds to “no muting,”
- 4 to listen to all intelligible signals,
- 8 to listen to slightly noisy signals and
- 15 only listen to signals with no background noise.


Pressing the “**OK**” key will exit to the Channel Screen with the selected mute setting.

Direct access to the “**Mute Adjust**” screen from other screens can also be programmed to one of the function buttons with the Field Programmer.

4.2.4 Phonebook Menu

When “**Phone Book**” is selected from the menu screen, the Phone Book Screen is shown. From this screen, it is possible to view the of all phone entries in the phone book.

Phone book entries may be Individual Addresses, Telephone numbers or Talk Groups.

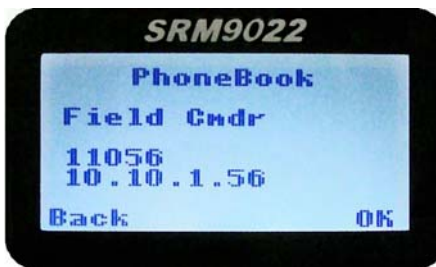

The second line shows the name of the selected phone book entry.

The third line shows the unit identifier of the phone book entry. This is the P25 ID that the radio will call.

The fourth line shows the IP address associated with the phone book entry. IP addresses are used for data calls.

Phone book entries may be selected with the ▼ and ▲ keys.

A “Reset” function key press (if configured) takes the radio back to the default screen display.

When “**Back**” key “**M**” is pressed, the radio returns to the Menu screen.

4.2.4.1 Making an Individual Call

When “**PTT**” key is pressed:

- The radio is changed to individual call mode (individual call to the unit identifier of the selected phone entry). The individual call icon is displayed.
- If the radio is already in individual call mode addressed to a different unit, the destination unit ID shall be replaced by that of the newly selected phone entry.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

- The radio will remain in individual call mode until the inactivity timeout has elapsed, i.e. No PTT or signal received for the Field Programmer set time period (typically 10 seconds).
- The radio will return to the default screen.

4.2.4.2 Making an Individual Call with Call Alert

When the “**OK**” key is pressed with the Phone Book entry displayed:

A Call Alert is sent to the displayed ID.

The called radio will sound a Call Alert.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.5 Phonebook Edit

The Phone Book can be modified so that new entries can be added and existing entries can be modified or removed from the phone book.


Phone book entries may be Individual Addresses, Telephone numbers or Talk Groups.

Changes to the phone book are permanent.

4.2.5.1 Phonebook Edit Default Screen

When “**Phone Book Edit**” is selected from the menu screen, the radio displays the Phone Book Edit Screen.

From this screen, an entry can be chosen using the ▼ and ▲ keys.

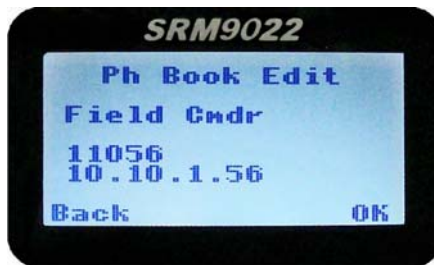


The displayed information is the same as the Phone Book Screen display.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

If the “**Back**” key “**M**” is pressed, the radio returns to the MENU screen.

If the “**OK**” key is pressed, the “**Phone Book Edit**” pop-up menu is displayed.

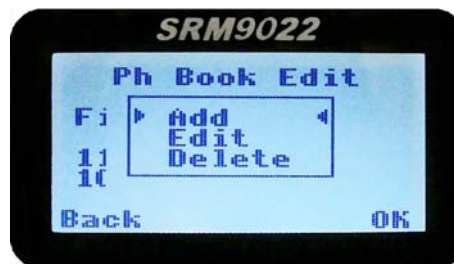

4.2.5.2 Phone Book Edit Pop-up menu

The pop-up items are:

- **Add:** to add a new phone entry
- **Edit:** to edit (modify) the selected phone entry.
- **Delete:** to delete the currently selected phone entry.

The selection is made with the ▼ and ▲ keys.

The “**M**” or “**Back**” key takes the radio back to the Phone Book Edit Default Screen.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

A “Reset” function key press (if configured) takes the radio back to the default screen display.

If “Delete” is selected, pressing “OK” removes the selected phone entry from the phone book and takes the radio back to the default screen display.

If “Add” is selected, pressing “OK” takes the radio to the Add New Entry sub-menu.

If “Edit” is selected, pressing “OK” takes the radio to the Edit Phone Entry sub-menu.


4.2.5.3 Phone Book Edit – Add New Phone Entry

The first edit screen is the entry type screen. There are 6 possible types of Phone Book entries. These are:

Conv.Unit ID (Option 0) Conv.PSTN (Option 1) Conv.Group (Option 2)

Trunk Unit ID (Option 3) Trunk PSTN (Option 1) Trunk Group (Option 4)

Make the selection 0 – 4 and select OK.

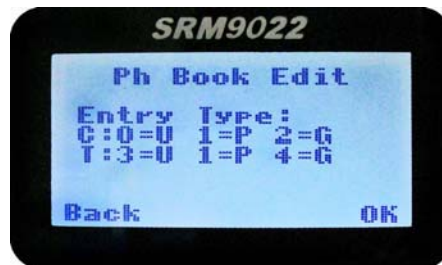



From here, enter the System ID value as described in the Phonebook Edit section.

4.2.5.4 Phonebook Edit.

This selection is used to edit an existing phone book entry. The operation is similar to adding a phonebook entry in previous section.

In this example, editing a P25 Trunked ID is shown. It is also possible to edit a P25 Conventional ID and a P25 Group Entry.

The first step is to edit the System ID, if required.

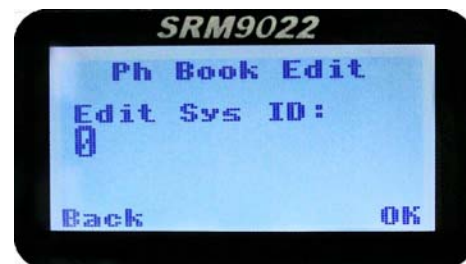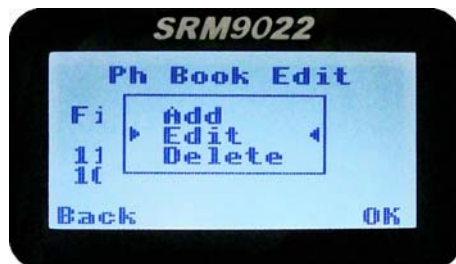


Upon entering this screen, the current trunked System ID of the selected entry is displayed.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

The System ID entry can then be changed using the numeric digits and ▼ key as a destructive backspace.

Once the New System ID is entered, press “OK” key to move on to the next sub-menu screen to edit the WACN ID, if required.

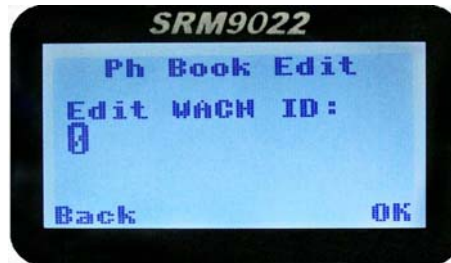

Upon entering this screen, the current WACN ID of the selected phone entry is displayed.

The WACN ID entry can then be changed using the numeric digits and ▼ key as a destructive backspace.


If there is no change for the WACN ID, press “OK” key to move on to the next sub-menu screen to edit the Unit ID, if required.



Upon entering this screen, the current Unit ID of the selected phone entry is displayed.

The name entry can then be changed using the numeric digits and ▼ and ▲ key to move the cursor with **Reset** function key as a destructive backspace.

If there is no change for the Unit ID, press “OK” key to edit the IP address, if required.

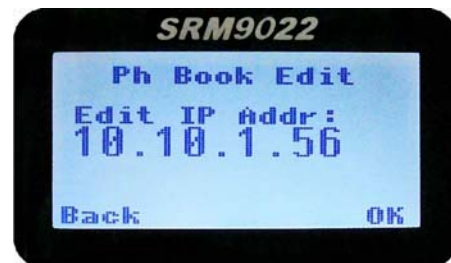

Upon entering this screen, the current IP address of the selected phone entry is displayed.

The IP address can then be changed using the numeric digits and ▼ and ▲ key to move the cursor with **Reset** function key as a destructive backspace. The “#” key is used to enter a “.”.

If there is no change for the IP address, press “OK” key and move on to the next sub-menu screen to edit the name.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS



Upon entering this screen, the current name of the selected phone entry is displayed.

The name entry can then be changed using the numeric digits and ▼ and ▲ key to move the cursor with **Reset** function key as a destructive backspace.

If there is no change for the name, press “OK” key to complete the editing on the phone entry. The phone entry will be modified in the radio, and the radio will return to the default screen.

4.2.6 User Options

The “**User Options**” menu provides access to a list of Functions that may be toggled on or off. Up to 10 functions may be defined in this menu by the FPP programmer.



Press the “OK” key for the “User Options” screen.



When the Function is selected, the function can be toggled ON or OFF with the “OK” key.

The ▼ and ▲ keys are used to select the other functions.

Pressing the “Back”/ “M” key saves all the function settings and returns to the next highest menu level.

Toggle functions include Key Beeps, Backlight, Talk-Around, Analogue Scrambler and Low Power Override.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

These functions can also be assigned directly to the radio's function buttons, if required.

4.2.7 Contrast

This menu allows the screen's contrast setting to be altered.



Press the "OK" key for the "Contrast" adjustment screen



When the "Contrast" menu is selected, the contrast can be adjusted with the ▼ and ▲ keys. The numeric value of the Contrast is displayed.

Pressing the "OK" key returns to the main channel screen.

Pressing the Back or "M" key returns to the next highest menu level.

4.2.8 Alert Volume


This Screen allows you to set the level of the relative Alert Volume level in relation to the current Volume setting. The level can be set in 62 steps over the range -31 to +31, with 0 being about the same as the voice level. For example, if the alert volume is set to -6, it will be softer than received voice on the radio.

From the Settings Sub Menu, step through the menu options with the ▼ and ▲ keys until the Alert menu is displayed.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS



Press the “**OK**” key for the “**Alert Volume**” adjustment screen

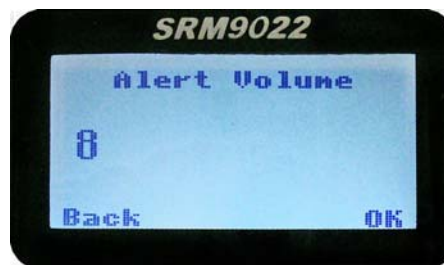

Use the ▼ and ▲ keys to change the relative alert volume level. The beep will sound at the indicated level each time the setting is changed.

Press **OK** to accept the setting and return to the Channel Screen.

Pressing the **M** key will exit back to the setup menu.

Note: A minimum Alert Level may be set by the FPP to ensure the Alerts can always be heard from the speaker.

4.2.9 Radio Info

These screens display information that identifies the Field Programmer File description, Radio ID, Serial Number, Software Version and IP Address.

Step through the menu options with the ▼ and ▲ keys until the Radio Info menu is displayed.

To select, Press the “**OK**” key for the “**Radio Info**” Screen.

The ▼ and ▲ keys select the following information pages:

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS



Description, P25 Conv. ID and Radio Band



Radio Software Version and Serial Number



Application Software Version and Date



Application Upgrade Version, Date and PLA code



P25 Radio Unit Trunked ID and IP Address



P25 Trunked SysID, WACN, GID and UID



Feature Authorisation Enables



Encryption Status



External Application Memory Status

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

The “**Radio Info**” screens are read-only screens. Press “**OK**” to return to the Channel Screen.

4.2.10 Mode Menu

The mode menu is used for changing from one radio to another, such as PMR/LMR mode to P25 or MPT1327 trunking.

From the Channel Screen, select menu mode with the “**M**” or “**Menu**” key and step through the menus with the ▼ and ▲ keys until the “**Mode**” menu is reached.



Press “**OK**” to select the Mode menu.



From the “**Mode**” menu, use the ▼ and ▲ keys to select the required operating mode, such as Apco P25, PMR or MPT Trunking. While the required mode is displayed, press OK to select that operating mode. The radio will then display the default screen for that mode.

Keypad shortcuts can be used to change modes from the keypad.

- PMR (*60#)
- P25 (*80#)
- MPT Network 1 (*71#)
- MPT Network 2 (*72#)

4.2.11 RSSI (Received Signal Strength Indication)

This screen displays the received signal strength in dBm. The reading is typically accurate within +/- 2 dBm between -120 and -80dBm, when the radio has been correctly calibrated. For example, -90dBm is a strong signal and -120dBm is no signal.

The screen also shows the Bit Error Rate (BER) on digital channels. RSSI and BER are typically used to indicate signal quality.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

From the Settings Sub Menu, step through the menu options with the ▼ and ▲ keys until the “RSSI” menu is displayed.



Press the “OK” key for the “RSSI” screen



If a Digital channel is selected BER will be displayed.

The RSSI/BER will be displayed until either the “M” key is pressed to return to the next highest menu level or the “OK” key is pressed which will return to the main channel menu.

A lower RSSI value indicates a stronger signal, i.e. -80dBm is a stronger signal than -100dBm.

4.2.12 Crypto

This menu allows the digital channel's default transmit encryption key to be modified. The current selected digital channel has encryption enabled if the padlock symbol is displayed.



P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

Press the “OK” key for the “Crypto Key” menu.



Digital



Analogue

If an Analogue channel is selected, a warning message will display “None-Analog”.

When the Crypto menu is selected, the digital channel's Encryption Key ID can be changed with the ▼ and ▲ keys.

The key name and the key identifier (1-32) for the selected channel are displayed.

If the selected channel is changed or the radio is switched off, the channel's default encryption key will be restored.

Pressing the “OK” key returns to the main channel screen.

Pressing the “Back” or “M” key returns to the next highest menu level.

4.2.13 Setup

The screens in the Setup sub-menus allow the radio operator to edit/modify the operation of some of the general functions of the radio.

Once the M key is pressed from the “Channel” screen, the ▼ and ▲ keys cycle through the available “Main” menus. Once the “Setup” menu appears, press the “OK” key to select it.



The ▼ and ▲ keys are then used to scroll through the setup menus.

The Setup menu structure may include, for example:

- **Alert Volume,**
- **Contrast,**
- **RSSI (Received Signal Strength Indication),**

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

- Info (Radio software and hardware information),
- Crypto (Select Transmit Encryption Key),
- Squelch,
- Mute Adjust or
- User Options

4.2.14 Stored Calls

This screen displays the received individual call records one by one, starting with the most recently received call record.



Either the name of the caller from the phone book or the user ID is displayed if the ID is not known to the phone book. If stored calls are empty, NO RECORD is displayed.

The ▼ and ▲ keys can be used to step through the stored calls. An error beep will sound if there are no more call records.

A “Reset” function key press (if configured), takes the radio back to the default screen display.

The “M” or “Back” key returns to Menu screen. When “OK” key is pressed, a pop up menu is displayed so that the message can be deleted or party called back.



The selections are:

- **DELETE** – to delete the call record.
- **CALL** – to call back the caller (set individual call to the caller)
- **CANCEL** – to cancel the action selection.

The selection is made with the ▼ and ▲ keys.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

The “**M**” or “**Back**” key returns to Stored Calls screen”.

A “Reset” function key press (if configured) takes the radio back to the default screen display.

If “**DELETE**” is selected, pressing “**OK**” removes the selected call record (being viewed) from the list. The radio returns to the Stored Calls Screen with the next record being displayed.

If “**CANCEL**” is selected, the **Stored Calls** screen is displayed.

If “**CALL**” is selected, pressing “**OK**” sets the radio to individual calling mode with the ID of the stored call. A subsequent PTT within the configured time interval will send an individual call to the ID of the stored call.

4.2.15 Messages

A radio unit can receive and transmit predefined short messages and text messages with another radio unit on a digital channel (P25 conventional only).

Messages received are stored in radio memory. They can be viewed and deleted as required.

If there are unread messages stored in the radio, the envelope icon on the default screen will flash.

If there are messages in the radio that have all been read, a steady envelope icon is shown on the default screen.

If there are no messages in the radio, the envelope icon will not appear on the default screen.

To view/delete/send messages, go to the Menu selection and choose the “**Messages**” menu.



When “Messages” is selected from the menu screen with “**OK**”, a pop-up screen will appear.



P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.15.1 Messages Selection Pop-Up Menu

The pop-up selections are:

- **VIEW:** view received messages.
- **SMSG:** Short Message. The radio can be programmed with a list of predefined messages. Choosing **SMSG** shows a list of predefined messages, which can be sent as a short message to another radio unit. Only applicable when a digital channel is selected.
- **TXTMSG:** Text message. Enters the text message edit and send sub-menus. Only applicable when a digital channel is selected.

Options are selected with the ▼ and ▲ keys.

Pressing “**M**” or “**Back**” keys takes the radio back to the Menu screen.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

If “**VIEW**” is selected, pressing “**OK**” shows the Message View screen.

If “**SMSG**” is selected, pressing “**OK**” shows the Short Message screen only for a digital channel, otherwise an error beep will sound.

If “**TXTMSG**” is selected, pressing “**OK**” shows the Edit Text Message screen only for a digital channel, otherwise an error beep will sound

4.2.15.2 View Received Messages Screen.

Received messages (both short messages and text messages) can be viewed from this screen.

This screen displays the received messages one by one, starting with the most recent received message.



The information displayed for each message includes the sender ID and the first 2 lines of the received message in text string.

If no messages are stored, “**NO RECORD**” is displayed.

To step through other stored messages, use the ▼ and ▲ keys. If there is no further message stored, an error beep will sound.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

If the “**Back**” or “**M**” key is pressed, the radio will return to the Messages Selection pop-up Menu.

Pressing the “**OK**” key displays the Message View pop-up menu with further options.



4.2.15.3 Message View Pop-Up Menu

The Message View pop-up allows the following options:

- **DELETE:** deletes the current received message.
- **MORE:** to view the full (entire) message.
- **REPLY:** to select the method of replying to the selected message.

Selection is performed using the ▼ and ▲ keys.

Pressing the “**M**” or “**Back**” key takes the radio back to the “**Messages View**” Screen.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

If “**DELETE**” is selected, pressing “**OK**” will remove the current selected message from the radio. The radio will return to the “**Messages View**” screen with the next message being selected and displayed.

If “**MORE**” is selected, pressing “**OK**” will display the full message.

If “**REPLY**” is selected, pressing “**OK**” will display the “**Message Reply**” pop-up screen.

4.2.15.4 More Message View Screen

This Screen displays the selected message in full scale – 6 lines of message text per page of the selected message.



If a message exceeds a screen, the ▼ and ▲ keys can select the other pages.

Pressing “**M**” or “**OK**” returns to the “**Messages View**” pop-up screen.

The “**Reset**” function key press (if configured), takes the radio back to the default screen display.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.15.5 Reply Message Selection Pop-Up Menu

Selecting Reply brings up another pop-up menu.



The selections are:

- **CALL:** calls the selected sender.
- **MSG:** sends a short message to the sender
- **TXTMSG:** to edit and send a text message to the sender.

Selection is made using the ▼ and ▲ keys.

The “M” or “Back” key press returns to the “Messages View” pop-up screen.

A “Reset” function key press (if configured) takes the radio back to the default screen display.

If “CALL” and “OK” is selected, the radio returns to the default screen and is set to individual calling mode for a time out period determined by radio configuration.

When the radio is PTT'd, an individual voice call is sent to the message sender.

If “MSG” is selected, pressing “OK” displays the Message Reply - Short Messages screen.

If “TXTMSG” is selected, pressing “OK” displays the Message Reply –Text Edit screen.

4.2.15.6 Short Message Reply

This menu is used to reply with a pre-defined short message.



This screen shows the destination unit identifier and the selected short message.

The short message can be selected from the short message list by using the ▼ and ▲ keys.

A “Reset” function key press (if configured) takes the radio back to the default screen display.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

A “**Back**” or “**M**” key press returns to the Message Reply Pop-up screen.

When “**OK**” key is pressed, the selected short message is sent in reply to the received message, and the radio returns to the default screen.

4.2.15.7 Text Message Reply Screen

This menu is used to reply with a free form text message.



The maximum length of text message is 210 characters. The number of characters entered is displayed in the top right hand side.

The characters are entered via the keypad by pressing the relevant key one or more times to choose each character.

The ▼ key is used to move the cursor to the left.

The ▲ key is used to move the cursor to the right.

A “**Reset**” button press and hold for less than one second deletes the character to the left of the cursor, and moves the cursor position to the left by one.

Holding the “**Reset**” button down for more than one second deletes all characters from the cursor position to the right. A new character entered is put on the current cursor location.

The ‘#’ key is used to toggle upper and lower case.

The “0” key is the space key.

When “**Back**” key “**M**” is pressed, the radio returns to the Message Reply pop-up screen.

Pressing “**OK**” sends the edited text message in reply to the sender of the message. The radio returns to the default screen.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.15.8 Send Message (Short or Text)

This menu is used to send either a short message or a text message to another party.

Select Messages from the main menu and then choose either “**SMSG**” (Short Message) or “**TXMSG**” (Text Message).



This screen allows the user to view and select a short message. It displays the selected short message text.



The short message can be selected by using the ▼ and ▲ keys.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

A “**Back**” or “**M**” key press returns to the Message Pop-up screen.

When the “**OK**” key is pressed, the Destination Pop-up screen is shown.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.15.9 Text Message Screen

This screen allows editing and sending a free form text message. A text message can have a maximum length of 210 characters. The number of characters entered is displayed in the top right hand side.



The characters are entered via the keypad by pressing the relevant key one or more times to choose each character.

The ▼ key is used to move the cursor to the left.

The ▲ key is used to move the cursor to the right.

A “Reset” button press and hold for less than one second acts as a destructive backspace.

Holding the “Reset” button down for more than one second deletes all characters from the cursor position to the right. A new character entered is put on the current cursor location.

The ‘#’ key is used to toggle upper and lower case.

When “Back” key “M” is pressed, the radio returns to the Message Reply pop-up screen.

When “OK” key is pressed, the Destination Selection Pop-up Menu screen appears.

4.2.15.10 Destination Select Pop-Up Menu

This menu allows selection of the message destination.



The selections are:

- **PH.BK:** to select the destination from the phone book
- **ENT.ID:** enter the destination unit ID
- **CANCEL:** to cancel the destination selection.

Use the ▼ and ▲ keys to make the selection.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

The “**M**” or “**Back**” key returns to previous screen, i.e., Short Message Screen, or Edit Text Message Screen.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.


If “**CANCEL**” is selected, pressing “**OK**” returns to the previous screen, i.e., Short Message Screen, or Edit Text Message Screen.

If “**PH.BK**” is selected, pressing “**OK**” key displays the “Phone Entry Screen”.

If “**ENT.ID**” is selected, pressing “**OK**” key displays the “Enter Unit Id Screen”.

4.2.15.11 Phone Book Selection Screen

This screen allows selection of the destination ID from the Phone Book.

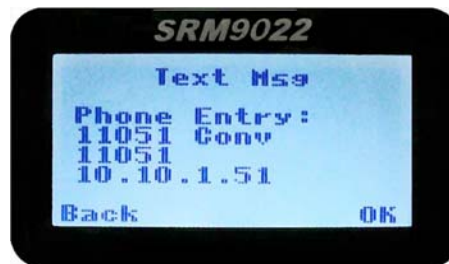

The ▼ and ▲ keys are used to select the phone book entry.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

The “**M**” or “**Back**” key returns to the Destination Selection Pop-up screen.

Pressing “**OK**” key sends the message to the chosen destination ID and the radio returns to the default screen.

4.2.15.12 Enter Unit ID Screen

This screen allows manual entry of the destination unit ID decimal digits. The valid range of unit ID: (0 – 16,777,215).



The entered digits can be deleted by using the ▼ key..

The “**M**” or “**Back**” key returns to Destination Selection pop-up Menu screen.

Pressing “**OK**” sends the message to the entered unit ID (providing it is valid). The screen will return to the default screen.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

If the entered unit ID is not valid, or the IP address is not defined, an error beep will sound.
Sending a short message or text message can fail if the destination radio is not available.

4.2.16 Scan Edit Menu

This menu allows channels in Scan Groups to be added or deleted by the user.
Add and Delete changes to a Scan Group are stored permanently in the radio.

[Missing Photo]

4.2.16.1 Scan Group Edit Screen

When selected, the “**Scan Group Edit**” screen is displayed, which shows the channels within the Scan Group.



The second line from the top shows the name of the selected channel in the scan group.

The next line shows the channel type, i.e., “Member” if it is a normal member of the scan group; “Priority” if it is the priority channel; or “Skipped”, if the channel is currently skipped from the scan group.

The ▼ and ▲ keys select the channel from the scan group list..

When “**Reset**” function key is pressed (if configured), the radio returns to the default screen display.

When the “**Back**” key or “**Menu**” is pressed, the radio returns to the “**Scan Group Edit**” screen.

When “**OK**” key is pressed, a pop-up action selection menu is displayed.



P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

The pop-up selections are:

- **Add:** adds a channel to the scan group
- **Delete:** deletes the currently selected channel from the scan group
- **Back:** returns to previous menu screen

The ▼ and ▲ keys make the selection.

The “**Menu**” or “**Back**” key takes the radio back to the “**Scan Edit**” main screen.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

If “**Delete**” is selected, pressing “**OK**” key removes the selected channel from the scan group and takes the radio back to the default screen display. If scanning is enabled on the current channel, this action shall result in rescanning. The deletion is permanent.

If “**Add**” is selected, pressing “**OK**” key takes the radio to the Scan Group Add screen.



The priority level of the channel to add to the scan group is selected from this screen. The choices are:

- **Member:** A member channel is a normal channel with lowest priority in the scan group.
- **Prty1:** A Priority 1 channel will have the highest priority in the scan group
- **Prty2:** A Priority 2 channel will have the second highest priority in the scan group.

The priority of the channel is selected using the ▼ and ▲ keys and pressing OK. The Scan Group Add screen will appear next.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

4.2.16.2 Scan Group Add Screen

The “**Scan Group Add**” screen shows channels that are not members of the Scan Group.



The second line from the top shows the name of a channel that is not a member of the Scan Group.

Other channels that are not members of the scan group can be selected using the ▼ and ▲ keys.

A “**Reset**” function key press (if configured) takes the radio back to the default screen display.

When the “**Back**” key or “**Menu**” is pressed, the radio returns to the main Scan Edit screen.

When “**OK**” key is pressed,

- If the scan group has less than 15 member channels, the selected non-member channel is added to the scan group. If scan is enabled on the current channel, the radio will resume scanning. The radio returns to the default screen. The added channel is permanent.
- Otherwise, an error beep will sound, and the radio will return to the default screen.

4.2.17 No Menu

The No Menu option exists in the FPP for when a menu entry is not required. If all entries are No Menu, there will be no menu system available. This may be desirable for simple configurations.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

5. COMMON FUNCTIONS AND FACILITIES

5.1 SWITCH-ON/SWITCH-OFF

The On/Off power switch on the SRM9022 is a red pushbutton located on the top right hand side of the controller microphone.

To turn the radio on, press and hold the button down when the radio is off. The radio will turn on after about one second and sound a beep.

The display will illuminate and show a 'Welcome Message' text as programmed by the Field Programmer.

After about two seconds, the display will revert to the Channel Screen, at which time the radio is ready for use.

Pressing and holding the power button when the radio is on will turn the radio off. A low tone will sound as the radio turns off.

If the radio Power Down Timer is enabled, the mobile will automatically turn off after several hours of inactivity (i.e. no keys pressed).

The radio will emit warning beeps for 10 seconds prior to automatically switching off. Pressing any key will reset this timer.

5.2 DEFAULT SCREEN –TRUNKED MODE

After power up, the radio will show the currently selected Zone and Channel. If the selected channel is a trunking channel, the radio will scan until it finds the trunked system. This will typically take a few seconds if the trunked network is available.



Trunked mode is indicated by the  icon. The rotating arrow indicates that the radio is scanning for a trunked network. When the arrow is not shown, the radio is registered with the trunked network and ready to make or receive a call.

5.3 VOLUME ADJUSTMENT

The Volume Control adjusts the speech level at the radio speaker. The volume is adjusted by a Volume Up and Down button on the top of the SRM9022 controller microphone

Note: The radio may be programmed so that the volume cannot be turned off completely.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

5.4 RECEIVING (SINGLE CHANNEL SCREEN)



The Speaker Icon  will show when a valid signal is being received and audio will be heard at the Loudspeaker.

The icon will be shown as an outline when a signal is being received that is not addressing this radio and hence, is not audible. For instance, another user group may be having a conversation on another talk group when receiving in Selective Mute.

The analogue channel's receive mute setting can be altered from the Mute Adjust menu.

While on an Analogue channel, both P25 and Analogue FM transmissions will be received.

While on a P25 channel, only P25 transmissions will be received.

To change channels, press the ▼ and ▲ keys while in the channel screen.

Zones can be changed from the **Zone** menu, see Section 4.3.1

5.5 RECEIVED INDIVIDUAL CALLS

Unanswered received Individual calls addressed to the radio are stored in radio memory.

The caller Unit ID may be viewed, answered and deleted by the user as desired.

A newly received individual call addressed to the radio sounds an alert tone periodically until the user presses any key.

If the caller unit ID of a newly received unanswered call is already in the Stored Calls list, the old Stored Call record of that unit ID will be replaced by the new record and added to the top of the list.

To view/answer/delete received call records, the **Stored Calls** screen is selected.



P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

5.5.1 Stored Calls Screen

This screen displays the received individual call records one by one, starting with the most recently received call record.



On the first line under the menu label, either the name of the caller from the phone book or the user ID is shown. The user ID is displayed if the ID is not known to the phone book. The next line has the zone that call was received on and the line below shows the channel. If stored calls are empty, NO RECORD is displayed.

The ▼ and ▲ keys can be used to step through the stored calls. An error beep will sound if there are no more call records.

A “Reset” function key press (if configured) takes the radio back to the default screen display.

The “Menu” or “Back” key returns to Menu screen. When “OK” key is pressed, a pop up menu is displayed so that the message can be deleted or party called back.

5.5.2 Received Call Pop-Up Menu



The selections are:

- **DELETE:** deletes the call record.
- **CALL:** calls back the caller (set individual call to the caller)
- **CANCEL:** cancels the action selection.

The selection is made with the ▼ and ▲ keys.

The “Menu” or “Back” key returns to Stored Calls screen.

A “Reset” function key press (if configured) takes the radio back to the default screen display.

If “DELETE” is selected, pressing “OK” removes the selected call record (being viewed) from the list. The radio returns to the Stored Calls Screen with the next record being displayed.

If “CANCEL” is selected, the **Stored Calls** screen is displayed.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

If “CALL” is selected, pressing “OK” sets the radio to individual calling mode with the ID of the stored call. A subsequent PTT within the configured time interval will send an individual call to the ID of the stored call.

5.6 TRANSMITTING

To avoid interfering with other users of the channel, listen first, or check that the “speaker” icon is not present, to ensure no transmissions are occurring.

If the speaker icon is shown, there are transmissions present on the channel and the user should not transmit. The radio may be programmed to prevent transmission on a busy channel if required.



Hold the microphone a few centimetres from the mouth, press the “Press to talk” (PTT) switch and note that the TX-LED is RED. Wait for the grant tone, and then speak clearly across the face of the microphone in a normal conversational manner.

In most systems it is important to wait a short time between pressing PTT and commencing to speak. This ensures that the path is properly established and avoids lost or distorted speech.

While transmitting, the vertical bars on the left hand side will indicate the transmit power level programmed for that channel. An **L** character below the bars indicates low power and an **H** character indicates high power.

Use the correct operating procedure and keep transmissions short.

Release the PTT switch as soon as the message is finished.

The talk group for a transmission is usually associated with a channel selection. A talk group will address all others that have the same TGID selected.

While on a P25 Channel, the transmission will be P25 digital. For an Analogue channel, the transmission will be Analogue FM

Note: A Transmit Limit Timer may be setup that limits a continuous transmission on a channel. The last 10 seconds before the timer expires may be accompanied by warning beeps.

5.7 SCAN/VOTE FUNCTIONS

The Scan/Vote Function allows the sequential searching of up to 16 channels if the selected zone channel is programmed as a Scan channel, and 15 channels if the selected zone channel is programmed as a Vote channel, for a valid signal (Carrier + CTCSS / DCS tone for Analogue FM or Network Access Code for P25). When found, the radio will stop on that channel until the signal disappears again.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

To activate Scanning, select a channel that has been programmed as a Scan channel. Once selected, the scanning will either start automatically, if programmed, or you will need to press the programmed scan function button. (Field Programmer configurable).

If a selected zone channel is programmed as a Vote channel, the voting will start automatically without any other user intervention.

While listening on the channel, the user is able to PTT on that channel. After the signal disappears, the radio will remain listening on the channel for a short time (Field programmer configurable, typically 3 seconds) before resuming scanning or voting

If a Priority Channel is assigned to Scan mode, the radio will interleave a check of this channel between each normal Scan channel.

5.7.1 Scan/Vote Screen

Scan can be started by

- (1) Pressing the function key that has been assigned the scan function by the Field Programmer or
- (2) Selecting a zone channel that has been assigned to automatically scan by the Field Programmer, or
- (3) Under User Options menu, selecting the SCAN ON option.

Selecting a channel that is associated to a VOTING group, with Scan/Vote enabled in the FPP, starts voting.

The top line of the display still shows the name of the current selected channel. The second line of the display shows the name of the current selected zone while scanning/voting.

The Channel can be changed by using the ▼ and ▲ keys. Other channels may be either Scan or Normal channels, depending on the radio's configuration.

Scanning/Voting is indicated by a rotating arrow symbol.



When stopped on a channel, the second line from the top shows the name of the channel from the scan group that the radio stopped on. If stopped on a channel, that channel can be “skipped” by pressing the skip programmed function key. Once a channel is “skipped” it will not be scanned for the duration that Zone/Channel selection.

While stopped on a channel, the asterisk (*) icon will display.

When transmitting on a channel, the second line of display shows the name of the current channel that the radio is transmitting on.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

5.8 KEYPAD LOCK

The Keypad Lock function prevents accidental key presses.

The keypad lock function may be enabled by the Field Programmer during configuration. If this function is activated, a key icon will be displayed in the bottom right-hand side of the display when locked.

The PTT, Alarm Key (if assigned), Reset Key (if assigned) are not locked.

To unlock the keypad, it is necessary to press and hold down the “OK” key for 2 seconds. After 2 seconds, the key icon will disappear and the keys will be enabled.

The keypad will automatically re-lock after a period of 10 seconds following no key activity.

5.9 ENCRYPTION

In P25 Digital mode, radio channels may be programmed for Encryption.

The encryption state of the selected channel is determined by the radio configuration. An encrypted channel will display the  encryption icon.

A radio channel that has been programmed for encryption will receive either clear or encrypted traffic. A transmission on this channel will be encrypted.

The encryption icon will not be shown if a received signal is not encrypted when on an encrypted channel.

The current channel's transmit encryption key can be temporarily changed from the Crypto menu.

When in Analogue FM mode, there is a simple voice inversion scrambler for low security applications.

A double beep will sound at the start of each PTT.

The scrambler function key is assigned using the Field Programmer.

5.10 EMERGENCY ALARM

5.10.1 Receiving Emergency Calls

When an emergency call is being received, a message will be displayed on the default screen indicating the radio unit sending the emergency call.

5.10.2 Making an Emergency Call

When the emergency key is pressed and held for a time determined by the Field Programmer, the radio will change to emergency mode. Under emergency mode, the radio can operate in three FPP configurable modes:

Normal: The radio will continue to respond to PTT, channel change etc. while displaying the E icon.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

Frozen: The default screen will freeze, with the E icon displayed indicating emergency mode.

Blank: The screen will blank giving no indication to others that the radio is in emergency mode.

When emergency mode is triggered, the radio can be configured by the FPP to transmit and receive on a cyclic basis with FPP programmed time periods. The display will show "TxEm": Channel No.

During TX, the radio will generate an emergency broadcast call on either the currently selected channel or an FPP nominated channel.

Others may listen to the automatic transmissions to hear conversations near the radio.

Turning the radio off and on will disable emergency mode.

6. SPECIAL FUNCTION KEYS

Several function keys are simply short cuts to a menu screen. For further information on the operation of these function keys, refer to the menu descriptions in section 4.

6.1 ALARM

This button is used to put the radio into Emergency Mode.

Alarm is supported in Digital mode only.

Pressing the Alarm key send causes the radio to set the Emergency flag in the transmit voice messaging and depending on radio configuration, optionally enter Transmit/Receive cycle mode. In cycle mode, the radio will transmit live microphone audio at high gain for the nominated duration and return to receive mode for the nominated duration.

This cycle will repeat indefinitely or until the radio is turned off and on again.

6.2 ANNOUNCE

To send an Announce call on the channel, press this function key and then use the PTT to send the call. The next PTT after the Announce will call the default group.

6.3 CHANNEL UP AND DOWN

The current selected zone's channel is decremented whenever the button is pressed.

The channel up and down functions is normally assigned to the Up/Down function keys. They can be assigned to other keys if required.

If the current channel is the first channel, then the decremented channel will wrap around to the last channel in the current zone.

The new channel can be an analogue or digital channel.

If pressed and held, the function auto repeats and updates the display for every 5th channel.

If the Talkaround function is enabled and selected, then Talkaround will be cancelled when the channel is changed.

6.4 CRYPTO

The function provides a shortcut to the Encryption select menu for user selection of the current encryption key.

6.5 DTMF SEND 1/2 (P25 ANALOGUE)

This function transmits a predefined DTMF sequence of up to 16 DTMF tones. There are two DTMF send functions, DTMF1 and DTMF2.

Send DTMF is only supported in analogue mode and can be assigned to keys F1 to F6.

If an analogue channel is selected, and transmit is allowed then this activating this function transmits a predefined DTMF sequence (up to 16 tones).

6.6 KEY LOCK

The Keyboard Lock function is dedicated to the OK button. To use Key Lock, the function has to be enabled in the FPP. To unlock the keys, the OK button must be held down for 2 seconds. The keys will then autolock again 10 seconds after no user activity.

Keys are locked in this mode with the exception of Emergency, PTT and any function key that has been assigned Reset function.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

6.7 LOW POWER

This function allows the User to toggle the Transmit Power between the level assigned in the Channel-Table and the “Low Power” setting.

The SRM9000 Transceiver has a “High Power” level and a “Low Power” level assigned to each channel.

The first press of this button will assign the low power setting to the current transmit channel.

The 2nd press will restore the transmit power setting to its FPP defined setting, either high or low.

The RF power level is indicated by the letter L or H replacing the antenna icon when transmitting. The bar graph above this icon shows 1 bar for low power and 6 bars for high power.

This function is unaffected by channel change.

6.8 MENU

This function enters the Menu Mode and select first main menu entry. This function is normally assigned to the F1 key, labelled M.

6.9 MODE

This function is a short cut to the Mode menu. The Mode menu is used to change radio modes, such as P25 conventional to MPT1327 Trunked.

Selections: Network 1-5. These networks may be PMR, MPT1327 Trunked, P25 Conventional or P25 Trunked.

Mode is supported in analogue and digital modes.

Once pressed, the radio screen will display the Network menu. The user can then use the up/Down keys to select the network and then press OK. The screen will then return to the channel screen of the new mode.

6.10 MUTE

This function allows the radio Carrier-Mute level to be adjusted.

Supported in analogue mode only. (Only applies to analogue channels)

This function is a shortcut to Mute Adjust menu.

On an analogue Channel, the mute level can be adjusted between the FPP Minimum Mute and maximum mute limits.

6.11 RESET

The reset function performs several tasks.

In order of priority, it:

- Stops Alerts (if any Alerts are sounding)
- Performs a Backspace (if there is a User entry pending)
- Switches back to the Main Menu (if in a lower menu)

It is used during text entry modes such as Phonebook Edit and Text Messaging for backspacing.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

6.12 SCAN

The Scan key starts and stops the Scan mode on a channel that has been associated with a scan list and enabled for scanning. Scanning will be indicated to the user with a rotating arrow icon.

Scan is supported in both analogue and digital mode.

If scan is enabled for the current channel in the current zone and auto scan is not enabled, then start scanning the channels defined in the current channel's scan group.

The 2nd press of the scan button will turn scanning off.

Note that if Autoscan is programmed for that channel, the Scan key will not function.

6.13 SCAN EDIT

This key is used to enter the Scan Edit menu, where the members of a scan group can be added or deleted.

6.14 SCRAMBLER ON/OFF (P25 ANALOGUE)

This function enables transmitted voice to be scrambled, to prevent radios without a scrambler from listening in on the conversation.

This low security form of encryption is sufficient to make speech unintelligible to other casual listeners, however it does not offer high level security as other radios programmed with a scrambler function will be able to unscramble it.

Supported in analogue mode only.

The speaker sounds a 'bip-bip' tone when PTT is pressed to indicate that scrambler is active.

Scrambler On/Off state is reset to Off at power-up and channel change.

CTCSS operates as normal.

First press of the function button enables scrambler mode.

The 2nd press restores channel to normal (clear) mode.

6.15 SKIP

The Skip function key is used to temporarily remove members from a scan channel. The removal is temporary only until the channel is changed.

6.16 SQUELCH

The squelch mode is used to selectively receive P25 signals. It has three modes, Monitor, Normal and Selective. When set to Monitor, all P25 traffic on that channel will be heard, subject to presence of encryption. Normal mode will hear all P25 traffic with the correct NAC code. Selective mode will only receive calls to the channel default talkgroup and individual calls.

6.17 TALKAROUND

This function will change the Transmit and Receive frequencies (and CTCSS tones) so that a local Repeater can be bypassed.

It is supported in both analogue and digital mode.

The first button press will redefine the channel's Rx\TX frequencies as specified by the FPP Talk-Around field:

- Swap Transmit and Receive frequencies
- Make Transmit Frequency same as Receive Frequency.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

- Make Receive Frequency same as Transmit Frequency.

The 2nd key press restores the channel's Rx/TX frequencies.

This function is cleared by a channel change.

6.18 ZONE

The Zone function enters the Zone menu so that the Zone can be changed. Refer to the section 4.1.1 Channel Operation for Zone behaviour.

Zone is supported in both analogue and digital mode

7. APPENDICES

7.1 ALERT TONES AND MESSAGES

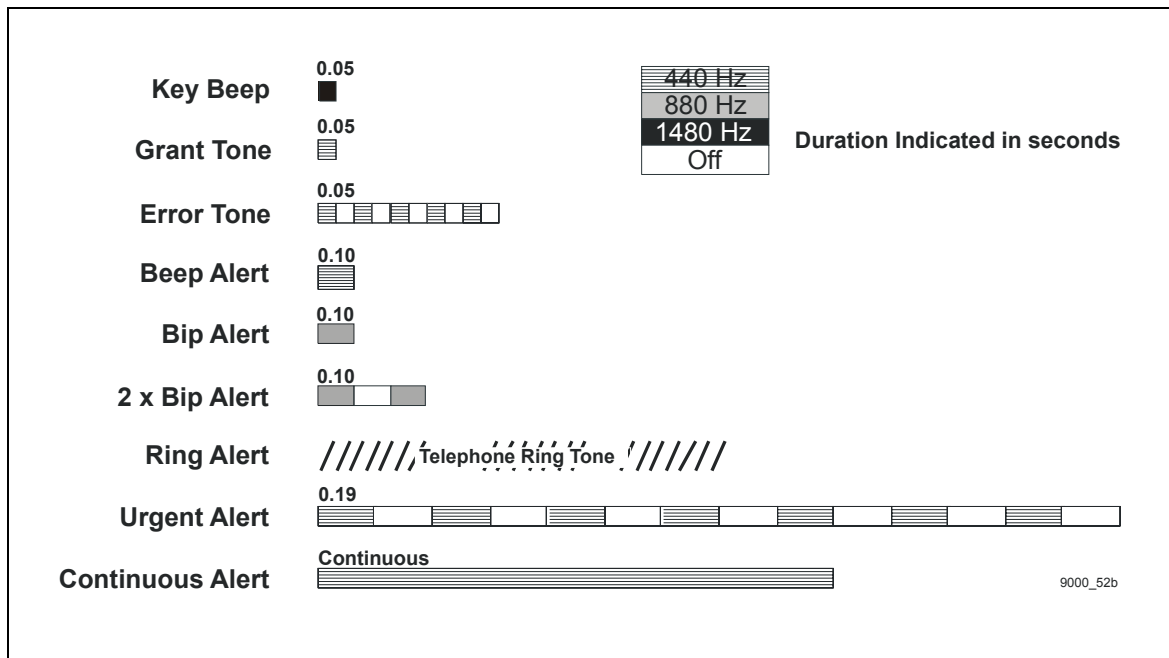


Figure 3 – Alert Tones

7.2 GLOSSARY

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

A summary of common radio terms and some other terms used in this document, and their meanings, are given below.

Term	Description	Notes
Bank	See Zone	
Channel	A logical combination of Network Access Code (NAC) RF Frequency Default TalkGroup Identity (TGID) Encryption Key Index (KID) Other channel associated parameters (CTCSS, scan etc)	
DTMF	Dual Tone Multi Frequency	
FPP	Field Personality Programmer or Field Programmer	Used for configuring the radio options and parameters
FM	Frequency Modulation	
LED	Light Emitting Diode	
Monitor	Mode of Radio Receive	Any P25 signal regardless of NAC or TGID will be heard
MPT Trunked	MPT1327 Trunked Mode	
NAC	Network Access Code	Used as a filter where multiple networks may share a common RF frequency
Normal Mute	Mode of Radio Receive	Only signals with matching NAC will be heard.
P25	PMR mode using analogue FM used in as a “fallback” mode with P25	Interoperability requirement
P25 Channel	Definition consisting of TX and RX RF frequencies, NAC and TGID	
P25 Conventional	Non-trunked digital, like digital PMR	
PMR	Private Mobile Radio Mode	
PTT	Push to Talk	
Radio Unit ID	Unique identifier allocated to each radio (0-16,000,000)	
RSSI	Received Signal Strength Indication	
RX	Receive	
Selective	Mode of radio receive	Only signals with matching NAC and TGID or Unit ID will be heard
TX	Transmit	
Zone	A collection of channels (usually organised by functional group of users)	

7.3 ACRONYMS

AES	Advanced Encryption Standard
-----	------------------------------

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

APCO	Association of Public Communications Officials
ARP	Address Resolution Protocol
AVL	Automatic Vehicle Location
BER	Bit Error Rate
BSS	Base Station System
C4FM	Four level FM modulation used on the physical air interface
CAI	Common Air Interface
CRC	Cyclic Redundancy Check
CTCSS	Continuous Tone Controlled Selective Squelch
DCS	Digital Controlled Squelch
DES-OFB	DES Encryption Standard
DSP	Digital Signalling Processor
DTMF	Dual Tone Multi Frequency
FEP	Field Encryption Programmer
FM	Frequency Modulation
FNE	Fixed Network Equipment
FPP	Field Personality Programmer
IP	Internet Protocol
LCD	Liquid Crystal Display
LET	Link Establishment Time
MA-ASIG	Audio and Serial Interface Option Board with GPS for SRM9000
MAB-1	Mobile Option Board (basic)
MAB-2	Mobile Option Board (enhanced I/O)
MA-SIXOHM	600 Ohm Option Board for SRM9000
MDP	Mobile Data Peripheral
MPT1327	Analogue Trunked Radio Standard
MRC	Mobile Routing and Control
NAC	Network Access Code, see also NID
NID	Network ID
P25	APCO Project 25
PLA	Programmable Logic Array
PMR	Private Mobile Radio
PPP	Point to Point Protocol
PTT	Push To Talk
RCP	Radio Control Protocol
RF	Radio Frequency
SLIP	Serial Line Internet Protocol
SS	Supplementary Service
TCP/IP	Transmission Control Protocol / Internet Protocol
TGID	Talk Group ID
TIA	Telecommunications Industry Association
UDP	User Datagram Protocol

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

7.4 COMPLIANCE WITH RF ENERGY EXPOSURE GUIDELINES (UNITED STATES AND CANADA)

RF ENERGY EXPOSURE AWARENESS AND CONTROL INFORMATION AND OPERATIONAL INSTRUCTIONS FOR FCC OCCUPATIONAL USE REQUIREMENTS.

Before using your TMC Radio mobile two-way radio, read this important RF energy awareness and control information and operational instructions to ensure compliance with the FCC's RF exposure guidelines.

NOTICE: This radio is intended for use in Occupational/ controlled conditions in a mobile application where users have full knowledge of their exposure and can exercise control over their exposure to meet FCC limits. This radio device is NOT authorised for general population, consumer, or any other use.

This two-way radio uses electromagnetic energy in the radio frequency (RF) spectrum to provide communications between two or more users over a distance. It uses radio frequency (RF) energy or radio waves to send and receive calls. RF energy is one form of electromagnetic energy. Other forms include, but are not limited to, electric power, sunlight and x-rays. RF energy, however, should not be confused with these other forms of electromagnetic energy, which when used improperly can cause biological damage. Very high levels of x-rays, for example, can damage tissues and genetic material.

Experts in science, engineering, medicine, health and industry work with organizations to develop standards for exposure to RF energy. These standards provide recommended levels of RF exposure for both workers and the general public. These recommended RF exposure levels include substantial margins of protection. All two-way radios marketed in North America are designed, manufactured and tested to ensure they meet government established RF exposure levels. In addition, manufacturers also recommend specific operating instructions to users of two-way radios. These instructions are important because they inform users about RF energy exposure and provide simple procedures on how to control it. Please refer to the following websites for more information on what RF energy exposure is and how to control your exposure to assure compliance with established RF exposure limits.

<http://www.fcc.gov/oet/rfsafety/rf-fags.htm> 1
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>

Federal Communications Commission Regulations:

The FCC rules require manufacturers to comply with the FCC RF energy exposure limits for mobile two-way radios before they can be marketed in the U.S. When two-way radios are used as a consequence of employment, the FCC requires users to be fully aware of and able to control their exposure to meet occupational requirements. An exposure awareness label is attached to the equipment directing users to specific awareness information.

Compliance with RF Exposure Standards

Your TMC two-way radio is designed to comply with a number of national and international standards and guidelines (listed below) regarding human exposure to radio frequency electromagnetic energy. This radio complies with the IEEE (FCC) and ICNIRP exposure limits for Occupational/ Controlled RF exposure environment at duty factors of up to 50% talk 50% listen and is authorised by the FCC for occupational use. In terms of measuring RF energy for compliance with the FCC exposure guidelines, your radio radiates measurable RF energy only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode.

Your TMC Radio two-way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- Industry Canada RSS-102

RF Exposure Compliance and Control Guidelines and Operating Instructions

To control exposure to yourself and others and ensure compliance with the Occupational/ Controlled environment exposure limits always adhere to the following procedures.

Guidelines:

- User awareness instructions should accompany the device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.

Instructions:

- Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk button. To receive calls, release the PTT button. Transmitting 50% of the time, or less, is important because this radio generates measurable RF energy exposure only when transmitting (in terms of measuring for standards compliance).
- Transmit only when people outside the vehicle are at least the recommended minimum lateral distance away, as shown in Tables 1, 2 and 3, from a properly installed according to installation instructions, externally-mounted antenna.

NOTES:

Table 1a) lists the recommended minimum lateral distance for bystanders in an uncontrolled environment from the transmitting antenna for the SRM9000AC (150MHz-174MHz) mobile rated power (25 watts) installed in a vehicle. Table 1b) lists the recommended minimum lateral distance for occupational/ controlled use.

Table 2a) lists the recommended minimum lateral distance for bystanders in an uncontrolled environment from the transmitting antenna for the SRM9000TU and SRM9000UW (406.1MHz-512MHz) mobile rated power (25 watts) installed in a vehicle. Table 2b) lists the recommended minimum lateral distance for occupational/ controlled use.

Table 3a) lists the recommended minimum lateral distance for bystanders in an uncontrolled environment from the transmitting antenna for the SRM9000X8 (806MHz-870MHz) mobile rated power (25 watts) installed in a vehicle. Table 3b) lists the recommended minimum lateral distance for occupational/ controlled use.

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

Table 1a) Rated Power and Recommended Lateral Distance for General Population uncontrolled exposure for SRM9000AC (150MHz to 174MHz).

Rated Power of Vehicle-installed Mobile Two-way Radio	Recommended Minimum Lateral Distance from Transmitting Antenna
25 watts with $\lambda/4$ dipole (2.14dBi gain)	90cm (35.5 inches)

Table 1b) Rated Power and Recommended Lateral Distance for Occupational/ Controlled exposure for SRM9000AC (150MHz to 174MHz).

Rated Power of Vehicle-installed Mobile Two-way Radio	Recommended Minimum Lateral Distance from Transmitting Antenna
25 watts with $\lambda/4$ dipole (2.14dBi gain)	40cm (15.75 inches)

Table 2a) Rated Power and Recommended Lateral Distance for General Population uncontrolled exposure for SRM9000TU and SRM9000UW (406.1MHz to 512MHz).

Rated Power of Vehicle-installed Mobile Two-way Radio	Recommended Minimum Lateral Distance from Transmitting Antenna
25 watts with $\lambda/4$ dipole (2.14dBi gain)	75cm (29.5 inches)

Table 2b) Rated Power and Recommended Lateral Distance for Occupational/ Controlled exposure for SRM9000TU and SRM9000UW (406.1MHz to 480MHz).

Rated Power of Vehicle-installed Mobile Two-way Radio	Recommended Minimum Lateral Distance from Transmitting Antenna
25 watts with $\lambda/4$ dipole (2.14dBi gain)	34cm (13.5 inches)

Table 3a) Rated Power and Recommended Lateral Distance for General Population uncontrolled exposure for SRM9000X8 (806MHz to 870MHz).

Rated Power of Vehicle-installed Mobile Two-way Radio	Recommended Minimum Lateral Distance from Transmitting Antenna
25 watts with $\lambda/4$ dipole (2.14dBi gain)	55cm (21.7 inches)

Table 3b) Rated Power and Recommended Lateral Distance for Occupational/ Controlled exposure for SRM9000X8 (806MHz to 870MHz).

Rated Power of Vehicle-installed Mobile Two-way Radio	Recommended Minimum Lateral Distance from Transmitting Antenna
25 watts with $\lambda/4$ dipole (2.14dBi gain)	24.6cm (9.7 inches)

P25 - SRM9022 RADIO – OPERATING INSTRUCTIONS

Vehicle Installation Instructions:

The antenna(s) used for the SRM9000 series of mobile two-way radios must be installed to provide a separation distance of at least 90cm (35.5 inches) from all persons for SRM9000AC (150-174MHz), 75cm (29.5 inches) for SRM9000TU and SRM9000UW (406.1-512MHz) and 55cm (21.7 inches) for SRM9000X8 (806-870MHz). The gain of the antenna(s) may not be greater than 0dBd (2.14dBi).

If the required separation distance extends beyond the physical boundary of the vehicle, the antenna must be installed on the center of the roof ONLY and must be installed in a vehicle having the following characteristics in order to prevent bystanders from being exposed to levels exceeding the limits set for General Population/ Uncontrolled exposure environment:

- All passengers must be sitting under a solid metal roof
- The rooftop width must be at least 180cm (71 inches) for SRM9000AC (150-174MHz), 150cm (59 inches) for SRM9000TU and SRM9000UW (406.1-512MHz), or 70cm (28 inches) for SRM9000X8 (806-870MHz)

Mobile Antenna:

- Install the antenna at the center of the roof or the center of the trunk deck, taking into account the bystander exposure conditions of backseat passengers and recommended minimum lateral distances in Tables 1a), 2a) and 3a). These mobile antenna installation guidelines are limited to metal body motor vehicles or vehicles with appropriate ground planes.
- The antenna installation must additionally be in accordance with:
 - a) The requirements of the antenna manufacturer/supplier
 - b) Instructions in the Radio Installation Manual, including minimum antenna cable lengths.
 - c) The installation information of how to install the antenna to facilitate recommended operating distances to all potentially exposed persons.
- Use only TMC Radio approved supplied antenna or TMC Radio approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.

Approved Accessories

- This radio meets the FCC RF exposure guidelines when used with the TMC Radio accessories supplied or designated for the product. Use of other accessories may not ensure compliance with the FCC's RF exposure guidelines and may violate FCC regulations.
- To obtain a list of TMC Radio approved accessories see contact details below or visit the following website which lists approved accessories: <http://www.tmcradio.com>

Contact Information

For additional information on exposure or other information, please contact

TMC Radio Pty. Ltd.
1270 Ferntree Gully Road
Scoresby
Victoria, 3179
Australia

Telephone +61 3 9730 3800
Facsimile +61 3 9730 3968
Email orderdesk@tmcradio.com
Website www.tmcradio.com