



FMAAdapter™

DIGITAL AUDIO FM TRANSMITTER ADAPTER

UFM1000 Series Digital Audio FM Transmitter Adapter USER'S Manual



FMAAdapter™
UFM1000 Series

Chapter 1: Introduction

1.1 About This Manual	6
1.2 Introduction	6

Chapter 2: Audio Converter System Descriptions

2.1 Feature Summary	7
2.2 Identification of Control	7
2.3 Port Definition Summary	9
2.4 Electrical Characteristics	9
2.5 Physical Dimensions.....	9

Chapter 3: Audio FM Transmitter System Descriptions

3.1 Feature Summary.....	11
3.2 Identification of Control	12
3.3 Port Definition Summary	13
3.4 Electrical Characteristics	13
3.5 Physical Dimensions.....	14

Table of Contents



Precautions

WARNING

DO not dismantle the housing or modify the module

Dismantling the case or modifying the module may result in electrical shock or burn.

Refer all servicing to qualified service personnel

Do not attempt to service this product yourself as opening or removing case may expose you to dangerous voltage or other hazards.

Keep the away from liquids

Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls/spills into the housing, unplug the module immediately. Have the module checked by a qualified service engineer before using it again.

Do not touch the powered UFM1000R and UFM1000T at the same time.

This module is designed for long distance connection, so the UFM1000R and UFM1000T are isolated electrically. Touching the powered transmitter and powered receiver at the same time may result in electrical shock.

Do not touch the module with wet hands

Touching the housing and plug with wet hands is dangerous and can cause electrical shock.

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety and EMI

Warranty

1(One) Year Warranty

Warranty Limitation and Exclusion

Core Automation shall have no further obligation under the foregoing limited warranty if the product has been damaged due to abuse, misuse, neglect, accident, unusual physical or electrical stress, unauthorized modifications, tampering, alterations, or service other then by **Core Automation** or its authorized agents, causes other then from ordinary use or failure to properly use the product in the application for which said product is intended,

1.1 About This Manual

This manual is part of basic Model guide reference documents that provides information necessary to incorporate the FMAAdapter™ UFM1000 series digital audio interface FM transmitter and receiver for high speed data transmission interface controller system. And this document covers spec of the FMAAdapter™.

The manual will be updated periodically to include latest component revisions and respective specification changes. Please contact Core Automation to obtain information on how to support all of CAI's optical display interface.

1.2 Introduction

The FMAAdapter™ audio converter and FM transmitter are FM radio transmitter communication interface for audio applications. The interface extends the base technology of SPDIF audio and FM radio to provide a specification more useful for audio applications.

.And the installation of FM transceiver's antenna shall be done by the authorized personal that are trained and qualified.

Chapter 1 Introduction

Chapter 2 Audio converter system Descriptions

2.1 Feature Summary

The UFM1000R System is a complete analog-to-digital converter for digital audio systems. It performs sampling, analog to digital conversion, and anti-alias filtering, generating 24-bit values for both left and right inputs in serial form at sample rates up to 200 kHz per channel.

The UFM1000R System uses a 5th-order, multi-bit Delta-Sigma modulator followed by digital filtering and decimation, which removes the need for an external anti-alias filter. The UFM1000R is ideal for audio systems requiring wide dynamic range, negligible distortion and low noise, such as set-top boxes, DVD-karaoke players, DVD recorders, A/V receivers, and automotive applications.



Figure 2.2.2 Picture of Rear Side

2.2 Identification of control

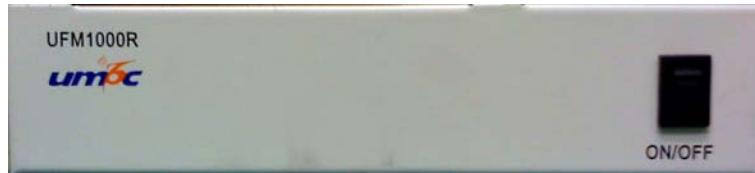


Figure 2.2.1 Picture of Front Side

2.3 Port Definition Summary

Parameter	Specification
Audio Input Port	Analog Max 1.0Vp-p Stereo Input Port
Audio Output Port	Digital Serial out 2Port

2.3 Electrical Characteristics

Parameter	Min.	Typ.	Max.	Unit
Input Supply Voltage	AC90		AC260	V
Power Dissipation				
Storage Temperature	-65		+150	°C
Operating Temperature	-40		+85	°C
Humidity	10		80	%
Support Distance(Output)	1		50	m

2.5 Physical Dimensions

The UFM1000R converter contains printed circuit boards mounted with electronic components and analog audio-to-digital audio logic. The physical dimensions are shown in the diagram below and depict the expected final dimensions for the conversion box.

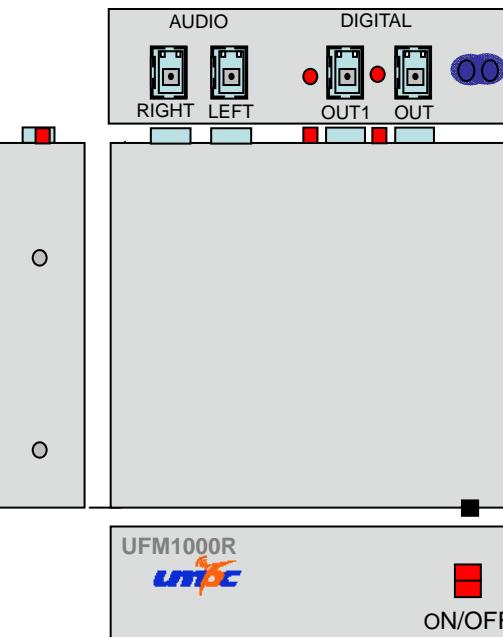


Figure 2.5.1 . UFM1000R Physical Dimension

Chapter 3 Audio FM Transmitter system Descriptions

3.1 Feature Summary

- Complete S/PDIF-Compatible Receiver
- 32 kHz to 192 kHz Sample Frequency Range
- Low-Jitter Clock Recovery
- On-Chip Channel Status Data Buffer Memories
- Auto-Detection of Compressed Audio Input Streams
- Carrier Frequency : 88.1MHz / 88.5MHz

The UFM1000T System is converter for FM Broadcasting.

This system is a receives and decodes one of 1 stereo pairs of digital audio data according to the IEC60958, S/PDIF, EIAJ CP1201, or AES3 interface standards. The UFM1000T System has serial digital audio input port and comprehensive control ability through a selectable control port in Hardware Mode.

A low-jitter clock recovery mechanism yields a very clean recovered clock from the incoming AES3 stream.

Stand-alone operation allows systems with no microcontroller to operate the UFM1000T System with dedicated output port for FM Broadcasting.

3.2 Identification of control



Figure 3.2.1 Picture of Front Side



Figure 3.2.2 Picture of Rear Side

3.3 Port Definition Summary

Parameter	Specification
Audio Input Port	Digital Serial Input Port
Audio Output Port	Digital Serial Output Port
Channel Frequency	PLL Synthesizer System Support simultaneously 1Ch
Carrier Frequency	88.1MHz / 88.5MHz

3.4 Electrical Characteristics

Parameter	Min.	Typ.	Max.	Unit
Input Supply Voltage	AC90		AC260	V
Power Dissipation				
Storage Temperature	-65		+150	°C
Operating Temperature	-40		+85	°C
Humidity	10		80	%
Support Distance(Output)	1		50	m

3.5 Physical Dimensions

The UFM1000T converter contains printed circuit boards mounted with electronic components and DIGITAL AUDIO-to-FM transmitter logic. The physical dimensions are shown in the diagram below and depict the expected final dimensions for the conversion box.

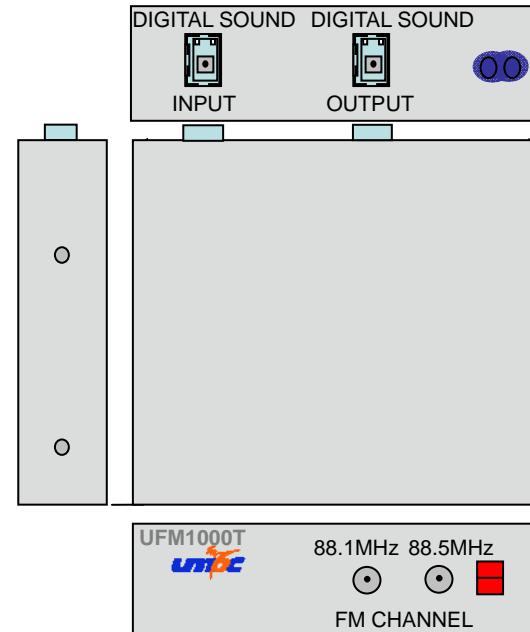


Figure 3.5.1 . UFM1000T Physical Dimension


Support

Address : E&C Ventuer Dream Tower2Bldg.

197-10, Guro3-dong, Guro-gu, Seoul, Korea

TEL : 82-070-7012-4370 FAX : 82-2-861-3869


Home Page : www.coreauto.co.kr

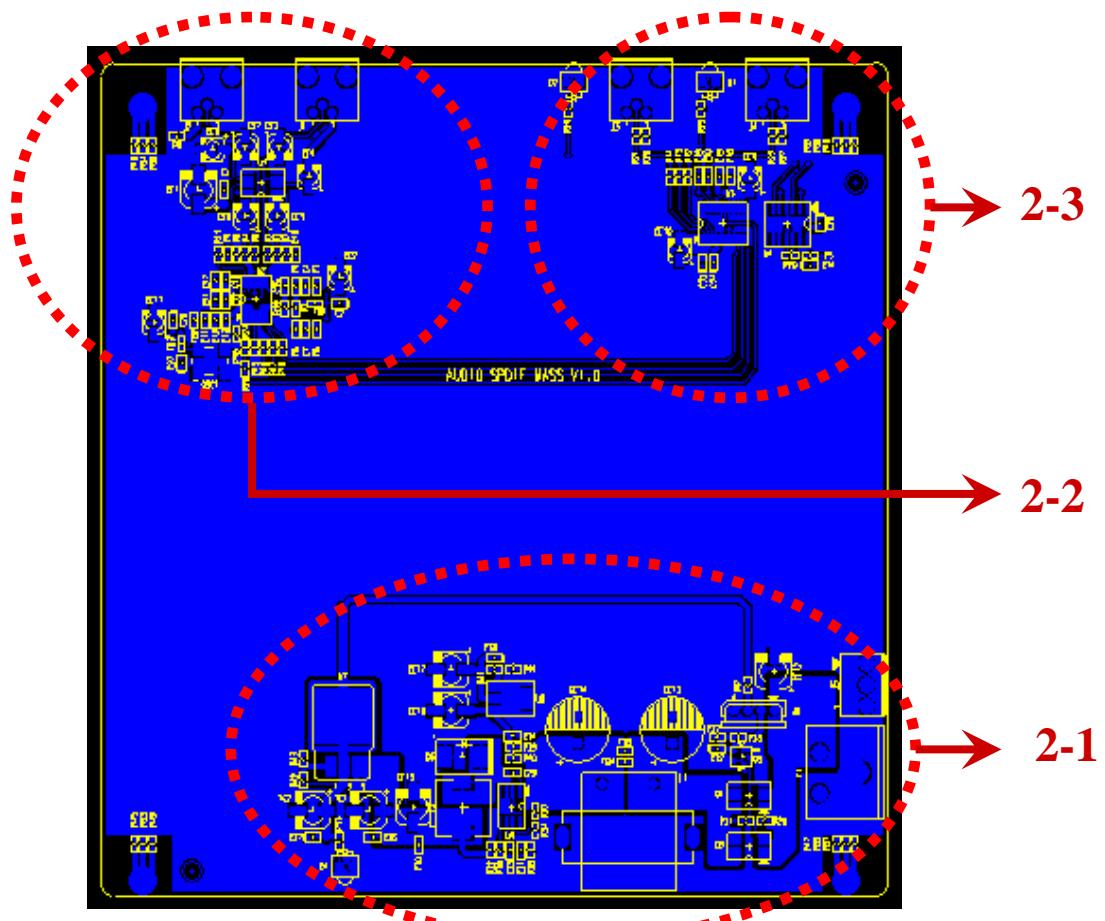


2-1. POWER BLOCK

2-2. AD Change (analog to digital)


2-3. Change Digital Sync sound to Digital non-sync sound

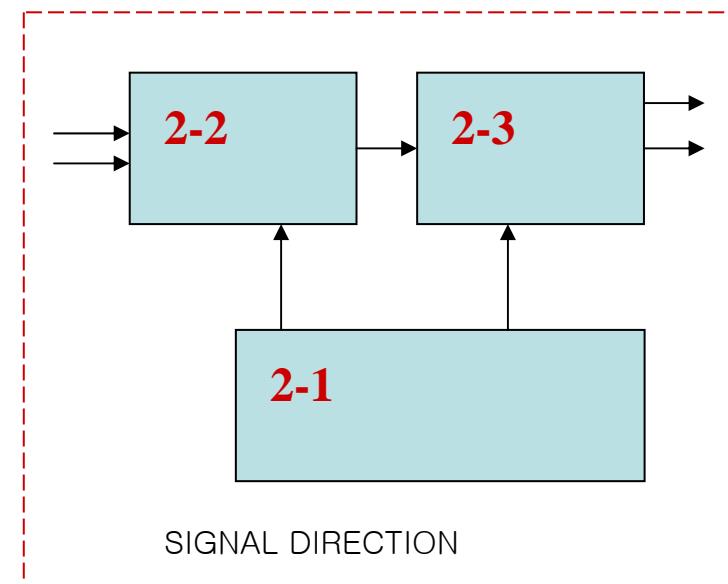

[UFM-1000R]

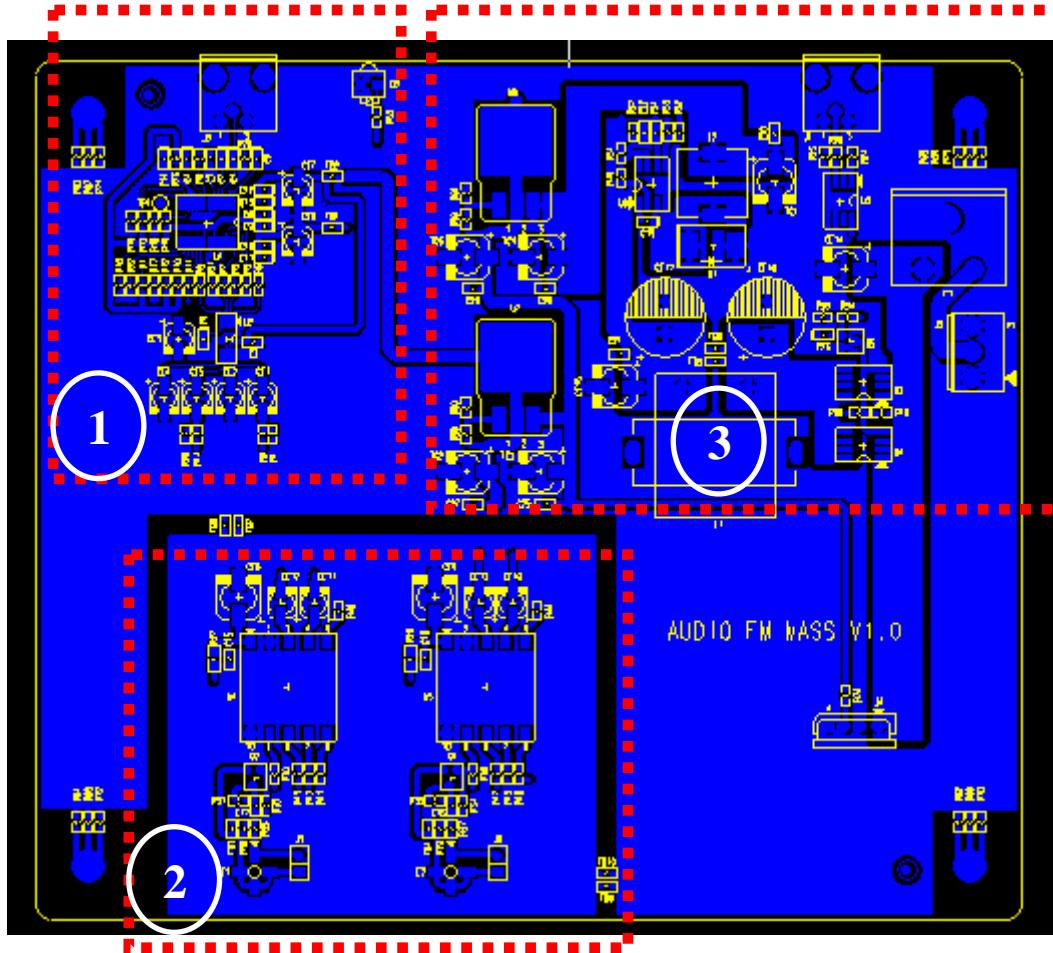


1. UFM1000T
2. 3 parts.
 1. DA Change part
 2. RF block
 3. POWER block

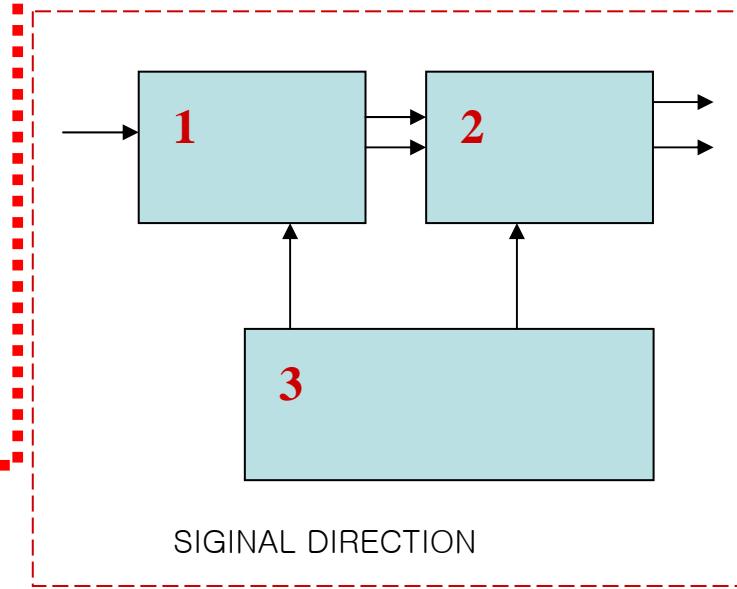

[UFM-1000T]

Antenna specification

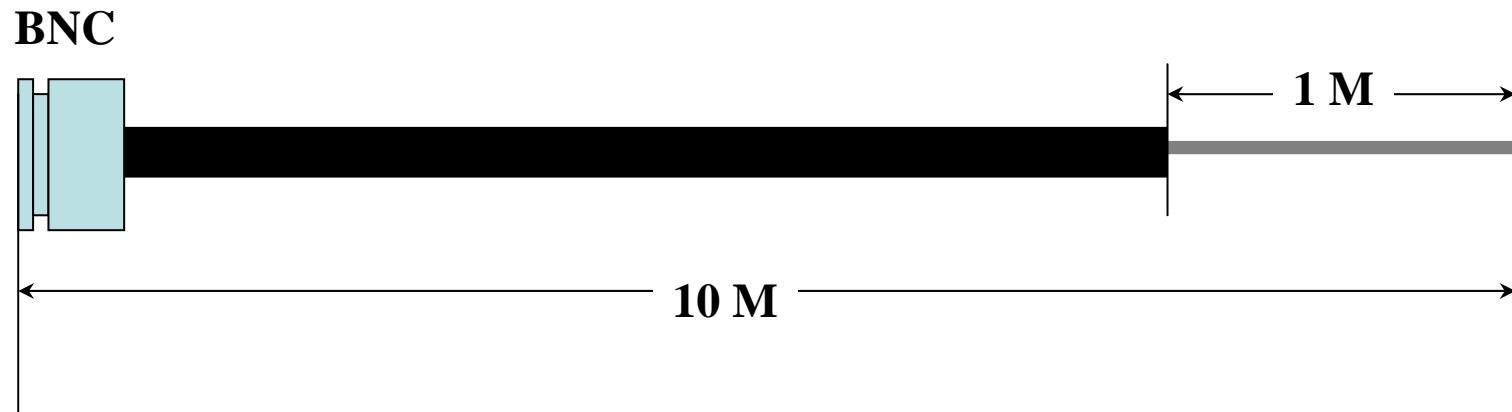

.. RF Loss : About 1dBm