




audition

Wireless Firepad

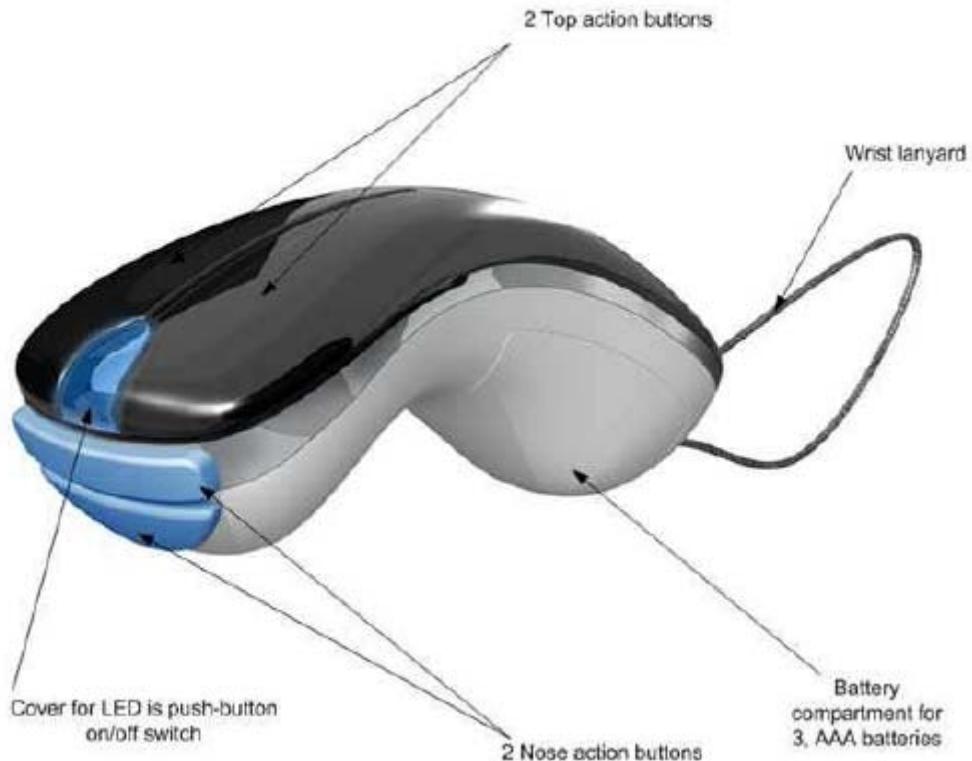

Functions

Buttons

(1) Digital buttons:

- λ Two action buttons on the top
- λ Two noise buttons in the front

Button definition:

- λ Top left action button: Button 1
- λ Top right action button: Button 2
- λ Front up noise button: Button 3
- λ Front bottom noise button: Button 4

(2) On/Off buttons

- λ Press On/Off button to connect the RF module
- λ Press and hold On/Off button to switch on or off



Functions

Buttons

(3) LED

- λ If connection is successfully, press On/Off button to reconnect the other RF module.
- λ If connection is successfully, press and hold On/Off button to switch off (sleep mode) the RF module.

Status

- λ Connected: Solid
- λ No Connection: Flashes (5Hz)
- λ Connected under low voltage: Flashes (3Hz)
- λ No connection under low voltage: Flashes (3Hz)
- λ Sleep Mode: Off for 5 seconds and On for 0.5 seconds periodically
- λ Off: Off

Remark: Low voltage 3.5V ±0.1V

Sleep Mode vs off mode

(1) Sleep mode

It will entry sleep mode automatically when

- λ No connect for 30 seconds
- λ Stay for 2 minutes

To wake up the unit

- λ Press action or noise buttons
- λ Move it

Motion sensor and MCU will be in standby mode

RF module will be in the off stage

(2) Off mode

Press and hold On/Off button to switch off the unit

Press On/Off button to switch on the unit

Motion sensor and RF will be in the off stage

MCU will be in standby mode



aurion

Current

- λ Connected: 16mA
- λ Sleep mode: 1.4mA
- λ Off mode: 10µA

The new VID for the wireless Firepad is 0x1C40 (or 7232 decimal) and the new PID is 0x03F3 (or 1011 decimal). Please do not use the VID and PID from the existing Firepad.

Program

Device Descriptor:

bcdUSB:	0x0200
bDeviceClass:	0x00
bDeviceSubClass:	0x00
bDeviceProtocol:	0x00
bMaxPacketSize0:	0x40 (64)
idVendor:	0x1C40
idProduct:	0x03F3
bcdDevice:	0x0100
iManufacturer:	0x01
0x0409:	""
iProduct:	0x02
0x0409:	""
iSerialNumber:	0x00
bNumConfigurations:	0x01

ConnectionStatus: DeviceConnected

Current Config Value: 0x01

Device Bus Speed: Full

Device Address: 0x01

Open Pipes: 2

Endpoint Descriptor:

bEndpointAddress: 0x02

Transfer Type: Interrupt

wMaxPacketSize: 0x0040 (64)



bInterval: 0x0A

Endpoint Descriptor:

bEndpointAddress: 0x81
Transfer Type: Interrupt
wMaxPacketSize: 0x0040 (64)
bInterval: 0x0A

Configuration Descriptor:

wTotalLength: 0x0029
bNumInterfaces: 0x01
bConfigurationValue: 0x01
iConfiguration: 0x00
bmAttributes: 0x80 (Bus Powered)
MaxPower: 0x32 (100 Ma)

Interface Descriptor:

bInterfaceNumber: 0x00
bAlternateSetting: 0x00
bNumEndpoints: 0x02
bInterfaceClass: 0x03 (HID)
bInterfaceSubClass: 0x00
bInterfaceProtocol: 0x00
iInterface: 0x00

HID Descriptor:

bcdHID: 0x0111
bCountryCode: 0x00
bNumDescriptors: 0x01
bDescriptorType: 0x22
wDescriptorLength: 0x0089

Endpoint Descriptor:

bEndpointAddress: 0x02
Transfer Type: Interrupt



multifion

wMaxPacketSize: 0x0040 (64)

bInterval: 0x0A

Endpoint Descriptor:

bEndpointAddress: 0x81

Transfer Type: Interrupt

wMaxPacketSize: 0x0040 (64)

bInterval: 0x0A

FCC Note:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and;
2. This device must accept any interference received, including interference that may cause undesired operation.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.