


WittCam

Weather camera

Model: HP10



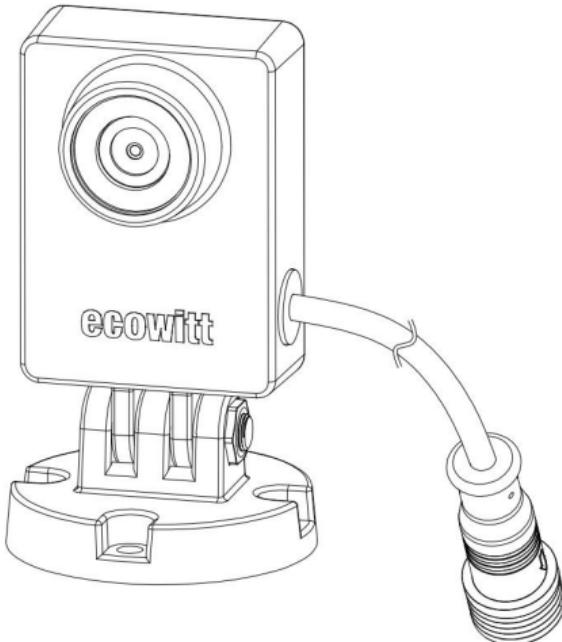

* Please scan the QR code to read English manual and keep it for future reference

* Bitte scannen Sie den QR-Code zudeutsche Anleitung lesen und aufbewahren für Zukunftsbezug

* Si prega di scansionare il codice QR per leggere il manuale italiano e conservarlo per riferimento futura

Instruction manuals

<https://s.ecowitt.com/JC83NU>

Note

Our product is continuously developing and improving, particularly online services and associated applications. To download the latest manual and additional help, please contact our technical support team:

support@ecowitt.com


[support.eu@ecowitt.net \(EU/UK\)](mailto:support.eu@ecowitt.net)



MADE IN CHINA



AC WORKS CONSULTING Srl
Via Vilfredo Pareto 125, 47521
Casena(FC), ITALY



HUA TENG LIMITED
3 Glass Street, Hanley, Stoke On Trent,
ST1 2ET United Kingdom

Table of Contents

1. Features	4
2. Specifications	5
3. Connection between WittCam and Your Router	6
4. Key	6
4.1 Camera key	6
4.2 Reset Key	7
5. LED	7
6. Picture Mode	8
7. Power on	9
8. WiFi Router Configuration	10
9. Taking Pictures	16
9.1 Normal Mode	16
9.2 SETUP Mode	17
9.3 WittCam setup on www.ecowitt.net	18
10. Mounting	23
11. Warranty Information	26

1. Features

Picture hosting on www.ecowitt.net with time lapse video for easier state checking is possible.

HTTP GET command for taking picture is available.

Hosting Server

www.ecowitt.net organize the received picture for current day, and if the time is over 24hrs, it will generate a time elapsed video for easier access.

HTTP GET command supported when device IP address is obtained.

2. Specifications

Maximum Image Transfer Rate	Ecowitt server	5 minutes per upload
	Custom mode HTTP get query	5s per upload
	ftp server	TBA
Dimensions		41×41×71.5mm
Waterproof		IP66
FOV		150°
Pixel Size	1600×1200, 1280×1024, 1024×768, 800×600, 400×296, 320×240, 160×120,	
Power supply	5V== 1A	
Operate Temperature	0 ~ 50 °C	
WiFi	802.11b/g/n	

3. Connection between WittCam and Your Router

Transmission distance in open field: 30m (100ft.) depending on router and environment

Wi-Fi Frequency: 2.4 GHz

WLAN: 802.11 b/g/n

4. Key

4.1 Camera key

press key once to activate action of taking a picture right now.

Press and hold 5s to start wifi configuration.

Press and hold this key for 10s will make a factory reset that will wipe out all the settings, including router setting.

4.2 Reset Key

press this key to make a hardware reset operation.

5. LED

Judge the working status of the equipment according to the LED light

- 1) Flashes at an interval of 1s: camera is connected to the router without internet access.
- 2) Flashes rapidly: the device is activated for wifi router provisioning or connect to the device via WLAN.
- 3) On and quick flicker every 5s: device is working normal.
- 4) Off and quick flicker every 5s: device is not connected with router.
- 5) Off or On without flickering every 5s: Abnormal state. Please restart device and check setup.

6. Picture Mode

After device time zone and GEO coordinates is set on [ecowitt.net](http://www.ecowitt.net), then server will be able to calculate its sunrise and sunset time. Thus, it is possible to choose one of the two picture mode: 24hrs or day only. Mode selection can only be chosen or edited under your camera device on www.ecowitt.net.

When day mode selected, the camera will start to take picture one hour prior to sunrise and stop one hour after sunset.

7. Power on

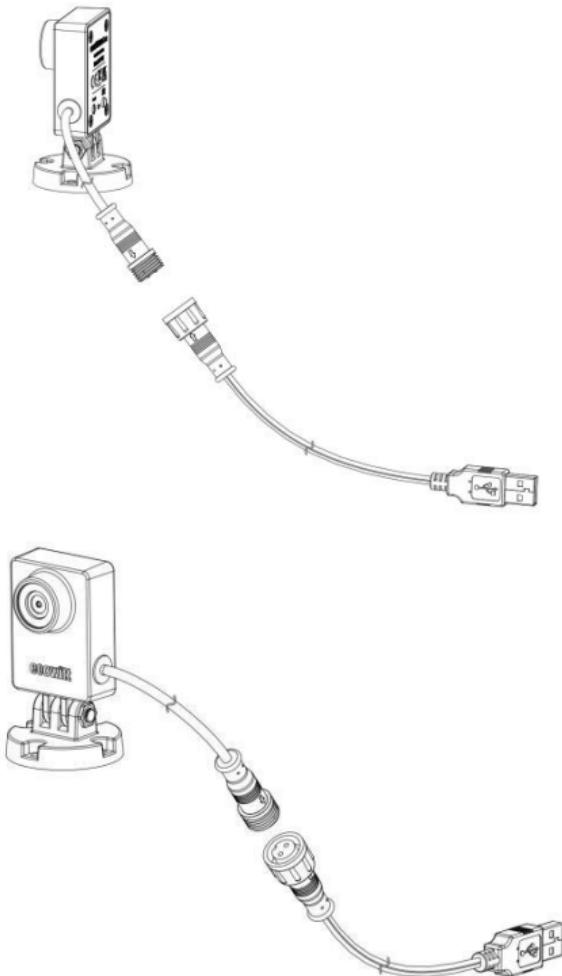


Figure 1: Power cord connection

There is a 5m power cord in the box, connecting via the 2 PIN port to the camera, and power it via USB plug (5V,1A) or computer USB port (power supply only).

8. WiFi Router Configuration

When device is used for the first time, or change of a new WiFi router with new ssid and password used, then the wifi configuration process need to be activated.

There are two ways to complete this task.

- 1) Via the ecowitt app. With “ecowitt” app, tap the menu button, choose “Camera” to start the camera adding process. The APP will walk you through the whole process. Prior to go any further, please make sure your phone setup for this “ecowitt” app with precise location and WLAN access. Make sure to turn off your mobile cellular data service and this will avoid many unknown problems.

2) Via WittCam embedded webpage.

Press and hold “camera” button for 5s until led start to flash rapidly.

Go to phone SETUP-WLAN (or PC) and connect to the wifi AP with name of “ HP10_WIFIXXXX”



Open web browser, enter default IP address of “192.168.4.1” in the address bar to the login screen
Enter password in the password box (initial password is empty), press “Login”



Enter wifi router credential into the “Router SSID” edit box (or click “Scan Router” to scan the WLAN), enter Wi-Fi password into the “WIFI Password” edit box, click “Apply” to save the setup. Once router credential has been set correctly, WittCam IP address will be updated as DHCP assigned. Only when updated IP address is shown up, then the WiFi router credential is correctly set and accepted by your router. Otherwise please check credential input contents is correct or not. Be careful to mistakes, like: 8 for B, 1 and 1, l and I etc.

Here're the interfaces as shown below:

Local Network

Video

Version: HP10_V1.0.2

MAC	E8:DB:84:0F:13:F4
Date	2021-01-01 00:01:43
Time Zone	(UTC)Greenwich
Sunrise	00:00
Sunset	00:00

Interval

Interval (minutes)

WIFI Network

Router SSID

WIFI Password show password
If your router is dualband, make sure you connect to the router's 2.4GHz band.

IP Address

Subnet Mask

Default Gateway

Upgrade


Upgrade Automatically upgrade firmware

Version Current version V1.0.2


Device AP Auto OFF When the device is successfully connected to the router, the AP (HP10) will be automatically shut down 5 minutes later

Login & AP Password

Login & AP Password show password
It can be set to NULL or 8-64 characters, and the device will restart when password is changed.

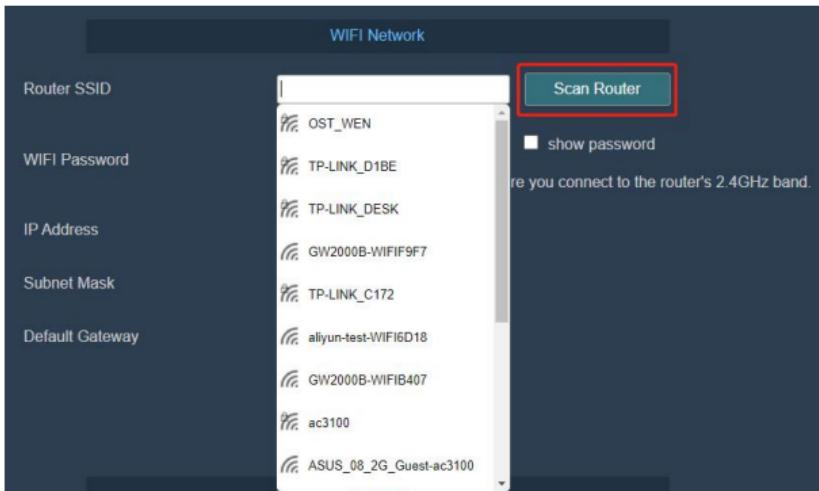

Scan or enter Wi-Fi router credentials here

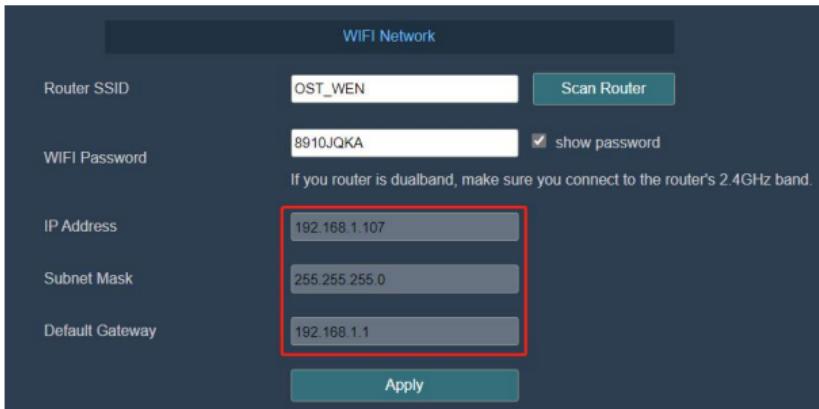

Once WiFi router is connected successfully, the device IP address will be updated via DHCP.


Local Network	
MAC	E8:DB:84:0F:13:F4
Date	2021-01-01 00:01:43
Time Zone	(UTC)Greenwich
Sunrise	00:00
Sunset	00:00

Please write down your device MAC address that will be needed for setup the device manually on www.ecowitt.net(refer to section 8).

Firmware update

Click “Check firmware” after login web page, check whether there is a new version and then upgrade firmware according to prompts.


If “Automatically upgrade firmware” option is chosen, WittCam will upgrade by itself via OTA when there is a new firmware available.

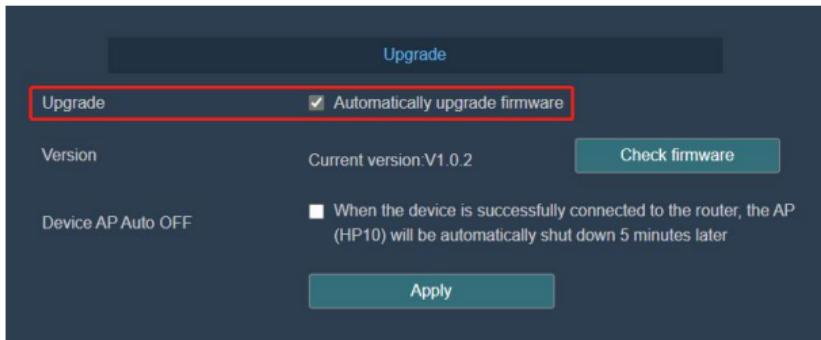

9. Taking Pictures

9.1 Normal Mode


After camera has been setup correctly, press the camera key to take pictures (Data will be uploaded to the server) and it can be viewed on your camera dashboard or ecowitt app.

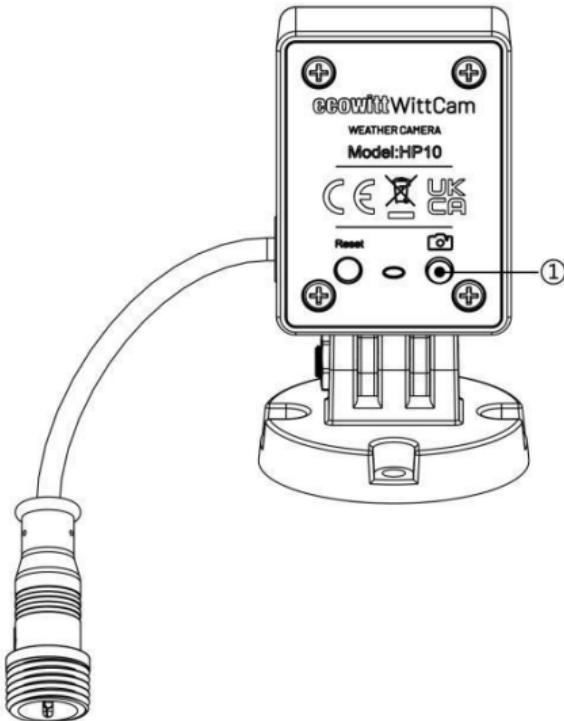

9.2 SETUP Mode

With device's embedded webpage opened, you can click "Camera" option.

Adjust the parameters so that your camera can get the best picture quality, press the camera icon to start taking pictures. Press this button again to stop.

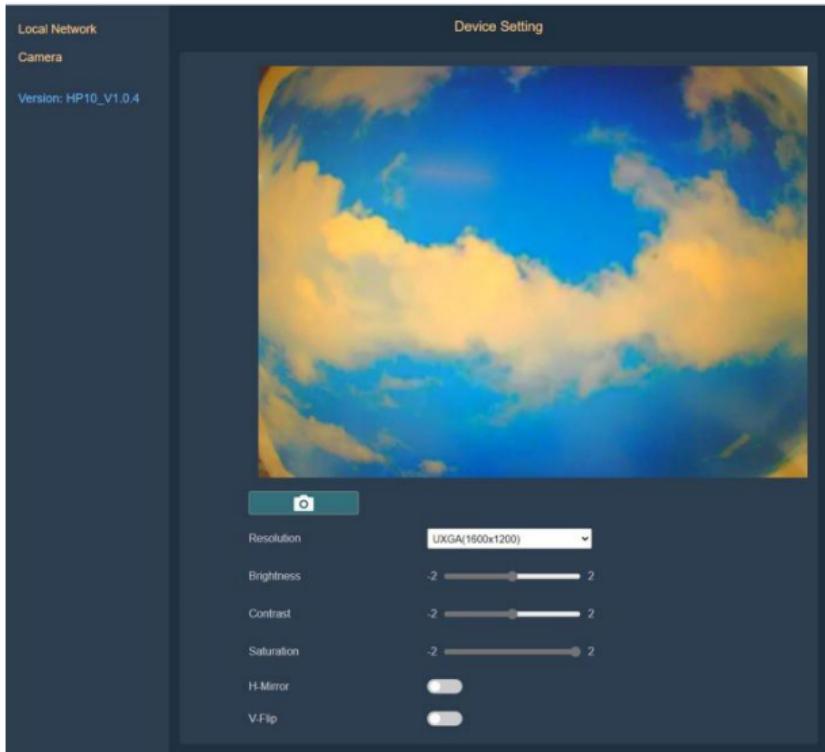

9.3 WittCam setup on www.ecowitt.net

If you completed the setup of WittCam with “ecowitt” app, you can skip this section as the device is bond to your account automatically via the APP.

If you Setup via embedded webpage for router

connection and camera setup are done, then the following setup is needed to bind the device under your account on www.ecowitt.net.

1. Open URL <https://www.ecowitt.net>, shown in Figure 2.


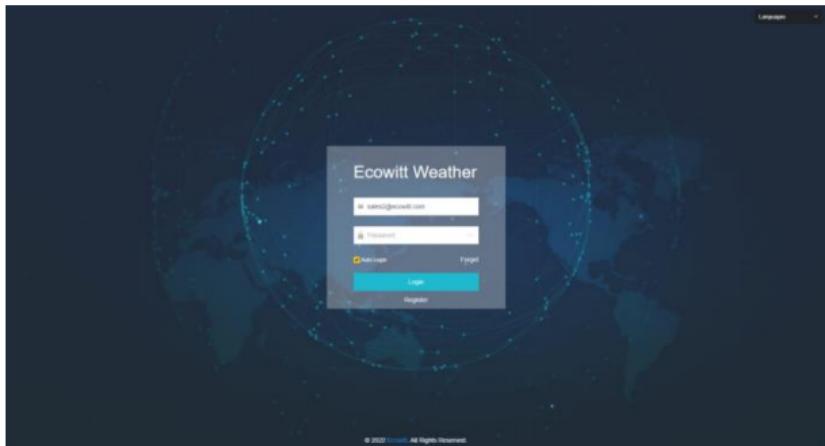


Figure 2

2. Enter the account and password to log in (You need to register an account first).
3. Click  in the left upper corner to open the menu page:

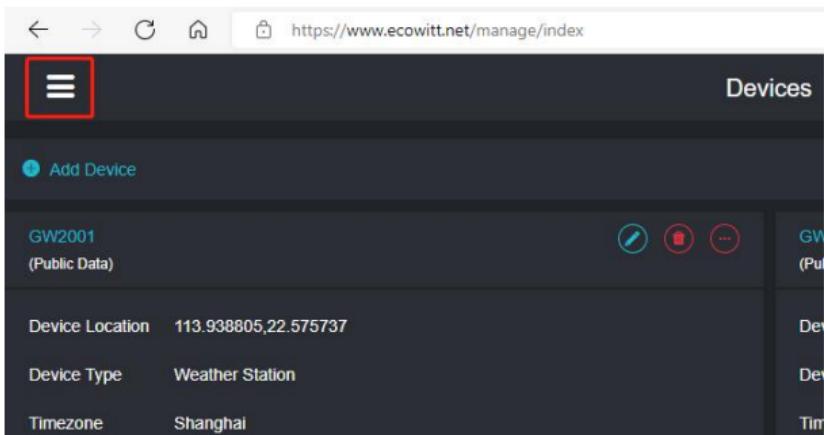

The screenshot shows a web interface for managing devices. At the top, there are navigation icons (back, forward, refresh, home) and a URL bar with the address <https://www.ecowitt.net/manage/index>. Below the header, a sidebar on the left has a red box around the three horizontal line icon. The main content area is titled "Devices". It shows a device entry for "GW2001 (Public Data)". The device details are as follows:

Device Location	113.938805,22.575737
Device Type	Weather Station
Timezone	Shanghai

On the right side of the device entry, there are three icons: a blue pencil (Edit), a red lock (Delete), and a red circle with a dot (More options). To the right of the device entry, there are more sections labeled "GW", "(Pub)", "Dev", "Dev", and "Tim".

Figure 3

4. Choose “Devices” from the list of options as shown in Figure 4.

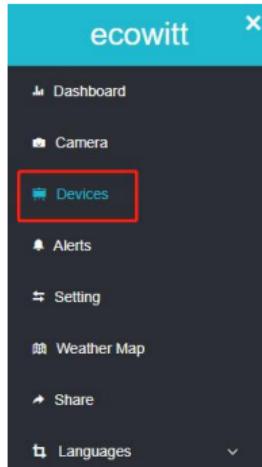


Figure 4

5. Click “Add device” as shown in Figure 5.

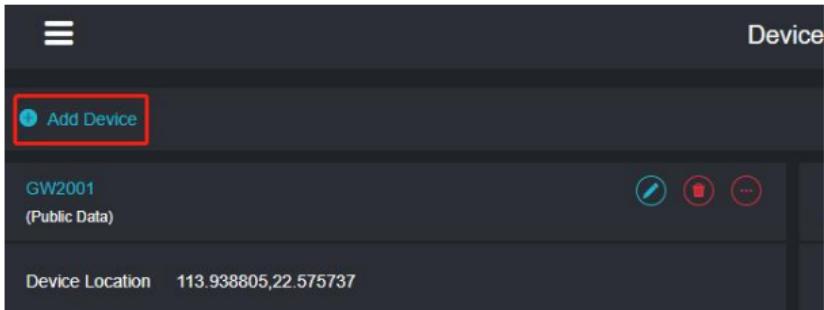


Figure 5

6. Set up the options as shown in Figure 6, the following is the illustration of each option:

Device name : You can name the device for easier reference (when you have more than one camera, it is easier to tell which camera is).

Device location : Choose the right coordinate (latitude and longitude) so that the camera will show up on weather map (public option selected).

Device type: Choose “camera”.

Timezone: Choose your local time zone.

MAC/IMEI : Be sure to enter the MAC address

correctly as this is your device identification to be matched before data from this device will be accepted.

Public: Choose to make the picture openly displayed on weather map.

Click “save” after set up the options above, HP10 is connected to the server successfully.

The screenshot shows a dark-themed 'Add Device' form. At the top is a title 'Add Device'. Below it are five input fields: 'Device Name' with a placeholder 'Input device name', 'Device Location' with a placeholder 'Input device location' and a small location icon, 'Device Type' with a dropdown menu showing 'Select', 'Timezone' with a dropdown menu showing 'Asia' and a sub-menu 'Shanghai', and 'MAC/IMEI' with a dropdown menu showing 'MAC' and a value '0F:0F:0F:0F:0F:0F'. At the bottom is a 'Public Data' checkbox which is checked. At the very bottom are two buttons: 'Cancel' and a large blue 'Save' button.

Figure 6

10. Mounting

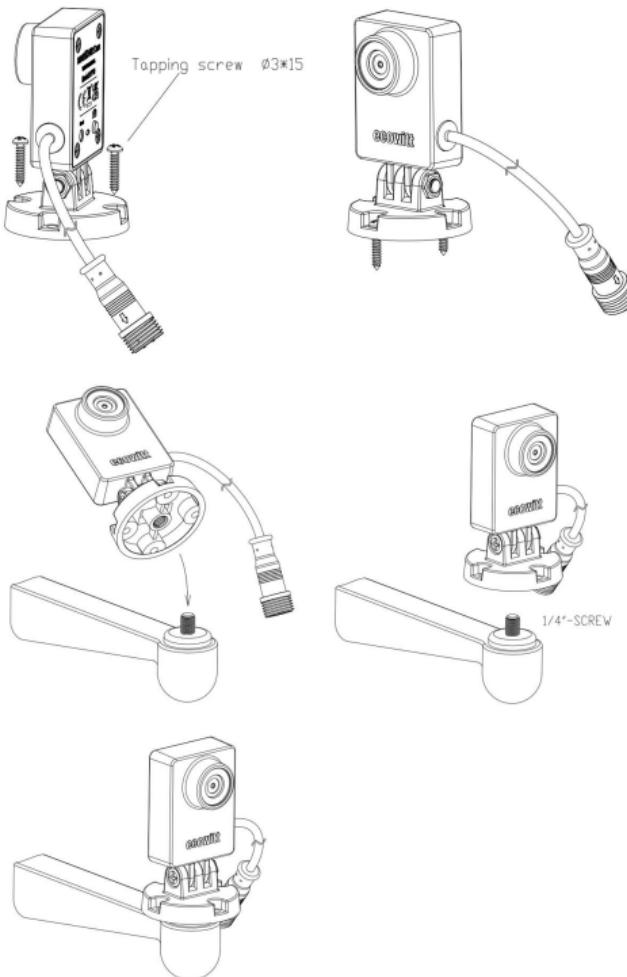


Figure 7: Camera mounting diagram

Securing the base with nails or 1/4-in camera quick release.

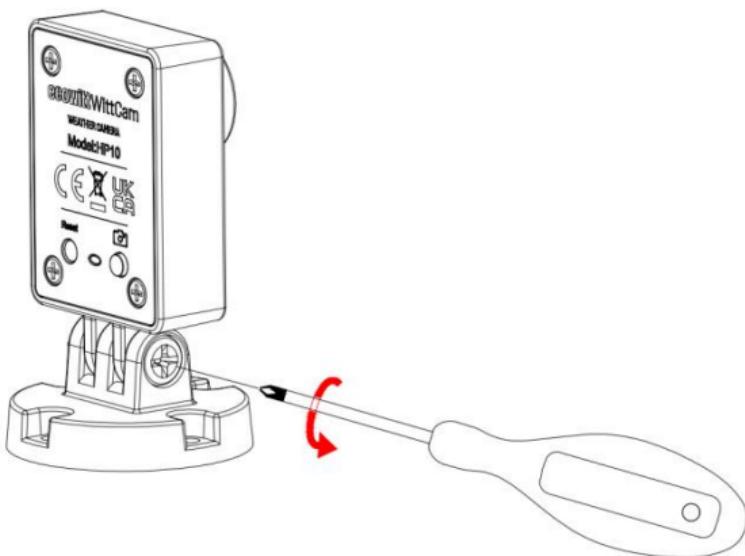


Figure 8: Loosen or tighten the screw

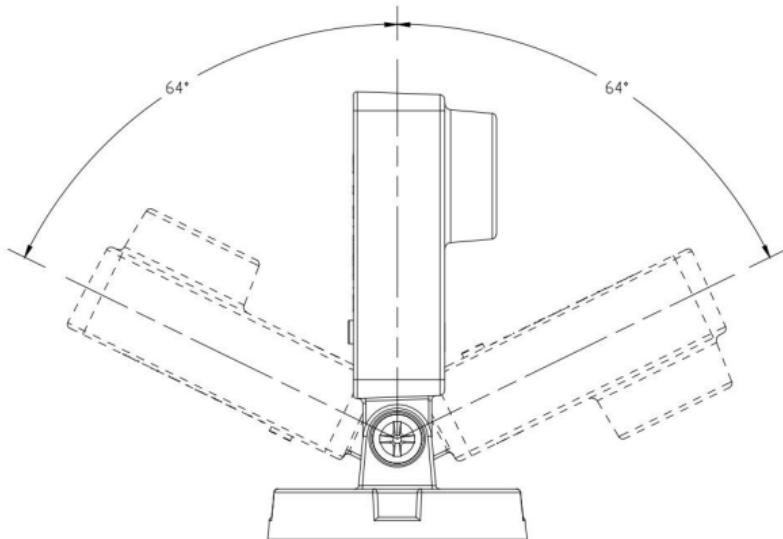


Figure 9: Setup the view

Loosen the screw to adjust the angle, and then tighten the screws.

11. Warranty Information

We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.

We provide a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

This limited warranty begins on the original date of purchase, is valid only on products purchased and only to the original purchaser of this product. To receive warranty service, the purchaser must contact us for problem determination and service procedures.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

FCC:

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

IC Caution:

English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.