



ES440 Infrastructure Mesh Point

Hardware Guide

www.fortresstech.com © 2011 Fortress Technologies



009-00019-00r3

Fortress ES440 Infrastructure Mesh Point [rev.3]

Copyright © 2011 Fortress Technologies, Inc. All rights reserved.

This document contains proprietary information protected by copyright. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, without written permission of Fortress Technologies, 1 Technology Park Drive, Westford, MA 01886-3140, except as specified in the Product Warranty and License Terms.


FORTRESS TECHNOLOGIES, INC., MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FORTRESS TECHNOLOGIES, INC. SHALL NOT BE LIABLE FOR ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, PERFORMANCE OR USE OF THIS MATERIAL. THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.

The Fortress Technologies and AirFortress logos and AirFortress and are registered trademarks; Multi-Factor Authentication, Unified Security Model, Wireless Link Layer Security and Three Factor Authentication (TFA) are trademarks of Fortress Technologies, Inc. The technology behind Wireless Link Layer Security[™] enjoys U.S. and international patent protection under patent number 5,757,924.

All trademarks mentioned in this document are the property of their respective owners.

IMPORTANT SAFETY INFORMATION

The ES440 is an outdoor device. It should be powered by PoE (Power over Ethernet) using a weatherized Ethernet cable. A mid-span PoE injector is provided with the ES440. This mid-span PoE injector, as well as the power supply/adapter used to power that injector, should remain indoors, protected from the weather. From the mid-span PoE injector, a weatherized Ethernet cable should be run to the outdoor ES440. In this way, power can be safely provided to the outdoor ES440 while the power supply and injector remain protected indoors, as shown:

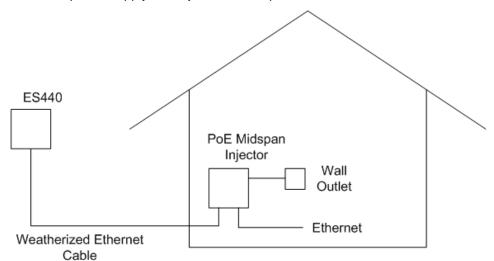

The power port on the ES440 should not be used; it is reserved for future expansion.



IMPORTANT FCC INFORMATION

The Federal Communications Commission has released Office of Engineering and Technology Laboratory Division Knowledge Database (KDB) 44399, which refines the definition of Dynamic Frequency Selection (DFS) support. Since this device has the ability to use frequencies covered by DFS, KDB 443999 must be followed. It is published in full on the FCC web site: https://apps.fcc.gov/oetcf/kdb/forms/FTSSearchResultPage.cfm?switch=P&id=41732

In order to support FCC KDB 443999, Fortress has limited the use of certain frequencies within the 5400–5725 MHz range. Specifically, the frequencies defined by the FCC as being of primary interest are those in the 5600–5650 MHz range, which correspond to 802.11a channels 120, 124, and 128. In order to comply with the KDB 443999, these channels have been removed from use, or *notched*. Notched channels are unavailable for use on this device.

KDB 44399 provides additional restrictions on the use of channels within 30 MHz of notched channels when the device is within 35 km of a Terminal Doppler Weather Radar (TDWR) installation. Affected channels 116, 132, and 136 serve as a *guard* of 30 MHz around the critical notched frequencies. Guard frequencies are unavailable for use on this device by default. The FCC allows these channels to be used, however, as long as the device is not within 35 km of a TDWR installation, as described in this excerpt of KDB 443999:

Any installation of either a master or a client device within 35 km of a TDWR location shall be separated by at least 30 MHz (center-to-center) from the TDWR operating frequency.

In some instances it is possible that a device may be within 35 km of multiple TDWRs. In this case the device must ensure that it avoids operation within 30 MHz for each of the TDWRs. This requirement applies even if the master is outside the 35 km radius but communicates with outdoor clients which may be within the 35 km radius of the TDWRs.

The requirement for ensuring 30 MHz frequency separation is based on the best information available to date. If interference is not eliminated, a distance limitation based on line-of-sight from TDWR will need to be used.

Please refer to the original KDB 443999 as posted on the FCC web site for the complete text.

In order to enable channels 116, 132, and/or 136, please contact Fortress to obtain a special license. This license will be issued after it is confirmed that the installation is not within 30 MHz and 35 km of registered TDWR sites. The following table (provided by the FCC in KDB 443999 published on 10/14/2010) describes the locations of TDWR sites, as well as the frequencies at which these sites operate:

TDWR Location Information				TERRAIN	ANTENNA	
STATE	CITY	LONGITUDE	LATITUDE	FREQUENCY	ELEVATION (MSL) [ft]	HEIGHT ABOVE TERRAIN [ft]
AZ	PHOENIX	W 112 09 46	N 33 25 14	5610 MHz	1024	64
CO	DENVER	W 104 31 35	N 39 43 39	5615 MHz	5643	64
FL	FT LAUDERDALE	W 080 20 39	N 26 08 36	5645 MHz	7	113
FL	MIAMI	W 080 29 28	N 25 45 27	5605 MHz	10	113
FL	ORLANDO	W 081 19 33	N 28 20 37	5640 MHz	72	97
FL	TAMPA	W 082 31 04	N 27 51 35	5620 MHz	14	80
FL	WEST PALM BEACH	W 080 16 23	N 26 41 17	5615 MHz	20	113
GA	ATLANTA	W 084 15 44	N 33 38 48	5615 MHz	962	113
IL	MCCOOK	W 087 51 31	N 41 47 50	5615 MHz	646	97
IL	CRESTWOOD	W 087 43 47	N 41 39 05	5645 MHz	663	113
IN	INDIANAPOLIS	W 086 26 08	N 39 38 14	5605 MHz	751	97
KS	WICHITA	W 097 26 13	N 37 30 26	5603 MHz	1270	80
KY	COVINGTON CINCINNATI	W 084 34 48	N 38 53 53	5610 MHz	942	97
KY	LOUISVILLE	W 085 36 38	N 38 02 45	5646 MHz	617	113
LA	NEW ORLEANS	W 090 24 11	N 30 01 18	5645 MHz	2	97



TDWR Location Information					TERRAIN	ANTENNA
STATE	CITY	LONGITUDE	LATITUDE	FREQUENCY	ELEVATION (MSL) [ft]	HEIGHT ABOVE TERRAIN [ft]
MA	BOSTON	W 070 56 01	N 42 09 30	5610 MHz	151	113
MD	BRANDYWINE	W 076 50 42	N 38 41 43	5635 MHz	233	113
MD	BENFIELD	W 076 37 48	N 39 05 23	5645 MHz	184	113
MD	CLINTON	W 076 57 43	N 38 45 32	5615 MHz	249	97
MI	DETROIT	W 083 30 54	N 42 06 40	5615 MHz	656	113
MN	MINNEAPOLIS	W 092 55 58	N 44 52 17	5610 MHz	1040	80
MO	KANSAS CITY	W 094 44 31	N 39 29 55	5605 MHz	1040	64
MO	SAINT LOUIS	W 090 29 21	N 38 48 20	5610 MHz	551	97
MS	DESOTO COUNTY	W 089 59 33	N 34 53 45	5610 MHz	371	113
NC	CHARLOTTE	W 080 53 06	N 35 20 14	5608 MHz	757	113
NC	RALEIGH DURHAM	W 078 41 50	N 36 00 07	5647 MHz	400	113
NJ	WOODBRIDGE	W 074 16 13	N 40 35 37	5620 MHz	19	113
NJ	PENNSAUKEN	W 075 04 12	N 39 56 57	5610 MHz	39	113
NV	LAS VEGAS	W 115 00 26	N 36 08 37	5645 MHz	1995	64
NY	FLOYD BENNETT FIELD	W 073 52 49	N 40 35 20	5647 MHz	8	97
ОН	DAYTON	W 084 07 23	N 40 01 19	5640 MHz	922	97
ОН	CLEVELAND	W 082 00 28	N 41 17 23	5645 MHz	817	113
ОН	COLUMBUS	W 082 42 55	N 40 00 20	5605 MHz	1037	113
OK	AERO. CTR TDWR #1	W 097 37 31	N 35 24 19	5610 MHz	1285	80
OK	AERO. CTR TDWR #2	W 097 37 43	N 35 23 34	5620 MHz	1293	97
OK	TULSA	W 095 49 34	N 36 04 14	5605 MHz	712	113
OK	OKLAHOMA CITY	W 097 30 36	N 35 16 34	5603 MHz	1195	64
PA	HANOVER	W 080 29 10	N 40 30 05	5615 MHz	1266	113
PR	SAN JUAN	W 066 10 46	N 18 28 26	5610 MHz	59	113
TN	NASHVILLE	W 086 39 42	N 35 58 47	5605 MHz	722	97
TX	HOUSTON INTERCONTL	W 095 34 01	N 30 03 54	5605 MHz	154	97

In addition, the FCC recommends that all operators and installers register with the WISPA database used by government agencies to quickly find devices that may be causing interference and notify their owners/operators to shut them down. This registration is not required, but Fortress strongly recommends that all systems be registered, as described in this excerpt of KDB 44399:

A voluntary WISPA sponsored database has been developed that allows operators and installers to register the location information of the UNII devices operating outdoors in the 5470 – 5725 MHz band within 35 km of any TDWR location (see http://www.spectrumbridge.com/udia/home.aspx). This database may be used by government agencies in order to expedite resolution of any interference to TDWRs.

KDB 443999 further specifies that the requirements of KDB 594280 must also be met. KDB 594280 is published in full on the FCC web site:

https://apps.fcc.gov/oetcf/kdb/forms/FTSSearchResultPage.cfm?switch=P&id=39498.

This device meets KDB 594280 by not allowing any configuration options to be made such that the device could be taken out of compliance. There is no ability for the user to change country codes or to select power levels that would take the device out of compliance.

For customers such as the U.S. military or others willing to produce evidence that particular devices will be used only outside of the United States, a special license can be obtained from Fortress that will allow those devices the option of selecting a different, non-U.S. country code. Fortress creates such licenses only for those customers who offer proof of non-U.S. device usage, and licenses are specific to particular devices and are not transferrable. Devices having such a



license should NOT be considered to be compliant with FCC regulatory requirements. Please contact Fortress with questions about these special licences.

Only software that has been signed by Fortress using the Fortress private key can be loaded onto a Fortress device, thus insuring that no software other than that which is controlled and signed by Fortress can by loaded onto the device.

FCC EMISSIONS COMPLIANCE AND INDUSTRY CANADA STATEMENTS

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND. IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION. WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND THE RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECIEVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

YOU MAY ALSO FIND HELPFUL THE FOLLOWING BOOKLET, PREPARED BY THE FCC: "HOW TO IDENTIFY AND RESOLVE RADIOTV INTERFERENCE PROBLEMS." THIS BOOKLET IS AVAILABLE FROM THE U.S. GOVERNMENT PRINTING OFFICE, WASHINGTON, D.C. 20402

CHANGES AND MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER OR REGISTRANT OF THIS EQUIPMENT CAN VOID YOUR AUTHORITY TO OPERATE THIS EQUIPMENT UNDER FEDERAL COMMUNICATIONS COMMISSION RULES. IN ORDER TO MAINTAIN COMPLIANCE WITH FCC REGULATIONS, SHIELDED CABLES MUST BE USED WITH THIS EQUIPMENT. OPERATION WITH NON-APPROVED EQUIPMENT OR UNSHIELDED CABLES IS LIKELY TO RESULT IN INTERFERENCE TO RADIO AND TELEVISION RECEPTION.

IN ADDITION, USERS SHOULD ALSO BE CAUTIONED TO TAKE NOTE THAT HIGH POWER RADARS ARE ALLOCATED AS PRIMARY USERS



(MEANING THEY HAVE PRIORITY) OF 5250-5350 MHZ AND 5650-5850 MHZ AND THESE RADARS COULD CAUSE INTERFERENCE AND/OR DAMAGE TO LE-LAN DEVICES.

ICES-003 STATEMENT:

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

THIS DEVICE HAS BEEN DESIGNED TO OPERATE WITH THE ANTENNAS HAVING A MAXIMUM GAIN OF 9 DB. ANTENNAS HAVING A GAIN GREATER THAN 9 DB ARE STRICTLY PROHIBITED FOR USE WITH THIS DEVICE. THE REQUIRED ANTENNA IMPEDANCE IS 50 OHMS.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION OF THE DEVICE.

TO REDUCE POTENTIAL RADIO INTERFERENCE TO OTHER USERS, THE ANTENNA TYPE AND ITS GAIN SHOULD BE SO CHOSEN THAT THE EQUIVALENT ISOTROPICALLY RADIATED POWER (E.I.R.P.) IS NOT MORE THAN THAT PERMITTED FOR SUCCESSFUL COMMUNICATION.

ANTENNA RESTRICTIONS

THIS DEVICE HAS BEEN DESIGNED TO HAVE A MAXIMUM GAIN OF 9 DBI. ANTENNAS HAVING A GAIN GREATER THAN 9 DBI ARE STRICTLY PROHIBITED FOR USE WITH THIS DEVICE. THE REQUIRED ANTENNA IMPEDANCE IS 50 OHMS. THIS PRODUCT IS NOT CAPABLE OF OPERATING IN THE 5600MHZ – 5650MHZ RANGE.

THIS PRODUCT MUST BE OPERATED NO CLOSER THAN 20CM TO THE HUMAN BODY.



Table of Contents

1 Overview 1	
This Document1	
Related Documents1	
The ES440	
Shipped Parts2	
2	
Installation 3	
Preparation	
Safety Requirements3	
Powering Options4	
Port Locations	
Connecting the ES4406	
Connections for Preconfiguration6	
Connections for Deployment6	
3	
LEDs and Button Operation 7	
Front-Panel LED Indicators7	
Recessed Button Operation8	



_	1
	•

Specifications	9
Hardware Specifications	9
Physical Specifications	9
Environmental Specifications	9
Compliance and Standards	10
RJ45-to-DB9 Serial Port Adapter	10
2-Pin DC Input Connector	11



Chapter 1 Overview

1.1 This Document

This user guide covers preparing and installing the ES440 Fortress Mesh Point hardware. It also describes the LED indicators and recessed button operation and provides specifications. Other Fortress hardware devices are covered in separate hardware guides, one for each Mesh Point (or Network Encryptor) model.

Fortress Mesh Point user guidance is intended for professional system and network administrators and assumes that its users have a level of technical expertise consistent with these roles.

Side notes throughout this document are intended to alert you to particular kinds of information, as visually indicated by their icons. Examples appear to the right of this section, in descending order of urgency.

1.1.1 Related Documents

Each Fortress hardware series runs the same Fortress software, and differences between ES and FC series software are minor. Fortress software user guidance covers all current Fortress hardware platforms.

Fortress Mesh Point software guides include:

- Mesh Point and Network Encryptor Software GUI Guide
- Mesh Point and Network Encryptor Software CLI Guide
- Mesh Point and Network Encryptor Software Auto Config Guide

In addition to this guide, the Fortress hardware guides include:

- ◆ ES210 Tactical Mesh Point Hardware Guide
- ◆ ES520 Deployable Mesh Point Hardware Guide
- ◆ ES820 Vehicle Mesh Point Hardware Guide
- ◆ FC-X Inline Network Encryptor Hardware Guide

warning: can cause physical injury or death and/or severely damage your equipment.

rupt your network, your data or an intended result.

NOTE: may assist you in executing the task, e.g. a convenient software feature or notice of something to keep in mind.



1.2 The ES440

The Fortress ES440 Infrastructure Mesh Point is a full-featured Fortress network device, providing strong data encryption and Multi-factor Authentication™, including native RADIUS authentication, to users and devices on the network it secures.

The ES440 contains four radios:

- Radio 1 is a dual-band 802.11a/b/g/n radio that can be configured to use either the 802.11b/g band or the 802.11a band, with an option for 802.11n capability in either band.
- ◆ Radios 2, 3 and 4 are high-power radios fixed on the 802.11a band, with an option for 802.11n capability.

Any of the ES440's radios can function as a wireless access point (AP), providing secure WLAN connectivity to wireless devices within range and as a wireless bridge or node in a mesh network.

1.2.1 Shipped Parts

The ES440-3555 package contains:

- one ES440 Mesh Point
- one universal AC-to-48V DC power adapter
- ◆ AC power cord
- one RJ-45-to-DB9 serial port adapter (for use with a straight-through Cat5 cable assembly)
- one POE injector
- two Ethernet weatherization boots
- antenna caps (4)
- tethered port caps: Ethernet (2), serial (1), USB (1)
- mounting bracket
- software CD, including:
 - ES440 Mesh Point software package
 - Fortress and standard SNMP MIBs
 - RADIUS dictionary file with Fortress Vendor-Specific Attributes for administrative authentication
 - ES440 Mesh Point user guides and latest release notes



Chapter 2 Installation

2.1 Preparation

Before proceeding with installation, review the safety information in Section 2.1.1 below.

2.1.1 Safety Requirements

To prevent damage to the product and ensure your personal safety, operate the Mesh Point only within the operating specifications given in Section 4.1.2, and carefully follow these guidelines:

- General: This equipment must be installed by qualified service personnel according to the applicable installation codes. Do not locate the Mesh Point or antennas near power lines or power circuits. When installing an external antenna, take extreme care not to come into contact with such circuits as they can cause serious injury or death. Avoid metal ladders wherever possible. For proper installation and grounding, refer to national and/or local codes (WSNFPA 70 or, Canadian Electrical Code 54).
- Indoor/Outdoor Siting: All interconnected equipment connected to the Mesh Point must be contained within the same building, including the interconnected equipment's associated LAN connections.
- Ambient Temperature: The temperature of the environment in which the Mesh Point operates should not exceed the maximum (158° F/70° C) or drop below the minimum (-40° F/-40° C) operating temperatures.
- ◆ Circuit Overloading: The ES440 version Mesh Point includes an internal 48V resettable fuse.
- Powering: The Mesh Point can be direct powered by standard AC or PoE (Power over Ethernet).

Refer to IMPORTANT SAFETY INFORMATION on page i at the front of this user guide for essential information on safely powering the unit when it is installed outdoors.



- Grounding: Ground the ES440 by connecting a ground wire to the ES440 mounting hole and the mast mounting bracket.
- Radio Frequency: The Mesh Point's internal radios conform to the FCC's safety standard for human exposure to RF electromagnetic energy, provided that you follow these guidelines:
 - Do not touch or move the antennas while the unit is transmitting or receiving.
 - To safeguard Mesh Point transmitting circuitry, relocate the Mesh Point and its antennas only when the Mesh Point is powered off.
 - When the Mesh Point is transmitting, do not hold it so that the antenna is very close to or touching any exposed parts of the body, especially the face or eyes.
 - Antennas must be installed to provide a separation of at least 20 cm (7.9") from all persons and any co-located antenna or transmitter.
 - Regarding use in specific environments: · Do not operate near unshielded blasting caps or in an explosive environment. · Limit use in a hazardous location to the constraints imposed by the location's safety director. · Abide by the rules of the Federal Aviation Administration for the use of wireless devices on airplanes. · Restrict the use of wireless devices in hospitals to the limits set forth by each hospital.

2.1.2 Powering Options

The ES440 Mesh Point can be powered by standard AC or PoE (Power over Ethernet).

To power the ES440 with standard AC, plug the included AC adapter into a properly rated AC outlet and connect the adapter to the ES440's power inlet (refer to Figure 2.1) with the cable provided.

To power the ES440 over Ethernet, connect Ethernet 1 (see Figure 2.1) to a remote standard 802.11af PoE midspan adapter or endspan source.

WARNING: If the Mesh Point connects to outside-mounted antennas, failure to provide a low resistive earth ground can result in migration of voltage from lightning or line surges onto the premises wiring, which can cause electric shock and/or fire within the building or structure.

caution: Never plug the ES440 into an AC adapter other than the adapter that ships with the unit (or a replacement obtained from Fortress). Using the wrong AC adapter can damage the ES440.



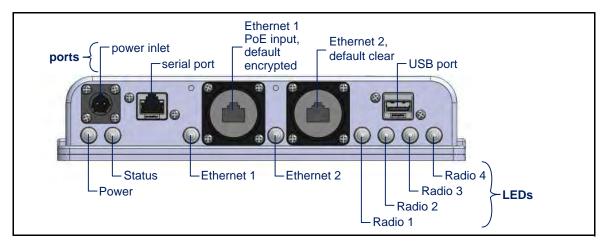


Figure 2.1. ES440 Front-Panel Port and LED Locations

2.2 Port Locations

The ES440 Mesh Point's power inlet, serial connector, Ethernet connectors and USB port are located on the front panel (see Figure 2.1).

All ES440 front-panel ports are protected by captive covers, shown in Figure 2.2. Unused ports should remain covered to protect against dust and other debris. Covered or uncovered, all ES440 ports are waterproof.

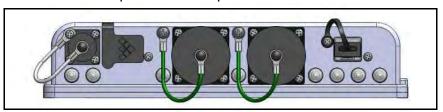


Figure 2.2. ES440 Front Panel with Port Covers

Four antenna connectors are situated on the ES440 back panel, corresponding to the ES440's internal radios, as shown below.

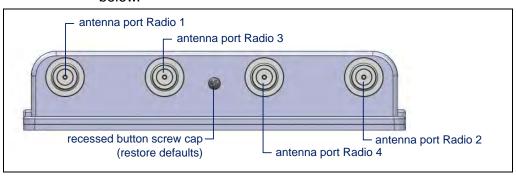


Figure 2.3. ES440 Back-Panel Antenna Connectors and Recessed Button

cap must be installed in order for the ES440 to be watertight.



The recessed button used to restore the running configuration to factory defaults (Section 3.2) is also located on the back panel, beneath a protective screw cap.

2.3 Connecting the ES440

The ES440 can be connected temporarily to preconfigure the Mesh Point software, and then permanently for deployment.

2.3.1 Connections for Preconfiguration

Mesh Point software should be configured in advance of deployment. This section provides instructions for temporarily connecting the ES440 Mesh Point for preconfiguration.

- 1 Position the Mesh Point so that it operates only within its safe temperature range.
- 2 Connect the Mesh Point to an external power source, either from the DC power inlet to an external source, or via the WAN port to a PoE source. Refer to Section 2.1.2, Powering Options.
- 3 Connect an Ethernet cable to the port labeled Ethernet 2, and connect the other end to a computer or a switch on the wired LAN.

To complete the configuration, refer to the *Software GUI Guide* or the *Software CLI Guide* for instructions on Logging On, Licensing, and Configuring the Mesh Point software.

2.3.2 Connections for Deployment

Review the Radio Frequency Safety Requirements (Section 2.1.1) before installing or operating Mesh Point radios.

- 1 Ground the ES440 by connecting a ground wire to the ES440 mounting hole and the mast mounting bracket.
- 2 If your deployment uses Radio 1, connect a standard 2.4 GHz- or 5 GHz-capable antenna with an N-type male connector to antenna port 1 (Ant1).

If the Mesh Point (or antenna) will be located outside, the antenna must be waterproof.

If your deployment uses Radio 2, 3, or 4, connect an antenna cable with a N-type male connector between the appropriate antenna port (see Figure 2.3) and a high-gain omnidirectional or directional antenna.

- 3 Connect the Mesh Point (or verify its connection to) to the power source(s) it will use.
- 4 Verify that the Power and Status LEDs illuminate, as well as the appropriate LEDs for all connected ports and enabled radio(s).

warning: To comply with FCC regulations, antennas must be professionally installed and the installer is responsible for ensuring compliance with FCC limits.

FCC requires colocated radio antennas to be at least 7.9" apart. The Mesh Point's antenna connectors are closer than this. Avoid directly mounting two or more antennas to the Mesh Point's rear-panel connectors.



Chapter 3 LEDs and Button Operation

3.1 Front-Panel LED Indicators

The ES440 Mesh Point features eight LEDs on the front panel (shown in Figure 2.1).

Power can exhibit:

- solid green Mesh Point is powered on and operating normally.
- off Mesh Point is powered off.
- slow-flash green Mesh Point is booting.

Status can exhibit:

 intermittent green - Cleartext is passing on an encrypted port.

Ethernet1 and Ethernet2 can exhibit:

- solid green Link has been established.
- intermittent green Traffic is passing on the port.

Radio1, Radio2, Radio3 and Radio4 can exhibit:

- solid green Radio is on.
- intermittent green Radio is passing traffic.
- off Radio is off or Mesh Point's RF Kill function is enabled.

color	behavior	Power	Status	Ethernet1/ Ethernet2	Radio1/Radio2/ Radio3/Radio4
	solid	normal operation	-	link established	radio ON
green	slow flash	booting	-	-	-
	intermittent	-	cleartext on encrypted port	passing traffic	passing traffic
off		powered OFF	-	-	radio OFF or RF Kill enabled



3.2 Recessed Button Operation

The single recessed button on the ES440 back panel (Figure 2.3) returns the ES440 Mesh Point to the factory default configuration.

The button is covered by a screw cap that you must remove, in order to access the button. You must replace the screw cap, in order to maintain the watertight integrity of the ES440 chassis.

To restore default settings, depress and hold the button for 10 seconds. All current configuration information on the running boot partition will be lost.



Chapter 4 Specifications

4.1 Hardware Specifications

4.1.1 Physical Specifications

form factor:	mountable, compact, rugged chassis
dimensions:	1.75" H x 8.5" W x 8.5" D (4.5cm×21.6cm×21.6cm)
weight:	4 lbs (1.8 kg)
power supply:	10 - 30 VDC POE
connections:	two RJ-45 10/100 Mbps Ethernet ports one RJ-45 serial port one USB port four N-type radio antenna ports (female) one 48V DC power input port
radio: Radio1: 802.11a/b/g/n Radio2, Radio3, and Rado4: high power 802.11a/	
indicators: system LEDs: Power, Status, Eth1, Eth2, Radio1, Radio2, Radio3, Radio	

4.1.2 Environmental Specifications

power draw:	8W Maximum
maximum heat dissipation:	20 BTU
cooling:	Convection Cooled
operating temperature:	-40C to +70C -40F to +158F
operating relative humidity (non-condensing):	5 - 95%
storage temperature:	-40C to +70C -40F to +158F



4.1.3 Compliance and Standards

emissions:	CE, FCC, ETSI, MIL STD 464A, MIL STD 461F
immunity:	MIL STD 461F
vibration:	MIL STD 810G

The Fortress ES440 is certified by the Wi-Fi Alliance® for the following standards:

IEEE:	802.11a/b/g		
security:	WPA™, WPA2™—Personal and Enterprise		
EAP types:	EAP-TLS, EAP-TTLS/MSCHAPv2, PEAPv0/EAP-MSCHAPv2, PEAPv1/EAP-GTC, EAP-SIM, EAP-AKA, EAP-FAST		

4.2 RJ45-to-DB9 Serial Port Adapter

An RJ45-to-DB9 adapter (included with each Mesh Point) is required in order to connect the Mesh Point's serial port to a DB9 terminal connection.

Figure 4.1 shows the pin numbers for the two connectors. With the RJ45 connector facing you and oriented with the tab receptacle up, pins are numbered from right to left, as shown. With the DB9 connector facing you and oriented with the wide side up, pins are numbered from right to left, top to bottom.

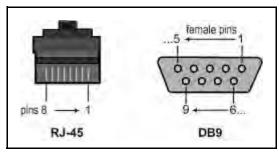


Figure 4.1. RJ45 and DB9 Pin Numbering



Table 4.1 shows the adapter pin-outs.

Table 4.1. RJ45-to-DBP Adapter Pin-Outs

RJ45 pin	DB9 pin	standard color
1	8	grey
2	6	brown
3	2	yellow
4	5	green
5	-	red
6	3	black
7	4	orange
8	7	blue

4.3 2-Pin DC Input Connector

The ES440 Mesh Point uses a 2-pin connector to input power.

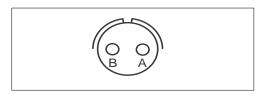


Figure 4.2. 2-pin Power Connector Pins

Table 4.2 shows the power connector pin-outs.

Table 4.2. ES440 DC Power Connector Pin-Outs

pin	signal	
Α	+9 to 30 VDC	
В	GND	



Index

antennas installing 6 precautions 4, 6 restrictions ii C chassis see hardware compliance i, 10 D DB9-to-RJ-45 adapter 10-11 dimensions 9 Ε earthing 4 emissions compliance 10 environmental specifications 9 F FCC see compliance fuse 3 G grounding 4 Н hardware safety requirements 3-4 specifications 9-10 versions 2 installation 6 safety requirements 3-4 interference i 0

operating temperature 3, 9

```
ports
connections 6, 6
precautions
see safety
```

R

Ρ

```
radios 2 precautions 4 RJ-45-to-DB9 adapter 10–11
```

S

```
safety
precautions 1
requirements 3–4
see also specifications
specifications 9–10
system requirements
see safety; specifications
```

U

UL see compliance