

Basic Functionality

The **Cel-Fi GO M** connects to an external Donor Antenna to draw in a cellular signal from the macro network. The **Cel-Fi GO M** Smart Signal Booster finds the appropriate cellular signal, per the product's configuration, improves the signal, and amplifies it. Improved service is provided to the user via the Server Antenna.

Note: A Stationary version ("GO X") of the product is available. Go to cel-fi.com for details.

Cel-Fi WAVE Mobile App

The **Cel-Fi WAVE** app provides a User Interface to Cel-Fi systems. The app's dashboard shows the system "Boost" value. A numeric representation mapped to the amount of Signal Gain the system is providing. Higher is better, with nine (9) being the highest value.

Cel-Fi WAVE and Cel-Fi GO M

Your **Cel-Fi GO M** will automatically select the strongest cellular signal to boost. However, you may manually configure the system preferences using **Cel-Fi WAVE**. Connect to **Cel-Fi GO M** with a bluetooth enabled mobile device, and manage the boost settings.

NEMA 4 Rating

The **Cel-Fi GO M** is NEMA 4 rated, and can be used both indoors and outdoors.

The NEMA 4 rating provides the following advantages:

- A degree of protection against ingress of solid foreign objects (falling dirt and windblown dust)
- A degree of protection from the ingress of water (rain, sleet, snow, splashing water, and hose directed water)
- Equipment will be undamaged by the external formation of ice on the enclosure

User Interface

Cel-Fi GO M features an LED on the top face to indicate the unit's state:

LED	MEANING
Solid GREEN	The unit is working properly and boosting properly.
Blinking GREEN	Unit is scanning for networks to boost.
Blinking RED	The unit is in an error condition. Use the Cel-Fi WAVE app to check the error code meaning and remedy.
Solid RED	The unit has a hardware error and is not booting up normally.



Note: In mobile usage, it is normal for the **Cel-Fi GO M** to fluctuate between scanning and boosting. The **Cel-Fi GO M** automatically adjusts its boost behavior based on available signal.

Troubleshooting

ISSUE	MEANING	ACTION
Continual Blinking GREEN	Unit is operational, but not attaching to a network to boost.	<ul style="list-style-type: none"> • Make sure both antennas are connected properly and are appropriate for the desired frequencies to boost. • Make sure the selected operator to relay is available at your location. This can be checked with the Cel-Fi WAVE application. If the service is not available, it cannot be boosted.
Solid RED LED	Unit is not operational.	<ul style="list-style-type: none"> • Unplug and reinsert power. • If restart has no effect, contact vendor for remedy.

Antenna Kitting

The following antennas are authorized to be used with **Cel-Fi GO M** Smart Signal Booster:

MODEL	DESCRIPTION	FREQUENCY
 A41-V21-100	Mobile Mag Mount	698-960 // 1710-2700 MHz
	CERTIFICATION	BAND SUPPORT
	FCC, Australia	2/4/5/12/13/28
	DONOR	SERVER
	✓	
 A41-V21-101	Mobile Mag Mount	698-960 // 1710-2700 MHz
	CERTIFICATION	BAND SUPPORT
	CE	1/3/5/7/8/20
	DONOR	SERVER
	✓	
 A41-V30-100	Patch Antenna	698-960 // 1710-2700 MHz
	CERTIFICATION	BAND SUPPORT
	FCC, CE	1/3/5/7/8/20/2/4/5/12/13/28
	DONOR	SERVER
		✓

Additional Cel-Fi Antenna options are available at www.cel-fi.com/antennas



Cel-Fi GO M Quick Start Guide

Smart Signal Booster™



Cel-Fi GO M is optimized for mobile applications such as trucks, boats, and RVs. It features the IntelliBoost™ technology which allows it to automatically adjust to the fast changing cellular network conditions as you move. ONLY when the signal is poor, will the IntelliBoost maximizes gain while boosting thus preventing any potential degradation of existing cellular service.

IN THE BOX	
	Main Unit
IN THE MOBILE KIT	
	External Magnetic Mount (Mag Mount) Antenna (used as the donor)
	Interior Patch Server Antenna


Included in the Mobile Kit (MK) version:



420N007-G32-011-12RA

Cel-Fi GO M Installation

1 Install Donor Antenna

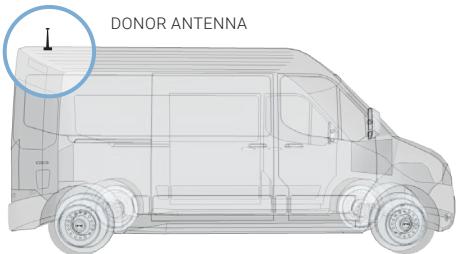


Place the Donor Antenna on the vehicle. Make sure you consider the entire system and required cable lengths.

TIPS AND TECHNIQUES

- Install antenna at least 12 inches from any other antennas for best performance
- Antenna should be free of obstructions
- Antenna should be away from windows (including sunroof or other openings)
- Install 8 inches away from any people
- For best performance make sure there is 50cm of metal around the base of the antenna.

2 Install Server Antenna

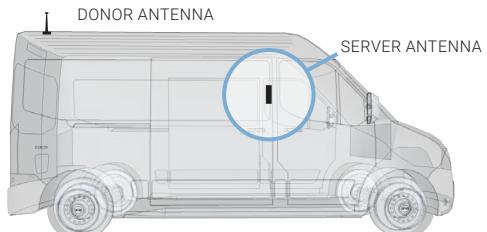


Install Server Antenna in the cab where coverage is needed.

TIPS AND TECHNIQUES

- For best results, install Donor and Server Antennas such that there is substantial material between the antennas. This will create isolation and allow the system to perform at higher gain without oscillation or feedback.
- Keep **Donor** and **Server Antennas** separated/isolated from each other for best performance.
- The power supply may not be NEMA 4 rated.

3 Mount Cel-Fi GO M

3

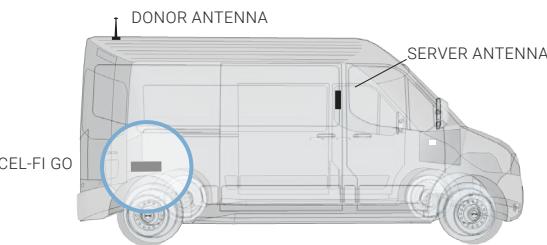

Find a good mounting location in your vehicle. Location should have airflow (for cooling) and be secure from contact with external objects.

Make sure the unit is within


cable range of the 12V power supply on your vehicle.

Best to make sure all cable lengths support the intended mounting location BEFORE permanent mounting.

 **DO NOT** plug in at this time.


4 Connect Donor & Server Antennas to the Cel-Fi GO M Unit

4

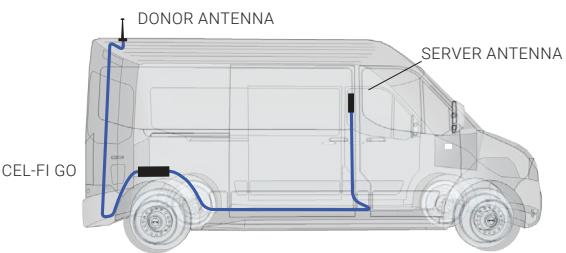

5 Plug in Cel-Fi GO M

5

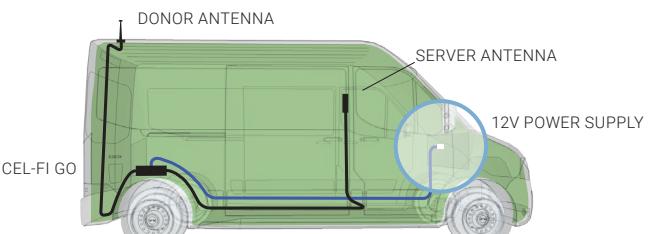

Specifications:

Frequency Support

Multiple variations of the product are available with different frequency support.

Model:
G32-2/4/5/12/13M

Band	Name	Downlink	Uplink	
2	1900 PCS	1930	1990	1850
4	AWS-1	2110	2155	1710
5	850	869	894	824
12	700 a	729	746	699
13	700 c	746	756	777
				787

Model:
G32-1/3/5/7/8/20M

Band	Name	Downlink	Uplink	
1	2100	2110	2170	1920
3	1800+	1805	1880	1710
5	850	869	894	824
7	2600	2620	2690	2500
8	900	925	960	880
20	800 DD	791	821	832
				862

Dimensions

Length	Width	Height	Weight
272.5 mm	96.5 mm	43.5 mm	850 g

Gain

Up to 65dB system gain

Environmental

Operating Temp: 0 - 65C

Relative Humidity: 95%

Power

Antenna Connectors

Certifications

(All variants)

10dBm/5MHz (16dBm per band)

SMA-Female

3GPP TS 25.143 Rel.10

3GPP TS 36.143 Rel.10

RoHS 2

BQB (Bluetooth)

NEMA-4

(G32-2/4/5/12/13 variants only)

FCC

ISED

(G32-1/3/5/7/8/20 variants only)

IEC 62368-1:2004

EN 301 489-1 v2.1.1

EN 301 489-17 v3.1.1

EN 301 489-23 v1.5.1

EN 301 908-1 v11.1.1

EN 301 908-11 v11.1.1

EN 301 908-15 v11.1.1

EN 300 328 v2.1.1

EN 62311 (2008)

Regulation (EC) 1275/2008 (Standby and Off mode)

Regulation (EC) 278/2009 (External Power Supply)