

IO-MURS-738 User Manual



MURS Multi-Mile Wireless Communication System

User Guide Version 0.1

Table of Contents

FCC Warnings.....	3
MURS Frequencies.....	3
Callbox Power.....	4
Antenna Connector	4
Antenna Mounting	4
Power and Gate Control Relay Connector	4
Installation Instructions	5
Callbox Mounting	5
To Initiate a Call	8
To Receive a Call.....	8
Channel Selection.....	8
Transmitter Power.....	9
Interference Eliminator Codes	9
Automatic Turnoff and Intercom Modes.....	11
Battery Power Alert	12
Gate/Door Opening Relay.....	12
Relay Mode	13
Relay Closure Time Setting	13
Volume Adjustment.....	14
Monitor Tone Code Selection	14
Limited Product Warranty	16

The MURS Multi-Mile Wireless Communication System is for use at locked entrances or remote gates and it not only enables two-way voice communication, but you can also use its built in switch to unlock a door or gate that has an electric opener. Its metal housing and stainless steel front make it both vandal and weather resistant. You can use this callbox at residential gates, office building main entrances, or anywhere two-way communication is needed.

The callbox also has a monitor mode that enables you to listen in to the sounds around the callbox for 15 seconds when it receives a 2-Tone signal from a radio.

The callbox uses an externally mounted antenna that you can mount away from the callbox and as high as possible to increase the range the callbox will transmit. The back of the callbox has mounting holes for wall or gooseneck pole mounting, plus a cable routing hole so you can route the antenna cable, switch control wires, and power supply wires for a nice, clean appearance.

FCC Warnings

This device is intended to be used in such a way that a separation distance of at least 40 centimeters (15.748 inches) is maintained between the antenna and any part of the user's body. Ensure that the antenna is mounted at least that far from the callbox, and for greater range, as high as possible.

This device is certificated in accordance with Part 95, Subpart J of the Commission's rules.

MURS Frequencies

MURS is short for Multi-Use Radio Service. This is service created by the FCC in the United States. It is a low power, short range service in the VHF (Very High Frequency) 150 MHz two way radio spectrum in which you do not need a license to operate a station. With MURS you can use the external antenna to improve range. You can add an unlimited number of MURS units together.

Callbox Power

The callbox can be powered from any 9-12 Volt DC power source that supplies a minimum of 1 amp of current. This power could be a battery pack that contains 6 D-cell batteries, an AC to DC adapter, a 12-volt battery, or a solar-panel power source with a battery.

Power and Gate Control Relay Connector

The cable for external power and the relay routes out the bottom of the housing through a liquid-tight nylon cable gland, also known as a cord grip. This allows connection of a +12 VDC power source, and a 1-amp contact switch closure output. The same cable also has wire pairs for the speaker, microphone, and push-to-talk (PTT) switch. See the table for colors and functions.

Wire Color	Function
Red	+9-12 Volts
Brown	Ground
Yellow	Relay Pin 1
Pink	Relay Pin 2
Blue	PTT 1
Green	PTT 2

Antenna Connector

At the bottom of the internal waterproof housing is an SMA connector that is used to connect an external antenna (one is provided). Simply route the antenna cable through the back of the vandal-proof steel housing and twist the connector of the cable onto the antenna connector. After routing the wires through the center hole on the back, insert the provided cable bushing to protect the cable and prevent excess moisture from entering the housing.

Antenna Mounting

The antenna kit for the callbox consists of the antenna, mounting bracket, and mounting hardware. The cable provided with the antenna is 1 meter long allowing the antenna to be placed as high as possible. You can also use cable extenders to extend the cable at least 20 feet with minimal signal loss. The mounting bracket included enables you to mount the antenna in a convenient location.

Installation Instructions


Before you can install or make changes to callbox programming, you first need to open the metal housing and the internal plastic waterproof housing. Following is the procedure:

1. Using the special security Torx bit that came with the callbox, remove the four screws holding the stainless steel faceplate in place. (need new drawings of the faceplate and mounting brackets).
2. Lift the stainless steel faceplate and attached hardware out of the steel box and set it face down on a soft surface to prevent scratches on the faceplate.
3. Remove the four nuts on the waterproof housing mounting brackets.
4. Flip the waterproof housing over and remove the four screws holding its cover in place using a Philips screwdriver.
5. Set the cover to the side and you can now make changes to the callbox programming or mount the steel housing.

Callbox Mounting


The vandal-resistant steel housing can be mounted using standard 5/16" lag bolts or regular bolts. There are two sets of holes on the back of the steel housing. One set of four holes are designed for use with gooseneck pedestals, and the other two can be used for mounting to a pole or any flat surface. Nylon washers are provided to use with the 5/16 bolts for the purpose of sealing out excess moisture.

In the middle of the callbox is a hole for the antenna, power supply, and relay wires. If you're using a gooseneck pole, you can route the wires through the pole. For other installations you can mount the callbox over

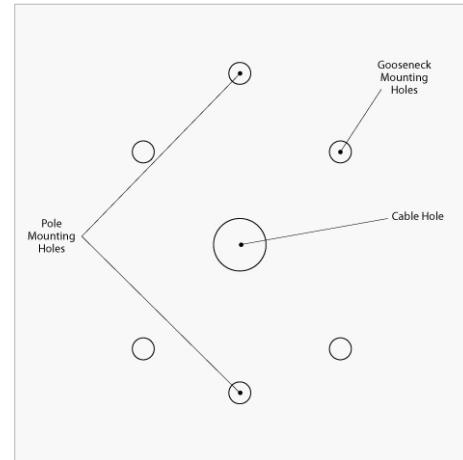

an electrical box or you can drill a hole in the mounting surface for the cables.

Hole plugs are provided for mounting holes that aren't being used so excess moisture can be kept out of the housing. The steel housing does have drainage holes in the bottom so condensation or any water that gets inside the housing can escape.

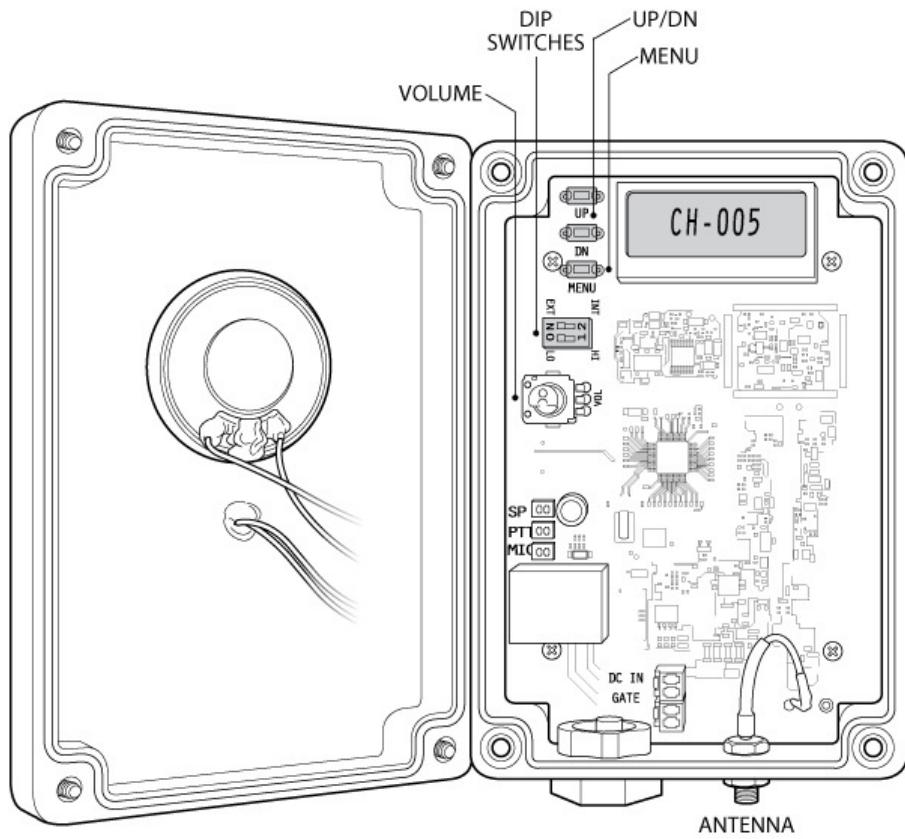

To Initiate a Call

Press and hold the ON/PTT Button. The callbox will send a three tone call tone to alert radio equipped personnel. This call tone will also be heard at the callbox. Once the call tone ends you continue to hold the button down and begin speaking into the microphone from an arm's length distance. For best communication, the caller should be 3 feet or less from the microphone. The call tone is only transmitted the first time the ON/PTT is pressed. After 15 seconds of inactivity, it will be transmitted again when the button is pressed again.

To Receive a Call

When the caller has finished speaking, they release the ON/PTT Button. Any reply will be heard through the callbox speaker. If a call is not received within 15 seconds of releasing the ON/PTT Button and there is no activity on the channel, the callbox will sound a low double tone and turn-off automatically. This automatic turn-off feature is designed to conserve battery life.

Channel Selection

The callbox can be set to use one of the following VHF "License Free" MURS frequencies. If a channel appears on the display you can change to a new channel by pressing the UP/DN keys. If not, follow this procedure:

1. Press the MENU button and use the UP/DN keys to scroll to CHANNEL.
2. Press MENU again to select the CHANNEL setting.
3. Use the UP/DN keys to select one of the channels from CH-001 to CH-005.
4. Press MENU again to exit and save. (Default: CH-001)

Channel	Frequency	Bandwidth
1	151.820 MHz	11.25 KHz
2	151.880 MHz	11.25 KHz
3	151.940 MHz	11.25 KHz
4	154.570 MHz	11.25 KHz
5	154.600 MHz	11.25 KHz

Transmitter Power

Power is limited to a maximum of 2 watts, but the callbox can also be set to 1 watt for shorter range or battery-powered applications. This setting is done via a single DIP switch. To change this setting move DIP switch number 1 as follows:

1. HI for 2 Watts
2. LO for 1 Watt.

If you don't need to communicate over long distances, you'll want to try the one watt setting first, even if you are using the AC to DC converter. The two watt setting may transmit your communications further than required so other people nearby could pick up your conversations if they are on the same channel and using the same interference eliminator codes. Also, if you are using the 6-D battery pack, your batteries will be quickly discharged using the 2 watt setting.

Interference Eliminator Codes

For any of the five channels, there are 38 interference eliminator codes for each channel. These are also called privacy codes or CTCSS which stands for Continuous Tone Coded Squelch System.

These codes allow a two-way radio to keep the radio squelched (quiet) if the chosen code is not received with a transmission. In other words, the speaker of the callbox is not turned on even though a transmission is received. Technically speaking, a CTCSS tone code is a sub-audible tone/code which allows you to ignore (not hear) calls from other parties who are using the same channel. With CTCSS it may seem like you have your own private channel but other parties can still hear your calls if they set up their transceiver with the same tone or code.

The radio used to reply to a call from the callbox must be set to the same interference eliminator/CTCSS code or the callbox will not hear a response (the transmitting radio may also not hear the callbox if it has a different programmed interference eliminator code. The following table lists the available codes.

Interference Eliminator Codes (CTCSS)					
Code	Frequency	Code	Frequency	Code	Frequency
01	67.0	14	107.2	27	167.9
02	71.9	15	110.9	28	173.8
03	74.4	16	114.8	29	179.9
04	77.0	17	118.8	30	186.2
05	79.7	18	123.0	31	192.8
06	82.5	19	127.3	32	203.5
07	85.4	20	131.8	33	210.7
08	88.5	21	136.5	34	218.1
09	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3
13	103.5	26	162.2	00	None

To set the interference eliminator code, follow this procedure:

1. Press the MENU button and use the UP/DN keys to scroll to CTCSS.
2. Press MENU again to select the CTCSS setting.
3. Use the UP/DN keys to select one of the CTCSS codes from EC00 to EC38 (Code 00 is interference eliminator off. Default: EC01).
4. Press MENU again to exit and save.

Squelch Adjustment

The squelch setting adjusts the threshold at which signals will open (un-mute) the audio channel. It acts to suppress the audio output of the receiver in the absence of a sufficiently strong desired input signal. With the squelch level correctly set, you will hear sound only when actually receiving a signal. Backing off the control will turn on the audio, and the operator will hear white noise (also called squelch noise) if there is no signal present. There are 10 levels from for the squelch adjustment. Select a level at which the background noise is just eliminated when no signal is present. The larger the level number you select, the stronger the signal you need to receive, and the smaller the receiving range.

To set the squelch level, follow this procedure:

5. Press the MENU button and use the UP/DN keys to scroll to **SQUELCH**.
6. Press MENU again to select the **SQUELCH** setting.
7. Use the UP/DN keys to select one of the **SQUELCH** codes from L00 to L10 (Default: L05).
8. Press MENU again to exit and save.

Automatic Turnoff and Intercom Modes

There are two modes of power operation for the callbox. When the callbox is powered by battery, it can be set to shut off the majority of its functions between calls to conserve battery power. In Automatic Turn Off mode the callbox automatically shuts off whenever there is no activity for fifteen (15) seconds (Activity means either the ON/PTT Button has not been pressed or a call has not been received). Once the unit has turned itself off, it can only be turned back on by depressing the ON/PTT Button. When Automatic Turn Off is enabled, the callbox is OFF and cannot receive a call until the callbox first initiates a call.

If you want to operate the callbox in full intercom mode where it can receive calls at any time, then it is recommended that you power it by a non-battery power source.

To change the power operation mode for the callbox, DIP switch 2 should be set as follows:

1. INT: Auto Turn Off enabled (default)
2. EXT: External AC adapter is used for full Intercom Mode

Battery Power Alert

If battery power is used, a low battery alert tone is transmitted when battery voltage drops below an acceptable level. This low battery tone notifies receiving radios that the batteries should be replaced. When the batteries are low an audible two-tone sound is transmitted to receiving radios every time the callbox button is pressed. When batteries are not low, the receiving radio only hears the four-tone audible sound the first time the button is pressed.

Gate/Door Opening Relay

The callbox has the ability to activate a set of relay contacts (120VAC, 1-Amp relay) that can be used to activate a gate controller, switch on a light, sound an alarm or any other application where remote control of an ON/OFF switch is required. The callbox does this by decoding 2-tone signals from handheld and base station intercoms.

The table to the right shows the 2-tone decode combinations that can be used to activate the relay. Each of the five channels is able to receive these tones and activate the relay.

To set the relay tone code, follow this procedure:

1. Press the MENU button and use the UP/DN keys to scroll to R1 TON.
2. Press MENU again to select the R1 TON setting.
3. Use the UP/DN keys to select one of the channels from D00 to

Programmable 2-Tone Decode (Receive) Code		
Code	Tone 1	Tone 2
0	*	*
1	330.5	569.1
2	349.0	600.9
3	368.5	634.5
4	389.0	669.9
5	410.8	707.3
6	433.7	746.8
7	457.9	788.5
8	483.5	832.5
9	330.5	600.9

D09.

4. Press MENU again to exit and save. (Default: D08)

Relay Mode

The relay has two modes of operation, Momentary and Toggle:

Momentary Closure: The relay switch is closed for 1-255 seconds when correct 2-Tone Decode Code is received. This is the default operation.

Toggle Closure: Switch alternately closes and opens when the correct 2-Tone Decode Code is received. After the 2-tone code is received the callbox transmits a single beep if the switch has been opened and a double beep if the switch has been closed. The switch opens when the callbox turns off if it is programmed for Automatic Turn-Off.

There are two wires connected to the internal relay (yellow and pink) and they are routed outside the waterproof enclosure through the liquid tight nylon cable gland.

To set the relay mode, use the following procedure:

1. Press the MENU button and use the UP/DN keys to scroll to R1 MOD.
2. Press MENU again to select the R1 MOD setting.
3. Use the UP/DN keys to select one between MOMENT (Momentary Closure) and TOGGLE (Toggle Closure).
4. Press MENU again to exit and save. (Default: MOMENT)

Relay Closure Time Setting

If Momentary Closure is chosen for the relay, then you can choose how long the relay stays closed. The setting is between 1 and 255 seconds.

To set the relay timing, use the following procedure:

1. Press the MENU button and use the UP/DN keys to scroll to R1 TIM.
2. Press MENU again to select the R1 TIM setting.
3. Use the UP/DN keys to select from 001s to 255s.
4. Press MENU again to exit and save. (Default: 001s)

Volume Adjustment

The volume of the callbox is adjusted simply by rotating the volume control. Turn the control right to make the volume louder.

Monitor Mode Tone Code Selection

The callbox has a Monitor feature that allows you to send a 2-Tone signal (default code 8) to the callbox which activates the transmitter for 15 seconds so you can listen in to the area around the callbox. This feature does not work when the unit is in Auto Turnoff Mode. During those 15 seconds, the button on the callbox can override the Monitor feature so a call can still be made, however Monitor Mode will be deactivated then. You will not be able to transmit to the callbox until Monitor Mode times out or the a caller presses the Talk button.

If you are using the gate or door opening capability, make sure you select a different tone code than you chose for it unless you want to listen in as the caller is entering.

To set the monitor tone code, use the following procedure:

Programmable 2-Tone Decode (Receive) Code		
Code	Tone 1	Tone 2
0	*	*
1	330.5	569.1
2	349.0	600.9
3	368.5	634.5
4	389.0	669.9
5	410.8	707.3
6	433.7	746.8
7	457.9	788.5
8	483.5	832.5
9	330.5	600.9

1. Press the MENU button and use the UP/DN keys to scroll to MT TON.
2. Press [MENU] to enter Monitor Tone Code setting.
3. Press MENU again to select 2-Tone Code of Monitor from D00 to D09.
4. Press MENU again to exit and save. (Default: D08)

Limited Product Warranty

A. What This Warranty Covers

IntercomsOnline.com, (hereafter called the Company) hereby warrants that this product manufactured, supplied or repaired by the Company shall be free from material defects in materials and workmanship for a period of 12 consecutive months after the date of shipment. Accessories such as power supplies and antennas have a 90 -day warrantee after the date of shipment.

B. Limitation of Remedies

The Company and Customer acknowledge and agree that the Customer's sole remedy under this Limited Warranty shall be the repair or replacement of the Products or any components thereof which are determined by the Company to be materially defective in material or workmanship or, at the sole option of the Company, the refund of the purchase price of the Products in question. The Company shall not be liable for injury to property other than the Products themselves.

C. Disclaimers from Warranty

THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. THERE ARE NO WARRANTIES THAT EXTEND BEYOND THE FACE OF THIS LIMITED WARRANTY AS TO THE FITNESS OF THE PRODUCTS HEREUNDER FOR ANY PARTICULAR PURPOSE. THE COMPANY HEREBY DISCLAIMS ANY WARRANTY, WHETHER EXPRESS OR IMPLIED, THAT THE PRODUCTS HEREUNDER ARE MERCHANTABLE. DUE TO THE UNIQUENESS OF EACH INSTALLATION, THE COMPANY DISCLAIMS ANY LIABILITY FOR RANGE OR COVERAGE OF THE PRODUCTS.

D. Products Covered by This Warranty

This Limited Warranty shall extend to the Products and components thereof manufactured, supplied or repaired by the Company, but shall not extend to products, parts or equipment supplied by other manufacturers and used by the Company to manufacture, supply or repair the Products, which shall be warranted only for the period, purposes and conditions extended by such manufacturers to the Company.

E. Automatic Termination of Warranty Obligations

Any obligation of the Company under this Limited Warranty shall automatically and immediately terminate, without notice from or any further action by the Company, and the Company shall have no responsibility for damages of any kind as a result of the occurrence of any of the following:

- (i) Acts of God, accident, misuse, abuse or negligent use of the Products or any component thereof;
- (ii) any repair or alteration of the Products or any component thereof made outside the Company's facility, except by an employee of the Company authorized to do so;
- (iii) improper installation, use or operation (including both mechanical and electrical) of the Products or any component thereof;
- (iv) failure to provide normal maintenance for the Products or any component thereof.

F. Limitation on Damages (Consequential Damages Excluded)

The Company shall not be responsible for, nor does this Limited Warranty extend to, any consequential or incidental damages or expenses of any kind or nature, regardless of the cause thereof or any knowledge which the Company may have regarding the probability of the occurrence of such damages or expenses including, without limitation, injury to persons or property, loss of use of the Products, lost goodwill, lost resale profits, work stoppage, impairment of other goods, breach of contract, negligence or such other actions as may be deemed or alleged to be the cause of a loss or damage to the Customer, its agents, sub-distributors, customers or any other persons.

G. No Other Warranties, Statements are Opinions

This Limited Warranty is in lieu of all other express or implied warranties of the Company and the Company does not assume, nor does it authorize any person to assume on its behalf, any other obligation or liability, either verbally or in writing. The Company and Customer agree that any statements and representations made by the Company outside of this Limited Warranty are only the Company's opinion, are not a part of the basis of the bargain and are not warranted to be accurate. The Company and Customer further agree that if any statement by the Company in this Limited Warranty or in any agreement or correspondence, whether oral or written, between the Company and Customer is construed as an affirmation or promise, it shall nevertheless not constitute a warranty that the Products or any component thereof will conform to such affirmation or promise.

H. How to Get Warranty Service

To receive warranty service during the warranty period, you must send the defective product to the Company via a prepaid, insured, trackable shipping method such as UPS or FedEx. Send packages to: **Multi-Mile Wireless Communications, Attn. Warranty Department, 8161 Highway 100, #194, Nashville, TN 37221**. Please specify in as much detail as possible as to the nature of the problem. You must provide written proof of purchase date and deliver it along with the product. The Company may choose to repair or replace a defective product with reconditioned product or parts, or totally replace the product. The Company shall ship, at the Company's expense, said replacement or repaired Product or component to Customer via the lowest priced transportation available to the Company. However, the Company shall be obligated to ship and pay only for deliveries within the United States of America. Replacements are covered for the balance of the original warranty period.

I. Other Rights

This Limited Warranty gives Customer specific legal rights, and Customer may also have other rights which may vary from state/province to state/province.

Specifications

Enclosure Material: Polycarbonate (UL94-HB)
Antenna Connector: 50 ohm SMA

Radio Specifications

For reference, below are specifications from a similar callbox that we already sell:

GENERAL

	<u>VHF</u>
FCC Rule Parts:	74, 90, 95J
Max. Freq. Separation:	15 MHz
RF Channels:	1 Channel, Independent TX/RX frequencies.
Synthesizer Step Size:	2.5 kHz
Frequency Stability (-30 C to +60 C):	\pm 2.5 PPM TX/RX
Tone/Code Signaling:	CTCSS (Quiet Call) 2-Tone Paging Decode
Enclosure Material:	Velox & Thermo Plastic O-ring sealed
Antenna Fitting:	50 Ω BNC Connector

TRANSMITTER

	<u>Narrow Mode</u>	<u>Narrow Mode</u>
Emission Designator:	11K0F3E	11K0F3E
Deviation:	\pm 2.50 kHz	\pm 2.50 kHz
FM Hum and Noise:	- 40 dB	- 40 dB
Audio Distortion:	< 6 %	< 6 %
RF Power Output @ + 13 VDC:	1.0 Watt	2.0 Watts
Spurious & Harmonics:	- 57 dBc	- 55 dBc
Audio Response:	Meets FCC & EIA requirements	
Time-out Timer:	60 seconds, programmable	

RECEIVER

	<u>Narrow Mode</u>	<u>Narrow Mode</u>
Modulation Acceptance:	± 3.75 kHz	± 3.75 kHz
Sensitivity (12 dB SINAD):	0.19 μ V	0.18 μ V
Adjacent Channel (EIA):	- 60 dB	- 60 dB
Spurious Rejection:	- 60 dB	- 60 dB
Image Rejection (EIA):	- 60 dB	- 80 dB
Intermodulation (EIA):	- 65 dB	- 65 dB
Noise Squelch Sensitivity:	Programmable per channel, factory set for 12 dB SINAD	
Frequency Response:	300 - 3000 Hz, de-emphasized	300 - 3000 Hz, de-emphasized
2-Tone Frequency Range:	300 - 1500 Hz	300 - 1500 Hz
2-Tone Decode Deviation Requirement:	1.5 - 2.5 kHz	1.5 - 2.5 kHz
Audio Output:	Minimum 1 Watt into 8 Ω , with < 5 % THD	
Receiving System:	Dual conversion superheterodyne	
I.F. System:	1st-43.65 MHz, 2nd - 450 kHz	1st-43.65 MHz, 2nd - 450 kHz
L.O. Injection:	Low side	High side
QC/DQC Decode Deviation Requirement:	350 - 500 Hz	350 - 500 Hz
QC/DQC Decode Time:	per EIA Standards	